HAYBUSTER®



Operating Instructions and Parts Reference

2564™


BALEBUSTER

SERIAL NUMBER FJ053164 AND UP

DURATECH® INDUSTRIES

0500128 • October 2026

DuraTech Industries International Inc.
PO Box 1940, Jamestown, ND 58402-1940
Tel: (701)-252-4601
www.duratechindustries.net www.haybuster.com

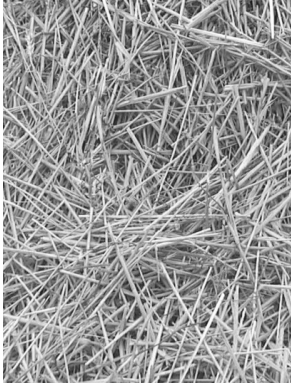

HAYBUSTER®

A Tradition of Innovation Since 1966



HAYBUSTER®

2564™ BALEBUSTER™

SERIAL NUMBER FJ053164 AND UP


Operating Instructions and Parts Reference

DuraTech Industries International Inc.(DuraTech Industries) has made every effort to assure that this manual completely and accurately describes the operation and maintenance of the 2564™ BALEBUSTER™ as of the date of publication. DuraTech Industries reserves the right to make updates to the machine from time to time. Even in the event of such updates, you should still find this manual to be appropriate for the safe operation and maintenance of your unit.

This manual, as well as materials provided by component suppliers to DuraTech Industries are all considered to be part of the information package. Every operator is required to read and understand these manuals, and they should be located within easy access for periodic review.

DURATECH® & HAYBUSTER® are registered trademarks of Duratech Industries International, Inc. 2564 and Balebuster are trademarks of Duratech Industries International, Inc.

STRAW CANNON® and logo are registered trademarks of Duratech Industries International, Inc.

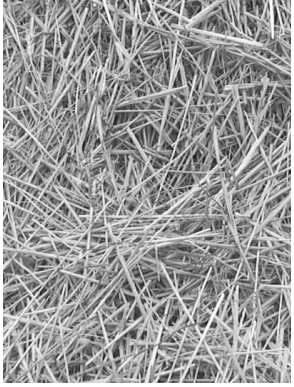

HAYBUSTER®

A Tradition of Innovation Since 1966



Foreword

All personnel must read and understand the following sections before operating the *BALEBUSTER*™.

- Section 2, ”Dealer Preparation,” to verify that the machine has been prepared for use.
- Section 3, “Operation,” which explain normal operation of the machine.
- Foreword and Section 1, important safety information.
- Section 3.1, “Pre-Operation Inspection”.


Appropriate use of unit

Your model 2564™ BALEBUSTER™ is designed to load and shred most types of baled livestock forage. It is designed specifically for use on 6 foot. diameter round bales weighing up to 2,000 pounds and 5-1/2 feet in length

To avoid possible damage to the machine and risk of injury to the operator, consult with a DuraTech representative before attempting to shred materials other than live-stock forage.

The BALEBUSTER has multiple uses:

- Laying forage windrows in open fields.
- Filling feed bunks - fenceline, circular etc.
- Spreading straw for livestock bedding.
- Spreading mulch over perennial plants, such as strawberries, mushrooms, etc.
- Spreading mulch over reclaimed land areas.
- Spreading mulch over sugar beets for storage.




Operator protection

As with all machinery, care needs to be taken in order to insure the safety of the operator and those in the surrounding area.



WARNING: The **OPERATOR IS RESPONSIBLE** for the safety of the operator and those in the surrounding area. Operators of the **BALEBUSTER** are required to wear head, eye, and ear protection, No loose clothing is allowed.



Part 1: Operating Instructions 1

Introduction 2

Appropriate use of unit 2

Purpose 2

How to use this manual 3

Section 1: Safety 4

1.1 Safety-alert symbols 4

1.2 Operator - personal equipment 6

1.3 Machine safety labels 7

1.4 Shielding 9

1.5 Personal equipment 9

1.6 Safety review 9

1.7 Towing/road transport 11

Section 2: Dealer preparation 12

2.1 Assembly required 12

2.2 Pre-delivery inspection 12

2.3 Machine operation check 13

2.4 Loader tines 14

Section 3: Operation 15

3.1 Pre-operation inspection 16

3.2 Introduction to the machine 17

3.2.1 Operator controls 17

3.2.2 Bale conveyor 17

3.2.3 Rotor 17

3.2.4 Auger 18

3.2.5 Slug bars 18

3.2.6 Screen 18

3.2.7 Fan 18

3.2.8 Discharge spout and deflector 18

3.3 Machine Operation & Adjustments 19

3.3.1 Tractor Set Up 19


3.3.2 Hitching the BALEBUSTER to a tractor 20

3.3.3 Starting the machine 20

3.3.4 Normal shut-down procedure 21

3.3.5 Unhitching the BALEBUSTER from a tractor 21

3.3.6 P.T.O. Shield 22



3.3.7 Conveyor Chain Adjustment 23
3.3.8 Chain Case Adjustments 23
3.3.9 Slugbar Adjustment 24
3.3.10 Clean Out Door 24
3.3.11 Flails 25
3.3.12 Loader 25
3.3.13 Loading the bale 27
3.3.14 Operating the machine 28
3.3.15 Loader Transport Pin 28
3.3.16 Hydraulic Cylinder and Valve 28
3.3.17 Tires and Rims 29
3.3.18 Rack 29
3.3.19 Jack 29
3.3.20 Hooking up hydraulic control box and hydraulics to tractor 30

3.4 Adjusting the machine 31
3.4.1 Changing the output distribution pattern 31
3.4.2 Changing length of cut 32
3.4.3 Changing screens 32
3.4.4 Adjusting the bale conveyor speed 32
3.4.5 Changing the slug bar settings 33

3.5 Road transport 33
3.5.1 Preparing the BALEBUSTER for transport 33
3.5.2 Changing Back To Operate 34


3.6 Storage 34
3.6.1 Preparing the machine for storage 34
3.6.2 Removing the machine from storage 35

Section 4: General maintenance 36
4.1 Lubrication 36
4.1.1 LUBRICATION POINTS 36


4.2 Axle, wheels, tires 40
4.3 Conveyor chain tension 40
4.4 General appearance 40

Section 5: Troubleshooting 41

Appendix A: WARRANTY 42
Appendix B: 2564 BALEBUSTER Specifications 43




Appendix C: Options 44
Appendix D: Required For Operation 45
Appendix E: 2564 BALEBUSTER SHIPPING LIST 46

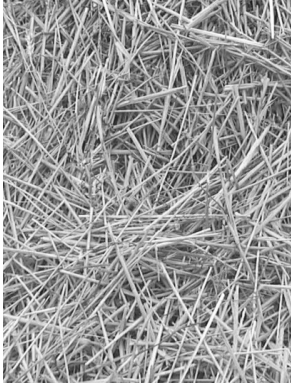

HAYBUSTER®

A Tradition of Innovation Since 1966




HAYBUSTER®

2564™ BALEBUSTER™

SERIAL NUMBER FJ053164 AND UP

Part 1: Operating Instructions



Introduction

Appropriate use of unit

Your model 2564™ BALEBUSTER™ is designed to load and shred most types of baled livestock forage. It is designed specifically for use on 6 foot. diameter round bales weighing up to 2,000 pounds and 5-1/2 feet in length

NOTE: To avoid possible damage to the machine and risk of injury to the operator, consult with a DuraTech Industries International, Inc. (DuraTech Industries) representative before attempting to shred materials other than livestock forage.

The 2564 BALEBUSTER has multiple uses:


- Laying forage windrows in open fields.
- Filling feed bunks - fenceline, circular etc.
- Spreading straw for livestock bedding.
- Spreading mulch over perennial plants, such as strawberries, mushrooms, etc.
- Spreading mulch over reclaimed land areas.
- Spreading mulch over sugar beets for storage.

Purpose

The purpose of this owner's manual is to explain maintenance requirements and routine adjustments for the most efficient operation of your 2564 BALEBUSTER. There is also a trouble shooting section that may help in case of problems in the field. Any information not covered in this manual may be obtained from your dealer.

SPECIAL NOTE: When reference is made as to front, rear, left hand, or right hand of this machine, the reference is always made from standing at the rear end of the machine and looking toward the hitch. Always use serial number and model number when referring to parts or problems. Please obtain your serial number and write it below for your future reference.

MODEL: 2564 BALEBUSTER SERIAL NO. _____



How to use this manual

Manual organization

This manual is organized into the following parts:


- Part 1: Operating instructions explain how to set up, use and maintain the 2564 BALEBUSTER.
- Part 2: Parts reference contains diagrams of each assembly, with the part number of each part. A key on the facing page contains a description of the part and the quantity used.

Dealer responsibilities

- Read Section 2, “Dealer Preparation,” and perform the tasks outlined. Also perform a pre-operation inspection as described in Section 3.1.
- Upon delivery of the unit to the customer, it is your responsibility to conduct a training session on the safe operation of the unit for the primary operator(s). You must also conduct a “walk-around” inspection of all safety instructional decals on the machine itself. Decals are illustrated in Part 2: Parts Reference.
- Complete and return the Warranty Registration Card. Receipt of this form is required to activate the warranty. Appendix A provides details of the warranty.

Operator responsibilities

- Operator is responsible for his safety.
- Operator is also responsible for safety of others near the machine.
- Review Section 2, ”Dealer Preparation,” to verify that the machine has been prepared for use.
- Thoroughly review sections 1 and 3, which explain normal operation of the machine, and section 4, which explain maintenance requirements.
- Note the important safety information in the Foreword and in Section 1, “Safety.”
- Keep copies of all manuals in a readily -accessible location for future reference.
- Tractor is setup according to section 3.3.1 “tractor set-up”



Section 1: Safety

The safety of the operator is of great importance to DuraTech Industries/Haybuster. We have provided decals, shield and other safety features to aid you in using your machine safely. In addition, we ask you to be a careful operator who will properly use and service your Haybuster equipment.



WARNING: FAILURE TO COMPLY WITH SAFETY INSTRUCTIONS THAT FOLLOW WITHIN THIS MANUAL COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH. BEFORE ATTEMPTING TO OPERATE THIS MACHINE, CAREFULLY READ ALL INSTRUCTIONS CONTAINED WITHIN THIS MANUAL. ALSO READ THE INSTRUCTION MANUAL PROVIDED WITH YOUR TRACTOR.

THIS MACHINE IS NOT TO BE USED FOR ANY PURPOSE OTHER THAN THOSE EXPLAINED IN THE OPERATOR'S MANUAL, ADVERTISING LITERATURE OR OTHER DURATECH INDUSTRIES WRITTEN MATERIAL PERTAINING TO THE 2564 BALEBUSTER.

1.1 Safety-alert symbols

Decals are illustrated in **Part 2: Parts Reference.**

The safety decals located on your machine contain important and useful information that will help you operate your equipment safely.

To assure that all decals remain in place and in good condition, follow the instructions below:


- Keep decals clean. Use soap and water - not mineral spirits, adhesive cleaners and other similar cleaners that will damage the decal.
- Replace all damaged or missing decals. When attaching decals, surface temperature of the machine must be at least 40° F (5° C). The surface must be also be clean and dry.
- When replacing a machine component to which a decal is attached, be sure to also replace the decal.
- Replacement decals can be purchased from your Haybuster dealer.

DuraTech Industries uses industry accepted **ANSI** or **ASAE** standards in labeling its products for safety and operational characteristics.



Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations, typically for machine components that, for functional purposes, cannot be guarded.



DANGER:
Signal word - White Lettering/Red Background
Safety Alert Symbol - White Triangle/Red Exclamation Point

WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



WARNING:
Signal word - Black Lettering/Orange Background
Safety Alert Symbol - Black Triangle/Orange Exclamation Point

CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



CAUTION:
Signal word - Black Lettering/Yellow Background
Safety Alert Symbol - Black Triangle/Yellow Exclamation Point


This manual uses the symbols to the right to denote important safety instructions and information.

The **DANGER**, **WARNING** and **CAUTION** symbols are used to denote conditions as stated in the text above. Furthermore, the text dealing with these situations is surrounded by a box with a white background, will begin with **DANGER**, **WARNING**, or **CAUTION**.

The **INFORMATION** symbol is used to denote important information or notes in regards to maintenance and use of the machine. The text for this information is surrounded by a box with a light grey background, and will begin with either **IMPORTANT** or **NOTE**.



	**1. Yellow warning triangle/black graphical symbol, indicates what the hazard is.** **Hazard Identification**
	**2. Red circle-with-slash/black graphical symbol indicates a prohibited action to avoid the hazard.** **Prohibited Action**
	**3. Blue mandatory action circles/white graphical symbol - indicates an action to take to avoid the hazard.** **Mandatory Action**



1.2 Operator - personal equipment

THE OPERATOR

Physical Condition

You must be in good physical condition and mental health and not under the influence of any substance (drugs, alcohol) which might impair vision, dexterity or judgment.

Do not operate a **2564 BALEBUSTER** when you are fatigued. Be alert - If you get tired while operating your **2564 BALEBUSTER,** take a break. Fatigue may result in loss of control. Working with any farm equipment can be strenuous. If you have any condition that might be aggravated by strenuous work, check with your doctor before operating

Proper Clothing



Clothing must be sturdy and snug-fitting, but allow complete freedom of movement. Avoid loosefitting jackets, scarfs, neckties, jewelry, flared or cuffed pants, unconfined long hair or anything that could become entangled with the machine.



Protect your hands with gloves when handling flail and sections. Heavyduty, nonslip gloves improve your grip and protect your hands.



Good footing is most important. Wear sturdy boots with nonslip soles. Steel-toed safety boots are recommended.



To reduce the risk of injury to your eyes never operate a **2564 BALEBUSTER** unless wearing goggles or properly fitted safety glasses with adequate top and side protection.



Tractor noise may damage your hearing. Always wear sound barriers (ear plugs or ear mufflers) to protect your hearing. Continual and regular users should have their hearing checked regularly.

1.3 Machine safety labels

The safety decals located on your machine contain important information that will help you operate your equipment. Become familiar with the decals and their locations.

DANGER: FLYING HAY, ROCKS, AND OTHER OBJECTS THROWN BY MACHINE.

STAY CLEAR OF DISCHARGE SIDE OF MACHINE UNLESS OPERATOR HAS STOPPED TRACTOR ENGINE AND MACHINE HAS STOPPED ROTATING. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN SEVERE PERSONAL INJURY OR DEATH.



6500034

DANGER: ROTATING FLAILS CAN KILL OR DISMEMBER

KEEP CLEAR OF MACHINE UNTIL POWER TAKE-OFF HAS BEEN DISENGAGED, TRACTOR ENGINE SHUT OFF AND FLAIL ROTATION STOPPED



6500035

DANGER: ROTATING DRIVELINE, KEEP AWAY! ENTANGLEMENT CAN CAUSE SERIOUS INJURIES OR DEATH.


DO NOT OPERATE WITHOUT

- ALL DRIVELINE GUARDS, TRACTOR AND EQUIPMENT SHIELDS IN PLACE
- DRIVELINES SECURELY ATTACHED AT BOTH ENDS
- DRIVELINE GUARDS THAT TURN FREELY ON DRIVELINE




6500085

WARNING: FOR YOUR PROTECTION KEEP ALL SHIELDS IN PLACE AND SECURED WHILE MACHINE IS OPERATING MOVING PARTS WITHIN CAN CAUSE SEVERE PERSONAL INJURY.

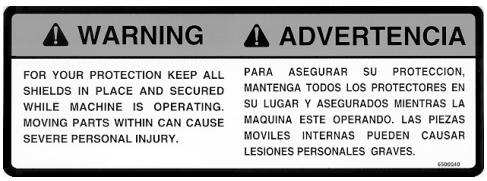


6500040




WARNING: FOR YOUR PROTECTION AND PROTECTION OF OTHERS, **PRACTICE THE FOLLOWING SAFETY RULES**.

1. BEFORE OPERATING THIS MACHINE, READ THE OPERATOR'S MANUALS SUPPLIED WITH THIS MACHINE AND YOUR TRACTOR.
2. CHECK OPERATORS MANUALS TO BE SURE YOUR TRACTOR MEETS THE MINIMUM REQUIREMENTS FOR THIS MACHINE.
3. READ ALL DECALS PLACED ON THIS MACHINE FOR YOUR SAFETY AND CONVENIENCE.
4. NEVER ALLOW RIDERS ON THIS IMPLEMENT OR THE TRACTOR.
5. KEEP OTHERS AWAY FROM THIS MACHINE WHILE IN OPERATION.
6. KEEP ALL SHIELDS IN PLACE WHILE MACHINE IS OPERATING.
7. KEEP HANDS, FEET, LOOSE CLOTHING, ETC., AWAY FROM POWER DRIVEN PARTS.
8. ALWAYS SHUT OFF MACHINE AND ENGINE BEFORE SERVICING, UNCLOGGING, INSPECTING, OR WORKING NEAR THIS MACHINE FOR ANY REASON. ALWAYS PLACE TRANSMISSION IN PARK OR SET PARK BRAKE AND WAIT FOR ALL MOVEMENT TO STOP BEFORE APPROACHING THIS MACHINE.

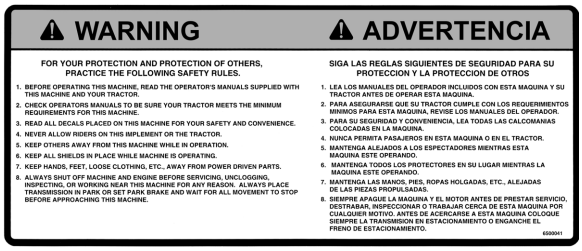


6500041

CAUTION: ADJUST TRACTOR DRAWBAR SO THAT THE DISTANCE FROM THE END OF THE P.T.O. SHAFT ON THE TRACTOR TO THE CENTER OF THE DRAWBAR HITCH PIN IS 16".

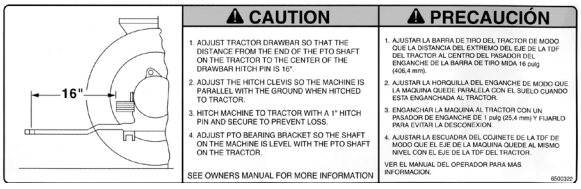

6500322



1.4 Shielding

Shields are installed for your protection. Keep them in place, and replace damaged shields.

1.5 Personal equipment

Operators of this machine are encouraged to wear head, eye, and ear protection. Operators should not wear loose clothing.

1.6 Safety review

BEFORE OPERATING THE MACHINE

- Read and follow all instructions contained in:


  A. This 2564 BALEBUSTER Operator's manual

  B. Tractor Operator's manual

  C. Decals placed on the 2564 BALEBUSTER

NOTE: Additional copies of the above mentioned materials can be obtained from your dealer.

- Allow only responsible, properly instructed individuals to operate your machine. Carefully supervise inexperienced operators.
- Use a tractor which meets the tractor requirements contained within this manual. **See Appendix D., Required For Operation:**
- Make sure the machine is in good operating condition and that all protective shields are in place and in proper working order. Replace damaged shields before operating.
- Make no modifications to the machine unless specifically recommended or requested by DuraTech Industries.
- Check periodically for broken or worn parts and make any necessary repairs.
- If required install the PTO safety chain. Check local regulations regarding safety chain requirements.



DURING OPERATION

Enforce the following safety precautions and others contained in this manual to prevent serious personal injury.

- Everyone must be kept clear of work area except operator seated at tractor controls.
- Disengage PTO before starting engine.
- **Never work on or near BALEBUSTER unless engine is shut off and flails have stopped.**
- Keep shields in place and in good condition.
- Watch out for and avoid any object that might interfere with the proper operation of the machine.
- Power takeoff shafts must be locked in place with protective PTO shields in place.
- Keep hands, feet and clothing away from power driven parts.
- **Never leave tractor controls unattended while the engine is running.**
- Exercise extreme care when operating on rough and/or steep terrain. Avoid operation on terrain which is excessively rough or steep.
- **Make surer your tractor PTO speed never exceeds 1000 RPM.**

WHEN PERFORMING SERVICE AND MAINTENANCE




CAUTION: Before performing any maintenance or adjustments make sure machine is NOT running. If for any reason arc welding is to be done, always ground the welder close to the point where the welding is being done. It is recommended that the rotor be grounded to frame of machine to prevent arcing on bearings.

- Before working on or near the BALEBUSTER for any reason, including servicing, cleaning, unplugging or inspecting machine, use normal shut-down procedures unless instructed differently in this manual.
- Use only replacement parts that are provided by DuraTech Industries.
- If it is necessary to operate the tractor engine indoors for more than a few seconds, be sure to provide enough ventilation to remove the tractor exhaust fumes.
- Relieve all pressure in the hydraulic system before disconnecting the hose or performing other work on the system. Make sure all connections are tight and the hose is in good condition before applying pressure to the system.



WARNING: Hydraulic fluid escaping under pressure can be visible and have enough force to penetrate the skin. When searching for a suspected leak, use a piece of wood or cardboard rather than your hands. If injured, seek medical attention immediately to prevent serious infection or reaction.

- **Never work on the BALEBUSTER with the bale loader in the raised position. Lower the bale loader to ground level.**
- Check for loose or badly worn bolts or connectors.



- Check for loose or misaligned sprockets on bale conveyor.
- Follow Lubrication Instructions.
- Inspect rotor and all rotating parts for twine or wire build-up. REMOVE DAILY
- Check air pressure in tires, inflate to the tire manufacturers recommended psi. The manufacturers recommended psi will be listed on the side wall of the tire.
- Check wheel bearings, and seals.
- Check flail bolts and tighten flail knife anchor bolts to 200 foot pounds torque. Flail should pivot on the bushing not on the bolt. Flail bolts are 5/8"x4", Gr 8 fine thread.

1.7 Towing/road transport


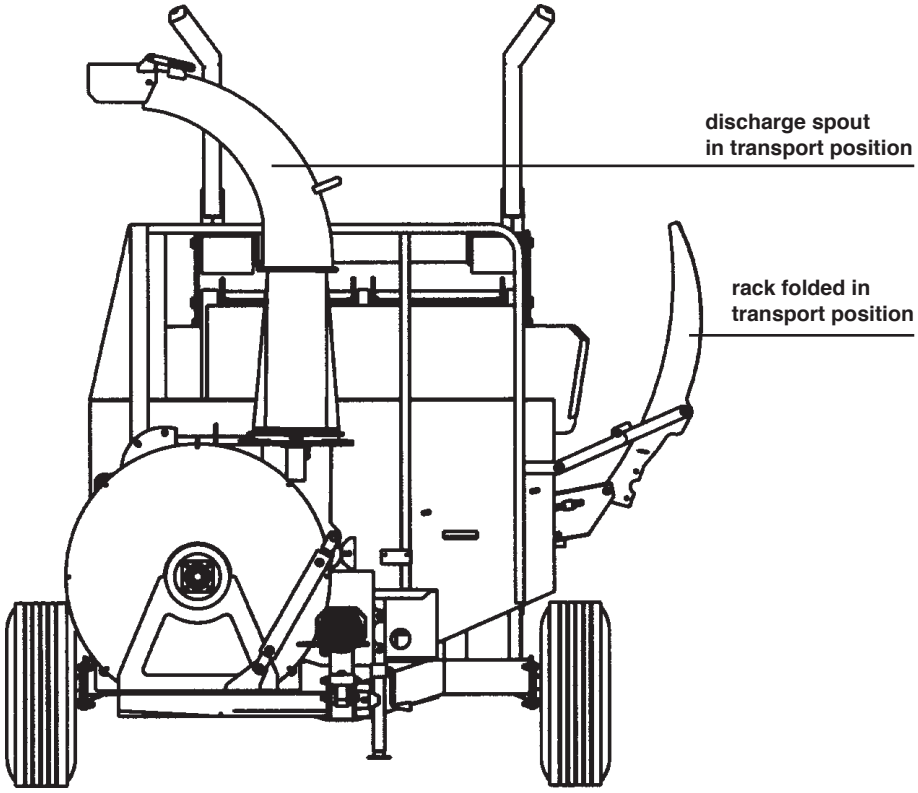


Figure 1.1
Rack, discharge spout and fan housing in the transport position

This machine is designed to fold for ease of transportation and storage. The rack assembly folds inside of bale chamber. A commercial diver's license may be required to tow this unit on public roads; verify with traffic control or licensing authorities.


- Use good judgment and drive slowly over rough or uneven terrain.
- Be sure tractor brakes are properly adjusted and foot pedals are locked together.
- When preparing implement for transport, it is recommended that the tines be removed or a pin be removed on each tine so they can pivot into the bale chamber.
- The discharge spout must be rotated to an upright position, and the fan housing must be locked in position with the strap bolted on the right side of the main frame (see Figure 1.1).
- Check your state laws regarding the use of lights, slow moving vehicle signs, safety chain and other possible requirements.



Section 2: Dealer preparation

2.1 Assembly required

1. Hitch the BALEBUSTER to the tractor drawbar. Adjust the hitch so machine is parallel with ground.
2. Raise the jack. Pull the lock pin and store in the transport position.
3. Mount fork tines to loader frame..
4. Attach the PTO shaft to the tractor PTO shaft. Depress coupling and slide the coupling onto the splined shaft. Make sure the spring loaded safety catch is properly seated.
5. Pull rack assembly into operating position.
6. If required, install the safety chain. Check local regulations regarding safety chain requirements.
7. Grease PTO before use.
8. This machine is set up to operate on 1000 RPM only!

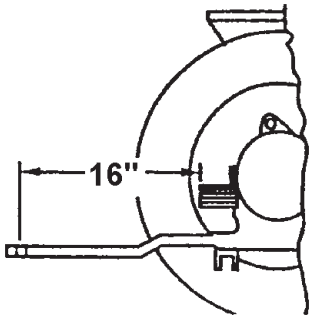

safe distance from PTO

For more information see section 3.3.1 "Tractor Set Up"

2.2 Pre-delivery inspection

INSTRUCTIONS: Before delivering the machine, check the following items carefully and make corrections when necessary. Place an "X" in the box after each item has been checked and found to be acceptable.

- ❑ Missing items or damage in transit.
- ❑ Loose bolts or set screws.
- ❑ Hydraulics components for leaks or damage.
- ❑ Lug bolts for tightness.
- ❑ Tires for proper air pressure.
- ❑ Condition of tire rims.
- ❑ Proper lubrication.
- ❑ All chains for proper adjustment.
- ❑ All shields for installation and condition.
- ❑ Condition of all decals.
- ❑ All phases of operation.
- ❑ Check for loose flail bolts, torque to 200 ft. lbs. (27 kg-m).

2.3 Machine operation check

With Tractor hooked up to the BALEBUSTER, try all functions on the machine.

WARNING: The electric\hydraulic system is polarity sensitive, reversing polarity will cause damage to the solenoid P\N (4000174)

CAUTION: The electric\hydraulic system has a check valve installed on the valve. Oil will flow only one direction from the tractor thru the valve.

With the engine off and key removed from the switch:

1. Adjust the spout, the fan housing should turn.
2. Adjust the deflector tip on the spout.
3. Adjust the slug bar


With the engine at idle:


1. Raise and lower the loading arms.
2. Adjust the spout if equipped with the hydraulic motor option.
3. Engage the bale conveyor, adjust conveyor speed control valve on the BALEBUSTER.
4. Engage the tractor PTO, the rotor, transfer auger, and fan should be running. Listen for any odd noises and vibrations.


Three Pin Socket

An auxiliary power connection is provided inside the operators compartment for connecting monitors, implement controllers, C.B. radios and other 12-volt equipment.

The three pin outlet is located on the right hand side to the rear of the seat. The outlet has a ground terminal and two 12-volt power terminals. One power terminal is through the key switch and the other is direct power.

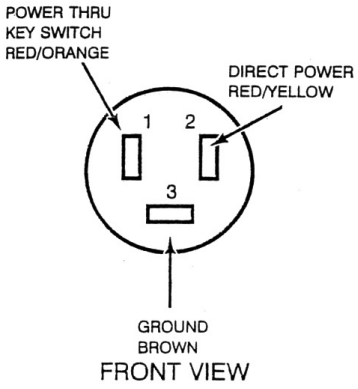

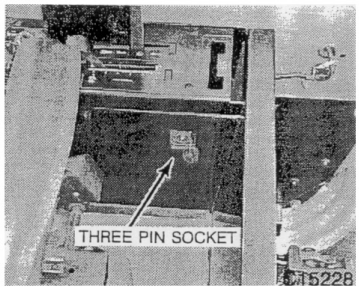



2.4 Loading tines



For shipping purposes the loading tines are placed on the loader as shown above.


After receiving the machine the loading tines need to be removed and put into the working position. See section **3.3.12 Loader** for setting the position of tines for bales.


Section 3: Operation

To insure long life and economical operation, we highly recommend the operator of the BALEBUSTER be thoroughly instructed in the maintenance and operation of the machine.

There is no substitute for a sound preventative maintenance program and a well trained operator.

Figure 3.1
Location of major components

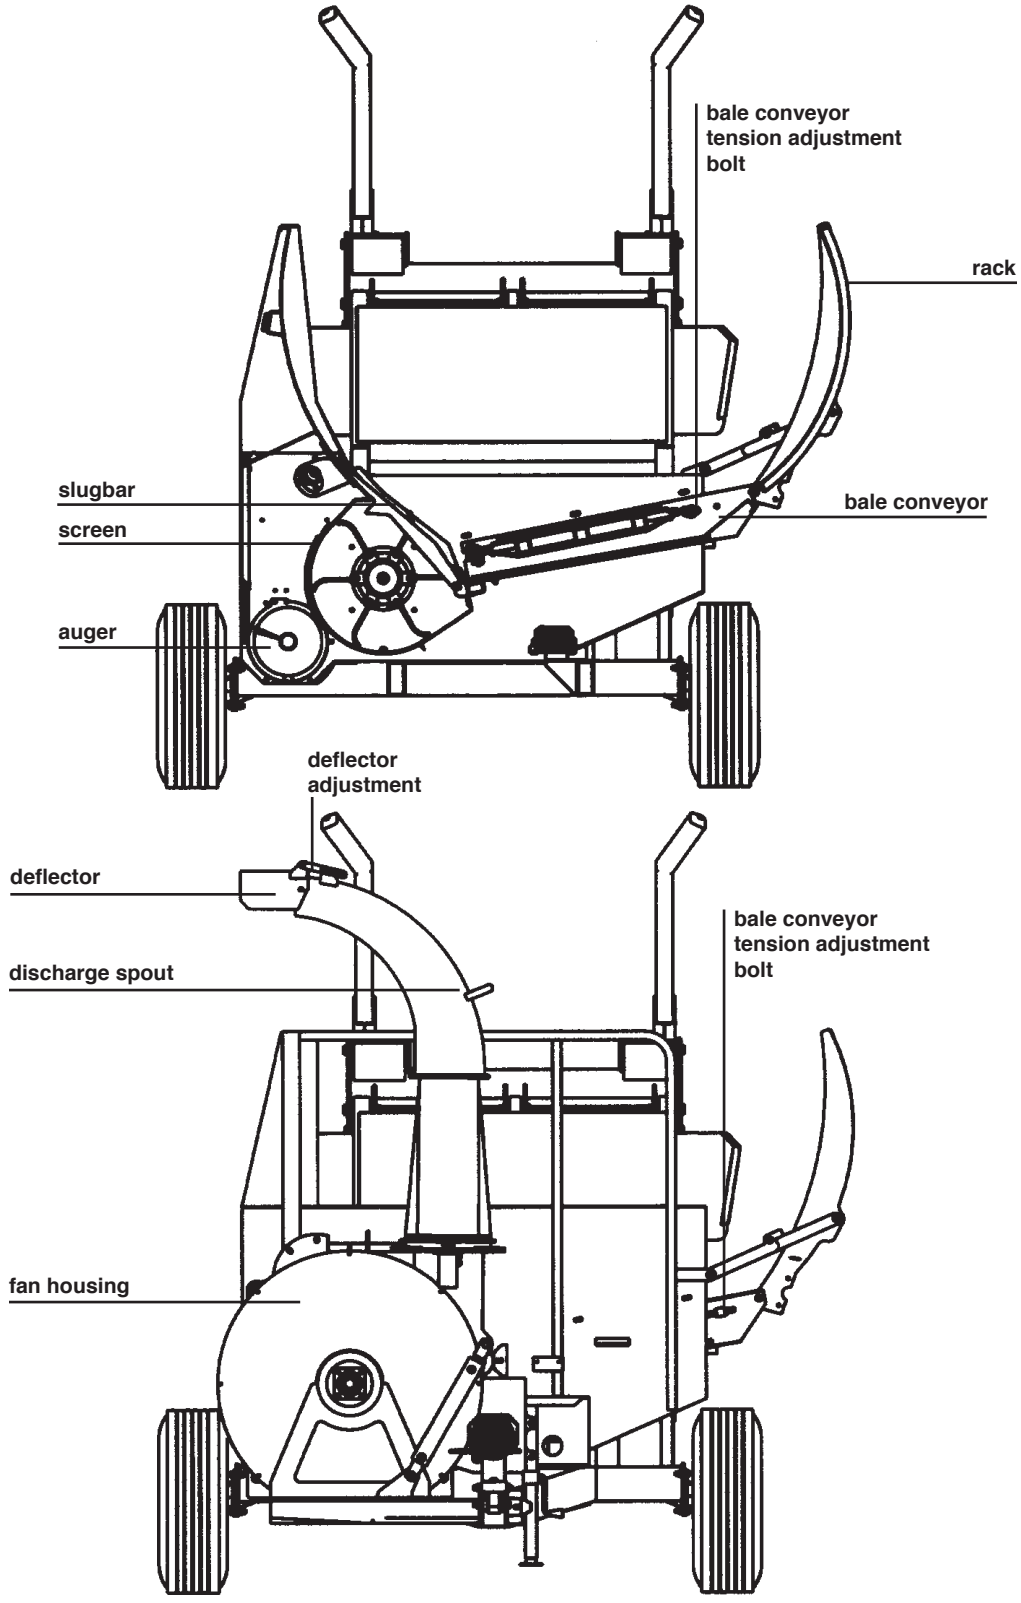



3.1 Pre-operation inspection

Prior to starting the engine of the tractor, we recommend the operator make a visual inspection of the unit. This can be done as the lubrication is being carried out. Any items that are worn, broken, missing or needing adjustment must be serviced accordingly before operating the BALEBUSTER.

WARNING: Before inspecting the machine, use the normal shut-down procedure in section 3.3.4.

Check the following:

- ❑ Transfer auger and screen for material buildup, and chunks from screen that have fallen into the transfer auger.
- ❑ Condition of flails and attachment bolts. Flail nuts are to be tightened to 200 ft. lbs. (27 kg-m).
- ❑ Rotor for twine build-up.
- ❑ Chains for proper tension, and condition.
- ❑ Keep auger pan door closed during operation
- ❑ Check for loose bolts, worn or broken parts.
- ❑ All lubrication points have been serviced.
- ❑ Lug nuts for tightness.
- ❑ Condition of tire rims.
- ❑ Tires for proper air pressure.
- ❑ Installation of slow moving vehicle (SMV) sign if required.
- ❑ Installation and condition of shields.
- ❑ Condition of decals.
- ❑ Hydraulic components for leaks or damage.

WARNING: Hydraulic fluid escaping under pressure can be almost invisible and can have sufficient force to penetrate the skin. When searching for suspected leaks, use a piece of wood or cardboard rather than your hands. If injured, seek medical attention immediately to prevent serious infection or reaction.

- ❑ Test run the BALEBUSTER before loading. To prevent damaging the BALEBUSTER always engage PTO with engine idling. Look for excessive vibration, loose or broken parts. Make any necessary repairs before attempting to do any bale feeding.

3.2 Introduction to the machine

3.2.1 Operator controls

Operator controlled items:

- The loading tines, to load the bale. See section 3.3.6, “Loading”
- The PTO shaft, which runs the fan, auger, and rotor.
- The bale conveyor chain.

Adjustable items:


- The conveyor speed control valve. See section 3.4.4, “Adjusting the bale conveyor speed”
- Slug bar setting
- Screen size
- Spout and spout deflector settings

3.2.2 Bale conveyor

The Bale conveyor keeps the bale moving into the flails, forcing the bale to rotate, and keeping product in front of the flails


Bale conveyor speed is set with the conveyor speed control valve or tractor controls if equipped with a PFC system.

To chop the forage finer, decrease the conveyor speed by rotating the control lever up and to the left. For a coarser cut, increase the conveyor speed by rotating the lever to the right and down.

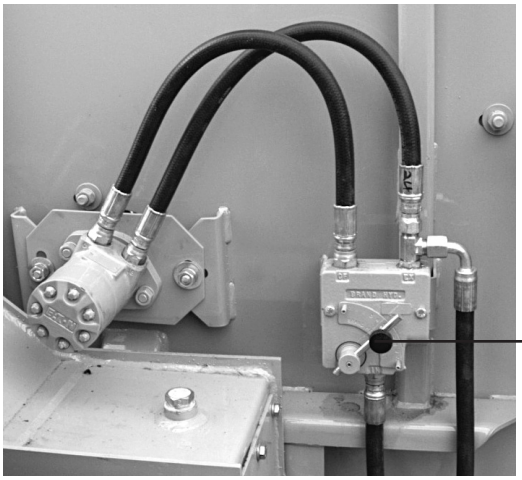

3.2.3 Rotor


The rotor flails shred the bale and throws the material into the augers. Rotor speed should remain constant, which is done by keeping the tractor PTO at 1000 RPM.



3.2.4 Auger

Transfers material from rotor chamber to fan, driven by the rotor.

Figure 3.2
Rotor, bale conveyor, slug bars, and the screen

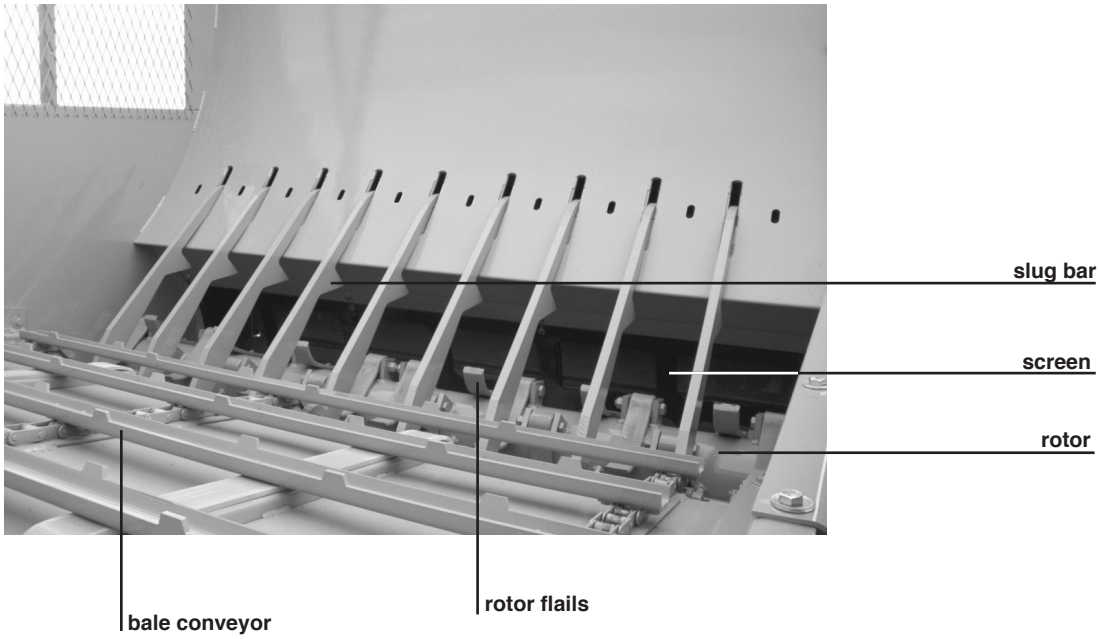

3.2.5 Slug bars

The 2564 BALEBUSTER comes standard with 9 slug bars. The slug bars control the depth that the flails cut into a bale as it is being shredded. As the depth of the cut becomes larger, the output becomes coarser. The depth of cut is controlled by the slug bar ratchet. For more information, see section 3.4.5 on changing the slug bar settings.

3.2.6 Screen

Screens are used in the 2564 to regulate product size. Screen sizes are 4-1/4”x10-1/2”, and 6-1/2”x10-1/2” openings. The larger the hole, the coarser the product. Screens can be reversed when one edge becomes worn. See section 3.4.3 on changing screens.

3.2.7 Fan

Material goes through fan and is blown out discharge. Driven by PTO.

3.2.8 Discharge spout and deflector

The discharge spout and deflector assembly can be adjusted for different scattering effects. Raise the deflector for a wider spread. Lower the deflector for a narrower windrow. Rotate the discharge spout and fan housing for distribution near the machine or farther out.

3.3 Machine Operation & Adjustments

3.3.1 Tractor Set Up

A tractor drawbar and 3-point arms can cause interference with the PTO driveline IID (Implement Input Driveline). This interference can cause serious damage to the IID guarding and the IID telescoping members.

If this implement is attached to a tractor with a clevis hitch (hammer strap) style drawbar, the hammer-strap must be removed to prevent damage to the IID guarding and the IID telescoping members. See Figure 1.

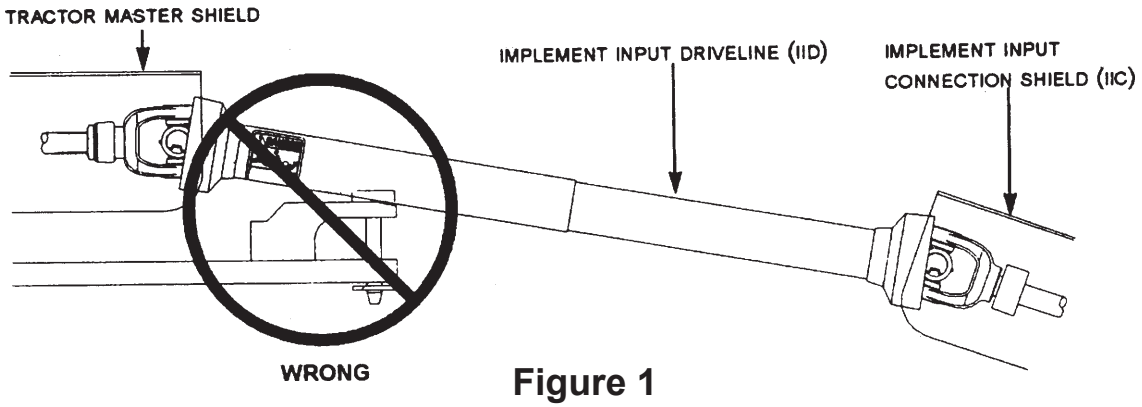


Figure 1

If this implement is attached to a tractor with an offset in the drawbar, be certain it is in the down position to prevent damage to the IID guarding and the IID telescoping members. See Figure 2.


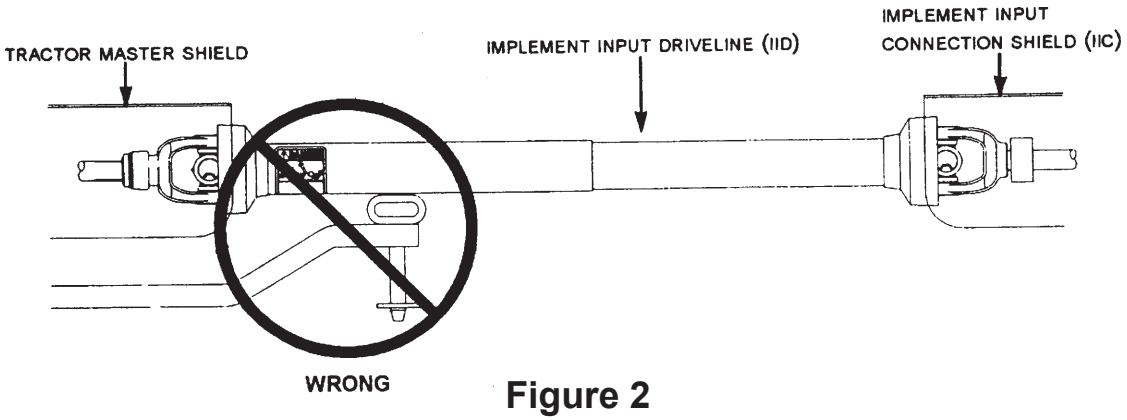


Figure 2


If this implement is attached to a tractor with 3-point arms, the arms must be fully raised and locked in position to prevent damage to the IID guarding and the IID telescoping members.

Hitch Adjustment

The hitch is adjustable so that the machine is parallel to the ground when attached to the tractor drawbar. This is accomplished by removing the two mounting bolts and reinstalling them with the hitch at the proper height. The distance from the end of the P.T.O. shaft on the tractor to the center of the drawbar hitch pin hole should be 16” (41 cm.), and the height from the top of the drawbar to the centerline of the P.T.O, should be 8”. **Refer to Page 20.**

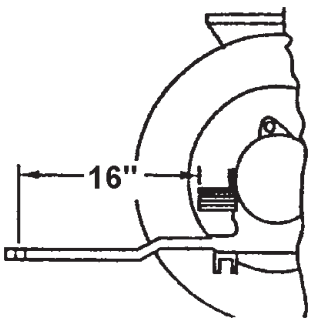


The hitch pin should be of proper size to prevent movement and length to extend through all components of the hitch. The pin should be secured with a hairpin clip or suitable device to prevent the loss of the pin.



3.3.2 Hitching the BALEBUSTER to a tractor

To hitch the BALEBUSTER to a tractor, perform the following steps:

1. Adjust jack for tractor height
2. Position tractor so hitch pin can be installed, and install the hitch pin.
3. Adjust jack so that the jackstand is loose. Then place jackstand in the raised and locked position.
4. Attach PTO to tractor.
5. Clean off the hydraulic hose ends and tractor couplings, then attach the hydraulic hoses.
6. Verify hydraulic hoses are hooked up in proper orientation.
7. Raise loading table before moving.

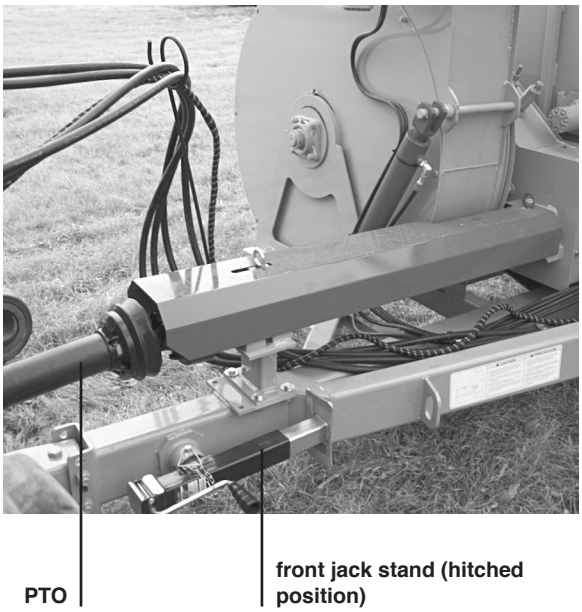


3.3.3 Starting the machine

WARNING: After making all necessary hook-ups to tractor, be sure rotor chamber is clear of any solid objects. Make sure any bystanders are away from discharge before engaging PTO. Flying objects can cause serious injury or even death. Stay clear of discharge side of machine unless operator has stopped tractor engine and machine has stopped rotating. Failure to follow these instructions may result in severe injury.

To start the machine, perform the following steps:

1. Machines hydraulic system performs two (2) functions. One function raises the bale loader for loading bales into the machine. The second function powers bale conveyor by means of a hydraulic motor.
2. Operating tractor PTO at 1000 RPM allows machine to do a better job of chopping forage and also keeps a minimum of twine build-up on the rotor. Twine build-up should be kept to a minimum to reduce fire hazard.
3. Always operate bale conveyor to rotate the bale in direction indicated by arrow on the front shield. Reverse direction only if the bale is lodged or hesitates to turn

4. **CAUTION:** Serious injury could result if machine is allowed to tip.



3.3.4 Normal shut-down procedure



WARNING: For your safety and the safety of others, you must use the following normal shut-down procedure before leaving the tractor controls unattended for any reason, including servicing, cleaning, or inspecting the BALEBUSTER. A variation of the following procedure may be used if so instructed within this manual or your tractor manual or if an extreme emergency requires it.

To shutdown the machine, perform the following steps:

1. Shut hydraulic drive off for chain conveyor, and wait until the fan and auger are emptied out.
2. Reduce engine RPM to a low idle, wait for the fan to slow down. Disengage PTO.
3. Lower machine to ground level.
4. Place transmission in park or set park brake
5. Shut Off engine and remove key.
6. Wait for all movement to stop.

3.3.5 Unhitching the BALEBUSTER from a tractor

To unhitch the BALEBUSTER from a tractor, perform the following steps:


1. Follow Normal shut-down procedure
2. Lower jack and secure. Raise tongue off of the tractor draw bar
3. Detach the PTO shaft from the tractor.
4. Cycle the hydraulic control levers to release any pressure in the hydraulic hoses. Be sure loading table is completely down.
5. Detach the hydraulic hoses.
6. Detach electrical cable.
7. Remove the safety chain, if installed
8. Remove the hitch pin.
9. Place jackstand in the down and locked position. Lower BALEBUSTER into jackstand. Raise Jacks.

3.3.6 P.T.O. Shield

WARNING: Before removing the P.T.O. shield, be sure and follow the normal shut down procedure. Be certain that the tractor is shut off and all rotating components of the machine have come to a complete stop before removing the shield. Loose clothing is discouraged, and long hair should be restrained whenever working on P.T.O. shafts.


To remove the P.T.O. shield, unhook the hold-down latches near the front and rear of the shield and lift the shield.

figure 3.3a
P.T.O. shield removed -maintenance position.

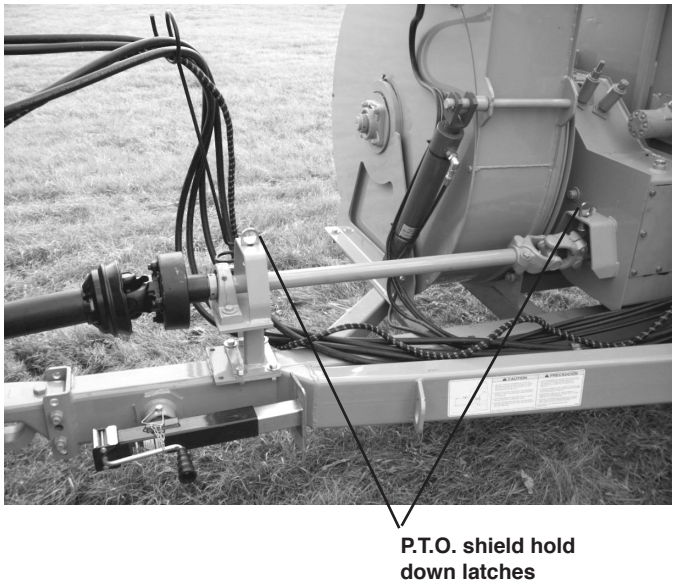


Once the shield is put in place, tighten the P.T.O. hold down latches.

figure 3.3b
P.T.O. shield, working (latched) position

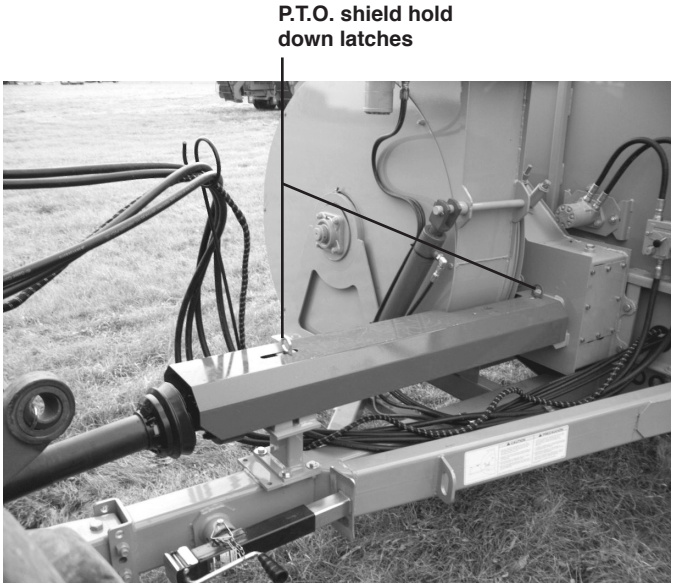


3.3.7 Conveyor Chain Adjustment

The three chain tensioning bolts should be adjusted to allow lifting the slats 1” to 1-1/2” above conveyor deck. These bolts are located, on the front of the conveyor, at the center, and on the rear. Bolts must be adjusted evenly.

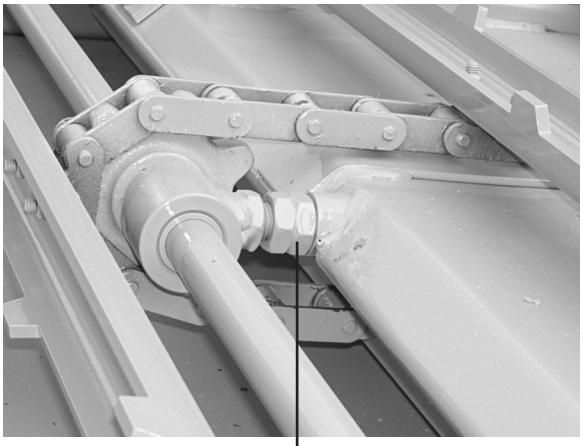

center conveyor chain adjustment bolt

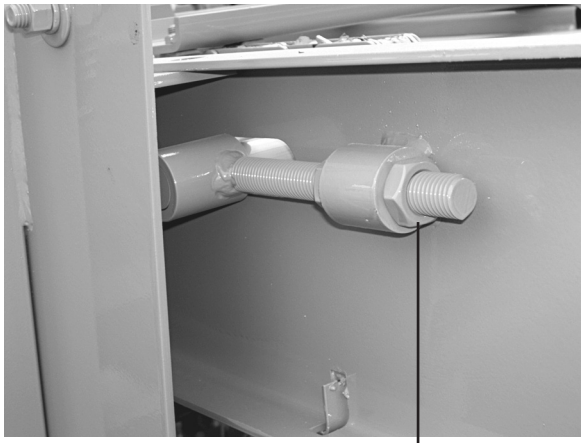



left conveyor chain adjustment bolt

3.3.8 Chain Case Adjustments.

It is normal for the chain to stretch. A spring-loaded idler sprocket maintains Chain tension. Adjusting the rod that protrudes through the top of the chain case changes chain tension. Chain tension can be checked by measuring the gap between the spring cover and the chain case. The correct dimension is 3/8 in. +\- 1/16 in.

The chain case was filled with hydraulic oil when assembled, (10-weight motor oil can be used.) To check oil level, remove the plug on the front of the chain case. The oil level is within 1/2 in. of the opening.

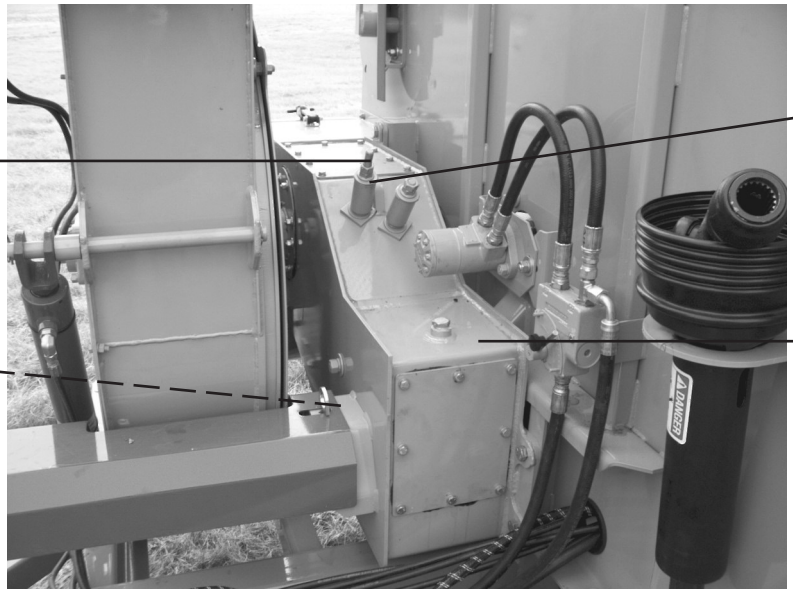



3.3.9 Slugbar Adjustment


Exposing, less flail will create a finer cut and use less horsepower, while exposing more flail will produce a coarser cut.

This is accomplished by rotating the slugbar adjustment handle. Rotating the handle clockwise will expose more flail, counterclockwise will expose less flail. To rotate the handle, squeeze the lever to release the lock and rotate the handle to the desired position, and release the lever. Be sure that the lever is seated in one of the adjustment slots to ensure that slugbars stay properly adjusted.

With the handle rotated fully counterclockwise the will expose the least amount of flail (position 1).

Position	Approx. Flail Exposed
1	1“
2	1-1/4”
3	1-1/2”
4	1- 5/8”
5	1-3/4”

Positions 1 through 3 are for grinding hay. Positions 4 and-5 should only be used when spreading Dry Straw. (**DO NOT,** use positions 4 and 5 if material is wet, has high moisture content or is frozen.)

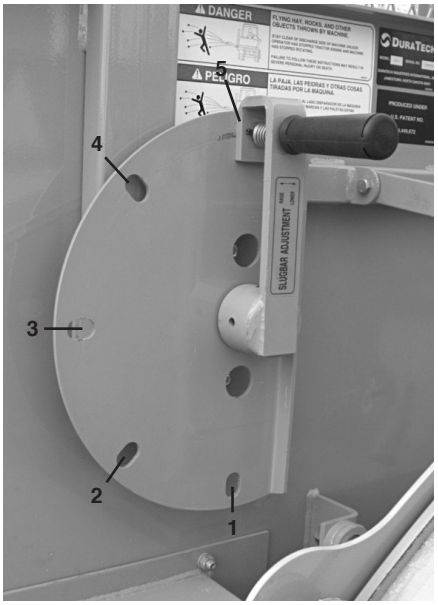


3.3.10 Clean Out Door

WARNING: Before opening the clean out door, be sure and follow the normal shut down procedure. Be certain that the tractor is shut off and all rotating components of the machine have come to a complete stop before opening clean out door.

The clean out door allows for easy access to the rotor for flail changes and twine removal. To open the door remove the lynch pins and release the latches. Lift the latch hooks and open the door.


To close the door, hook the latch hooks and close the handles. This should draw the door in tight. If the door is loose or can not be closed, check for obstructions. Hooks can be adjusted by screwing them in or out of the latch. Once the door is closed, replace the lynch pins.

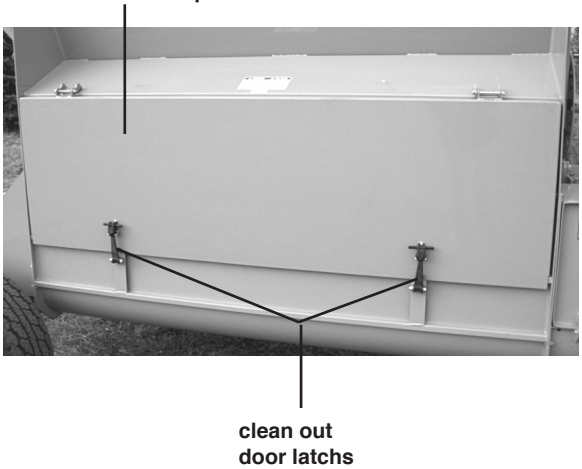

3.3.11 Flails

Flails must to be free to rotate about the bushings on the rotor. The bushings must not rotate. The bushings are held secure by tightening the bolts which squeeze the tabs against the bushing. Bolts should be torqued to 200 ft.-lbs. (27 kg-m).


figure 3.4
rotor and flails

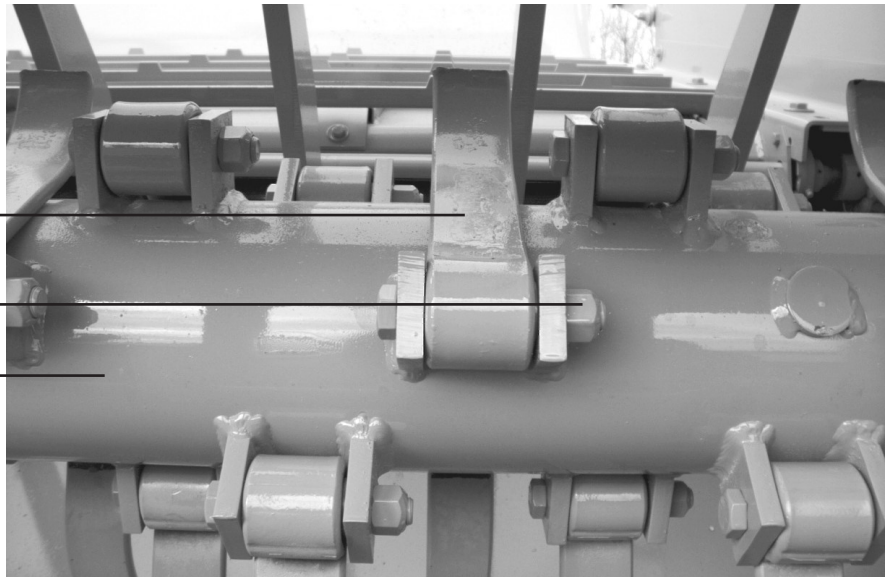

3.3.12 Loader

WARNING: Loader tines may swing down unexpectedly as they drop over center. They can move faster than you can react. Keep all bystanders away from the machine while loader is raised.

figure 3.5
Loader Tines

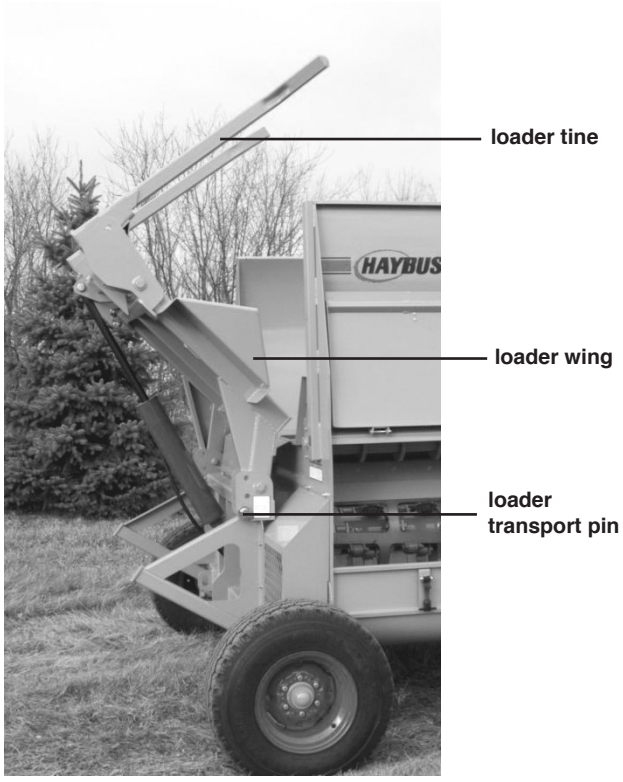


1. The loader has three settings for different size bales. For bales approximately 72” in diameter mount the loader tines in the outermost position. 60” bales require the loader tines to be positioned in the left outer slot and the right inner slot (left and right are determined while facing in the direction of travel). 48” bales require the tines to be positioned in the inner mounting slots (see below)

2. 48” bales use left inner and right inner mounting slots.

   60” bales use left outer and right inner mounting slots (standard).

   72” bales use left outer and right outer mounting slots.

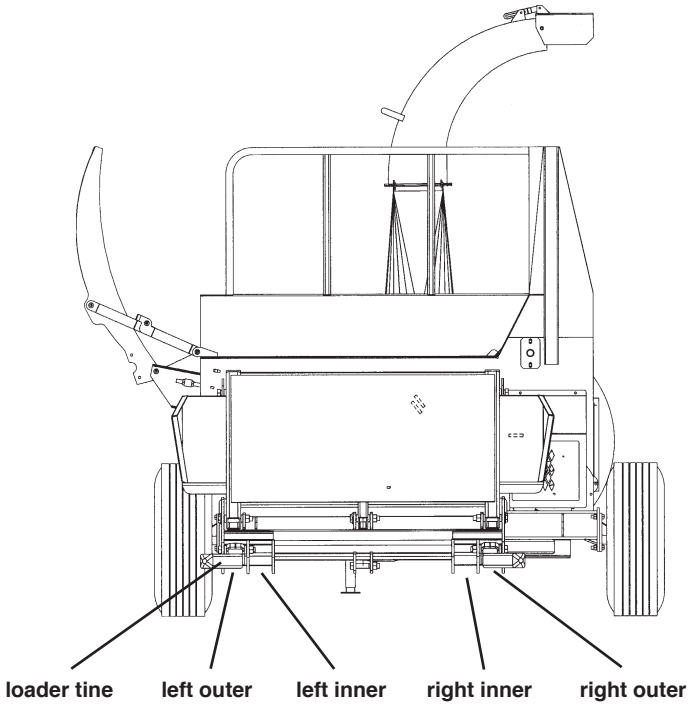


Tine mounting brackets

3. These settings are accomplished by removing the pivot bolts and removing the tine. After the tine is reinstalled in the proper position, reinstall the pivot bolt and tighten. Be sure the bolt threads protrude though the entire nut so that the locking nut functions properly. Do not over tighten the pivot bolt, the tine should rotate freely about the pivot bolt.

4. The loader tines should pivot freely as the loader is raised and lowered. If the loader tines don’t swing down into the loading position the bale will not load properly. With the loader fully raised the loader tines should swing down.



CAUTION: Watch for overhead hazards such as power lines.



3.3.13 Loading the bale

The bale conveyor must not be running when a bale is lifted into the shredding chamber. (*step3-5),* dropping bales on to the moving conveyor slats may bend slats.

DANGER: If it is necessary to transport a second bale over uneven terrain, make sure any bystanders are away from the 2564 BALEBUSTER. Serious injury or death could result if the bale rolls off the loader main frame loader supports.

STEP 1: Lower the bale loader part way down so you can so you can still see the end of the tine fork. Use the fork as a guide and back up to the first bale, with the bale loader in its lowest position, back up until the bale is loaded on the main frame loader supports

STEP 2: Slowly lift bale, until the flat end is frimly against the table. If you need to travel to the second bale, transport with the bale loader on the main frame supports, use the bale as a guide to line up the second bale.


STEP 3-5: Slowly lift bale into the shredding chamber. Continue lifting the bale loader until it stops. The correct position for shedding a single bale will help prevent spillage.


NOTE: If bale does not rotate forward the twine may be over the tine. Cut the twine at this time to prevent damage to the machine.

STEP 6: Load a second bale (if the first bale is on the main frame loader supports, use the bale as a guide to line up on the second bale). (If the first bale is in the shredding chamber use the conveyor and move the bale to the right so you can look past it on the left side). Back trailer until bale is loaded on the main frame loader supports. Slowly lift the bale off the ground keeping the weight of the bale on the main frame loader supports. This is the transport position for the second bale.

STEP 7: After the first bale is shredded, repeat steps, 3-5, loading and shredding the bale.

figure 3.6
loading the bale

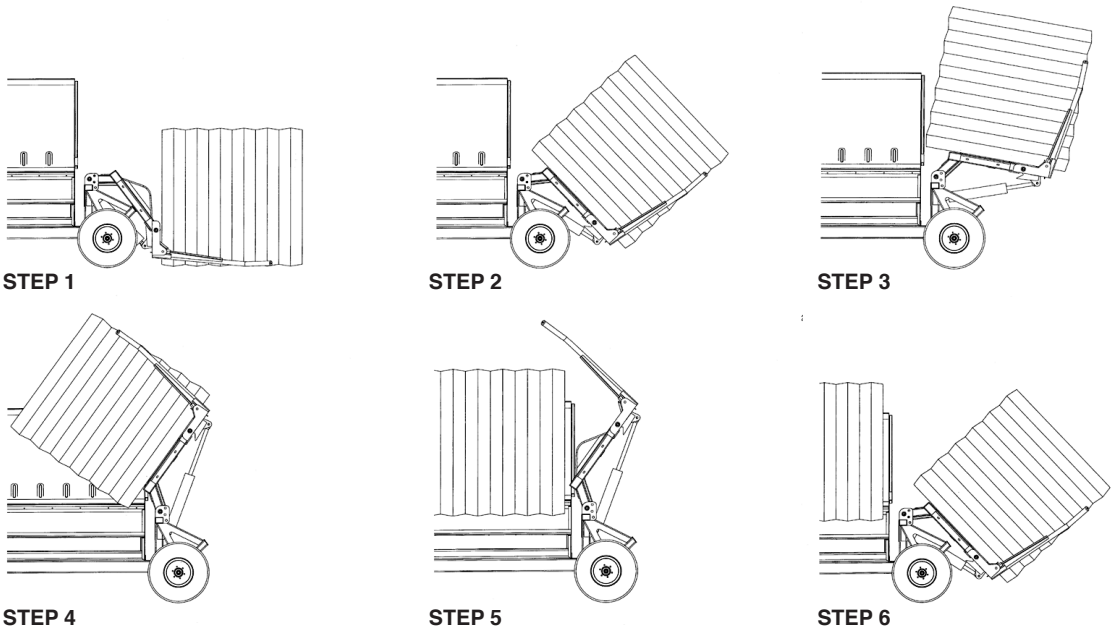



3.3.14 Operating the machine

To operate the machine, perform the following steps:

1. Load machine according to section 3.3.6 “Loading Bales”.
2. With tractor at half speed, engage PTO.
3. Increase tractor engine speed so PTO is at 1000 RPM.
4. Engage conveyor chain orbit motor hydraulics.
5. Drive as needed to spread as desired.

3.3.15 Loader Transport Pin



WARNING: Never stand under loader when removing transport pins. Do not attempt to force pins out, with the loader fully raised they can be easily removed.

The loader transport pins can be inserted into three positions:

1. Upper hole: Holds the loader in the fully raised position for transport.
2. Middle hole: Holds the loader partly raised. This improves rear visibility and reduces wind drag during transportation
3. Lowest hole: Holds the loader transport pin in storage position.



loader transport pin in storage position

3.3.16 Hydraulic Cylinder and Valve

All cylinder and valve hose connections should be tight and leak free. If the area near a hose connection becomes oily or dirty repairs should be made to seal the leak. Hoses should be free of cracks or cuts to ensure safe operation. Cylinder seal kits are available from your dealer to repair a leaky cylinder. Pin connections should be free of excessive wear. If pins become worn they should be replaced. Also check yokes and mounts for cracks and wear.



WARNING: Hydraulic fluid escaping under pressure can be almost invisible and can have sufficient force to penetrate the skin. When searching for suspected leaks, use a piece of wood or cardboard rather than your hands. If injured seek qualified medical attention immediately to prevent serious infection or reaction.

3.3.17 Tires and Rims


Tires should be inflated to 40 PSI (275 kPa) and should be free of cuts or cracks. There should also be adequate tread and no visible cords, wires or tread separation. Tires must also be of proper load rating, speed rating and size.

Rims must be free of cracks and rust pitting. Lug bolts must also be tight. Inspect the area around the lug bolts. If rust develops this is a sign of loose lug bolts. Check wheel bearings and seals, replace and grease as use requires.

3.3.18 Rack

The rack has two positions: transport and working. The rack should travel between the two positions freely under the operator's own power. All pivoting connections should be snug, but still allow the points to hinge freely. Inspect for cracked or excessively worn holes at the connections. The rack connection straps are designed to be self-folding and should not drop over center. If the straps become bent or do not function properly they should be replaced.

figure 3.7
rack in the working position, rack connection straps

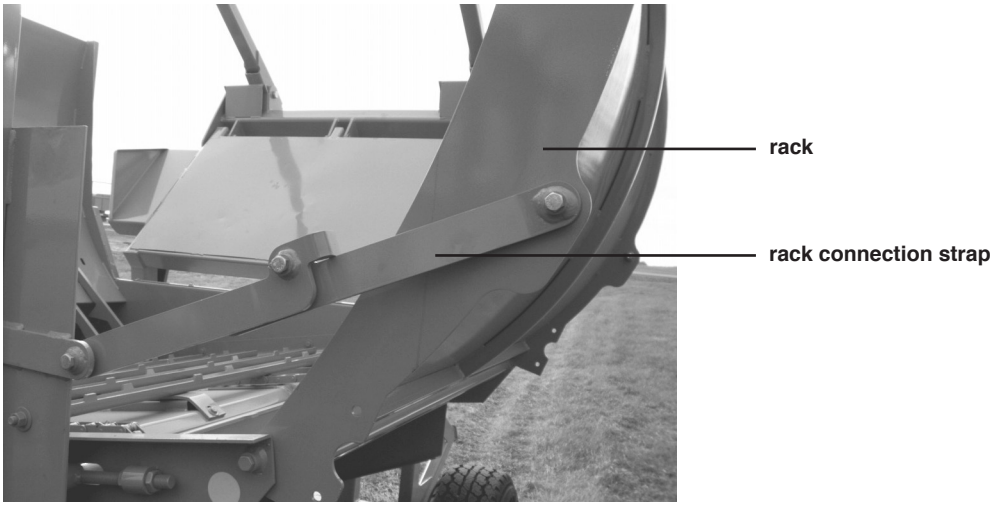


3.3.19 Jack

An adjustable jack is provided with the machine to support the hitch when the machine is disconnected from the tractor. The jack must only be used on firm, level ground or similar base to prevent it from sinking,

When unhooking the machine remove the jack pin and rotate the jack to the upright position and reinstall the pin. Crank the jack until the hitch is no longer supported by the drawbar of the tractor. The hitch pin can now be removed.

WARNING: Never use the jack without reinstalling the jack pin.

When hooking up the machine, install a proper hitch pin and secure it with a hairpin clip or comparable device, crank the jack until the foot of the jack is fully raised. Remove the jack, and place in transport position.



3.3.20 Hooking up hydraulic control box and hydraulics to tractor

To hook up the hydraulic control box to the 2564 Balebuster, line up plug from the control box to the plug on the machine and twist together. To disconnect twist opposite direction and pull apart.


Valves on the 2564 Balebuster are protected with a one way check valve to ensure proper function.

To engage tractor hydraulics so switches function correctly, turn on and lock one hydraulic function when operating the shredder.

If the direction of the lever is not right for the tractor or does not lock, reverse the hydraulic hose hook ups on the tractor.

Recommended hydraulic flow rate is 8 to 12 gallons a minute. If hydraulic flow is to low, it will cause the hoses to pulsate and if the flow is too high, damage to the valve will occur.

To hook up to 12 volt power, one of two power plugs is needed. For newer tractors with a three prong plug a 15 amp fuse is needed. For older tractors a wiring harness can be purchased (part #5700686) using a 15 amp fuse, and plugging the harness into a keyed power source.

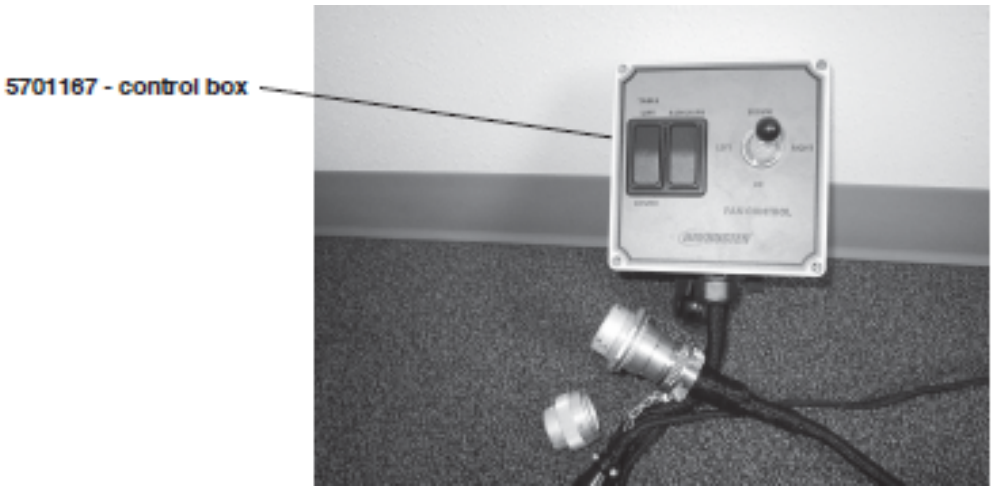

3.4 Adjusting the machine

3.4.1 Changing the output distribution pattern

The spout and deflector can be set to create a windrow or for spreading.

For bedding or mulching, remove the spout assembly. This allows the chopped material to discharge directly from the fan. The distance the material is thrown and the coverage may be varied by rotating the fan housing to obtain the desired results. Adding the optional barrel will throw the material farther.

For Bunk Feeding, set the spout in its working position. Adjust the deflector on the end of the spout up or down to help regulate the force of the material leaving the spout. When bunk feeding, raise the spout above the bunk and use the deflector to direct the material downward. This will reduce the force, helping to prevent material from blowing out of the bunk. If material is still blowing out of the bunk, PTO speed may be decreased.



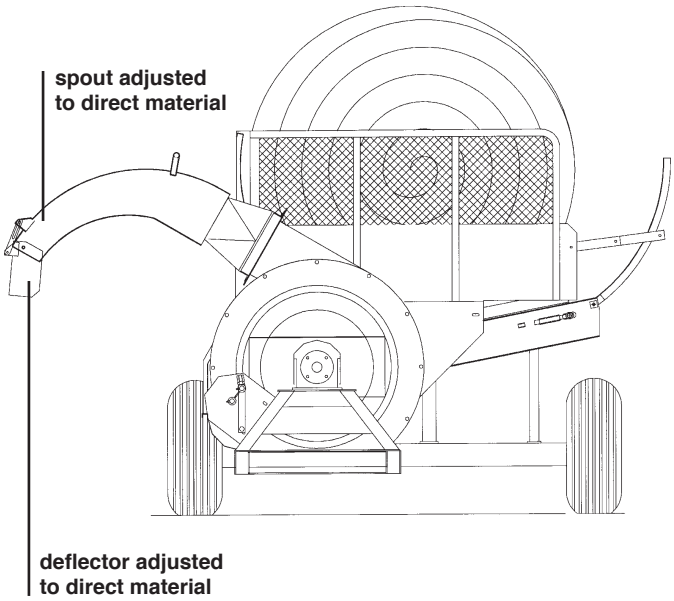


Figure 3.8
Spout, deflector and fan housing

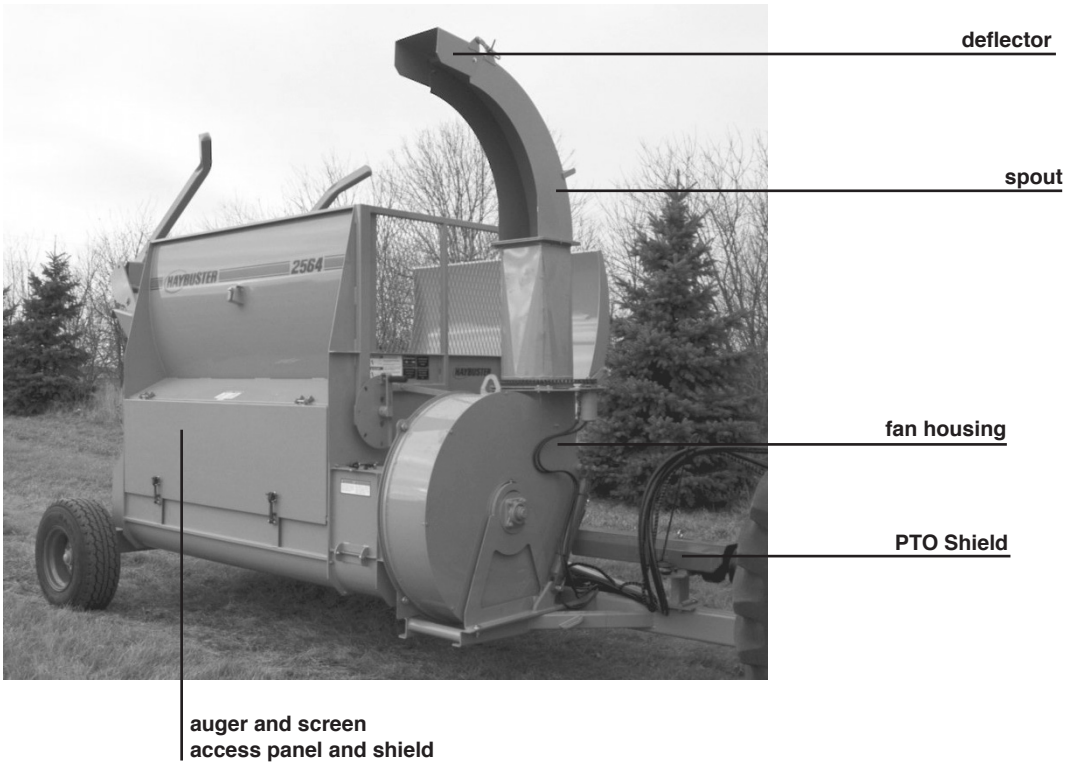

To create windrows set the spout and deflector as follows; with the spout latched in the working position, the deflector can be raised and the fan housing rotated to place the material in a row as desired.



3.4.2 Changing length of cut

Using conveyor speed and slug bar settings to determine material size will reduce the horsepower requirements and increase flail life. If a greater size reduction is required, then add a smaller screen.

Using a screen will produce a relatively small material size, but will require more horsepower, lower production (tons/hour), and result in greater flail and screen wear.

3.4.3 Changing screens

Using a screen with a smaller hole will produce a finer cut.

Where a coarse cut is desired, use a screen with a larger hole.

To change screens, perform the following steps:


1. Open the access door on side of machine
2. Remove 8 bolts
3. Slide screen out
4. Clean screen track
5. Insert new screen
6. Replace bolts, and access door

3.4.4 Adjusting the bale conveyor speed

Moving the lever counterclockwise will slow the conveyor, and make a finer product.. Moving the lever clockwise will speed up the conveyor and make a coarser product.

For tractors with PFC type hydraulic systems:

This valve should be set in the full open position. Conveyor speed can be controlled directly from the tractor controls.

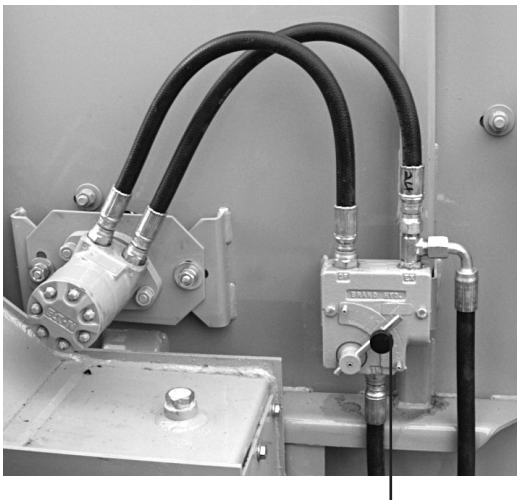

bale conveyor speed control valve

3.4.5 Changing the slug bar settings

Figure 3.9
Location of the slug bar ratchet



Exposing less flail will create a finer cut, while exposing more flail will create a coarser cut.

This is accomplished by adjusting the slug bar ratchet.


3.5 Road transport

3.5.1 Preparing the BALEBUSTER for transport

To prepare the machine for transport, perform the following steps:

1. Remove loader tines, and store them in the bale chamber or in the transporting vehicle. Save the bolts for later use.
2. Put loader frame in fully up position
3. Push up on links attaching rack to frame, push rack into transport position
4. Check condition of tires
5. Check condition of SMV sign, warning lights, safety chain, as required by local regulations.





3.5.2 Changing Back To Operate

To prepare the machine for operation, perform the following steps:

1. To prevent serious personal injury enforce and follow the safety precautions contained in this manual
2. Hook up to tractor.
3. Lower loader frame.
4. Return rack to working position

3.6 Storage


3.6.1 Preparing the machine for storage

This machine is designed to fold for ease of transportation and storage. The rack assembly folds inside of bale chamber.

To prepare the BALEBUSTER for storage, perform the following steps:

1. Shutdown the BALEBUSTER using the normal shutdown procedure.
2. Clean all mud, dirt, grease and other foreign material from the exterior of the machine. Cut all twine off from around the rotor, auger, and fan. Wash the complete machine. If washing the BALEBUSTER with a high pressure washer, keep the nozzle away from the sealed bearings. Repaint places where bare metal is exposed - this will inhibit rusting.
3. Place the jackstands in the down and in locked position. Block the rear axle up taking the weight off the tires, but do not deflate tires. If possible, store the machine in a dry, protected place. If it is necessary to store the machine outside, cover it with waterproof canvas, plastic, or other suitable protective material.
4. Coat exposed cylinder lift rod with grease. Oil chains on conveyor. Lubricate thoroughly according to lubrication instructions. Repack wheel bearings.
6. Check the machine for any worn or broken parts.

By ordering parts now, you will avoid delays when it is time to remove the machine from storage. When ordering parts always specify machine serial number and the part number of the replacement part. Part numbers can be found in the parts section of this manual.



3.6.2 Removing the machine from storage

To remove the BALEBUSTER from storage, perform the following steps:

1. Remove all protective coverings.
2. Remove blocking from under the machine
3. Lubricate machine in accordance with lubrication instructions found in this manual.
4. Follow pre-starting inspection instructions.

Section 4: General maintenance

IMPORTANT: Before performing any service or maintenance on your BALEBUSTER, review the safety guidelines for performing service and maintenance in section 1.6 "Safety review" under the heading "**WHEN PERFORMING SERVICE AND MAINTENANCE**".

4.1 Lubrication

LUBRICATION INSTRUCTIONS: The operator should make a check of all grease fittings in the unit before beginning to operate it so as to become familiar with their location and the correct service schedule.

WARNING: Use normal shut-down procedure (section 3.3.4) before lubricating machine.

Use only a high quality, multi-purpose grease when lubricating the unit. Make sure all fittings and the nozzle of the grease applicator are clean before applying the grease. If any grease fittings are missing, replace them immediately.

4.1.1 LUBRICATION POINTS

The following grease points will require an eight (8) hour service interval.

- Idler Pivot - 1 see figure 4.1
- Transfer auger bearings - 2 see figure 4.1
- Rotor bearings - 2 see figure 4.1
- Fan Bearings - 2 see figure 4.2
- Fan House Pivot - 2 see figure 4.2 and figure 4.4

  Rotating the fan housing to different positions while greasing will help distribute grease better.
- Universal Joints - 2 see figure 4.3
- Telescoping Shaft - 1 see figure 4.3
- Driveline Support Bearings - 1 see figure 4.3
- Chain Case - 4 see figure 4.5 and figure 4.6

To insure best possible performance, all indicated locations should be greased as often as every four (4) hours under severe conditions. All grease points should be greased at equal intervals.

1. As many as 7 pumps of grease are required to purge all cross and bearing grease points with fresh grease.
2. Telescoping members require enough grease to maintain a smooth sliding action. When telescoping members become contaminated with dirty grease, they should be inspected and cleaned to insure smooth operation.
3. Shield components should be inspected to insure all components are in working condition or are replaced if damaged. A properly maintained shield will inhibit dirt from contaminating telescoping members.

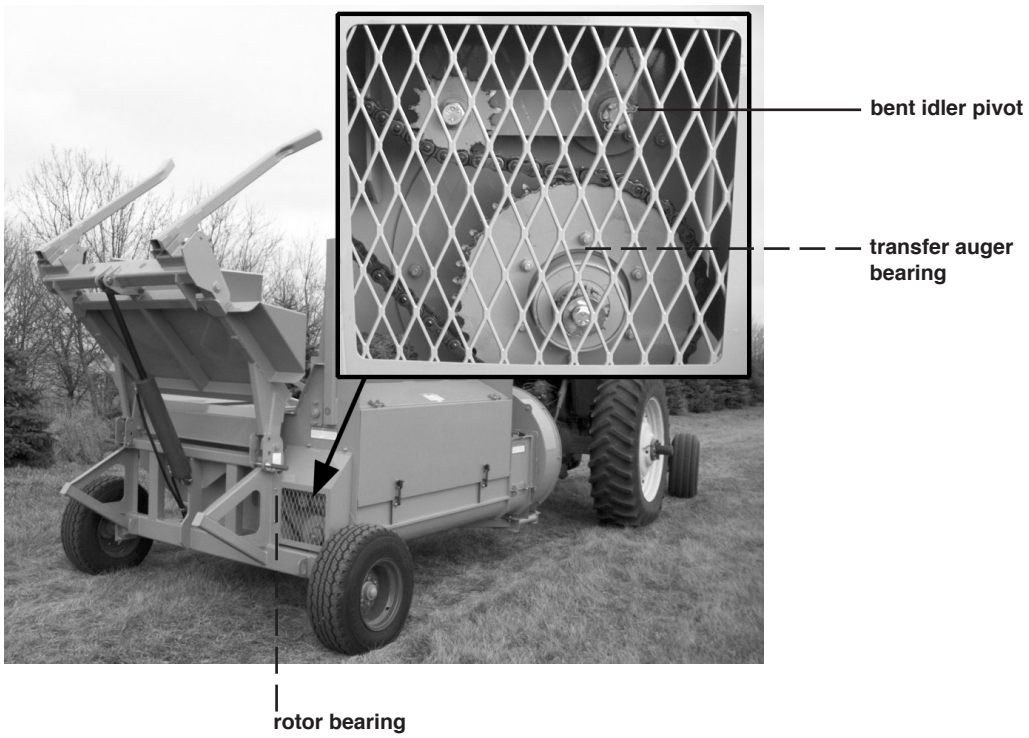


Figure 4.1
Lubrication points for bent idler pivot, transfer auger bearing and rotor bearing




Figure 4.2
Lubrication points for fan house pivot, fan bearings and fan hand crank

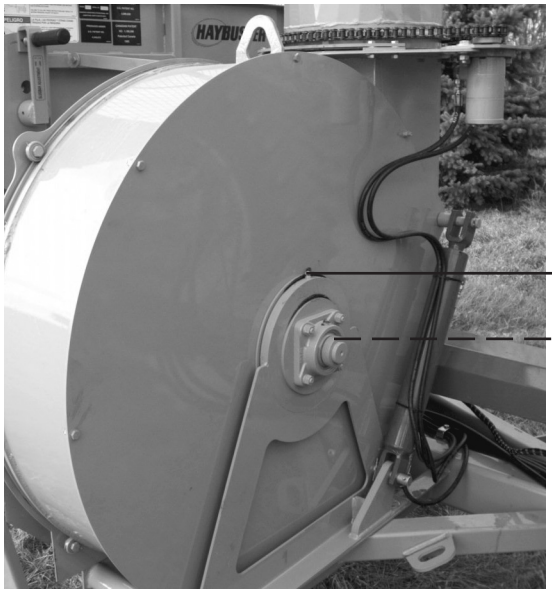
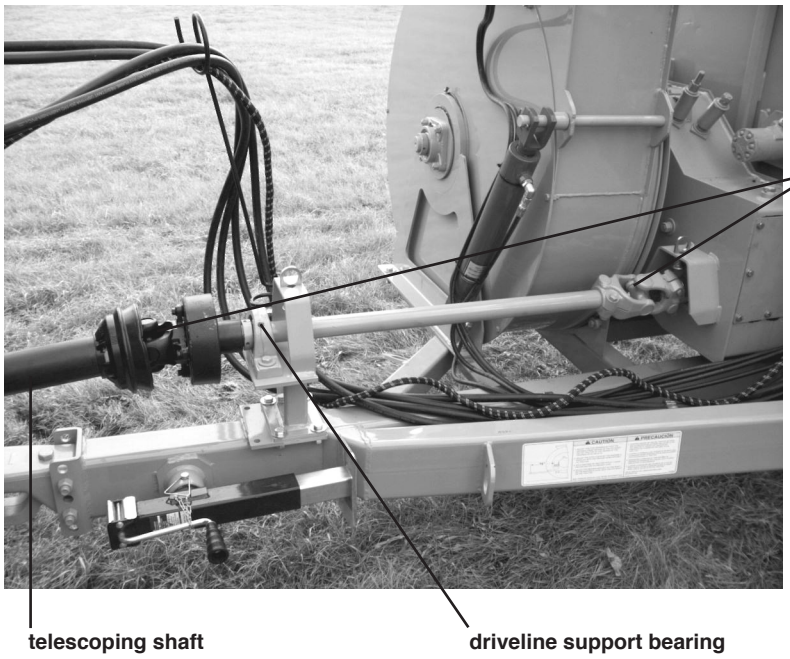


Figure 4.3
P.T.O. lubrication points






Figure 4.4
Lubrication points for chain case bearing and fan bearing

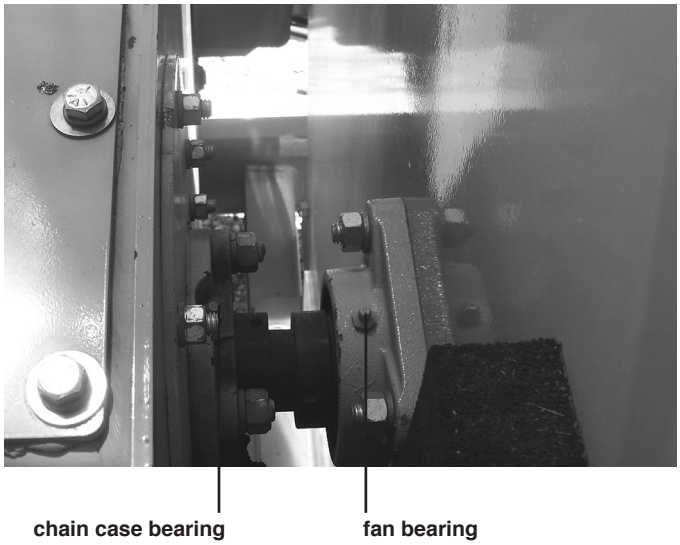


Figure 4.5
Lubrication points for chain case bearing


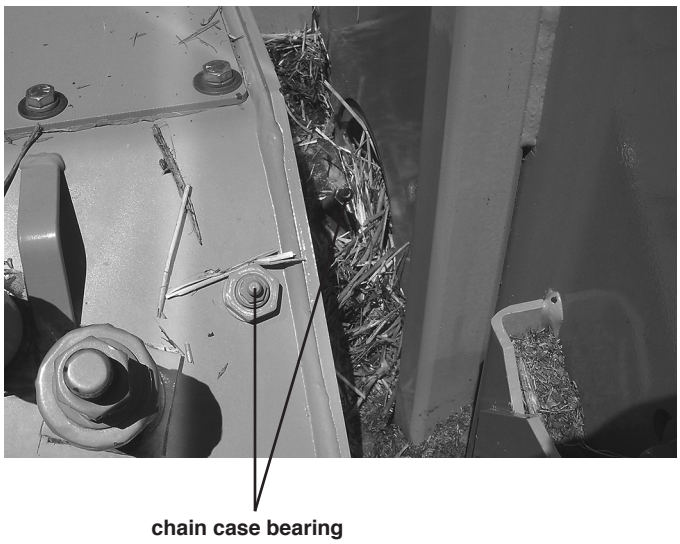


Figure 4.6
Lubrication points for chain case bearing





4.2 Axle, wheels, tires

Repack wheel bearings annually.

4.3 Conveyor chain tension


Figure 4.7
Bale conveyor chain tightener



Bale conveyor chain tension should be adjusted so the chain can be lifted 1” to 1-1/2” above the deck. Use the bale conveyor chain tightener shown in Fig 4.7 to tighten or loosen the bale conveyor chain tension.


4.4 General appearance

Clean all mud, dirt, grease and other foreign material from the exterior of the machine. Cut all twine off from around the rotor, auger, and fan. Wash the entire machine. If washing the BALEBUSTER with a high pressure washer, keep the nozzle away from the sealed bearings. Repaint places where bare metal is exposed. - this will inhibit rusting.



Section 5: Troubleshooting

PROBLEM	CAUSE	REMEDY
1 No Capacity	1. Bale turning too slow.	1. Open conveyor speed control valve.
2. Bale Does Not Turn	1. Bale lodged in feeder.	1. Reverse rotation of slat conveyor
3. Excessive Vibration	1. Broken Flail. 2. Defective cylinder bearing. 3. Misaligned or worn PTO 4. Build up of twine on rotor, auger, or fan. 5. Bent rotor, auger, or fan.	1. Replace Flail. 2. Replace Bearing. 3. Replace worn part or complete PTO. 4 Remove all twine from rotor, auger, and fan. 5. Replace as necessary
4. Machine Will Not Lift Bale	1. Tractor hydraulic pressure too low. 2. Hydraulic oil leaking by piston in cylinder.	1. Check pressure. 2. Repair or replace hydraulic cylinder
5. Forage Too Coarse	1. Conveyor speed too fast. 2. Slug bar set too low. 3. Screen removed or screen too coarse.	1. Decrease conveyor speed. 2. Raise slug bar to expose less flail. 3. Add a screen or install a finer screen
6. Forage Too Fine	1. Conveyor speed too slow. 2. Slug bar set too high. 3. Screen installed.	1. Increase conveyor speed. 2. Lower slug bar to expose more flail. 3. Install coarser screen.
7. Fan Plugs	1. Too much material going through fan	1. Slow conveyor speed down. 2. Adjust slug bars so less flail is exposed. 3. Install screen, or install finer screen.
8. Forage Blows Past Bunk When Bunk Feeding	1. Deflector spout to high.	1. Lower Deflector spout.
9. Forage Blows Out of Bunk		1. Reduce PTO speed.
10. Auger Plugs	1. Too much material going through fan.	1. Slow conveyor speed down. 2. Adjust slug bars so less flail is exposed. 3. Install screen, or install finer screen.
11. Auger Feeding Side Discharge Conveyor Plugs	1. Too much material going through transition.	1. Slow conveyor speed down. 2. Adjust slug bars so less flail is exposed. 3. Install screen, or install finer screen.



Appendix A: WARRANTY

Duratech Industries International Inc. warrants to the original purchaser for one year from purchase date that this product will be free from defects in material and workmanship when used as intended and under normal maintenance and operating conditions. This warranty is limited to the replacement of any defective part or parts returned to our factory in Jamestown, N.D., within thirty (30) days of failure.

This warranty shall become void if in DuraTech Industries International, Inc.'s., judgment the machine has been subject to misuse, negligence, alterations, damaged by accident or lack of required normal maintenance, or if the product has been used for a purpose for which it was not designed.


All claims for warranty must be made through the dealer which originally sold the product and all warranty adjustments must be made through same.

This warranty does not apply to tires or bearings or any other trade accessories not manufactured by DuraTech Industries International Inc.'s.. Buyer must rely solely on the existing warranty, if any, of these respective manufactures.

DuraTech Industries International Inc., shall **not** be held liable for damages of any kind, direct, contingent, or consequential to property under this warranty. DuraTech Industries International Inc., cannot be held liable for any damages resulting form causes beyond its control. DuraTech Industries International Inc., shall **not** be held liable under this warranty for loss of crops, or rental costs or any expense or loss for labor or supplies.

DuraTech Industries International Inc., reserves the right to make changes in material and/or designs of this product at any time without notice.

All other warranties made with respect to this product, either expressed or implied, are hereby disclaimed by DuraTech Industries International Inc.



Appendix B: 2564 BALEBUSTER Specifications

General:

Tractor H.P. required ..... 100 HP (76.6 kw) to 155 HP (115.6 kw)
Capacity.....5-1/2' long x 6-1/2' diameter, 2000 lbs. (1.67 m x 1.98m, 907.2 kg)
Rotor Length .....78" (1.98 m)
Rotor Diameter(flail tip to flail tip) ..... 25-1/2" (64.8 cm)
Flails - Swinging / Heavy Spring Steele 40
Wheel - Taper Roller Bearings - Tire Size
PTO .....1000 RPM
Dual Hydraulics (single hydraulic system optional) .....1500 PSI (105.6 kgf/cm$^{2)}$
Tire Size .... See Appendix C
Cylinder.....4-1/2" x 24" (11.43 cm x 60.96 cm) Double Acting


Transport Position:

Height .....129" (3.26 m)
Width .....107" (2.71 m)
Length.....198" (5.02 m)
Weight .....6325 Lbs. (2,868.97 kg)

Working Positions:

Working Position 1 Bale Height.....129" (3.26 m)
Length.....198" (5.02 m)
Width .....123" (3.12 m)

Working Position 2 Bales Height .....129" (3.26 m)
Length.....271" (6.88 m)
Width .....123" (3.12 m)



Appendix C: Options

Hydraulic fan housing rotation, allows fan housing to be rotated “on the go”, requires 1 hydraulic valve and set of outlets on tractor

Hydraulic fan discharge spout rotation, allows discharge spout to be rotated on the go, also requires 1 hydraulic valve and set of outlets on tractor.

Cannon discharge spout, allows for spreading material over greater distance.

Shredder chamber right side extension.

Screens available are: 4-1/4” x 10-1/2”

6-1/2” x 10-1/2”

“No Loader” If machine is to be loaded by front end loader or the like, the loader may not be needed.

Manual fan housing rotation

Curved spout

Slugbars - Fixed

Tires: 12.5L X 15 8 PLY IMP

31 X 10.5 X 15 “C” HWY

14L X 16.1 8 PLY FLOT IMP

Appendix D: Required For Operation


WARNING: Do not operate the BALEBUSTER unless the tractor complies with the following requirements:


1. Horsepower - 80 HP minimum. 1000 rpm, 1-3/8” PTO shaft.
2. Rollover protective structure and seat-belts.
3. Hydraulic system - 8 gallons per minute (30 liters per minute) minimum, 1500 Psi minimum (105 bar).
4. Two double acting control valves.
5. The tractor must be of equal or greater weight than the BALEBUSTER and bale to assure adequate braking and steering control.
6. Counterbalance weight - It may be necessary to add weight to the front end of your tractor to maintain adequate tractor stability and control. At least 20% of the total weight must remain on the front axle.
7. Tractor os setup according to section 3.3.1 “tractor setup”
8. 12V D.C. Auxiliary power socket on tractor.


Three Pin Socket

An auxiliary power connection is provided inside the operators compartment for connecting monitors, implement controllers, C.B. radios and other 12-volt equipment.

The three pin outlet is located on the right hand side to the rear of the seat. The outlet has a ground terminal and two 12-volt power terminals. One power terminal is through the key switch and the other is direct power

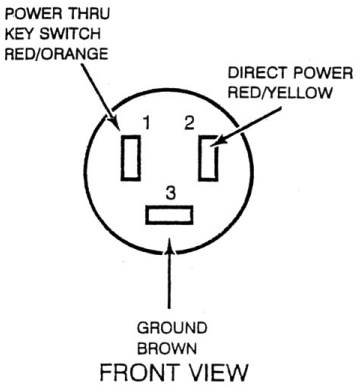

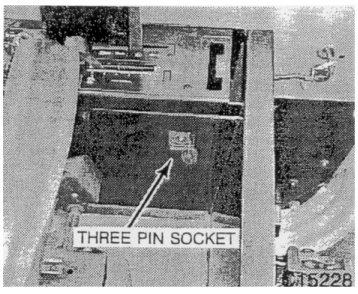



Appendix E: 2564 BALEBUSTER SHIPPING LIST

PART#	QUANTITY	DESCRIPTION
4800471	2	BOLT\HEX\1X7\NC
4900127	2	NUT\TPLCK\1\NC
8101033	1	TINE\SQ\LEFTHAND
8101075	1	TINE\SQ\RIGHTHAND
	1	CONTROL BOX CABLE ASSEMBLY




HAYBUSTER®

2564™ BALEBUSTER™

SERIAL NUMBER FJ053164 AND UP


Part 2: Parts Reference

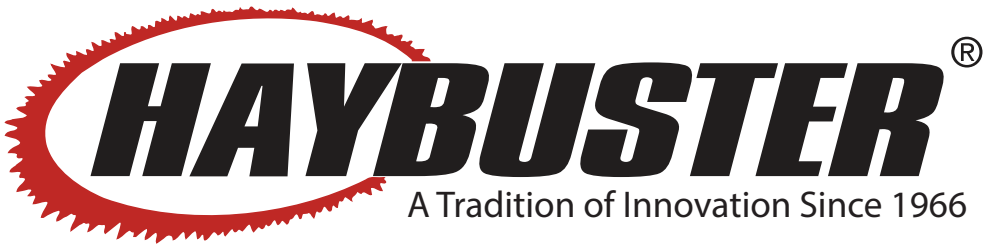
HAYBUSTER®
A Tradition of Innovation Since 1966


2564 Balebuster Parts Reference

MAIN FRAME ASSEMBLY (S.N. UP TO 0640) . . . 1
MAIN FRAME ASSEMBLY (S.N. 0641 AND UP) . . . 3
STANDARD DRIVE LINE ASSEMBLY . . . 5
OPTIONAL DRIVE LINE ASSEMBLY . . . 7
3600670 - PTO ASSEMBLY . . . 9
3600672-PTO OPTIONAL (FOR SN UP TO 0940) . . . 11
3600779-PTO WWCV EQUAL ARM - OPTIONAL (FOR S.N. 0941 AND UP) . . . 13
FAN ASSEMBLY . . . 15
CHAIN CASE ASSEMBLY (S.N. UP TO 0640) . . . 19
CHAIN CASE ASSEMBLY (S.N. 0641 AND UP) . . . 23
SHREDDER ASSEMBLY FRONT (THRU S.N. 10089064) . . . 29
SHREDDER ASSEMBLY FRONT (S.N. 10089164 & UP) . . . 31
SHREDDER ASSEMBLY - SHIELDS, DOOR, & SCREEN (S.N. UP TO 0640) . . . 33
SHREDDER ASSEMBLY - SHIELDS, DOOR, & SCREEN (FOR SN 0641 TO 1008964) . . . 35
SHREDDER ASSEMBLY - SHIELDS, DOOR, & SCREEN (FOR SN 10089164 & UP) . . . 37
ROTOR AND AUGER ASSEMBLY (S.N. UP TO 0640) . . . 41
ROTOR AND AUGER ASSEMBLY (S.N. 0641 AND UP) . . . 45
SLUG BAR ASSEMBLY . . . 49
CONVEYOR ASSEMBLY (THRU S.N. 10089064) . . . 51
CONVEYOR ASSEMBLY (S.N. 10089164 THRU 12101564) . . . 55
CONVEYOR ASSEMBLY (S.N. 13101664 & UP) . . . 59
RACK ASSEMBLY . . . 63
LOADER ASSEMBLY . . . 65
WHEEL AND BEARING ASSEMBLY (THRU S.N. IJ084-064) . . . 67
WHEEL AND BEARING ASSEMBLY (S.N. 10084164 THRU 15131564) . . . 69
WHEEL AND BEARING ASSEMBLY (S.N. 16131664 AND UP) . . . 71
HYDRAULICS ASSEMBLY (THRU S.N. 10089064) . . . 73
HYDRAULICS ASSEMBLY (S.N. 10084164 AND UP) . . . 75
4000344 - HYDRAULIC VALVE . . . 77
4000479 - HYDRAULIC VALVE . . . 79
4000213 - Flow Control Valve . . . 81
4000331-Flow Control Valve . . . 83
CONTROL PANEL ASSEMBLY & SWITCH BOX . . . 85
JOYSTICK CONTROL BOX . . . 87
3900025 Orbit Motor Assembly . . . 89
3900033 Orbit Motor Assembly . . . 91
Optional Curved Spout . . . 93
Optional 5-1/2 Ft. Straw Cannon Assembly . . . 95
Optional Spout Hose Bracket . . . 97
Optional Spout Mini-Gun . . . 99
Optional 80 Degree Spout . . . 101
Optional Flotation Tires . . . 103
Optional Axle Extensions . . . 105
OPTIONAL STATIONARY SLUG BAR ASSEMBLY . . . 107
OPTIONAL HYDRAULIC SLUG BAR . . . 109
OPTIONAL SHREDDER EXTENSION ASSEMBLY . . . 111
OPTIONAL SHREDDER EXTENSION KIT . . . 113
OPTIONAL FENDER ASSEMBLY . . . 115
2564 OPTIONAL TAILLIGHT - FENDER MOUNTING (FOR SN UP TO 10089064) . . . 117
2564 OPTIONAL TAILLIGHT - FENDER MOUNTING (FOR SN 10089164 & UP) . . . 119
OPTIONAL BUNK CONVEYOR . . . 121
HYDRAULICS ASSEMBLY WITH BUNK CONVEYOR OPTION . . . 125
DECALS . . . 129
2564 HYDRAULIC SCHEMATIC - 3 SPOOL VALVE . . . 131
2564 HYDRAULIC SCHEMATIC - 4 SPOOL VALVE . . . 132
2564 ELECTRICAL SCHEMATIC . . . 133
4000344-HYDRAULIC VALVE - WIRE LAYOUT . . . 134
4000479-HYDRAULIC VALVE - WIRE LAYOUT . . . 135

TRACTOR/IMPLEMENT WIRING HARNESS 136
5700925/5701079 TAILLIGHT HARNESS 137

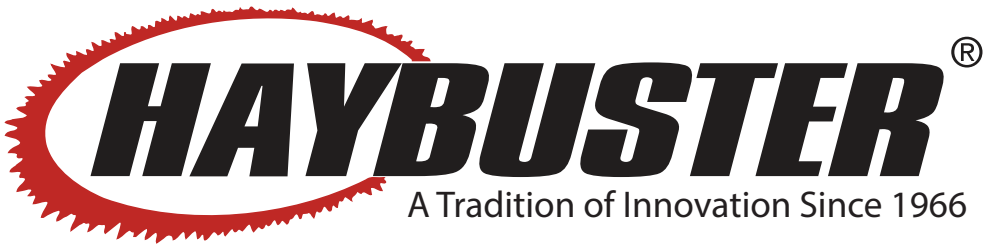
HAYBUSTER®
A Tradition of Innovation Since 1966


2564 Balebuster Parts Reference

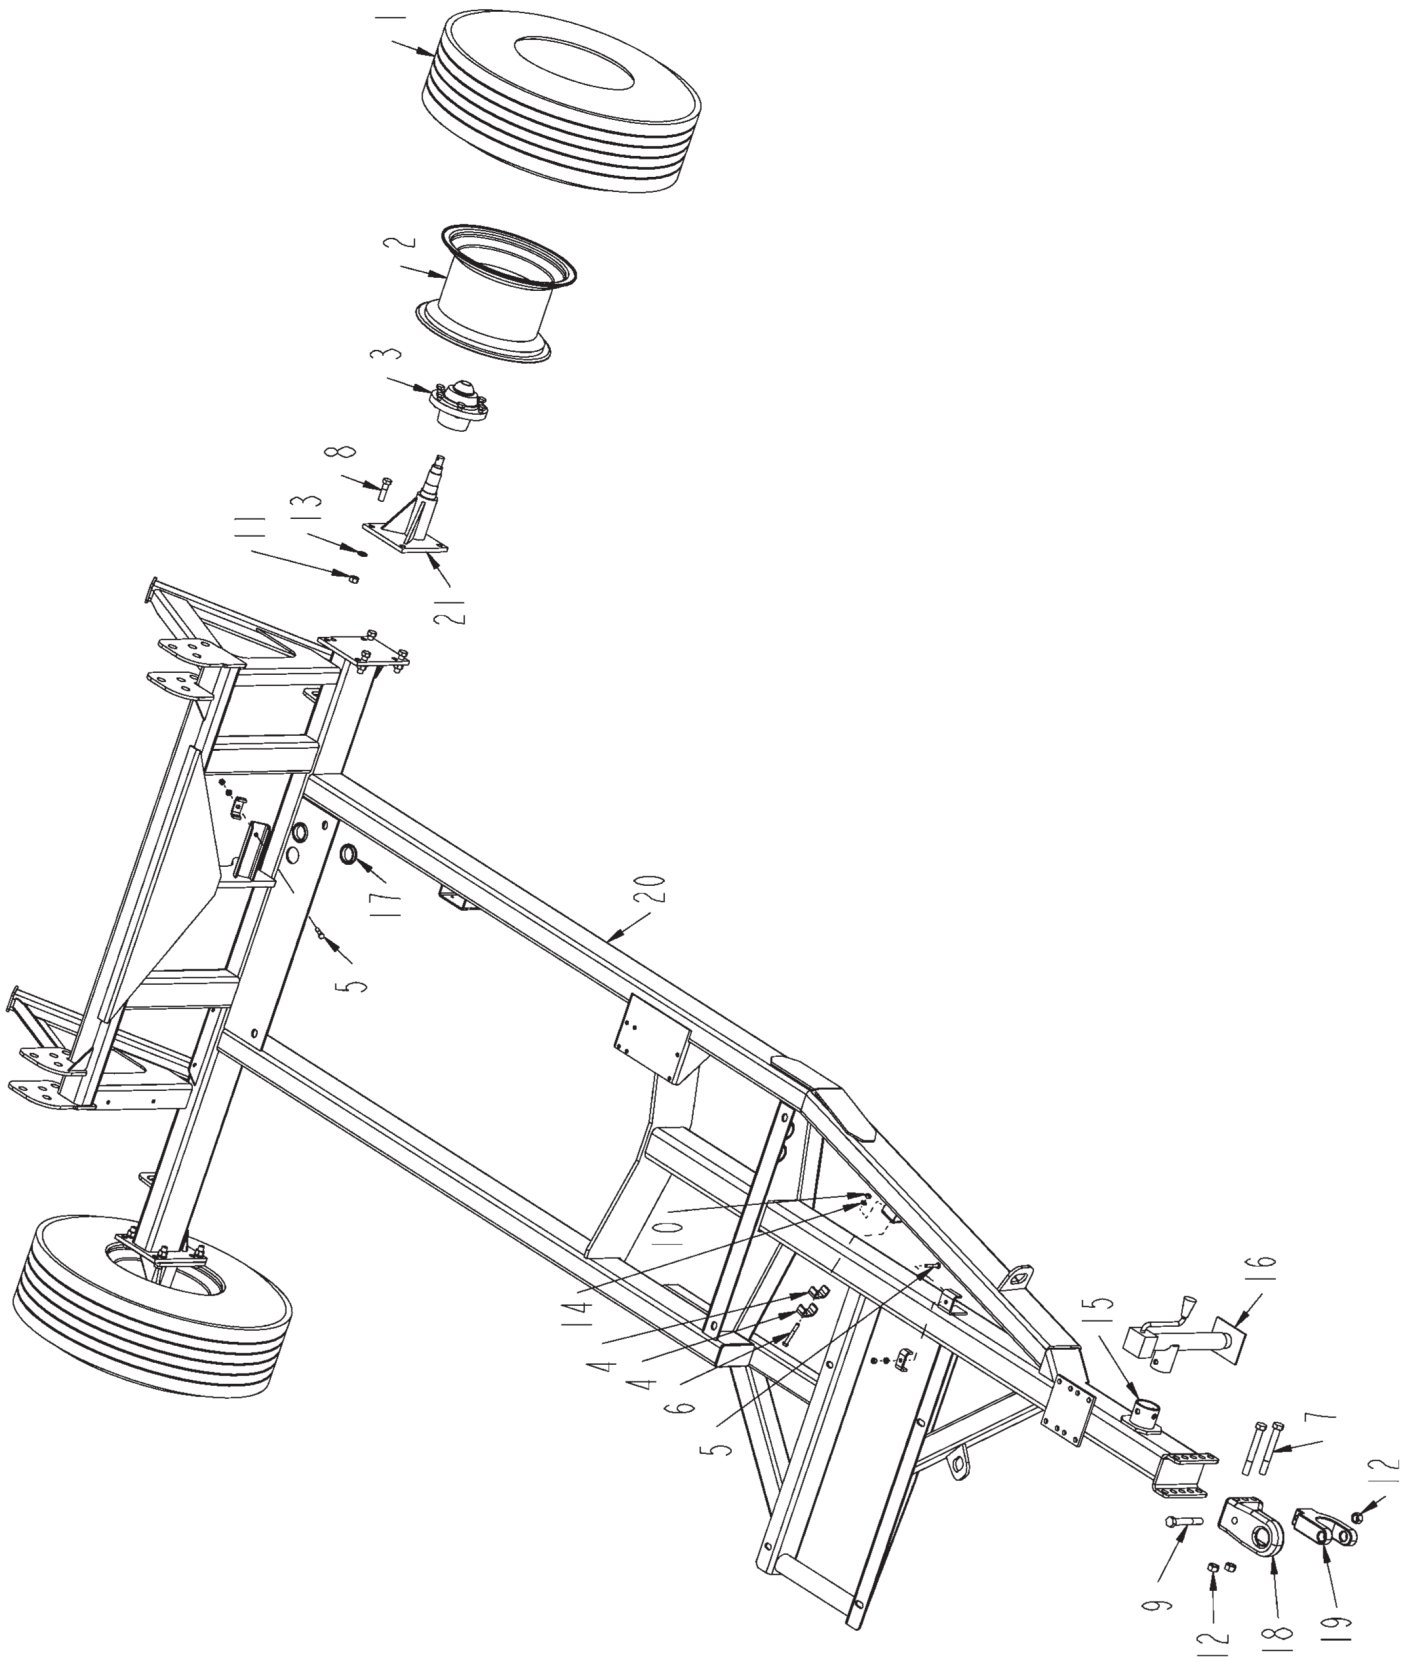

MAIN FRAME ASSEMBLY (S.N. UP TO 0640)

Item	Part No.	Name	Remarks	Qty	Uom
1	2600046	TIRE\12.5LX15\10PLY\RIBIM		2	EA
2	2600624	WHL\6-BOLT\15"X10"		2	EA.
	2600841	WHL\IMP\12.5L15\TIRE&RIM	Includes 2600046 and 2600624		EA
3	2900069	HUB\6BOLT\631\COMP		2	EA
4	4700777	CLMP\HOSE\1/2		4	EA.
5	4800146	BOLT\HEX\3/8X2		2	EA.
6	4800156	BOLT\HEX\3/8X3		1	EA.
7	4800248	BOLT\HEX\3/4X6		2	EA.
8	4800350	BOLT\HEX\5/8X2-1/4		8	EA.
9	4800562	BOLT\HEX\3/4X5\GR8\NC		1	EA.
10	4900002	NUT\HEX\3/8\NC		3	EA.
11	4900005	NUT\HEX\5/8\NC		8	EA.
12	4900139	NUT\TPLCK\3/4\GR8\NC		3	EA.
13	5000003	WASH\LOCK\5/8		8	EA.
14	5000019	WASH\LOCK\3/8		3	EA.
15	5800624	TUBE\FEMALE\JACK\7000LB		1	EA
16	5800632	JACK\5000LB\15"\SWIVEL-STYLE		1	EA.
17	7500360	GRMT\RBBR\2X1.75IDX1/4T		4	EA.
18	7501047	HITCH\BASE\#3\PPI\1"PIN		1	EA.
19	7501048	HITCH\CLEVIS\PPI\1"PIN		1	EA.
20	8101275	MNFRM\2564		1	EA
21	8101703	SPNDL\BOLT-ON\LIGHT_DUTY		2	EA
NS	1100275	CHAIN\1/4\SFTY\AG\11000LB		1	EA.
NS	4800382	BOLT\HEX\3/4X6-1/2		1	EA.
NS	5000005	WASH\FLAT\3/4		1	EA.
NS	5000030	WASH\FLAT\13/16\2OD\1/4T		1	EA.


2564 Balebuster Parts Reference

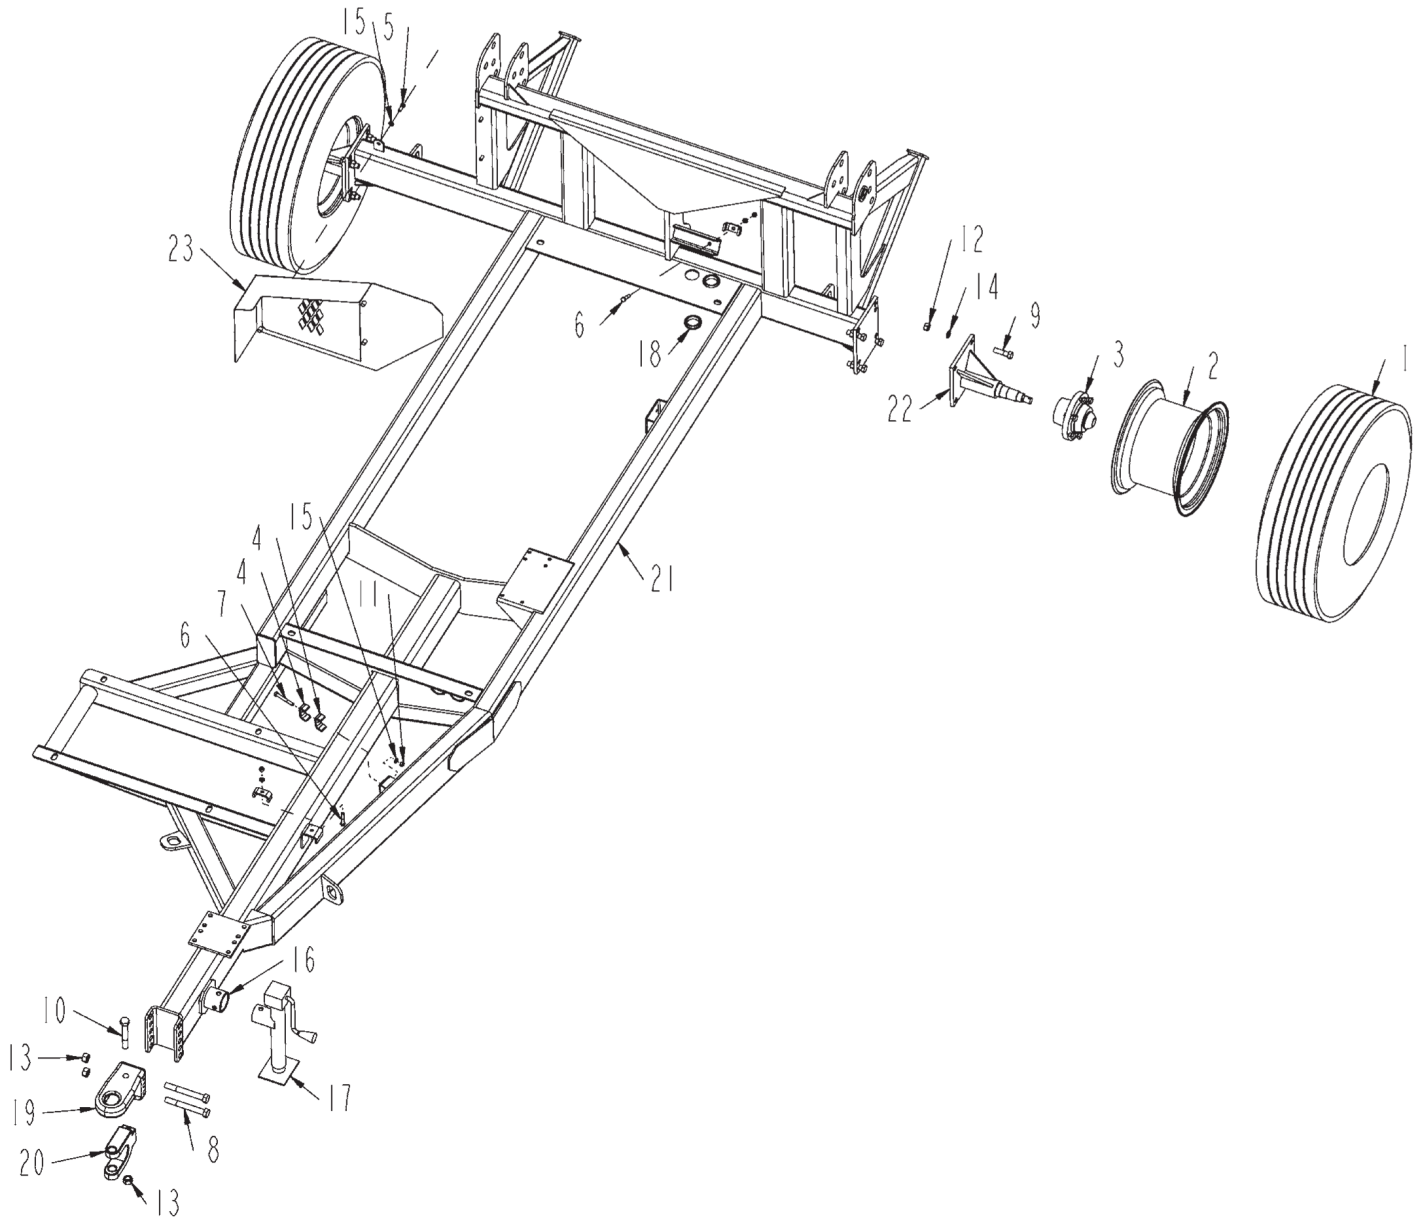

MAIN FRAME ASSEMBLY (S.N. 0641 AND UP)

Item	Part No.	Name	Remarks	Qty	Uom
1	2600046	TIRE\12.5LX15\10PLY\RIBIM		2	EA
2	2600624	WHL\6-BOLT\15"X10"		2	EA.
	2600841	WHL\IMP\12.5L15\TIRE&RIM	Includes #1-2600046 and #2-2600624		EA
3	2900069	HUB\6BOLT\631\COMP		2	EA
3A	2900163	HUB\6-BOLT\(875)COMPLETE	(For SN 10084164 to 15131564)	2	EA
3B	2900171	HUB\6-BOLT\STUDS\COMPLETE	(For SN 16131664 and Up)		EA.
4	4700777	CLMP\HOSE\1/2		4	EA.
5	4800003	BOLT\HEX\3/8X1		3	EA.
6	4800146	BOLT\HEX\3/8X2		2	EA.
7	4800156	BOLT\HEX\3/8X3		1	EA.
8	4800248	BOLT\HEX\3/4X6		2	EA.
9	4800350	BOLT\HEX\5/8X2-1/4		8	EA.
10	4800562	BOLT\HEX\3/4X5\GR8\NC		1	EA.
11	4900002	NUT\HEX\3/8\NC		3	EA.
12	4900005	NUT\HEX\5/8\NC		8	EA.
13	4900139	NUT\TPLCK\3/4\GR8\NC		3	EA.
14	5000003	WASH\LOCK\5/8		8	EA.
15	5000019	WASH\LOCK\3/8		6	EA.
16	5800624	TUBE\FEMALE\JACK\7000LB		1	EA
17	5800632	JACK\5000LB\15"\SWIVEL-STYLE		1	EA.
18	7500360	GRMT\RBBR\2X1.75IDX1/4T		4	EA.
19	7501047	HITCH\BASE\#3\PPI\1"PIN		1	EA.
20	7501048	HITCH\CLEVIS\PPI\1"PIN		1	EA.
21	8101275	MNFRM\2564		1	EA
22	8101703	SPNDL\BOLT-ON\LIGHT_DUTY		2	EA
22A	8101828	SPNDL\BOLT-ON\HVY_DUTY	(For 10084164 and up)	2	EA.
23	8101729	SHLD\DRIVE\AUGER		1	EA.
NS	1100275	CHAIN\1/4\SFTY\AG\11000LB		1	EA.
NS	4800382	BOLT\HEX\3/4X6-1/2		1	EA.
NS	5000005	WASH\FLAT\3/4		1	EA.
NS	5000030	WASH\FLAT\13/16\2OD\1/4T		1	EA.


2564 Balebuster Parts Reference

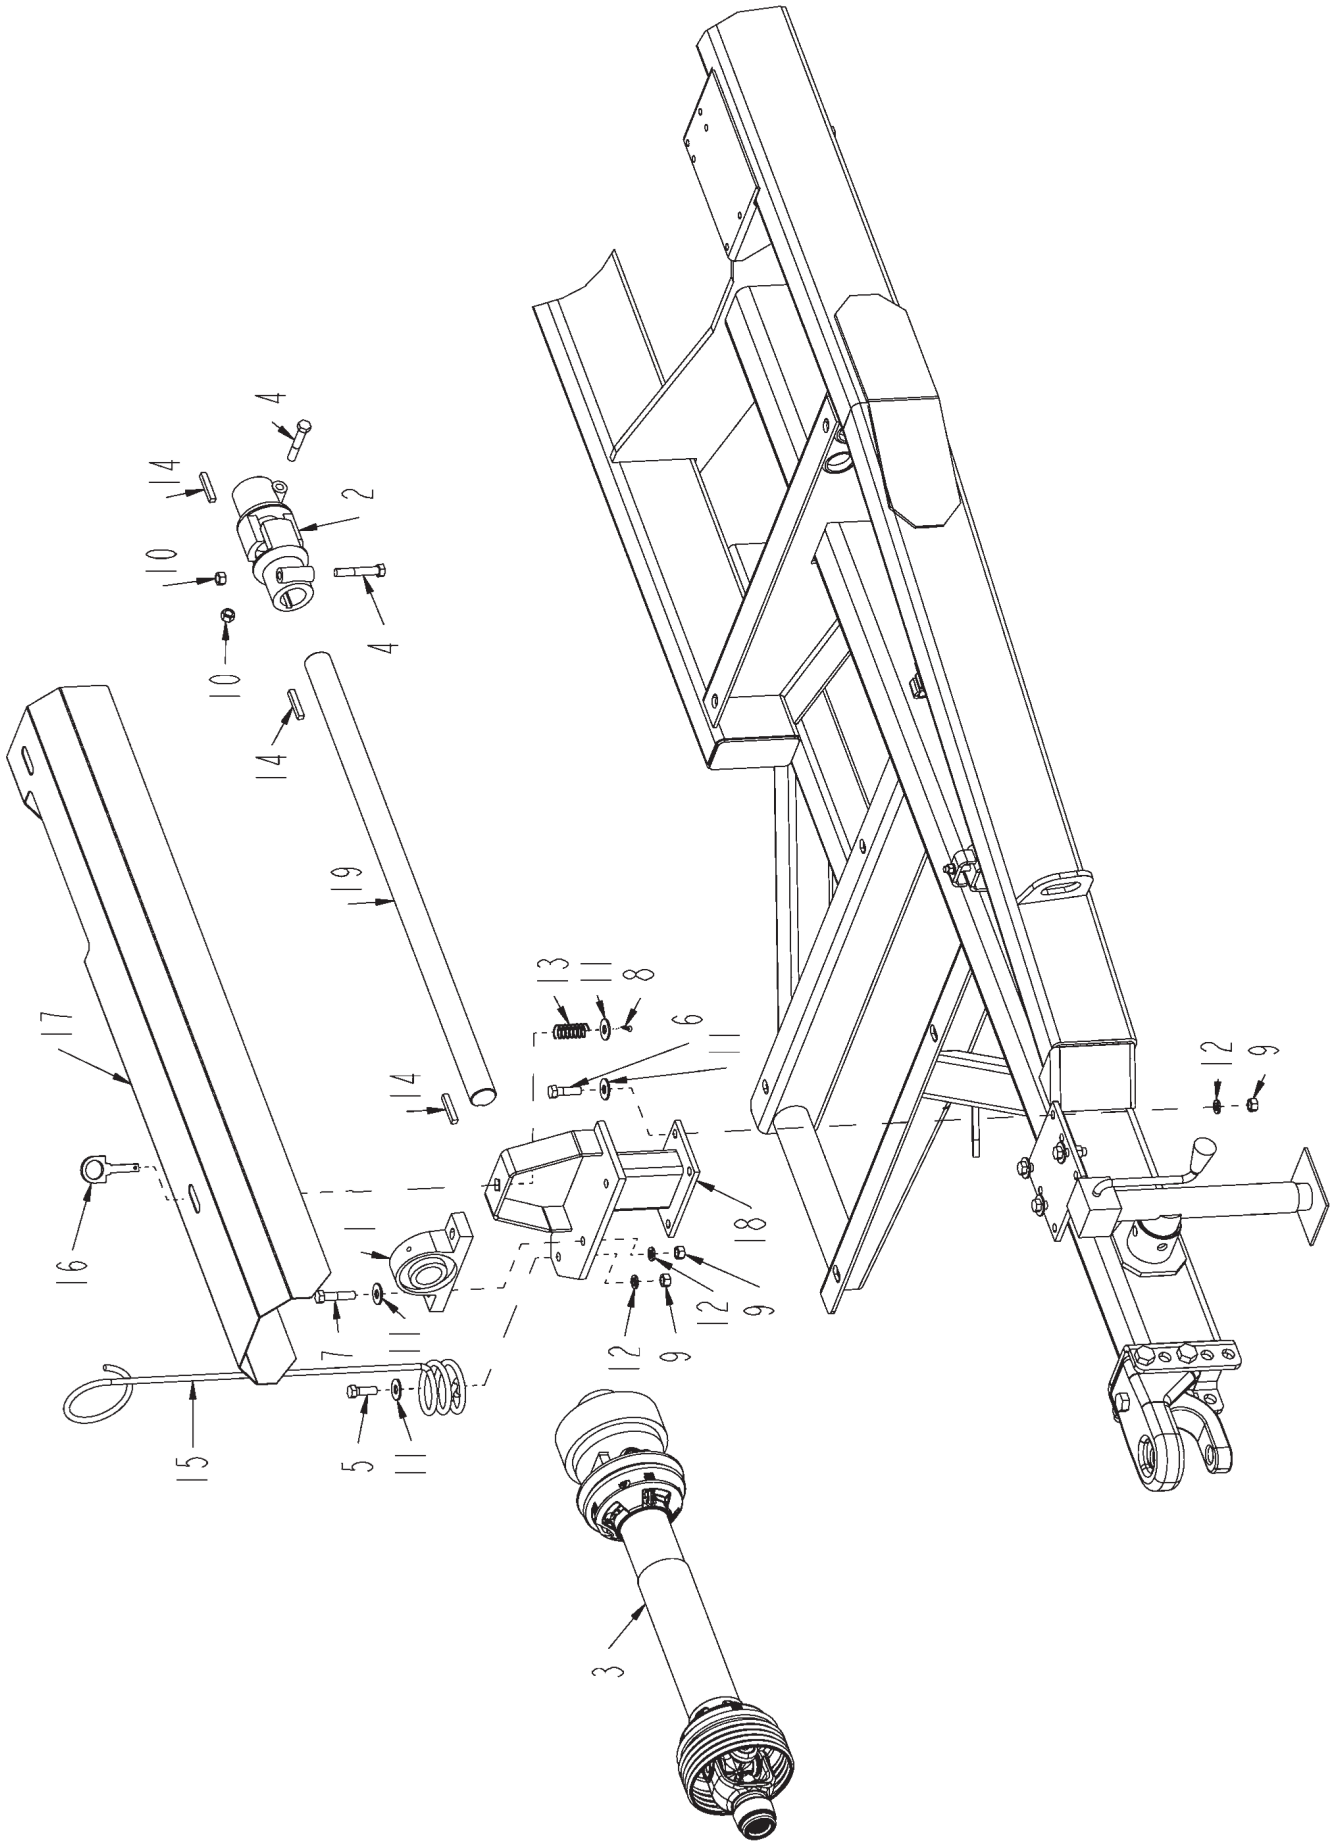

STANDARD DRIVE LINE ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
1	2000514	BRG\PB\1-3/4\2BOLT\MALLEABLE		1	EA.
2	3600453	JOINT\44\1-3/4BORE\ASSY		1	EA.
3	3600670	PTO\COMP\44\21SP\1-3/8\>		1	EA
4	4800068	BOLT\HEX\1/2X3		2	EA.
5	4800082	BOLT\HEX\1/2X1-1/2		1	EA.
6	4800178	BOLT\HEX\1/2X1-3/4		4	EA.
7	4800251	BOLT\HEX\1/2X2-1/4\NC		2	EA.
8	4800531	PIN\COT\3/16X3/4		2	EA
9	4900001	NUT\HEX\1/2\NC		7	EA.
10	4900014	NUT\TPLCK\1/2\NC		2	EA.
11	5000004	WASH\FLAT\1/2		9	EA.
12	5000006	WASH\LOCK\1/2		7	EA.
13	6100031	SPRING\COMP\.072W\25/32OD		2	EA.
14	6200020	KEY\SQ\3/8X2-1/4\HARDEND		3	EA.
15	7500170	HOSE MINDER		1	EA.
16	8101071	LATCH\SHLD		2	EA.
17	8101653	SHLD\PTO		1	EA
18	8101655	STAND\PTO		1	EA
19	8101701	SHFT\DRV\PTO		1	EA


2564 Balebuster Parts Reference

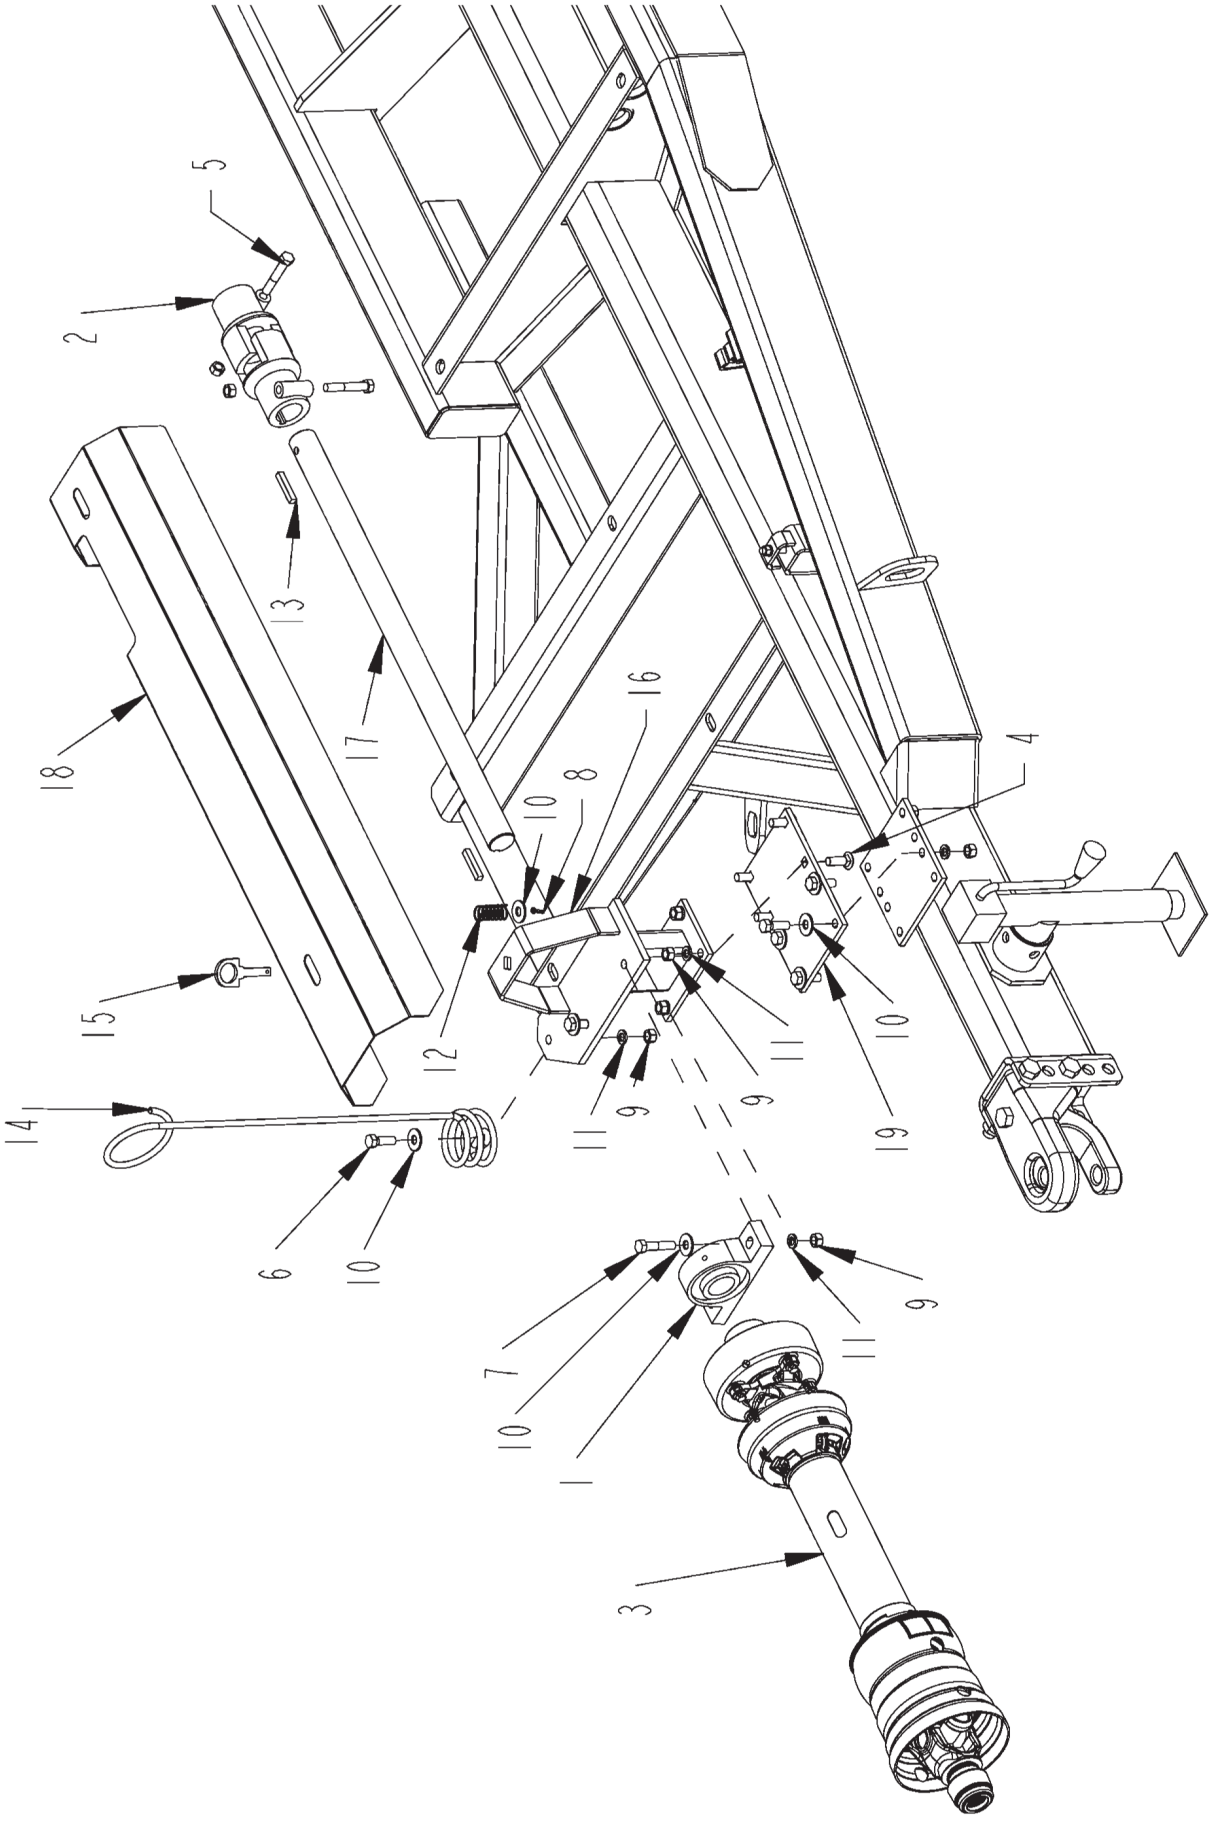

OPTIONAL DRIVE LINE ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
1	2000514	BRG\PB\1-3/4\2BOLT\MALLEABLE		1	EA.
2	3600453	JOINT\44\1-3/4BORE\ASSY		1	EA.
3	3600672	ORDER 3600779	FOR SN UP TO 0940	1	EA
3A	3600779	PTO\44E\CAT6\80WWCV\21SP	FOR SN 0941 AND UP		EA
4	4800061	BOLT\CRG\1/2X1-1/2\NC		4	EA
5	4800068	BOLT\HEX\1/2X3		2	EA.
6	4800082	BOLT\HEX\1/2X1-1/2		5	EA.
7	4800251	BOLT\HEX\1/2X2-1/4\NC		2	EA.
8	4800531	PIN\COT\3/16X3/4		1	EA
9	4900001	NUT\HEX\1/2\NC		13	EA.
10	5000004	WASH\FLAT\1/2		8	EA.
11	5000006	WASH\LOCK\1/2		11	EA.
12	6100031	SPRING\COMP\.072W\25/32OD		1	EA.
13	6200020	KEY\SQ\3/8X2-1/4\HARDEND		2	EA.
14	7500170	HOSE MINDER		1	EA.
15	8101071	LATCH\SHLD		1	EA.
16	8101655	STAND\PTO		1	EA
17	8101739	SHFT\DRV\PTO		1	EA
18	8101740	SHLD\PTO		1	EA
19	8101741	MNT\PL\STND\PTO		1	EA


2564 Balebuster Parts Reference

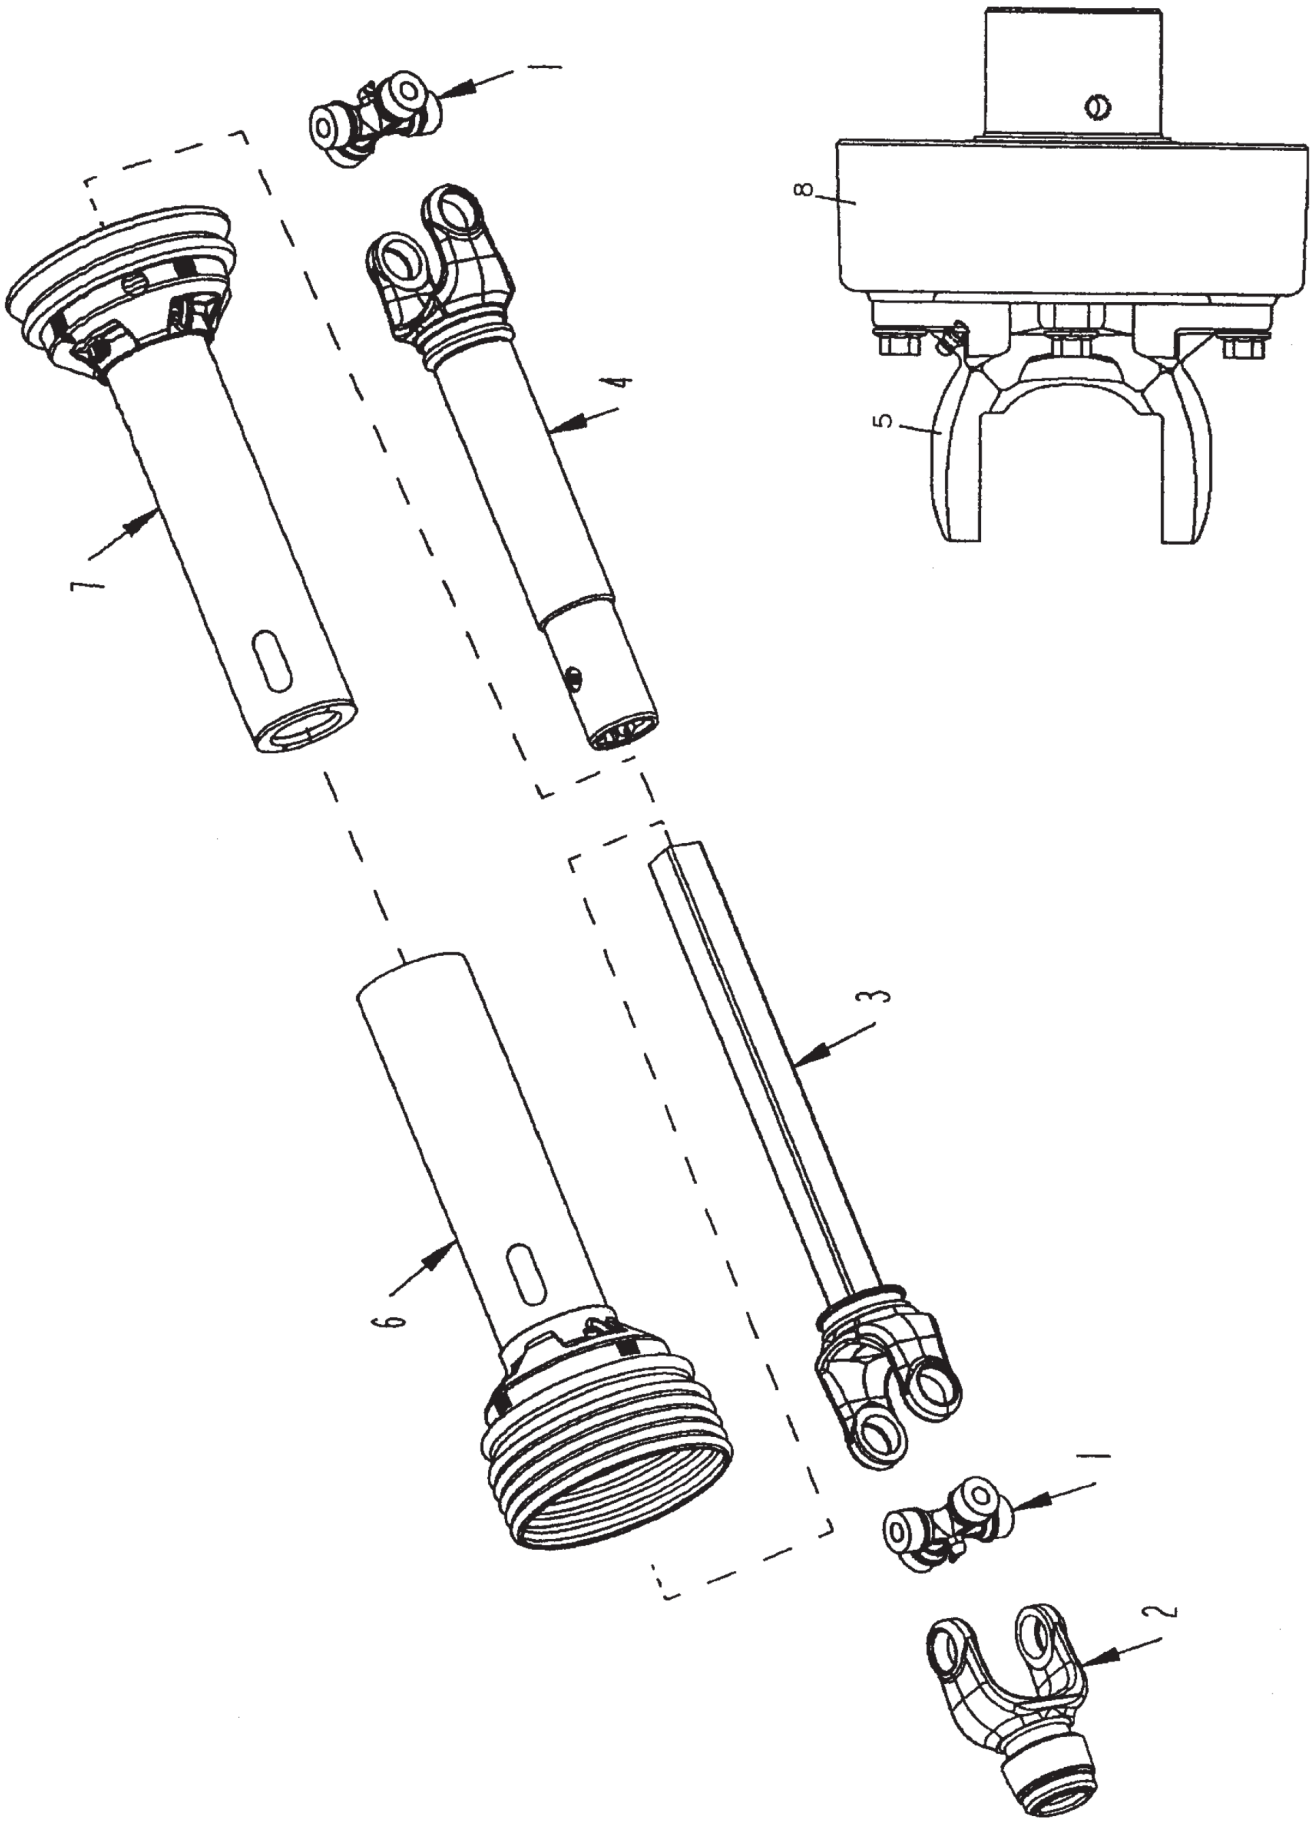

3600670 - PTO ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
CA	3600670	PTO\COMP\44\21SP\1-3/8\>			EA
1	3600115	440 CROSS AND BEARING KIT		2	EA.
2	3600363	SLIDE LOCK YOKE ASSY		1	EA.
	3600271	LOCK\SAFTY;SLID\KIT\1-3/8	Repair kit for 3600363		EA.
3	3600364	YOKE & SHAFT 3600334		1	EA.
4	3600368	YOKE,TUBE,SLIP SLEEVE		1	EA.
5	3600634	YOKE&HUB\OVERRUNNING\44		1	EA
	3600635	KIT\REP\FOR\3600634\>			EA
	3600636	JOINT & TUBE ASSY W/GUARD	(INCLUDES 1, 4, 5, 7 & 8)		EA
6 & 7	3600460	GUARD\SET\PTO\3600459		1	EA.
8	3600671	CLTCH\AUTO\OVRRN\21000\>			EA
	3600462	JOINT & SHAFT ASM W-GUARD	(INCLUDES 1, 2, 3 & 6)		EA.
NS	3600489	NYLON\REPAIR\KIT			EA.


2564 Balebuster Parts Reference

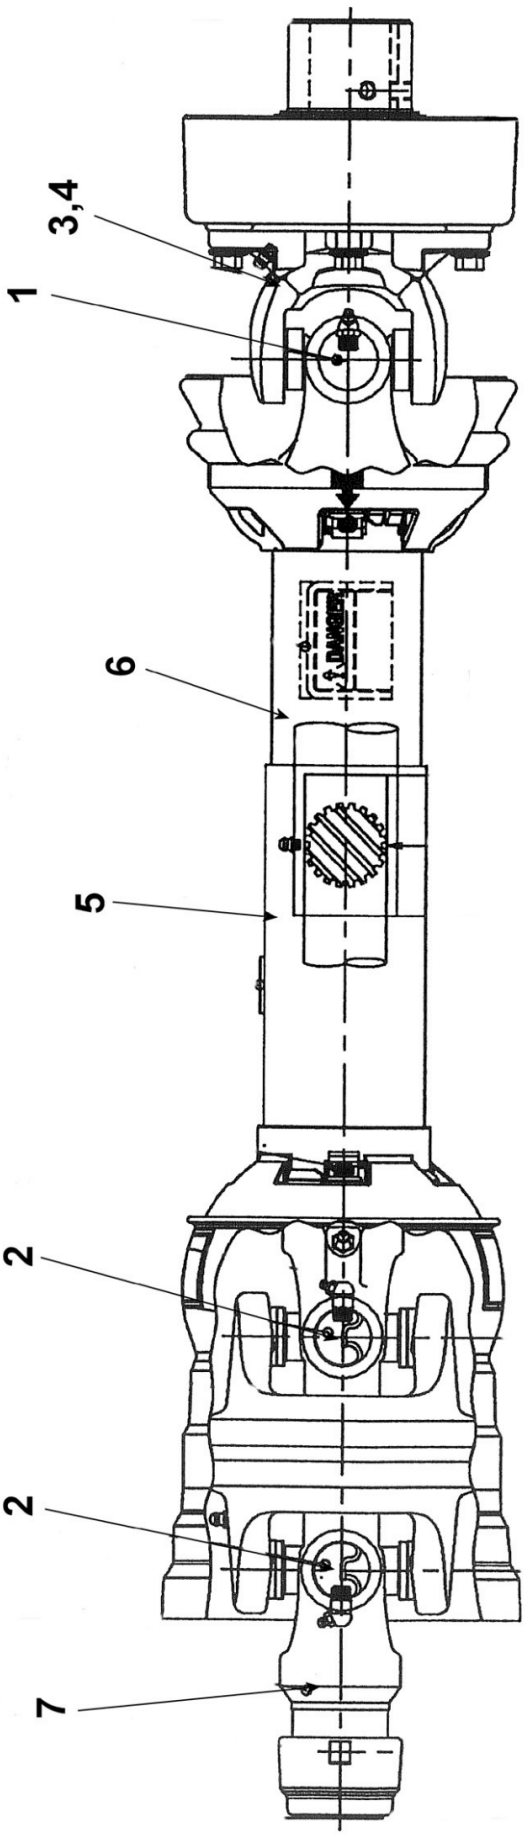

3600672-PTO OPTIONAL (FOR SN UP TO 0940)

Item	Part No.	Name	Remarks	Qty	Uom
1	3600604	CROSS&BRG\44E\WSLR			EA.
2	3600605	CROSS&BRG\CAT5\80DEG\CV			EA
3	3600634	YOKE&HUB\OVERRUNNING\44			EA
4	3600635	KIT\REP\FOR\3600634\>			EA
5	3600678	PTO\HALF\TRAC\CV\3600672			EA
6	3600679	PTO\HALF\MACH			EA
7	3600689	YOKE\44E\1-3/8CV-21SPLINE\SSL			EA
7a	3600818	YOKE\44E\1-3/8CV-6\CAT5\SSL>			EA


2564 Balebuster Parts Reference

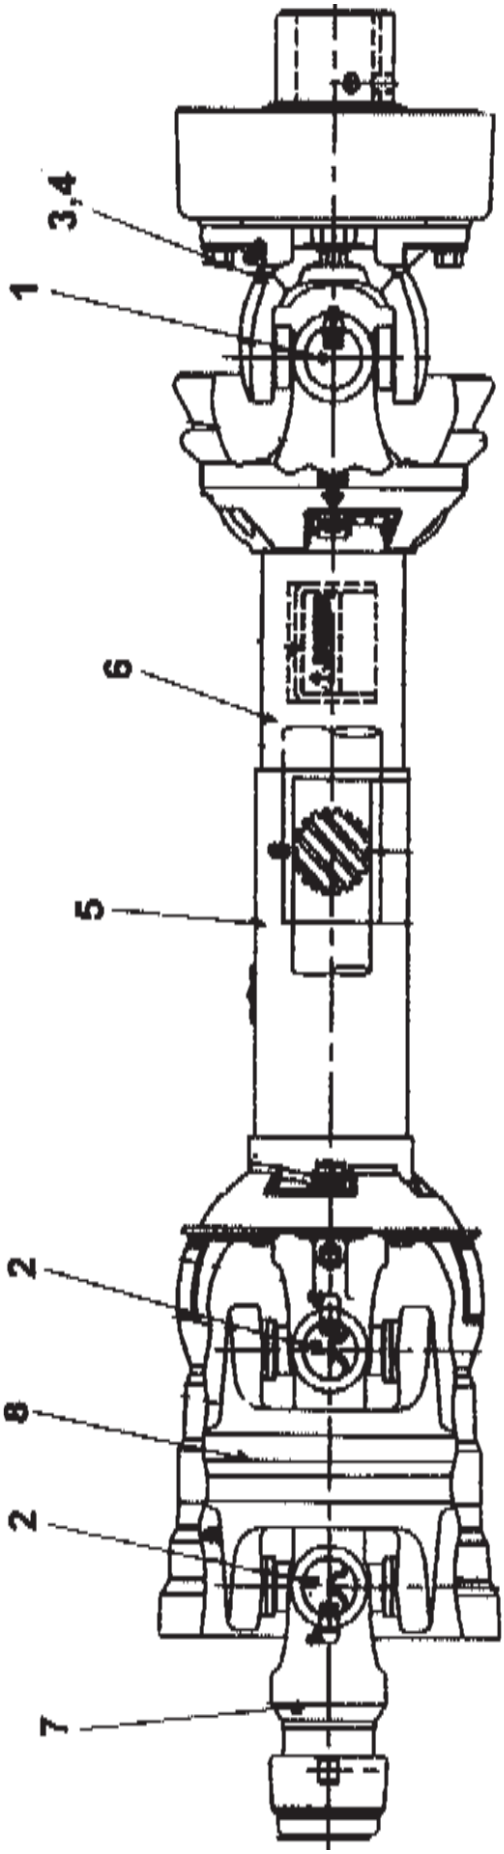

3600779-PTO WWCV EQUAL ARM - OPTIONAL (FOR S.N. 0941 AND UP)

Item	Part No.	Name	Remarks	Qty	Uom
CA	3600779	PTO\44E\CAT6\80WWCV\21SP			EA
1	3600604	CROSS&BRG\44E\WSLR			EA.
2	3600764	CROSS&BRG\CAT6\80DEG\CV			EA.
3	3600634	YOKE&HUB\OVERRUNNING\44			EA
4	3600635	KIT\REP\FOR\3600634\>			EA
5	3600780	Order 3600779			EA
6	3600679	PTO\HALF\MACH			EA
7	3600763	YOKE\44E\1-3/8CV-21\CAT6\AL			EA.
7a	3600782	YOKE\44E\WWCV\1-3/4\20SP\AL			EA.
7b	3600823	YOKE\ASM\AUTO-LOK\1-3/8-6 WWCV			EA
8	3600765	CENTER-HOUSING			EA.

2564 Balebuster Parts Reference

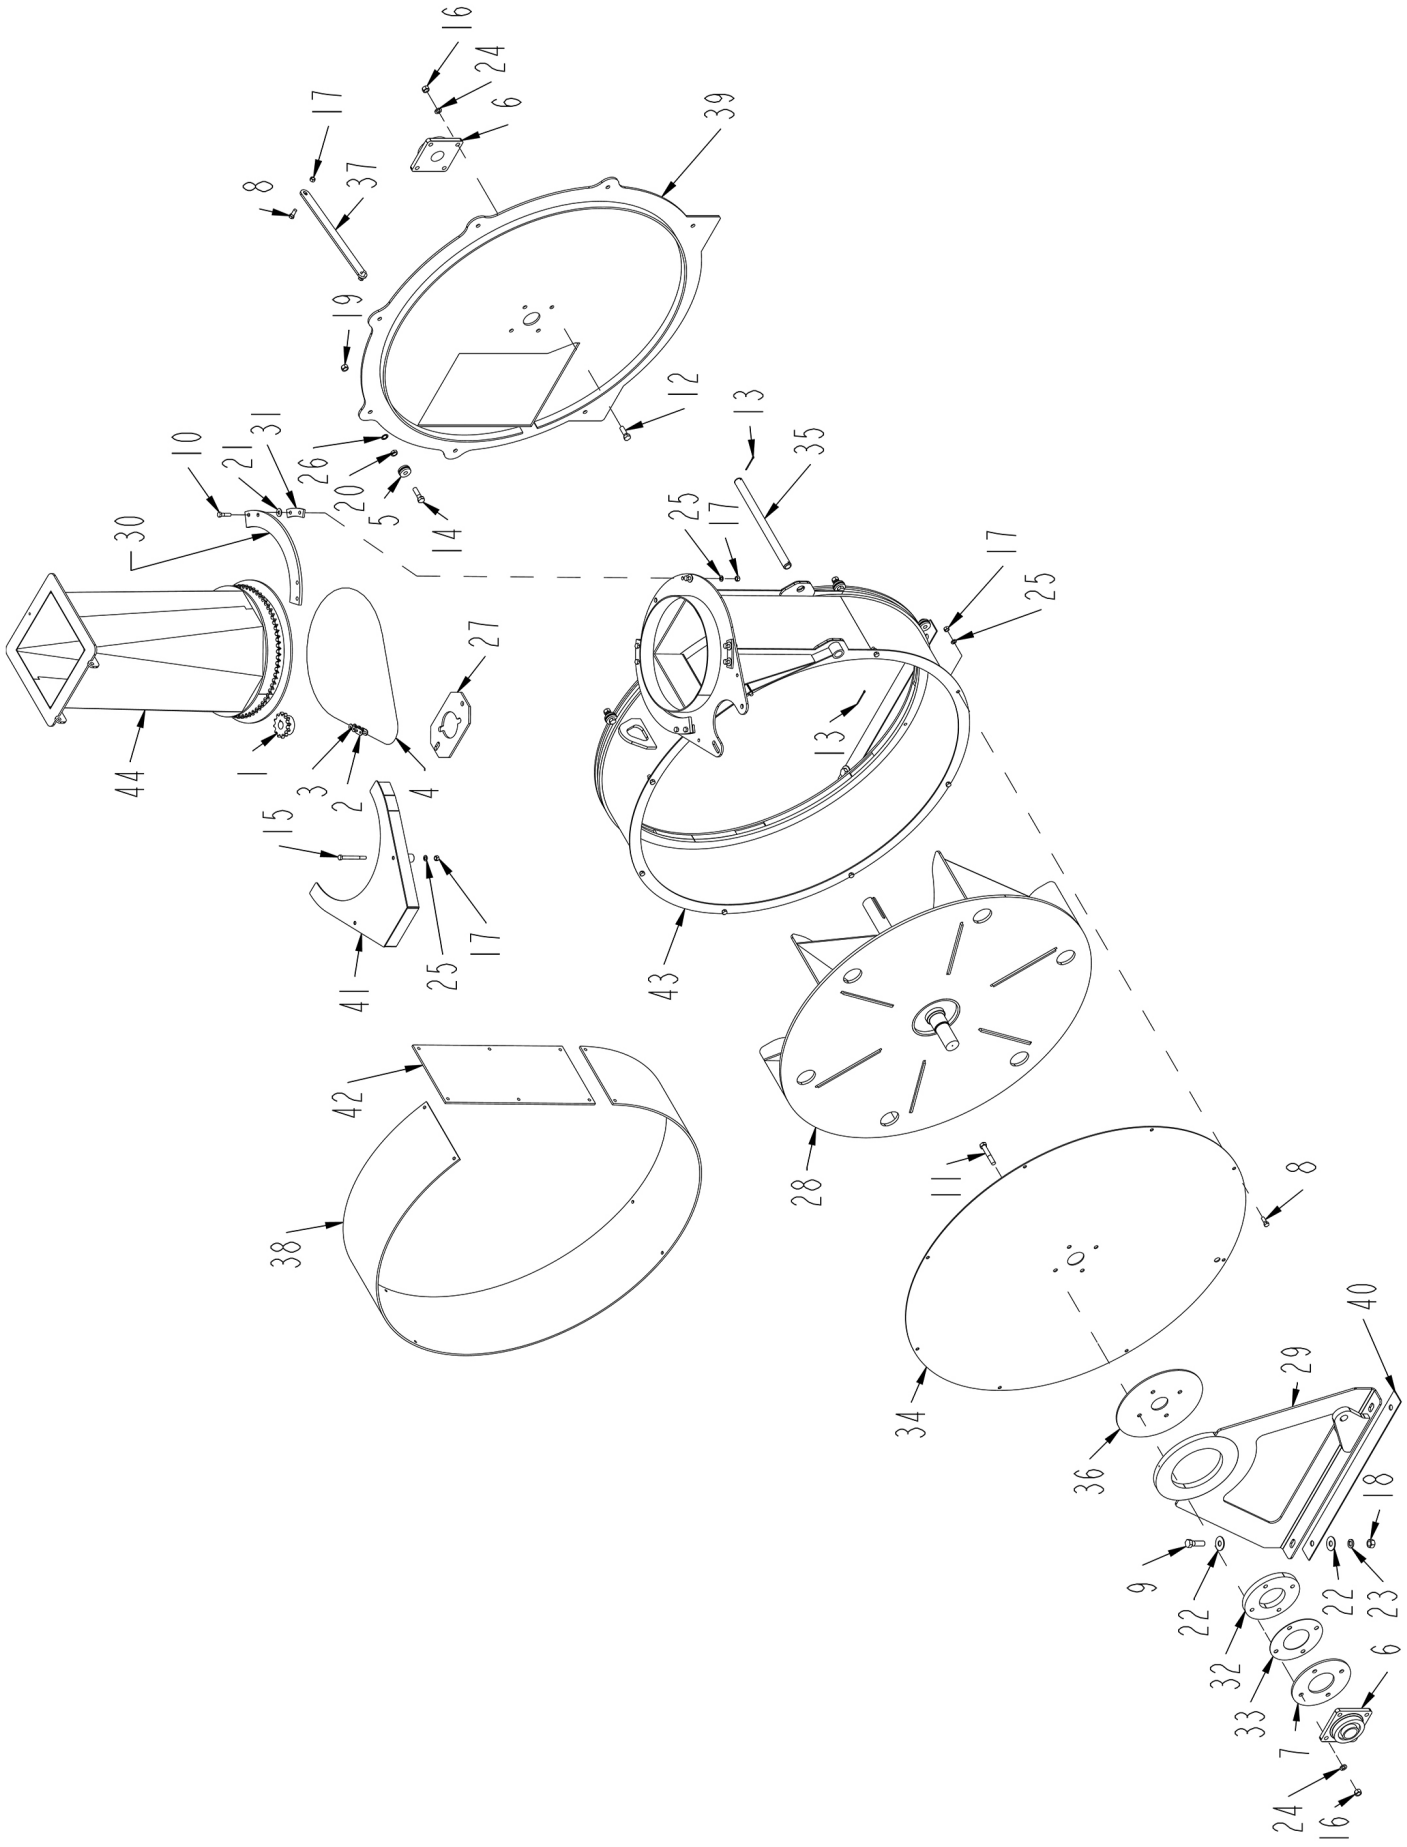


FAN ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
1	1000129	SPKT\60\B\12\1\1/4KW		1	EA.
2	1100062	CHAIN\60\CL		1	EA.
3	1100063	CHAIN\60\OL		1	EA.
4	1100270	CHAIN\60\77		1	EA.
5	2000080	BRG\CAM\1/2" I.D.X1-1/2" O.D		7	EA.
6	2000311	BRG\FLG\CAST\1-3/4\4BOLT		2	EA.
7	4500529	PL\MNT\FAN		1	EA.
8	4800003	BOLT\HEX\3/8X1		10	EA.
9	4800010	BOLT\HEX\5/8X2		4	EA.
10	4800034	BOLT\HEX\3/8X1-1/2		8	EA.
11	4800068	BOLT\HEX\1/2X3		4	EA.
12	4800082	BOLT\HEX\1/2X1-1/2		4	EA.
13	4800172	PIN\COT\1/8X2		2	EA.
14	4800178	BOLT\HEX\1/2X1-3/4		7	EA.
15	4800516	BOLT\HEX\3/8X3-3/4/NC		2	EA.
16	4900001	NUT\HEX\1/2\NC		8	EA.
17	4900002	NUT\HEX\3/8\NC		20	EA.
18	4900005	NUT\HEX\5/8\NC		4	EA.
19	4900014	NUT\TPLCK\1/2\NC		7	EA.
20	4900046	NUT\JAM\1/2\NC		7	EA.
21	5000001	WASH\FLAT\3/8		8	EA.
22	5000002	WASH\FLAT\5/8		8	EA.
23	5000003	WASH\LOCK\5/8		4	EA.
24	5000006	WASH\LOCK\1/2		8	EA.
25	5000019	WASH\LOCK\3/8		18	EA.
26	5000134	WASH\LOCK\TOOTH\INT\1/2		7	EA.
27	8100542	MNT\MTR\ORBIT\FAN		1	EA.
28	8101274	RTR\FAN\2564		1	EA
29	8101657	MNT\FRONT\FAN		1	EA
30	8101663	DBLR\MNT\SWVL\FAN		2	EA.
31	8101664	MNT\SWVL\FAN		4	EA.
32	8101665	MNT\PL\FAN\3/4"		1	EA.
33	8101666	MNT\PL\FAN		1	EA.
34	8101681	SH\HSG\FAN		1	EA
35	8101684	CYL\MNT\PIN		1	EA
36	8101695	MNT\PL\FAN		1	EA.
37	8101697	BRACE\FAN\2564		1	EA.
38	8101720	SHT\LINER\FAN		1	EA.

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	8101726	HSG\FAN\REAR		1	EA
40	8101735	SHIM\MNT\FAN\10GA		2	EA.
41	8101754	SHLD\CHN\RTT\FAN-TRANS		1	EA.
42	8101772	LNR\SPT\HSG\FAN		1	EA.
43	8101773	HSG\FAN\W-LINER\2564		1	EA
44	8101847	TRANS\FAN		1	EA.

2564 Balebuster Parts Reference

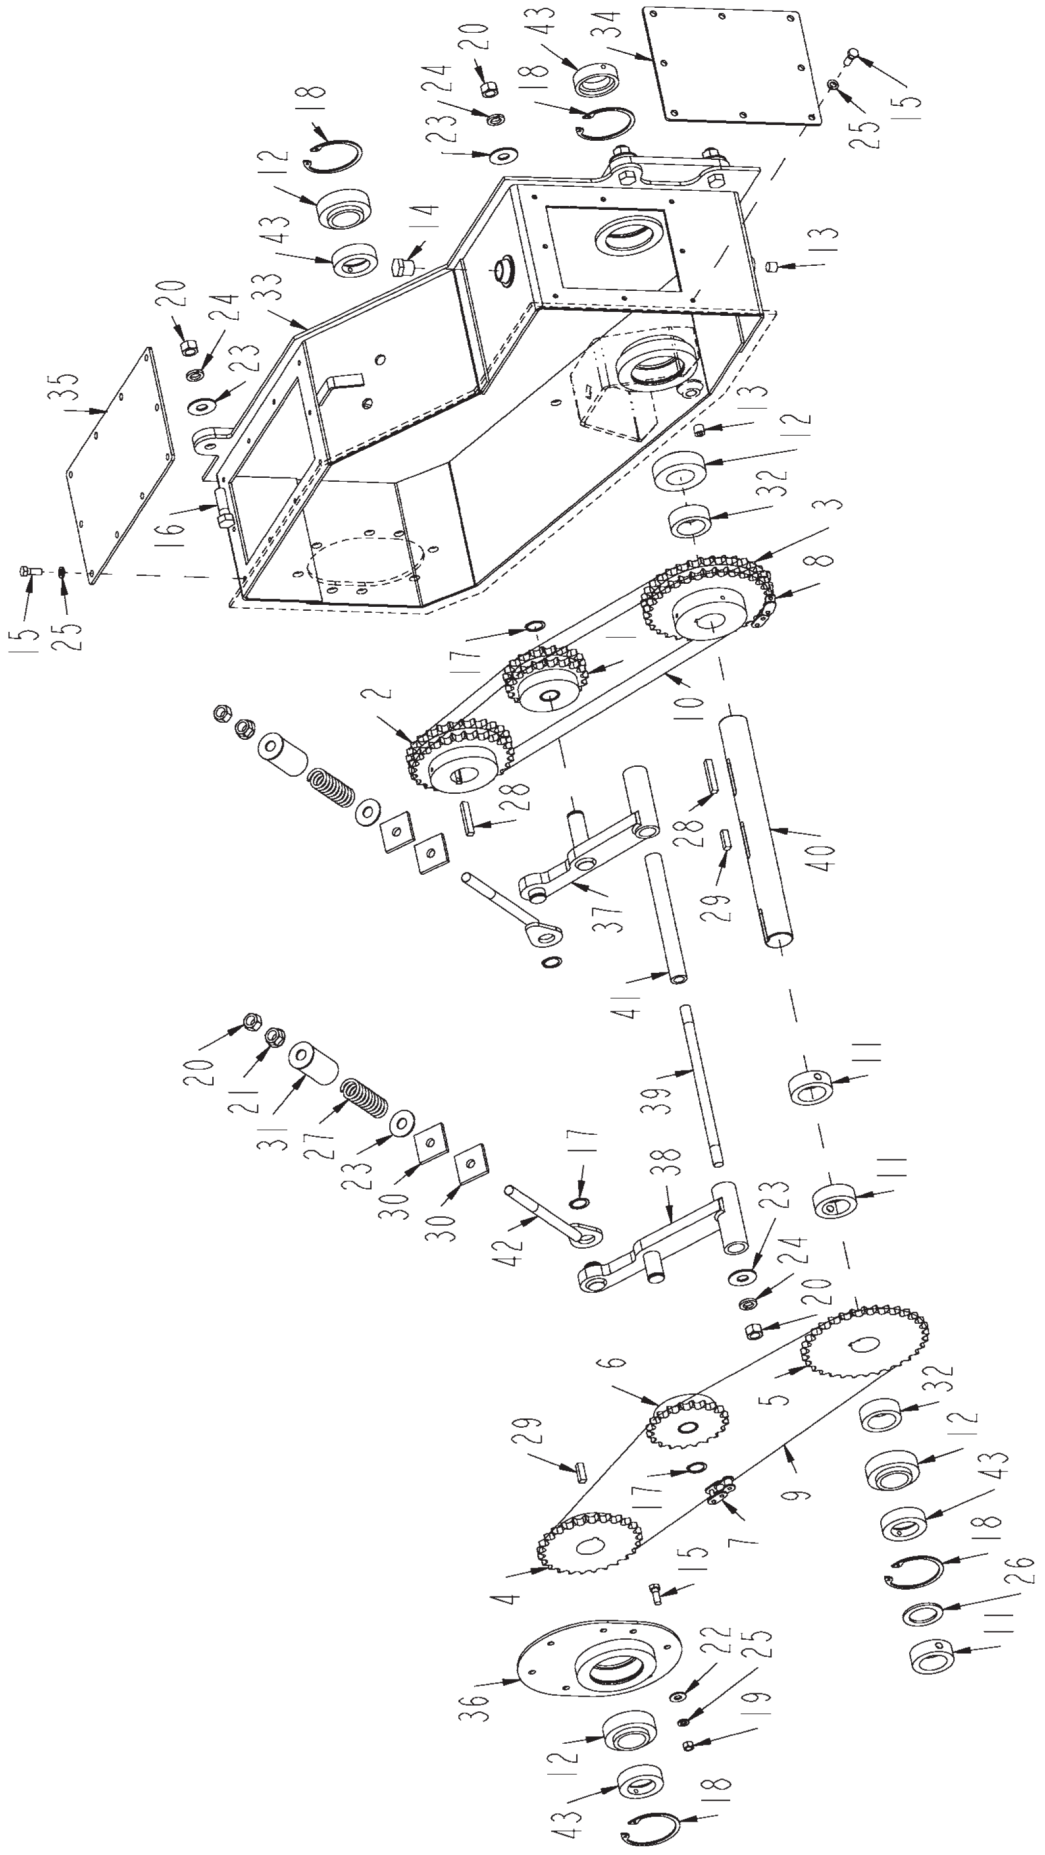


CHAIN CASE ASSEMBLY (S.N. UP TO 0640)


Item	Part No.	Name	Remarks	Qty	Uom
1	1000234	SPKT\DBL\B\60\20\HT\IDLER		1	EA.
2	1000235	SPRKT\DBL\60\B\26\1-3/4\3/8KW\2SS		1	EA.
3	1000236	SPKT\DBL\60\B\32\1-3/4\3/8KW\2SS		1	EA.
4	1000264	SPKT\60\B\26\1-3/4\3/8KW		1	EA
5	1000265	SPKT\60\B\32\1-3/4\3/8KW		1	EA
6	1000266	SPKT\B\60\20\1\IDLER		1	EA
7	1100062	CHAIN\60\CL		1	EA.
8	1100064	CHAIN\60DBL\CL		1	EA.
9	1100272	CHAIN\60\99		1	EA
10	1100273	CHAIN\60DBL\85		1	EA
11	2000817	CLLR\SHFT\1-3/4\SET		3	EA
12	2001041	BRG\CYL\1-3/4\W-ECC		4	EA.
13	3800326	FTG\3/8MP\PLUG\ALN		2	EA.
14	3800452	FTG\3/4MP\VENT\BREATHER		1	EA.
15	4800003	BOLT\HEX\3/8X1		26	EA.
16	4800010	BOLT\HEX\5/8X2		4	EA.
17	4800904	SNSPRNG\EXT\1"		4	EA.
18	4800921	SNSRNG\INT\3-11/16\HO-334\STPA		4	EA.
19	4900002	NUT\HEX\3/8\NC		8	EA.
20	4900005	NUT\HEX\5/8\NC		8	EA.
21	4900110	NUT\FLG\SERR\5/8\NC		2	EA.
22	5000001	WASH\FLAT\3/8		8	EA.
23	5000002	WASH\FLAT\5/8		10	EA.
24	5000003	WASH\LOCK\5/8		6	EA.
25	5000019	WASH\LOCK\3/8		26	EA.
26	5000051	WASH\MACH\1-3/4ID\10GA\PL		1	EA.
27	6100076	SPRING\1-1/4ODX3-3/4 LX3/16WX10		2	EA.
28	6200020	KEY\SQ\3/8X2-1/4\HARDEND		2	EA.
29	6200027	KEY\SQ\3/8X1-1/4		2	EA
30	8101077	RUBBER\CUSHION		4	EA.
31	8101078	BRKT\LIMIT\SPRING		2	EA.
32	8101083	BRKT\SPACER\7/8"\DRV\PTO		2	EA.
33	8101271	HSG\DRV\PTO		1	EA
34	8101287	COVER\SIDE\GEARBOX		1	EA
35	8101288	COVER\TOP\GEARBOX		1	EA
36	8101289	MNT\BRG\CHAIN		1	EA
37	8101295	BRKT\IDLER\DRIVE\RTR		1	EA
38	8101296	BRKT\IDLER\DRIVE\FAN		1	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	8101303	ROD\CASE\CHAIN		1	EA
40	8101619	SHFT\DRV\CHAIN		1	EA
41	8101662	MNT\IDLER\DRV		1	EA
42	8101675	ROD\TGHTNR\IDLER		2	EA
43	2000808	CLLR\LOCK\1-3/4		4	EA
CA	8101661	DRV\CHAIN\ASSY\2564	(For SN Up to 0640)		EA

2564 Balebuster Parts Reference

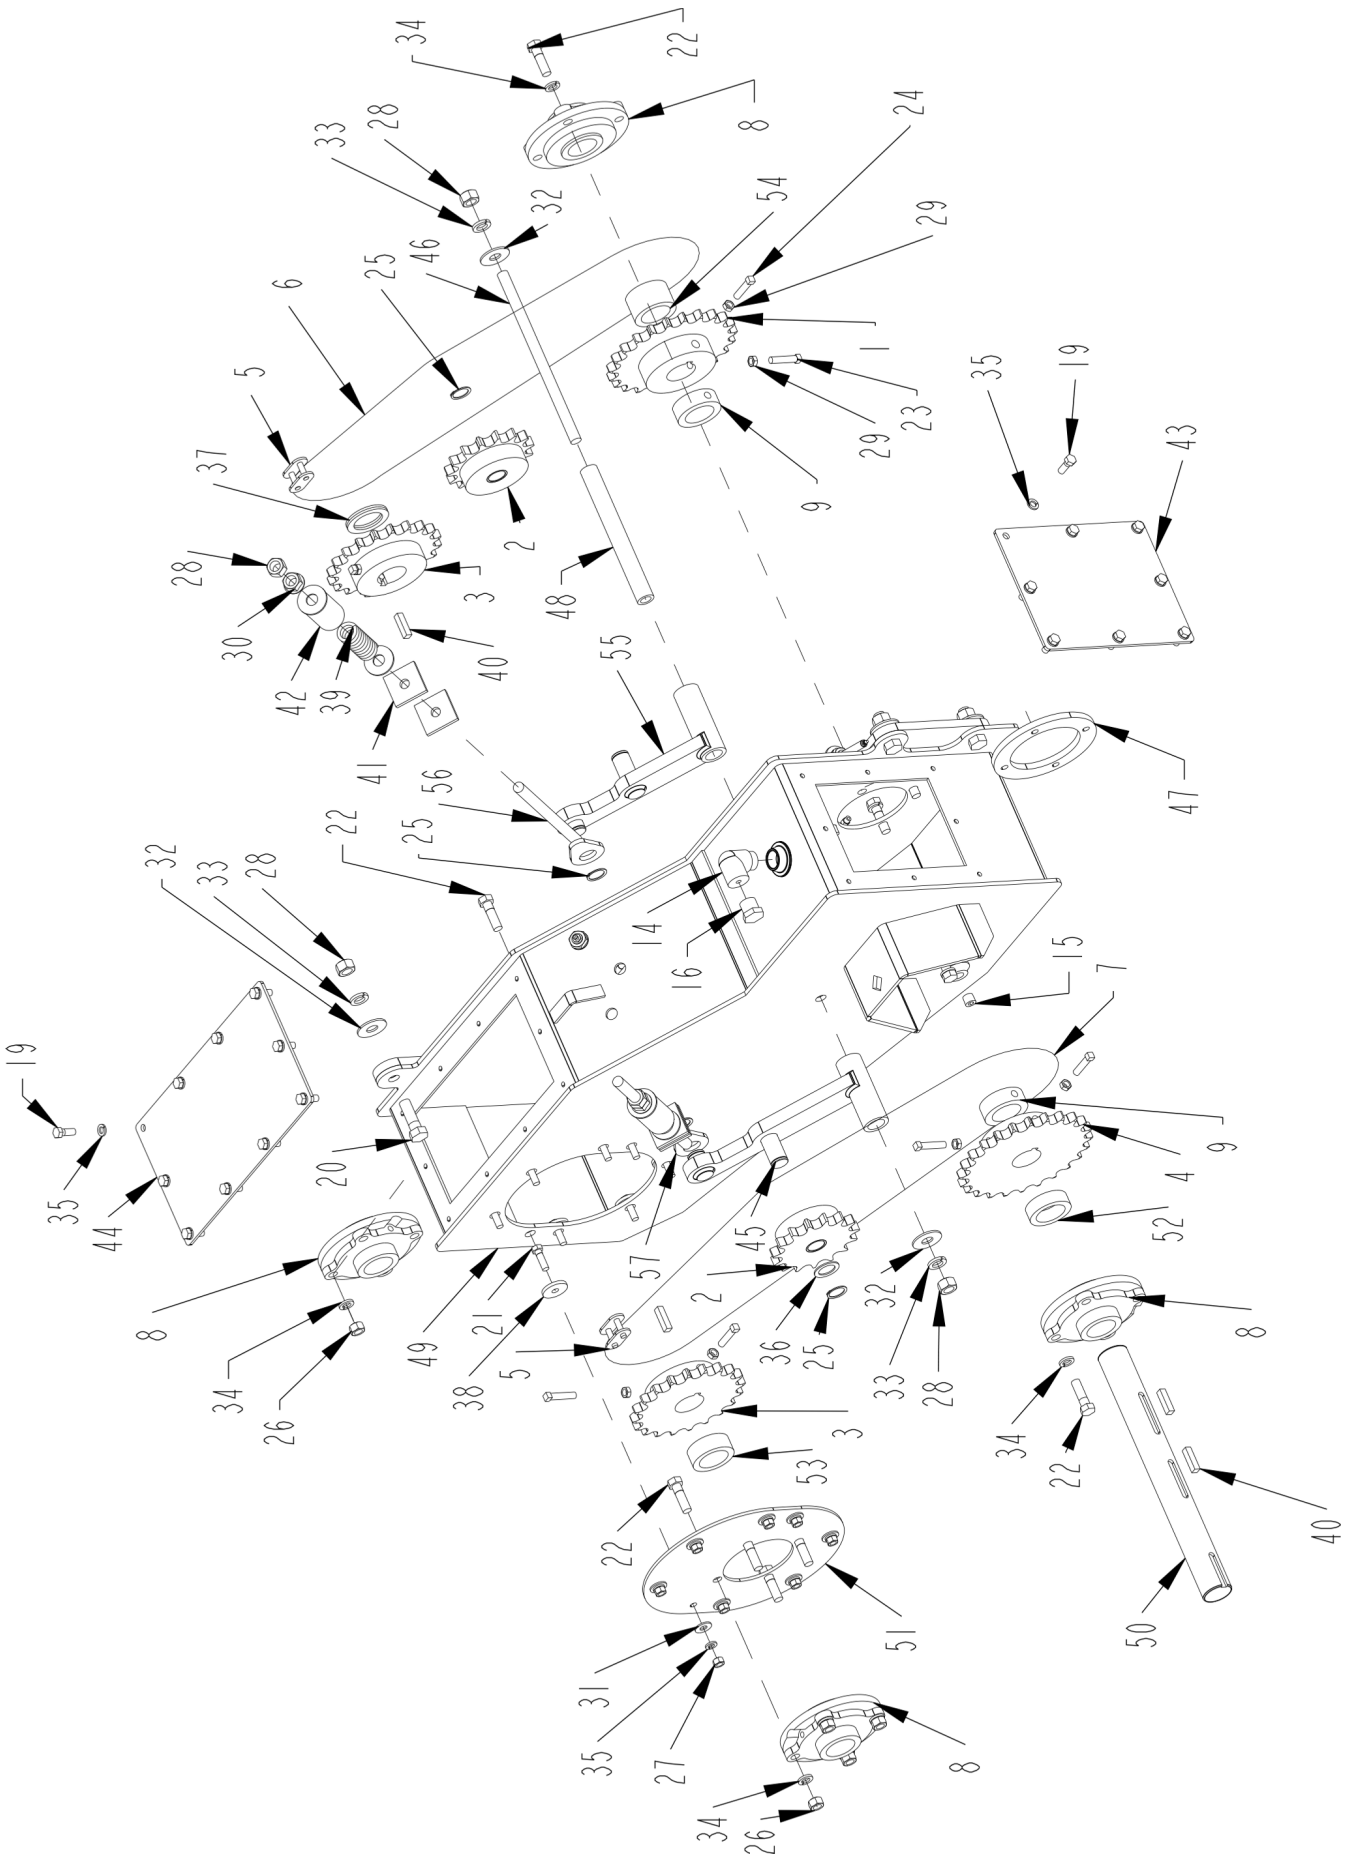

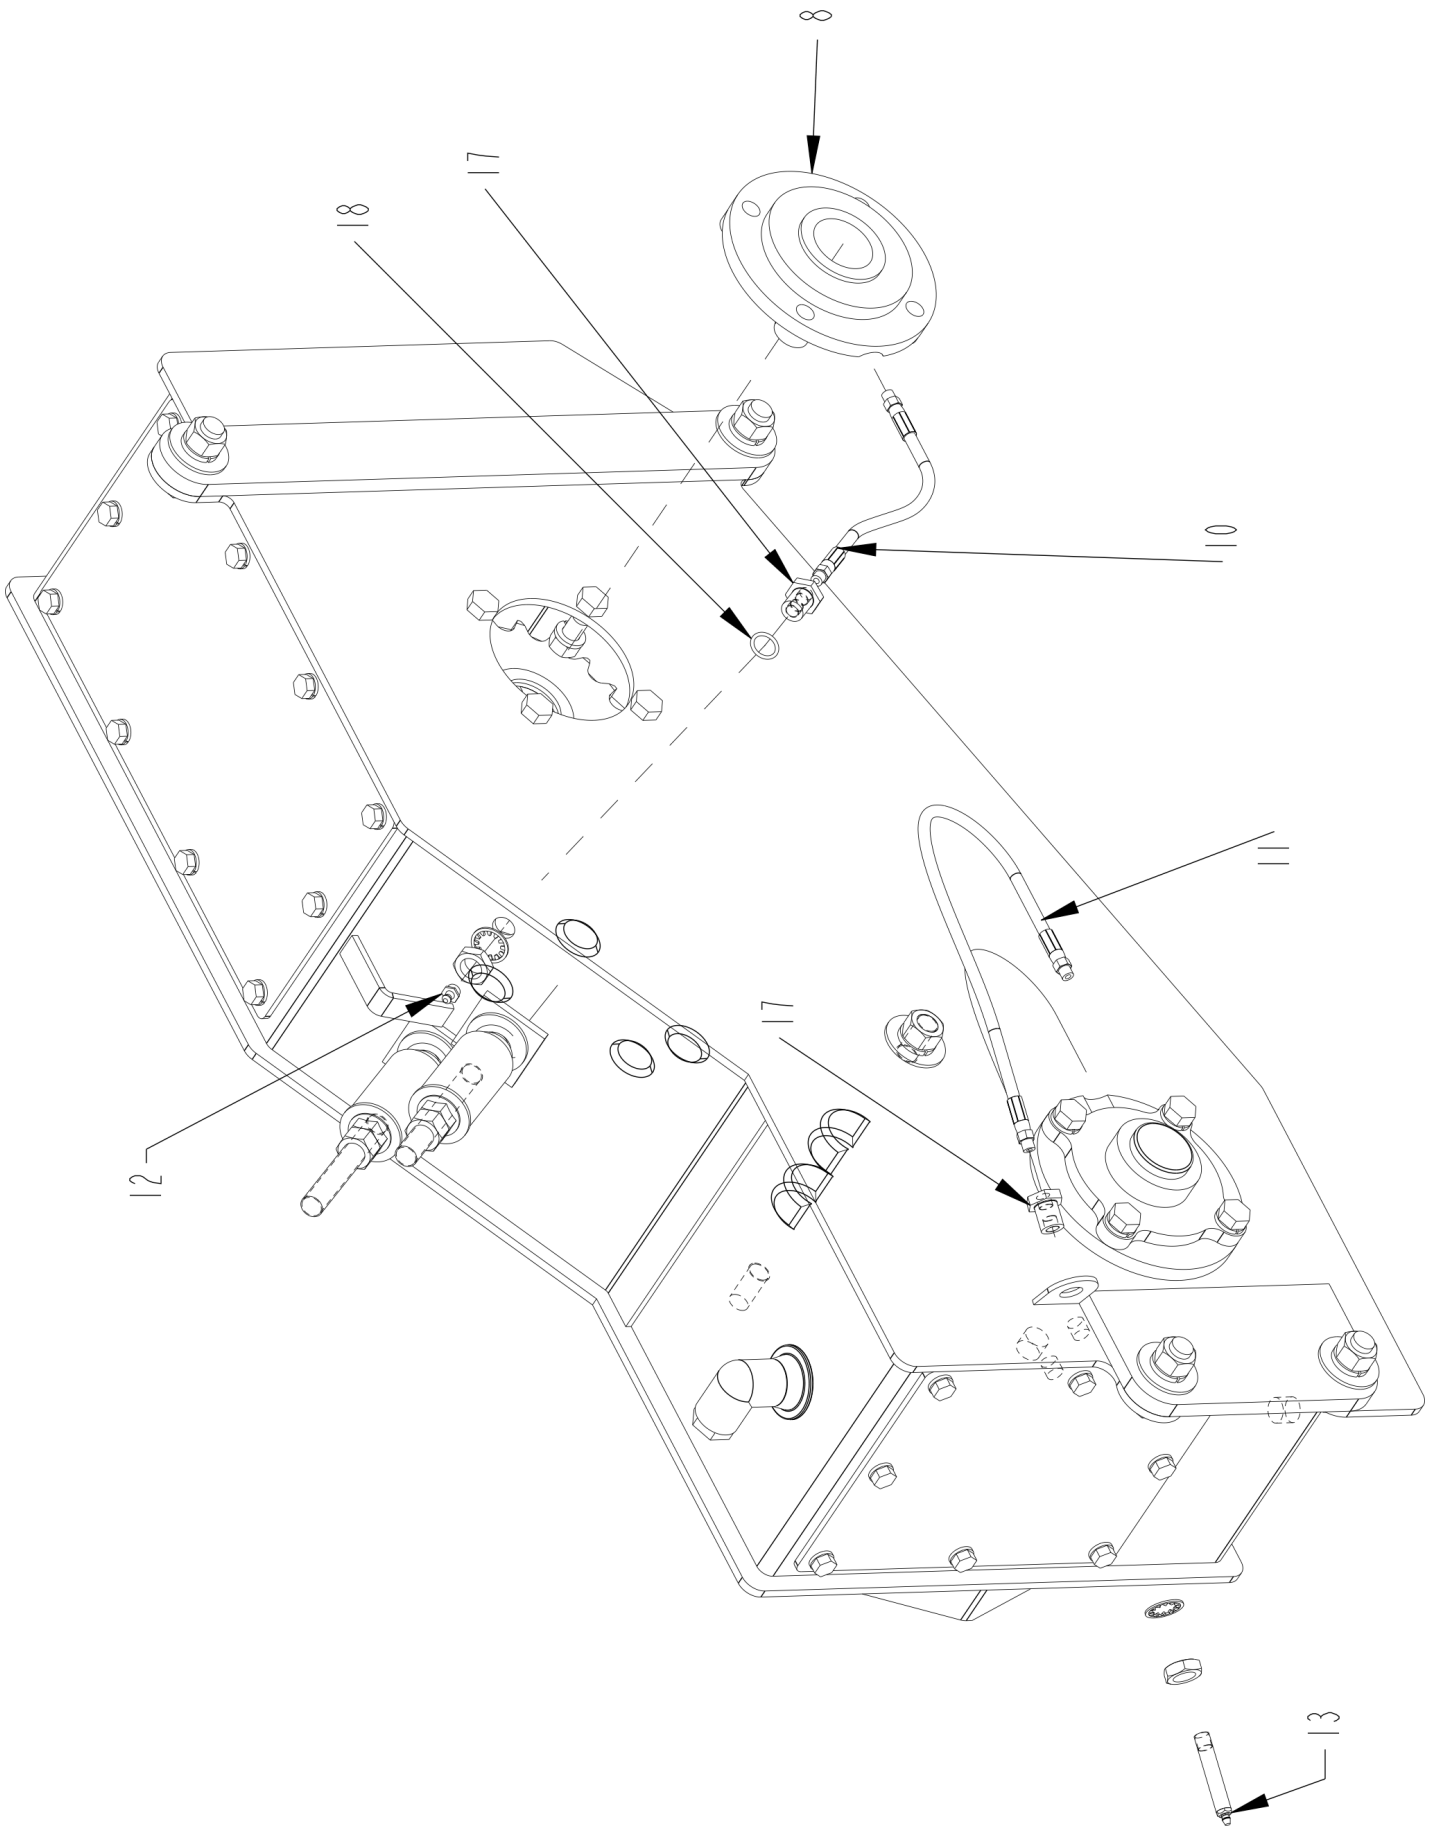
8
17
18
10
11
17
12
13

This page intentionally left blank


CHAIN CASE ASSEMBLY (S.N. 0641 AND UP)

Item	Part No.	Name	Remarks	Qty	Uom
1	1000252	SPKT\B\80\23\HT\1-3/4\3/8KW		1	EA
2	1000276	SPKT\B\80\15\HT\1\IDLER		2	EA.
3	1000277	SPKT\80\B\20\HT\1-3/4\3/8KW		2	EA.
4	1000278	SPKT\80\B\24\HT\1-3/4\3/8KW		1	EA.
5	1100162	CHAIN\80H\CL		2	EA.
6	1100279	CHAIN\80H\63		1	EA
7	1100280	CHAIN\80H\73		1	EA
8	2000339	BRG\FLG\CAST\PILOTED\1-3/4		4	EA.
9	2000817	CLLR\SHFT\1-3/4\SET		2	EA
10	3700770	HOSE\LUB\1/8X8-1/2\MPS-MPS		1	EA.
11	3700830	HOSE\LUB\1/8X16\MPS-MPS		1	EA.
12	3800043	FTG\LUB\1/8MPXZRK\SHORT		1	EA.
13	3800126	FTG\LUB\1/8MPXZRK\2-5/8		1	EA.
14	3800129	FTG\3/4MPX3/4FP\90\ST;EL		1	EA.
15	3800326	FTG\3/8MP\PLUG\ALN		2	EA.
16	3800452	FTG\3/4MP\VENT\BREATHER		1	EA.
17	3800895	FTG\1/8FP\CPLG\ANCHOR\5/8NF		2	EA.
18	3800896	FTG\O-RING\5/8IDX13/16OD		1	EA.
19	4800003	BOLT\HEX\3/8X1		18	EA.
20	4800010	BOLT\HEX\5/8X2		4	EA.
21	4800098	BOLT\HEX\3/8X1-1/4\NC		8	EA.
22	4800178	BOLT\HEX\1/2X1-3/4		16	EA.
23	4800359	SCR\SET\SQ\3/8X1-3/4\NC		4	EA
24	4800443	SCR\SET\SQ\3/8X1-1/2\NC		4	EA
25	4800904	SNSPRNG\EXT\1"		4	EA.
26	4900001	NUT\HEX\1/2\NC		8	EA.
27	4900002	NUT\HEX\3/8\NC		8	EA.
28	4900005	NUT\HEX\5/8\NC		8	EA.
29	4900026	NUT\JAM\3/8\NC		8	EA.
30	4900110	NUT\FLG\SERR\5/8\NC		2	EA.
31	5000001	WASH\FLAT\3/8		8	EA.
32	5000002	WASH\FLAT\5/8		10	EA.
33	5000003	WASH\LOCK\5/8		6	EA.
34	5000006	WASH\LOCK\1/2		16	EA.
35	5000019	WASH\LOCK\3/8		26	EA.
36	5000040	WASH\BUSH;MACH\1		2	EA
37	5000051	WASH\MACH\1-3/4ID\10GA\PL		2	EA.
38	5000096	WASH\FLAT\SPCL\13/32X7GAX1-1/2OD		8	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	6100076	SPRING\1-1/4ODX3-3/4 LX3/16WX10		2	EA.
40	6200021	KEY\SQ\3/8X1-1/2\HARDEND		4	EA.
41	8101077	RUBBER\CUSHION		4	EA.
42	8101078	BRKT\LIMIT\SPRING		2	EA.
43	8101287	COVER\SIDE\GEARBOX		1	EA
44	8101288	COVER\TOP\GEARBOX		1	EA
45	8101296	BRKT\IDLER\DRIVE\FAN		1	EA
46	8101303	ROD\CASE\CHAIN		1	EA
47	8101307	RING\MNT\BRG		2	EA.
48	8101662	MNT\IDLER\DRV		1	EA
49	8101714	CASE\CHAIN\FLG-BRG\2564		1	EA
50	8101716	SHFT\DRV\CHAIN		1	EA
51	8101731	PL\BRG\CHAINCASE		1	EA
52	8101732	TUBE\SPCR\DRV\PTO		1	EA
53	8101733	TUBE\SPCR\DRV\PTO		1	EA
54	8101734	TUBE\SPCR\DRV\PTO		1	EA
55	8101736	BRKT\IDLER\DRIVE\RTR		1	EA
56	8101737	ROD\TGHTNR\IDLER		1	EA
57	8101738	ROD\TGHTNR\IDLER		1	EA
CA	8101715	DRV\CHAIN\ASSY\W-FLG-BRG\2564			EA.


2564 Balebuster Parts Reference

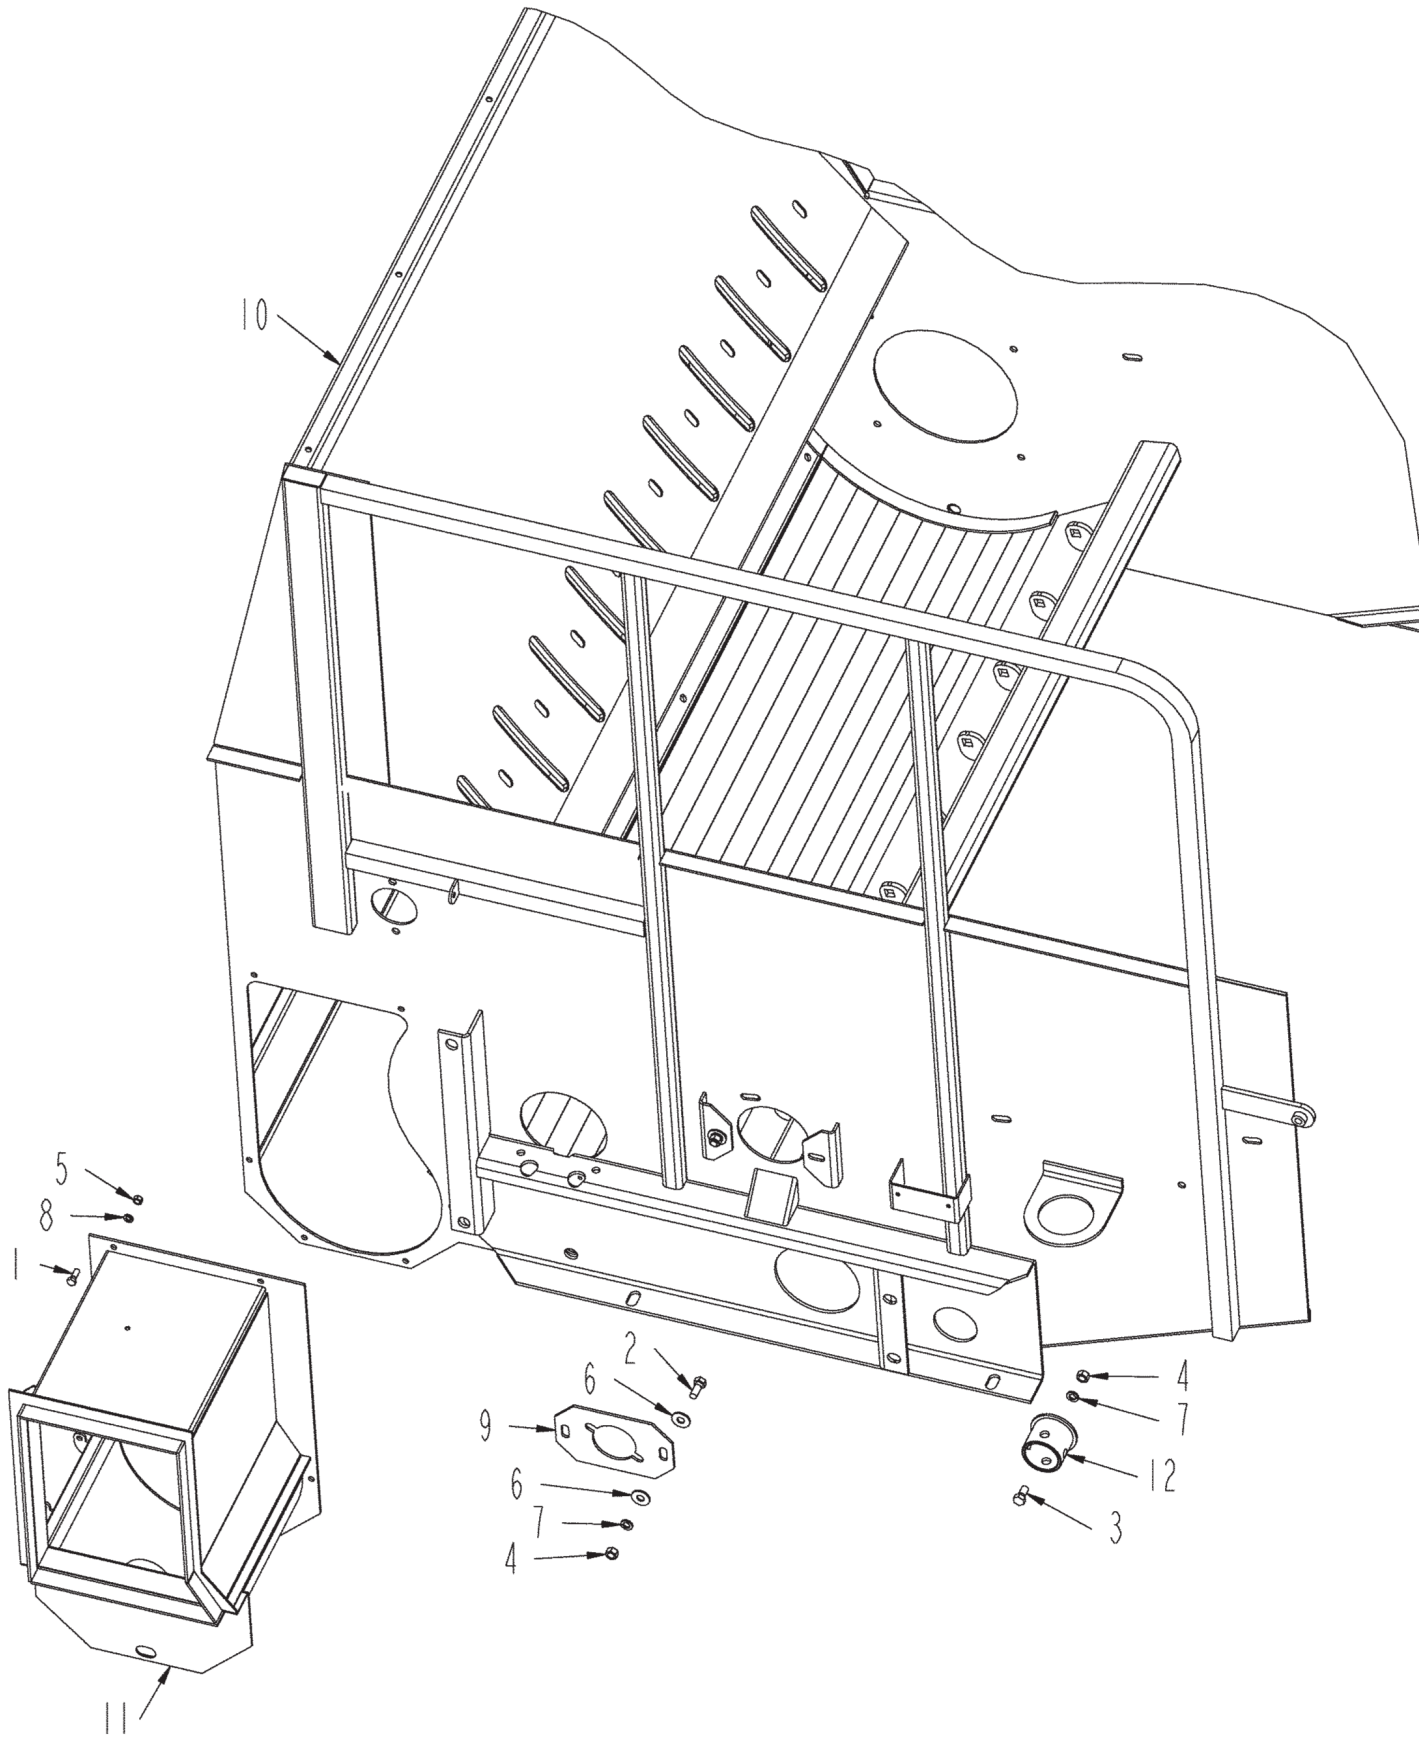

SHREDDER ASSEMBLY FRONT (THRU S.N. 10089064)


Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		6	EA.
2	4800018	BOLT\HEX\1/2X1-1/4		2	EA.
3	4800085	BOLT\HEX\1/2X1		1	EA.
4	4900001	NUT\HEX\1/2\NC		3	EA.
5	4900002	NUT\HEX\3/8\NC		6	EA.
6	5000004	WASH\FLAT\1/2		4	EA.
7	5000006	WASH\LOCK\1/2		3	EA.
8	5000019	WASH\LOCK\3/8		6	EA.
9	8100036	MNT\MTR\HYD		1	EA.
10	8101268	FRM\SHREDDER\2564		1	EA
11	8101671	AUGER\EXT		1	EA
12	8101748	BRKT\STRG\JACK		1	EA.

2564 Balebuster Parts Reference

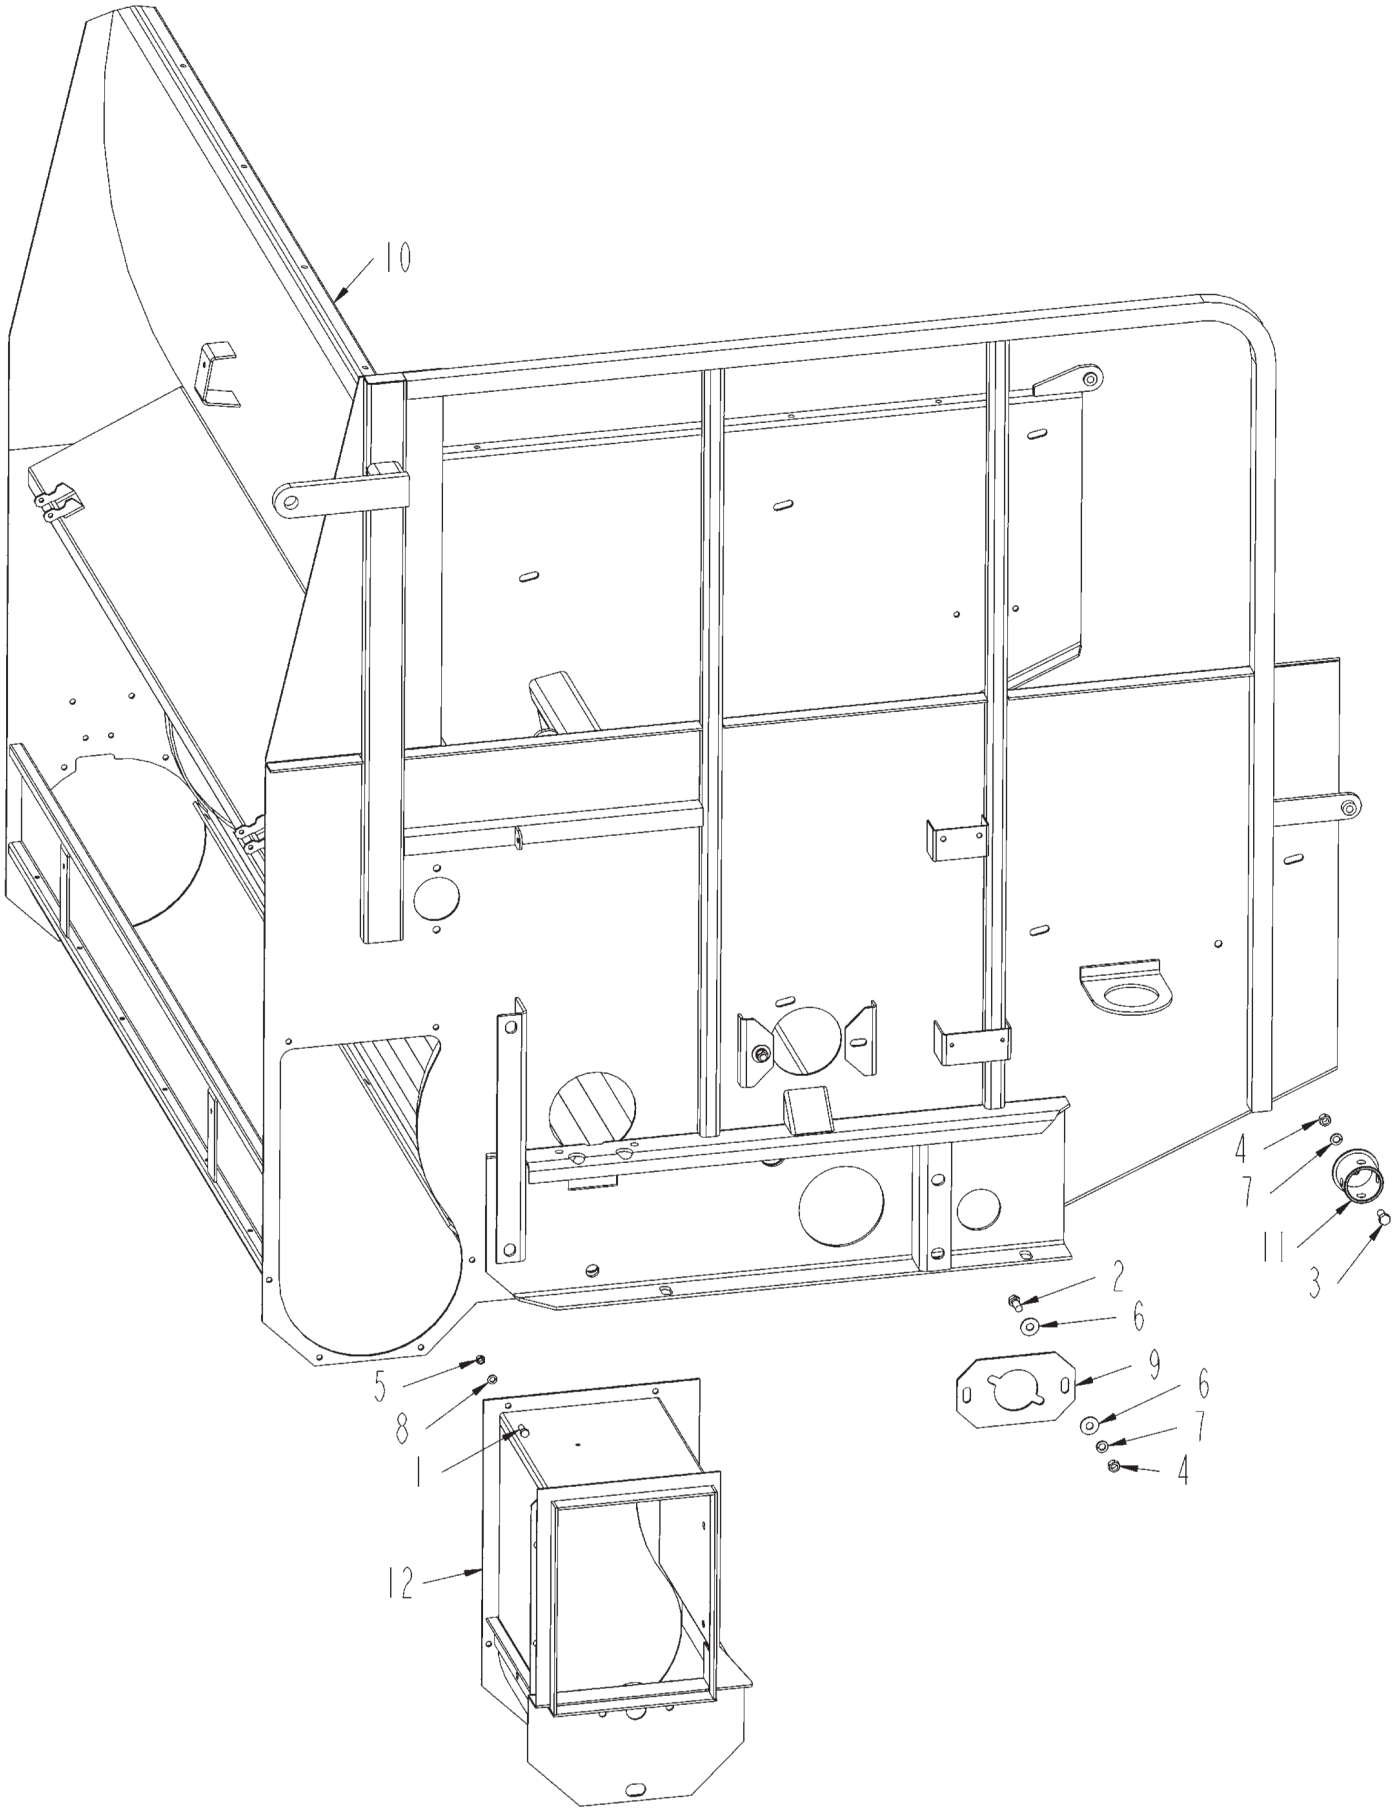


Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		1	EA.
2	4800018	BOLT\HEX\1/2X1-1/4		2	EA.
3	4800085	BOLT\HEX\1/2X1		1	EA.
4	4900001	NUT\HEX\1/2\NC		3	EA.
5	4900002	NUT\HEX\3/8\NC		1	EA.
6	5000004	WASH\FLAT\1/2		4	EA.
7	5000006	WASH\LOCK\1/2		3	EA.
8	5000019	WASH\LOCK\3/8		1	EA.
9	8100036	MNT\MTR\HYD		1	EA.
10	8101268	FRM\SHREDDER\2564		1	EA
11	8101748	BRKT\STRG\JACK		1	EA.
12	8101817	AUGER\EXT		1	EA

2564 Balebuster Parts Reference

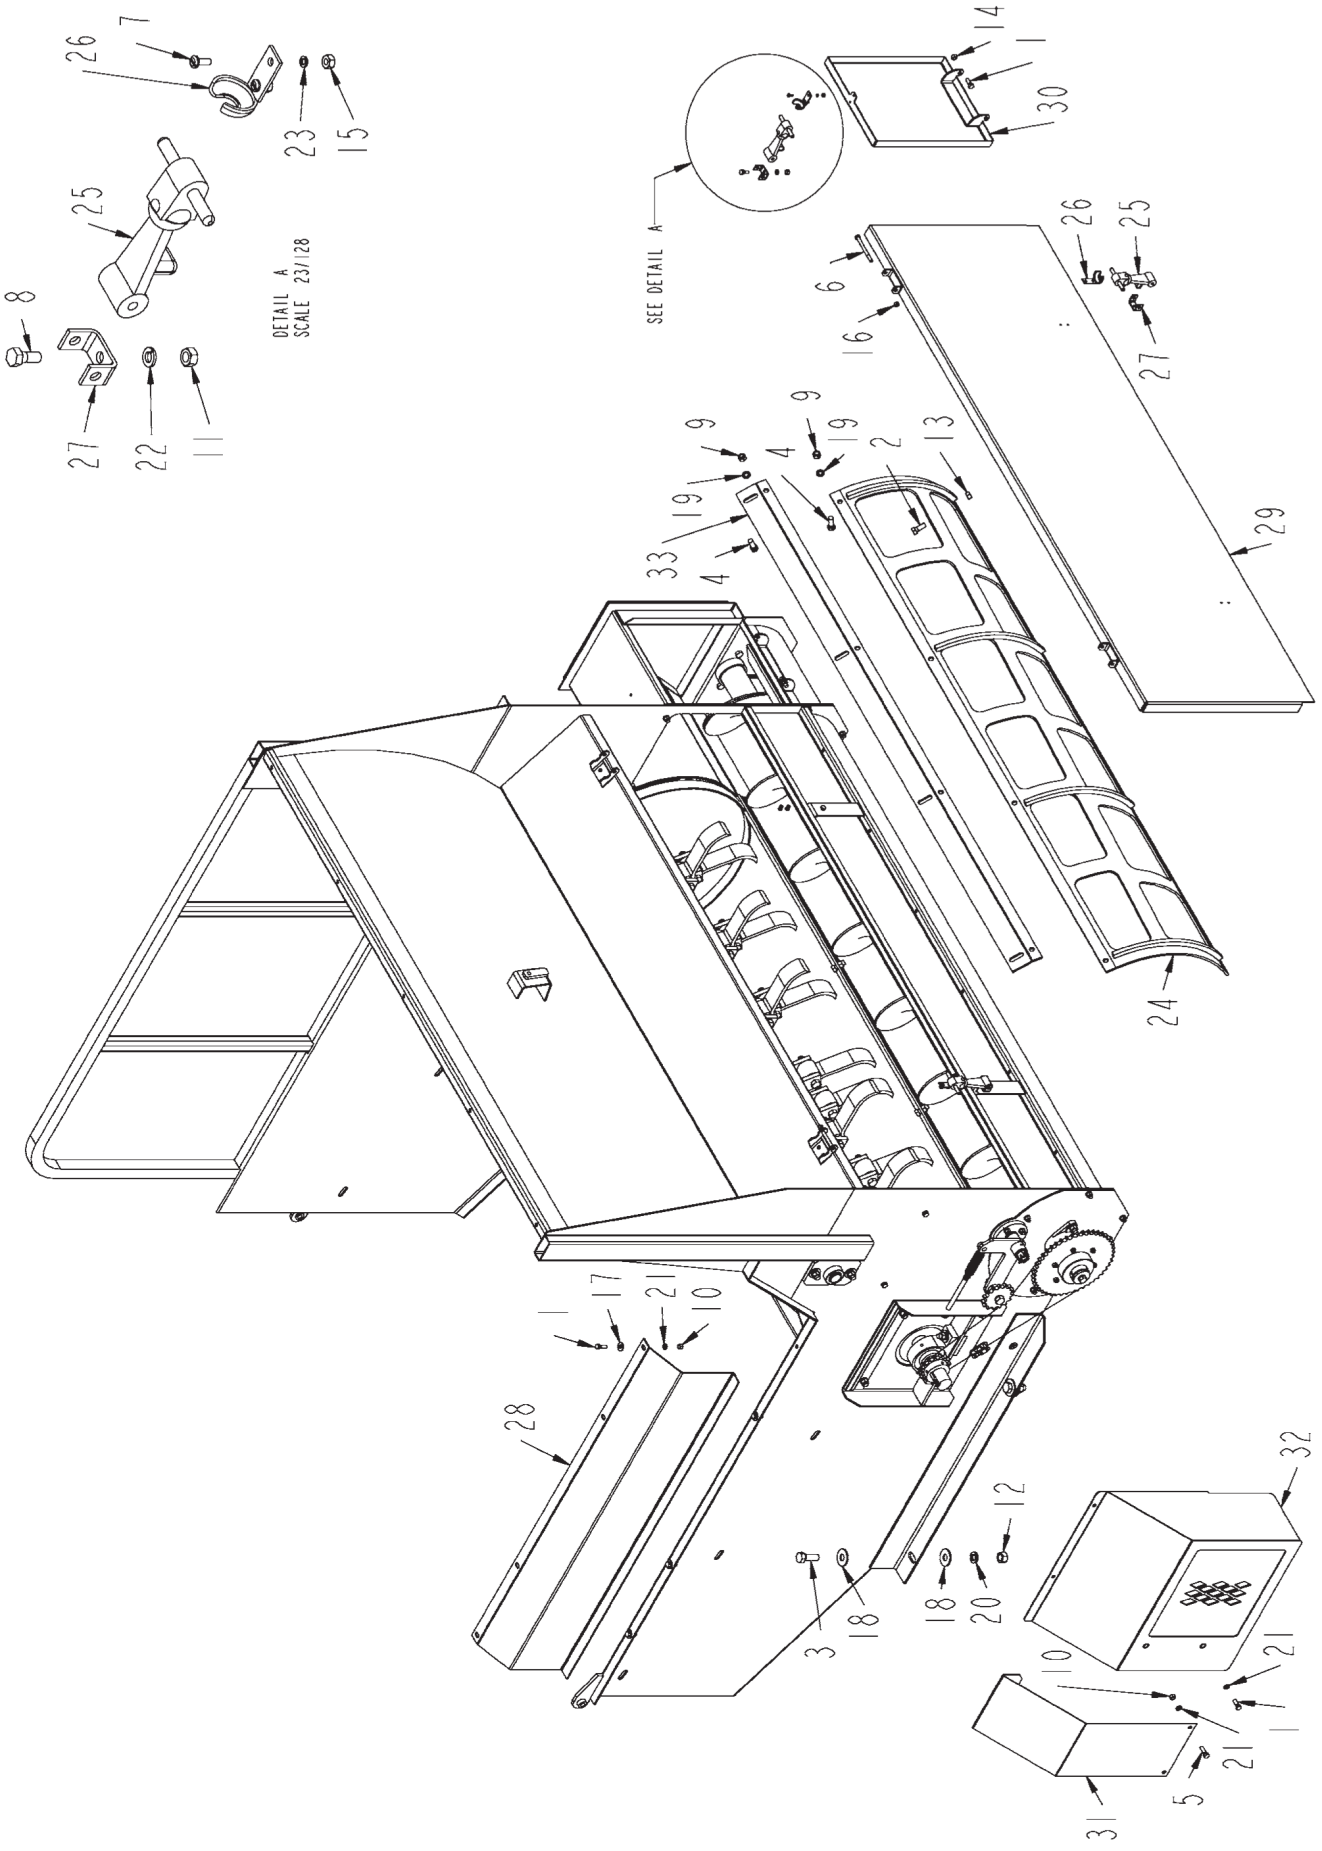


Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		10	EA.
2	4800018	BOLT\HEX\1/2X1-1/4		4	EA.
3	4800033	BOLT\HEX\3/4X2		4	EA.
4	4800082	BOLT\HEX\1/2X1-1/2		8	EA.
5	4800098	BOLT\HEX\3/8X1-1/4\NC		2	EA.
6	4800198	BOLT\HEX\5/16X3-3/4		2	EA.
7	4800468	SCR\RD\SLOT\#10-24X1/2\NC		6	EA.
8	4800643	BOLT\HEX\5/16X3/4		3	EA.
9	4900001	NUT\HEX\1/2\NC		8	EA.
10	4900002	NUT\HEX\3/8\NC		6	EA.
11	4900003	NUT\HEX\5/16\NC		3	EA.
12	4900004	NUT\HEX\3/4\NC		4	EA.
13	4900014	NUT\TPLCK\1/2\NC		4	EA.
14	4900023	NUT\TPLCK\3/8\NC		2	EA.
15	4900072	NUT\HEX\#10\NC		6	EA.
16	4900099	NUT\TPLCK\5/16\GR8\NC		2	EA.
17	5000001	WASH\FLAT\3/8		4	EA.
18	5000005	WASH\FLAT\3/4		8	EA.
19	5000006	WASH\LOCK\1/2		8	EA.
20	5000012	WASH\LOCK\3/4		4	EA.
21	5000019	WASH\LOCK\3/8		10	EA.
22	5000022	WASH\LOCK\5/16		3	EA.
23	5000071	WASH\LOCK;EXT\STAR\#10		6	EA.
24	5400128	SCRN\4-1/4X10-1/2			EA.
24A	5400129	SCRN\6-1/2X10-1/2			EA.
24B	5400135	SCRN\2HL\ROUND			EA.
24C	5400136	SCRN\3HL\ROUND			EA.
24D	5400137	SCRN\4HL\ROUND			EA.
25	7501660	LATCH\RBBR\8\W-STD-CATCH		3	EA.
26	7500190	LATCH\RBBR\CATCH\6		3	EA
27	7500347	LATCH\RBBR\MNT\6		3	EA
28	8101070	SHLD\REAR\SHRDR\2650		1	EA
29	8101281	DOOR\SHREADER\2564		1	EA.
30	8101282	DOOR\AUGER EX\2564		1	EA.
31	8101302	SHLD\BRG\REAR\RTR		1	EA
32	8101690	SHLD\AUG\DRIVE		1	EA
33	8101702	MNT\SCRN\BTTM\SHREDDER		1	EA

2564 Balebuster Parts Reference

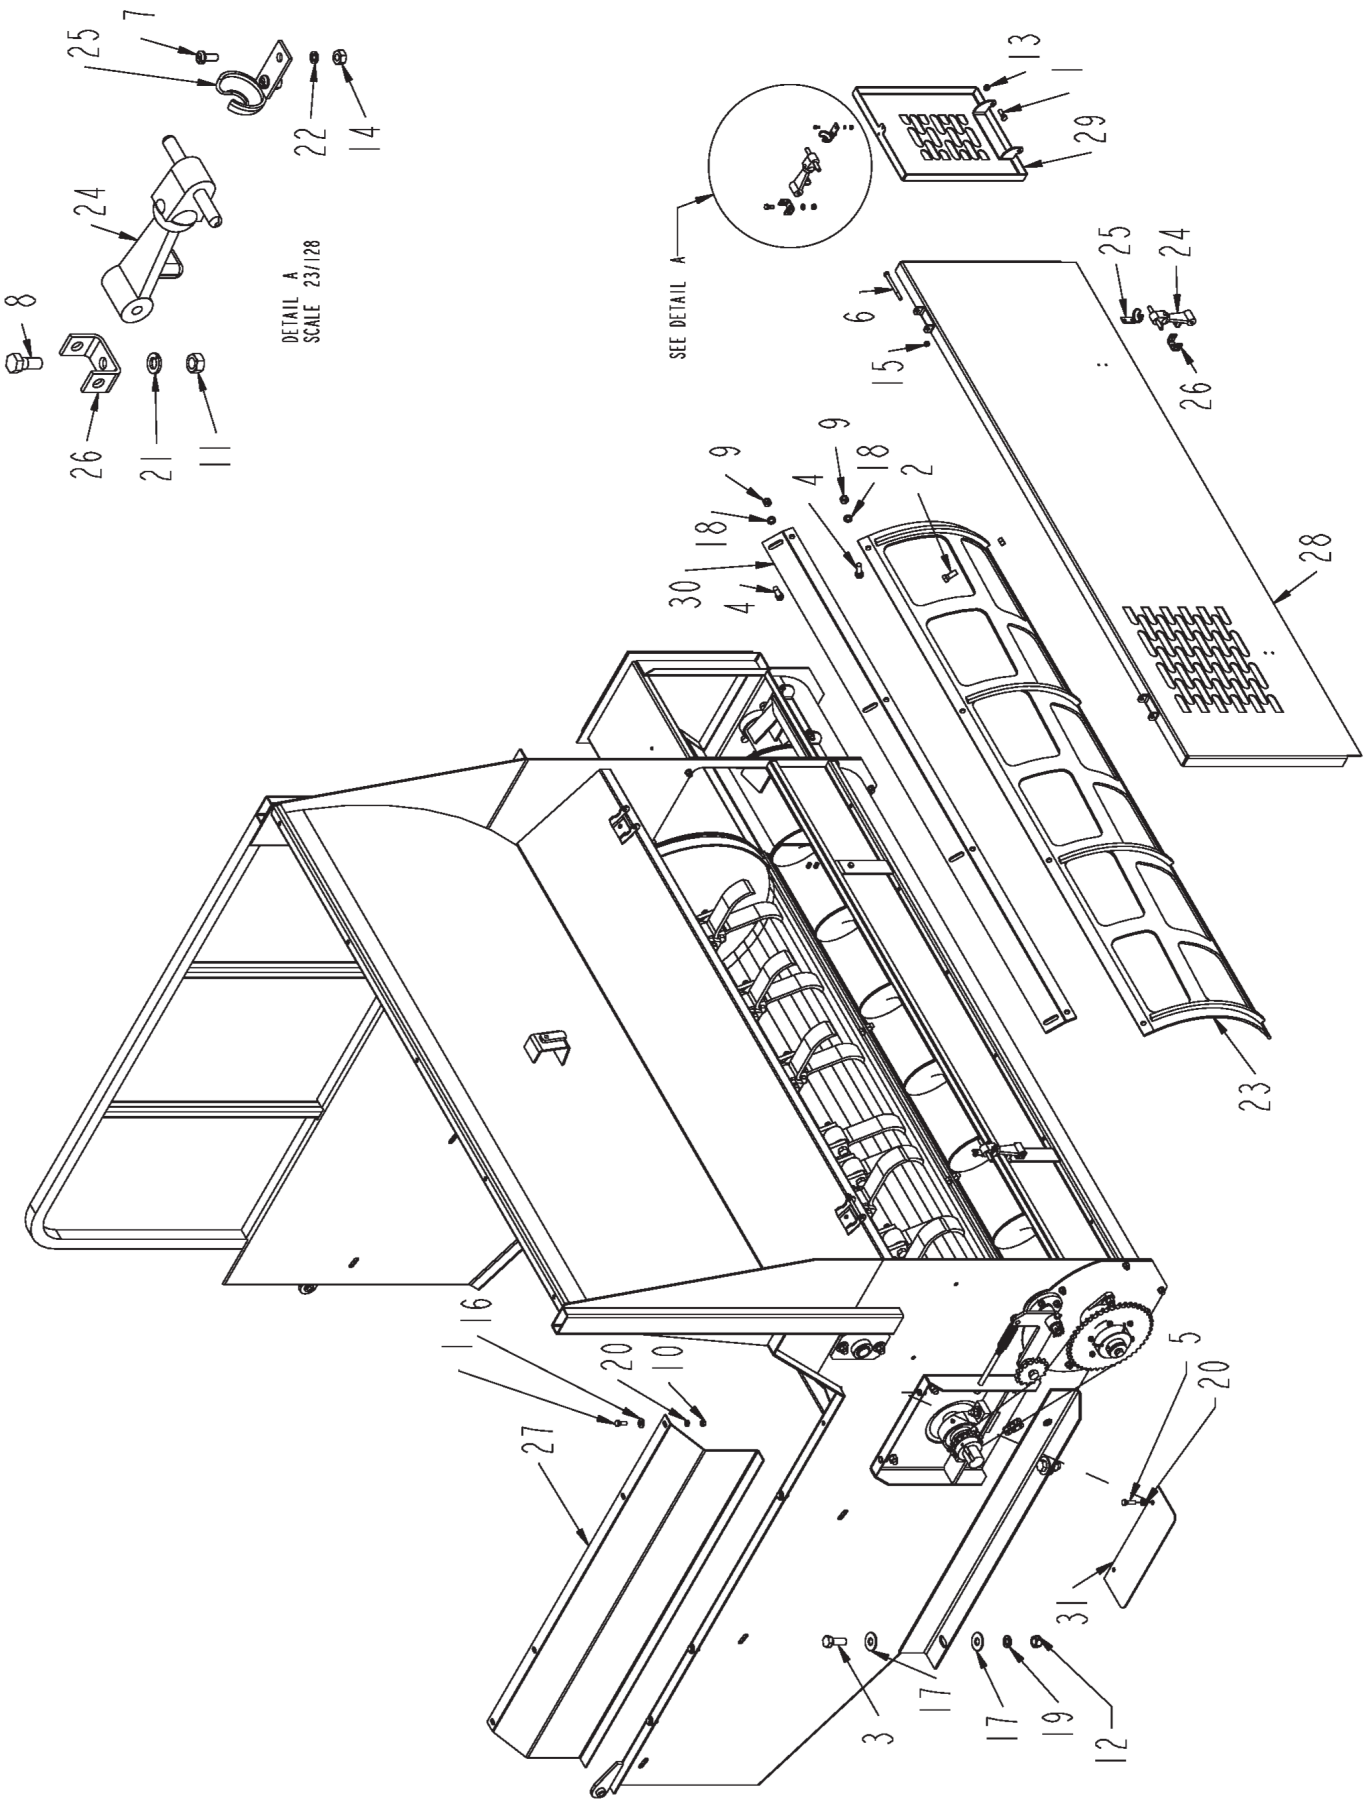

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		18	EA.
2	4800018	BOLT\HEX\1/2X1-1/4		11	EA.
3	4800033	BOLT\HEX\3/4X2		4	EA.
4	4800082	BOLT\HEX\1/2X1-1/2		16	EA.
5	4800098	BOLT\HEX\3/8X1-1/4\NC		6	EA.
6	4800198	BOLT\HEX\5/16X3-3/4		2	EA.
7	4800468	SCR\RD\SLOT\#10-24X1/2\NC		6	EA.
8	4800643	BOLT\HEX\5/16X3/4		3	EA.
9	4900001	NUT\HEX\1/2\NC		28	EA.
10	4900002	NUT\HEX\3/8\NC		20	EA.
11	4900003	NUT\HEX\5/16\NC		3	EA.
12	4900004	NUT\HEX\3/4\NC		4	EA.
13	4900023	NUT\TPLCK\3/8\NC		2	EA.
14	4900072	NUT\HEX\#10\NC		6	EA.
15	4900099	NUT\TPLCK\5/16\GR8\NC		8	EA.
16	5000001	WASH\FLAT\3/8		4	EA.
17	5000005	WASH\FLAT\3/4		8	EA.
18	5000006	WASH\LOCK\1/2		27	EA.
19	5000012	WASH\LOCK\3/4		4	EA.
20	5000019	WASH\LOCK\3/8		22	EA.
21	5000022	WASH\LOCK\5/16		3	EA.
22	5000071	WASH\LOCK;EXT\STAR\#10		6	EA.
23	5400128	SCRN\4-1/4X10-1/2		1	EA.
23A	5400129	SCRN\6-1/2X10-1/2			EA.
23B	5400135	SCRN\2HL\ROUND			EA.
23C	5400136	SCRN\3HL\ROUND			EA.
23D	5400137	SCRN\4HL\ROUND			EA.
24	7500166	ORDER 7501660 LATCH\RBBR\6		3	EA.
25	7500190	LATCH\RBBR\CATCH\6		3	EA
26	7500347	LATCH\RBBR\MNT\6		3	EA
27	8101070	SHLD\REAR\SHRDR\2650		1	EA
28	8101281	DOOR\SHREADER\2564		1	EA.
29	8101282	DOOR\AUGER EX\2564		1	EA.
30	8101702	MNT\SCRN\BTTM\SHREDDER		1	EA
31	8101745	SHLD\DRV\AUGER		1	EA.

2564 Balebuster Parts Reference

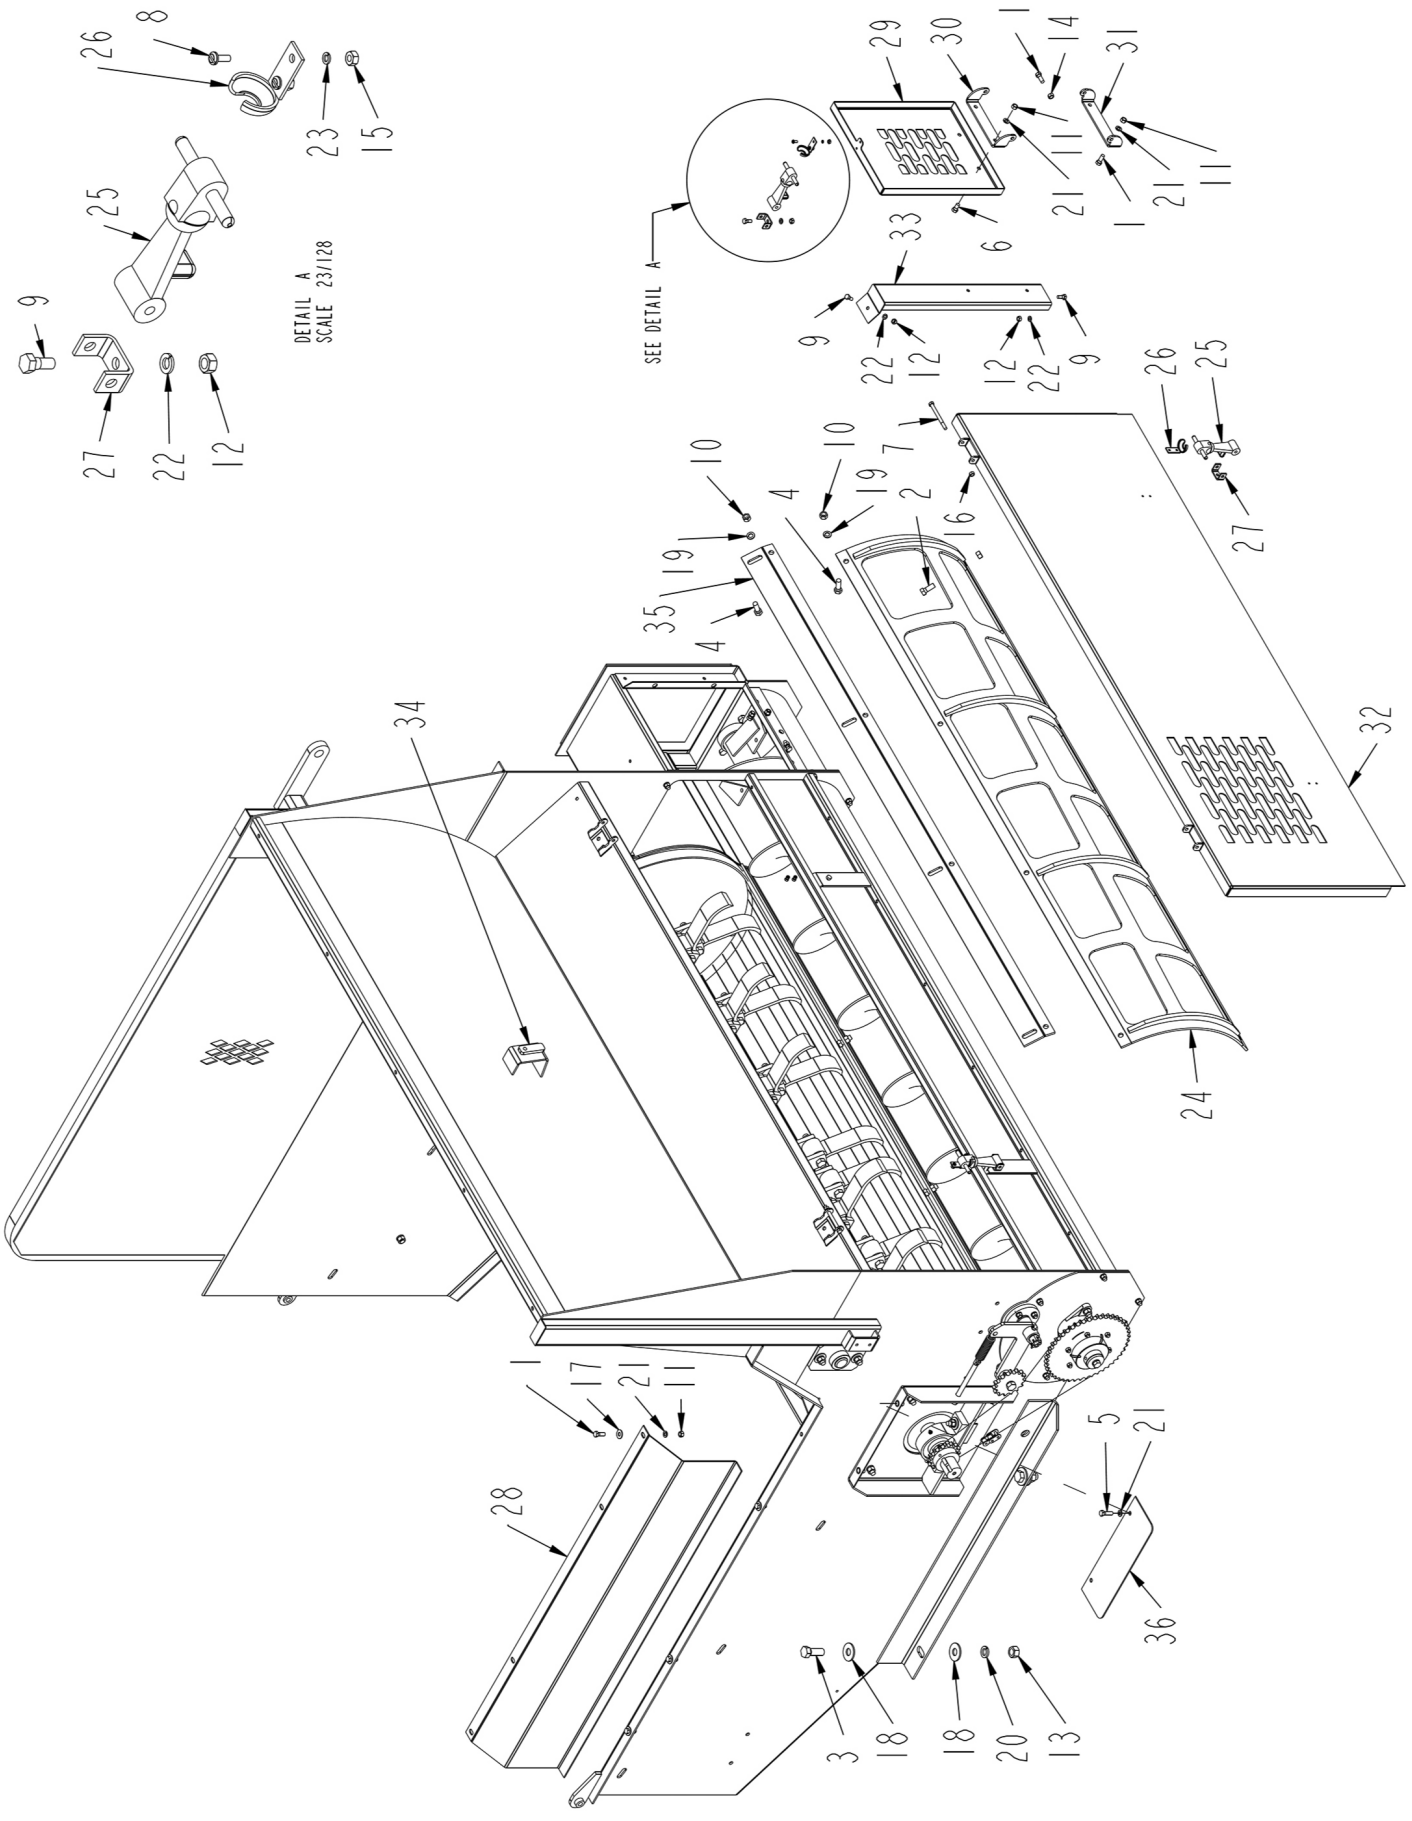


Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		20	EA.
2	4800018	BOLT\HEX\1/2X1-1/4		11	EA.
3	4800033	BOLT\HEX\3/4X2		4	EA.
4	4800082	BOLT\HEX\1/2X1-1/2		16	EA.
5	4800098	BOLT\HEX\3/8X1-1/4\NC		6	EA.
6	4800164	BOLT\HEX\3/8X3/4		2	EA
7	4800198	BOLT\HEX\5/16X3-3/4		2	EA.
8	4800468	SCR\RD\SLOT\#10-24X1/2\NC		6	EA.
9	4800643	BOLT\HEX\5/16X3/4		5	EA.
10	4900001	NUT\HEX\1/2\NC		29	EA.
11	4900002	NUT\HEX\3/8\NC		24	EA.
12	4900003	NUT\HEX\5/16\NC		5	EA.
13	4900004	NUT\HEX\3/4\NC		4	EA.
14	4900023	NUT\TPLCK\3/8\NC		2	EA.
15	4900072	NUT\HEX\#10\NC		6	EA.
16	4900099	NUT\TPLCK\5/16\GR8\NC		8	EA.
17	5000001	WASH\FLAT\3/8		4	EA.
18	5000005	WASH\FLAT\3/4		8	EA.
19	5000006	WASH\LOCK\1/2		28	EA.
20	5000012	WASH\LOCK\3/4		4	EA.
21	5000019	WASH\LOCK\3/8		26	EA.
22	5000022	WASH\LOCK\5/16		5	EA.
23	5000071	WASH\LOCK;EXT\STAR\#10		6	EA.
24	5400128	SCRN\4-1/4X10-1/2			EA.
24A	5400129	SCRN\6-1/2X10-1/2			EA.
24B	5400135	SCRN\2HL\ROUND			EA.
24C	5400136	SCRN\3HL\ROUND			EA.
25	7501660	LATCH\RBBR\8\W-STD-CATCH		3	EA.
26	7500190	LATCH\RBBR\CATCH\6		3	EA
27	7500347	LATCH\RBBR\MNT\6		3	EA
28	8101070	SHLD\REAR\SHRDR\2650		1	EA
29	8101334	DOOR\AUGER\EXT		1	EA
30	8101336	HINGE\DOOR		1	EA
31	8101337	HINGE\DOOR		1	EA
32	8101338	PRICE ON REQUEST		1	EA
33	8101339	FLLR\DOOR\SHRDR		1	EA
34	8101678	LATCH\DOOR		1	EA.
35	8101702	MNT\SCRN\BTTM\SHREDDER		1	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
36	8101745	SHLD\DRV\AUGER		1	EA.

2564 Balebuster Parts Reference

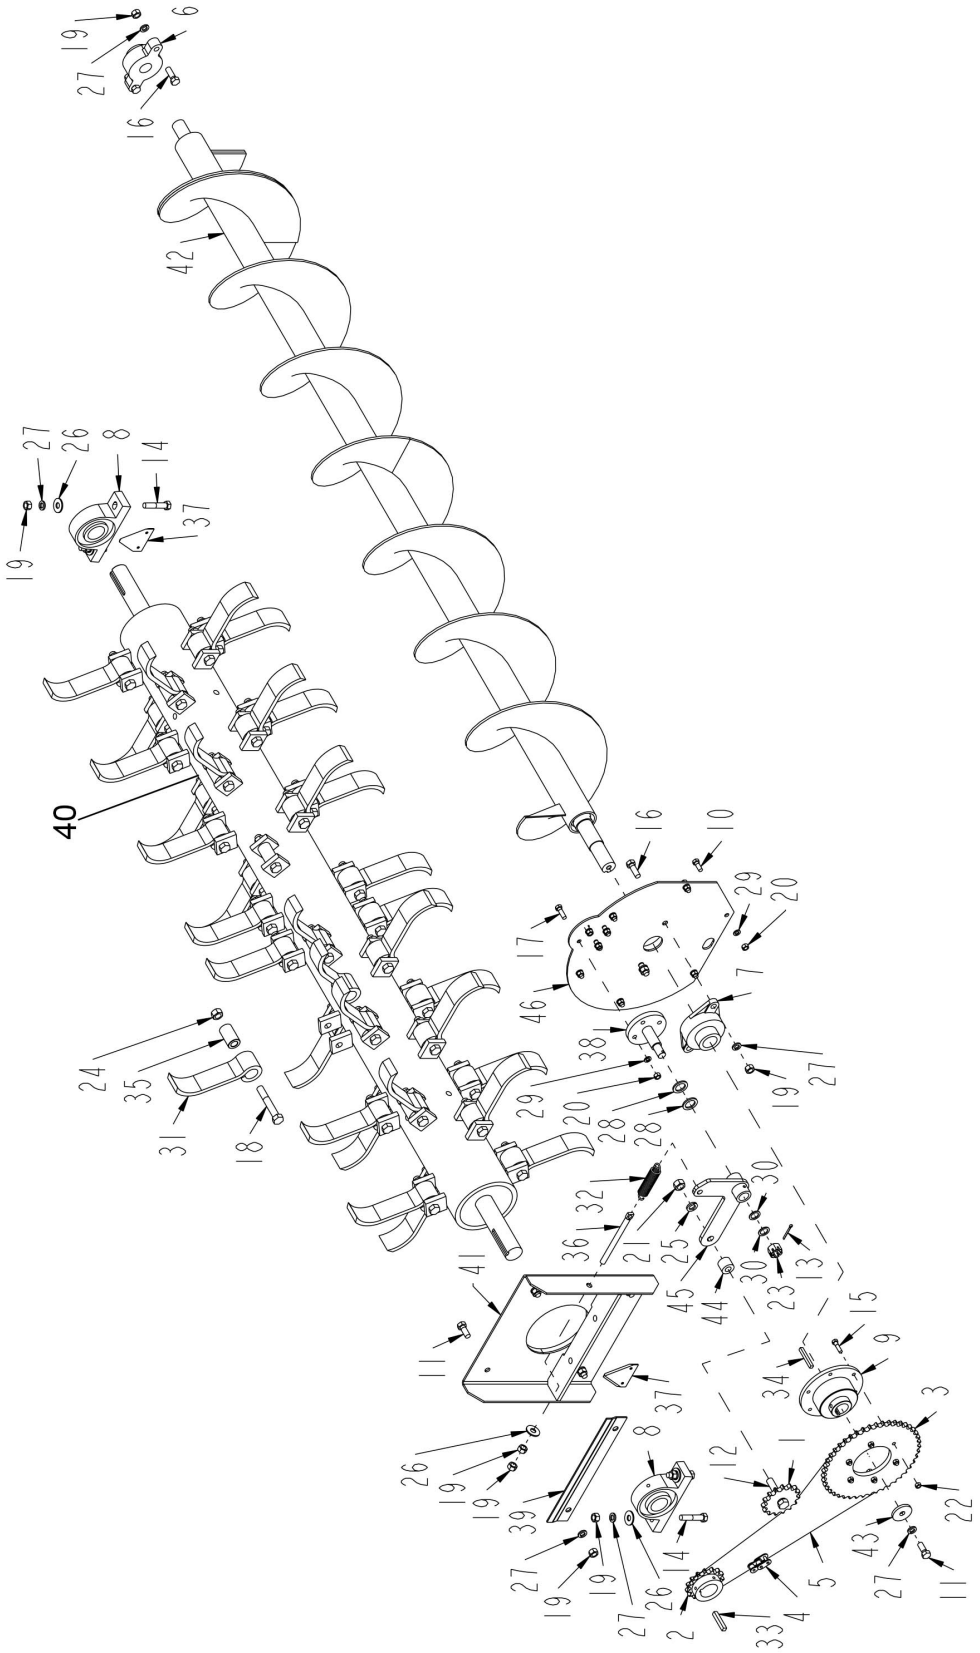


ROTOR AND AUGER ASSEMBLY (S.N. UP TO 0640)

Item	Part No.	Name	Remarks	Qty	Uom
1	1000007	SPKT\IDLER\60\15\5/8		1	EA
2	1000086	SPKT\B\60\15\1-3/4\3/8KW		1	EA
3	1000275	SPKT\A\60\45\4.015 BORE		1	EA
4	1100062	CHAIN\60\CL		1	EA.
5	1100268	CHAIN\60\85		1	EA
6	2000301	BRG\FLG\CAST\1-1/4\2BOLT		1	EA
7	2000308	BRG\FLG\CAST\1-1/2\2BOLT		1	EA.
8	2000514	BRG\PB\1-3/4\2BOLT\MALLEABLE		2	EA.
9	3600666	CLTCH\AUTO\W-MNT		1	EA
10	4800003	BOLT\HEX\3/8X1		6	EA.
11	4800018	BOLT\HEX\1/2X1-1/4		5	EA.
12	4800021	BOLT\HEX\5/8X3		1	EA
13	4800044	PIN\COT\5/32X1-1/2		1	EA.
14	4800070	BOLT\HEX\1/2X2-1/2		4	EA.
15	4800071	BOLT\HEX\5/16X1-1/4		6	EA.
16	4800082	BOLT\HEX\1/2X1-1/2		4	EA.
17	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
18	4800598	BOLT\HEX\5/8X4\NF\GR8		40	EA.
19	4900001	NUT\HEX\1/2\NC		14	EA.
20	4900002	NUT\HEX\3/8\NC		10	EA.
21	4900005	NUT\HEX\5/8\NC		1	EA.
22	4900099	NUT\TPLCK\5/16\GR8\NC		6	EA.
23	4900116	NUT\SLOT.\3/4\NF		1	EA
24	4900179	NUT\TPLCK\RTR\5/8\NF\GR9		40	EA.
25	5000003	WASH\LOCK\5/8		1	EA.
26	5000004	WASH\FLAT\1/2		5	EA.
27	5000006	WASH\LOCK\1/2		13	EA.
28	5000018	WASH\FLAT\1\10GA\1-1/2 O.D.		2	EA.
29	5000019	WASH\LOCK\3/8		10	EA.
30	5000041	WASH\3/4ID\1-1/8OD\16GA		2	EA.
31	5200012	FLAIL\BB\8		40	EA.
32	6100036	SPG\EXT\1OD\.155WD>		1	EA
33	6200020	KEY\SQ\3/8X2-1/4\HARDEND		1	EA.
34	6200060	KEY\SQ\5/16X2.5\HARDENED		1	EA
35	7500223	BUSH\FLAIL\1-1/4X.687x2-1/8L		40	EA.
36	7500716	ROD\ARM\6"		1	EA
37	7501050	PLATE\SICKLE		2	EA.
38	8100571	MNT\IDLER\		1	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	8100879	MNT\SHLD\REAR\BRG\RTR		1	EA.
40	8101269	RTR\20-40\6-ROW		1	EA
41	8101280	BRKT\BRG\REAR\RTR		1	EA
42	8101284	AUGER\2564		1	EA
43	8101301	WASH\FLAT\17/32\2ODX1/4T		1	EA
44	8101305	SPCR\IDLER\CHAIN\AUGER		1	EA
45	8101652	BRKT\BELLCRANK\CHAIN\DRV		1	EA
46	8101677	HSG\END\AUGER-PAN\2564		1	EA

2564 Balebuster Parts Reference

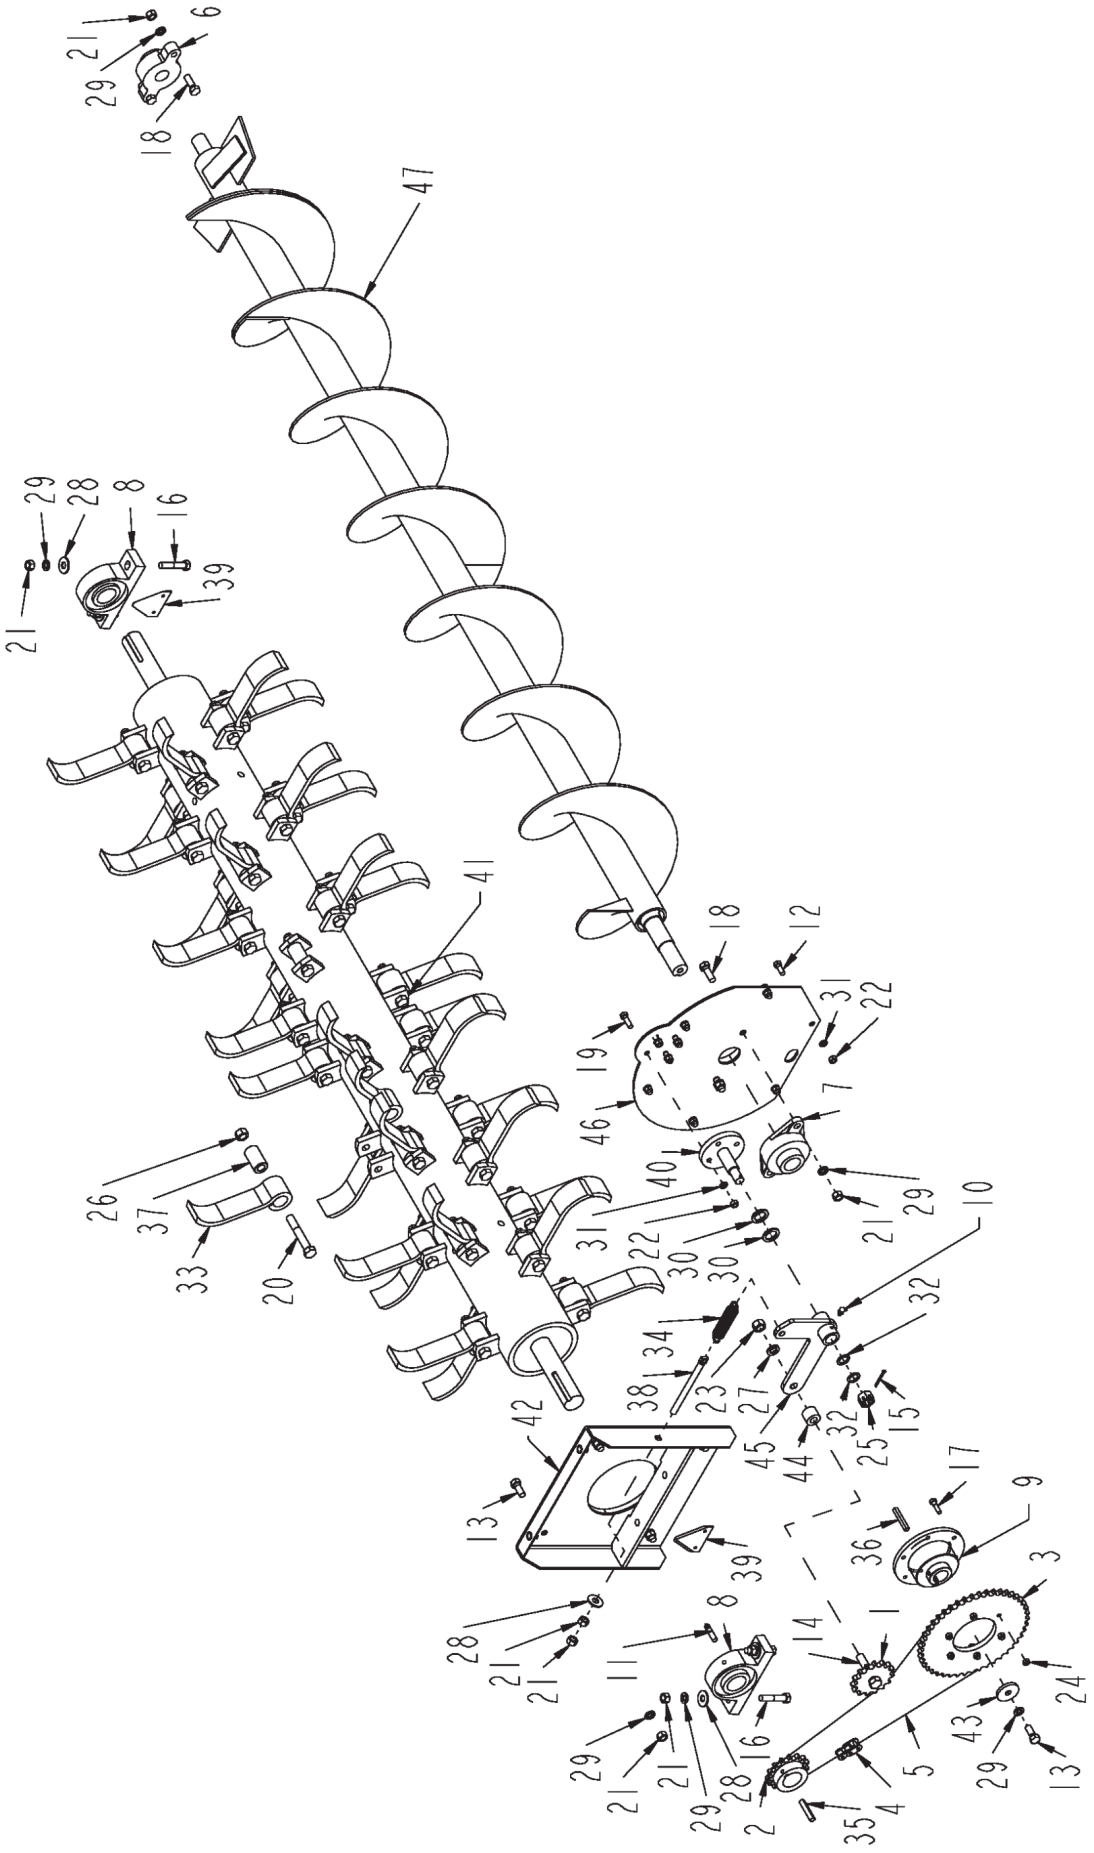


Item	Part No.	Name	Remarks	Qty	Uom
1	1000007	SPKT\IDLER\60\15\5/8		1	EA
2	1000086	SPKT\B\60\15\1-3/4\3/8KW		1	EA
3	1000275	SPKT\A\60\45\4.015 BORE		1	EA
4	1100062	CHAIN\60\CL		1	EA.
5	1100268	CHAIN\60\85		1	EA
6	2000301	BRG\FLG\CAST\1-1/4\2BOLT		1	EA
7	2000308	BRG\FLG\CAST\1-1/2\2BOLT		1	EA.
8	2000514	BRG\PB\1-3/4\2BOLT\MALLEABLE		2	EA.
9	3600666	CLTCH\AUTO\W-MNT		1	EA
10	3800083	PRICE ON REQUEST		1	EA
11	3800126	FTG\LUB\1/8MPXZRK\2-5/8		2	EA.
12	4800003	BOLT\HEX\3/8X1		6	EA.
13	4800018	BOLT\HEX\1/2X1-1/4		5	EA.
14	4800021	BOLT\HEX\5/8X3		1	EA
15	4800044	PIN\COT\5/32X1-1/2		1	EA.
16	4800070	BOLT\HEX\1/2X2-1/2		4	EA.
17	4800071	BOLT\HEX\5/16X1-1/4		6	EA.
18	4800082	BOLT\HEX\1/2X1-1/2		4	EA.
19	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
20	4800598	BOLT\HEX\5/8X4\NF\GR8		40	EA.
21	4900001	NUT\HEX\1/2\NC		14	EA.
22	4900002	NUT\HEX\3/8\NC		10	EA.
23	4900005	NUT\HEX\5/8\NC		1	EA.
24	4900099	NUT\TPLCK\5/16\GR8\NC		6	EA.
25	4900116	NUT\SLOT.\3/4\NF		1	EA
26	4900179	NUT\TPLCK\RTR\5/8\NF\GR9		40	EA.
27	5000003	WASH\LOCK\5/8		1	EA.
28	5000004	WASH\FLAT\1/2		5	EA.
29	5000006	WASH\LOCK\1/2		13	EA.
30	5000018	WASH\FLAT\1\10GA\1-1/2 O.D.		2	EA.
31	5000019	WASH\LOCK\3/8		10	EA.
32	5000041	WASH\3/4ID\1-1/8OD\16GA		2	EA.
33	5200012	FLAIL\BB\8		40	EA.
34	6100036	SPG\EXT\1OD\.155WD>		1	EA
35	6200020	KEY\SQ\3/8X2-1/4\HARDEND		1	EA.
36	6200060	KEY\SQ\5/16X2.5\HARDENED		1	EA
37	7500223	BUSH\FLAIL\1-1/4X.687x2-1/8L		40	EA.
38	7500716	ROD\ARM\6"		1	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	7501050	PLATE\SICKLE		2	EA.
40	8100571	MNT\IDLER\		1	EA
41	8101269	RTR\20-40\6-ROW		1	EA
42	8101280	BRKT\BRG\REAR\RTR		1	EA
43	8101301	WASH\FLAT\17/32\2ODX1/4T		1	EA
44	8101305	SPCR\IDLER\CHAIN\AUGER		1	EA
45	8101652	BRKT\BELLCRANK\CHAIN\DRV		1	EA
46	8101677	HSG\END\AUGER-PAN\2564		1	EA
47	8101718	AUGER\2-PADDLE\2564		1	EA


2564 Balebuster Parts Reference

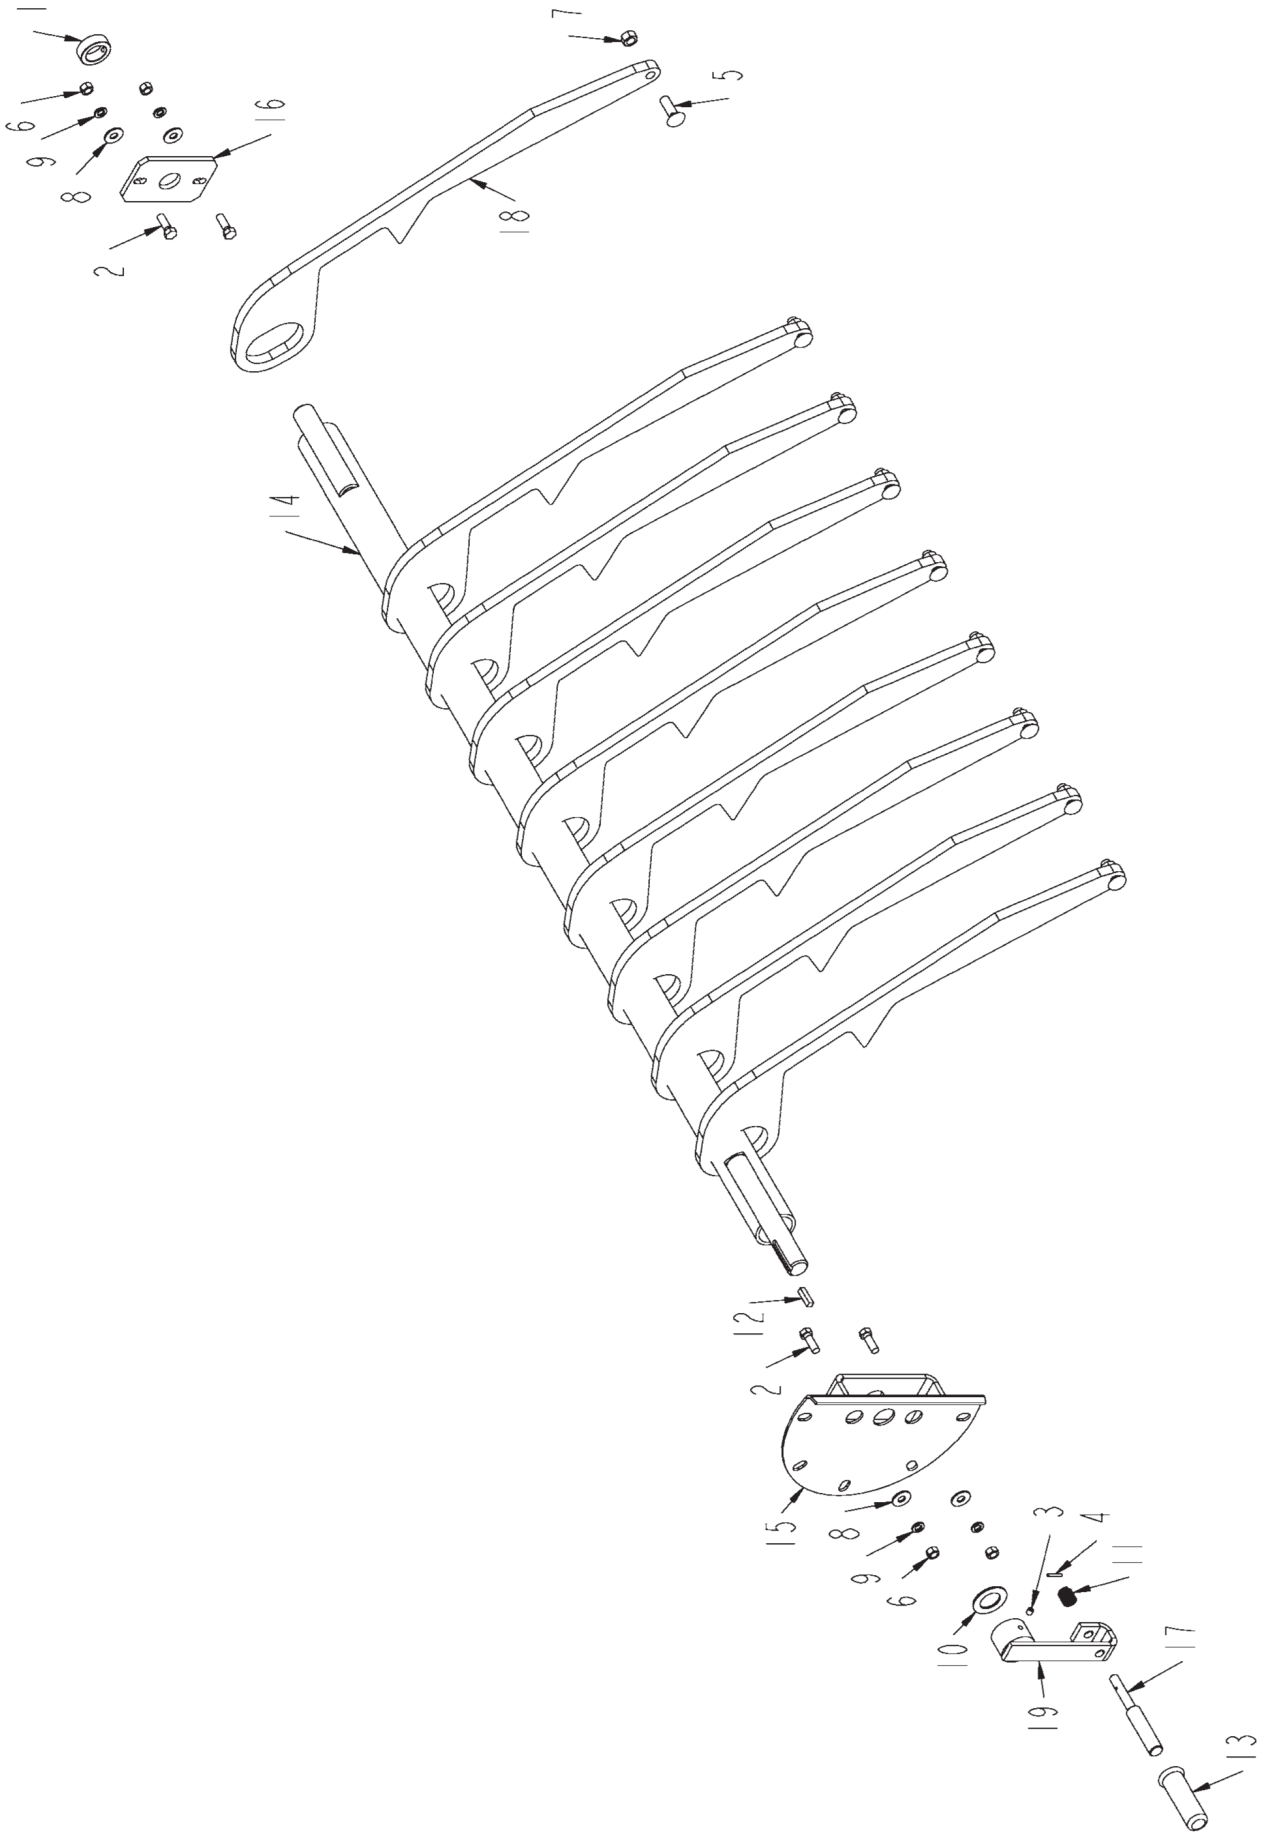

SLUG BAR ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
1	2000813	CLLR\SHFT\1-1/2\SET		1	EA.
2	4800082	BOLT\HEX\1/2X1-1/2		4	EA.
3	4800143	SCR\SET\ALN\3/8X3/8\NC		2	EA.
4	4800456	PIN\RLLD\3/16X1-1/8		1	EA.
5	4800483	BOLT\CRG\5/8X2\NC		9	EA.
6	4900001	NUT\HEX\1/2\NC		4	EA.
7	4900012	NUT\TPLCK\5/8\NC		9	EA.
8	5000004	WASH\FLAT\1/2		4	EA.
9	5000006	WASH\LOCK\1/2		4	EA.
10	5000008	WASH\MACH\1-1/2IDX10GA\NR		1	EA.
11	6100031	SPRING\COMP\.072W\25/32OD		1	EA.
12	6200021	KEY\SQ\3/8X1-1/2\HARDEND		1	EA.
13	7500736	GRIP\HAND\1X4-1/2\FLG		1	EA.
14	8100765	SHFT\ADJ\SLUGBAR		1	EA.
15	8101038	BRKT\INDEX\SLUGBAR		1	EA.
16	8101039	BRKT\BRG\SLUGBAR		1	EA.
17	8101050	BRKT\HANDLE\INDEX\SLUGBAR		1	EA.
18	8101278	BAR\SLUG\ADJ		9	EA.
19	8101306	BRKT\MNT\HANDLE\SLUGBAR		1	EA.

2564 Balebuster Parts Reference

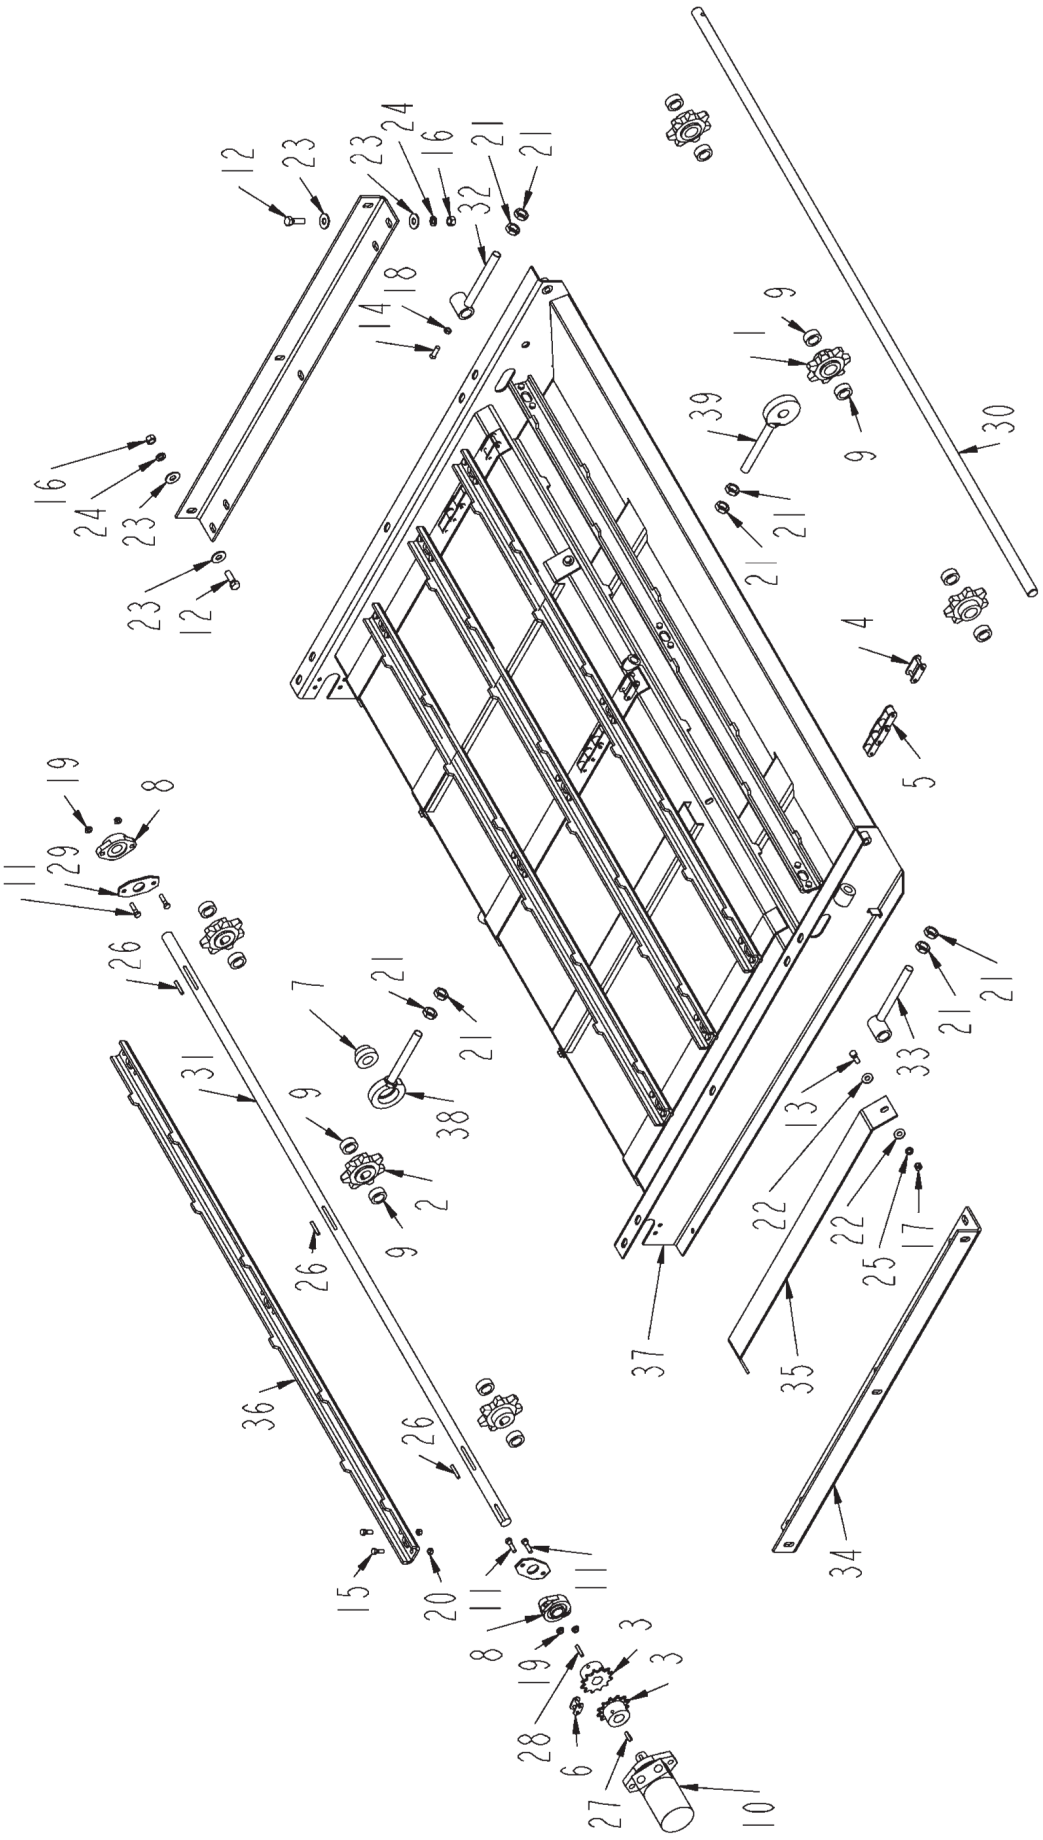


CONVEYOR ASSEMBLY (THRU S.N. 10089064)

Item	Part No.	Name	Remarks	Qty	Uom
1	1000088	SPKT\662\7\1\IDLER\CA		3	EA.
2	1000089	SPKT\662\7\1\1/4KW\DR	10% Discount @50pc, ORDER 4800143 SET SCREW	3	EA.
3	1000233	SPKT\60\B\12\1\1/4KW		2	EA.
4	1100103	CHAIN\620CA\CL		3	EA.
5	1100150	CHAIN\620CA\53\W/ATTCH		3	EA.
6	1100240	CHAIN\60\12\CPLNG\W-CL	Includes connecting link 1100062	1	EA.
7	2000047	BRG\W/CLLR\1\FHR\205-16		1	EA
8	2000310	BRG\FLG\CAST\1\2BOLT		2	EA.
9	2000809	CLLOR\SHFT\1\(SET)		12	EA.
10	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT		1	EA.
11	4800071	BOLT\HEX\5/16X1-1/4		4	EA.
12	4800082	BOLT\HEX\1/2X1-1/2		12	EA.
13	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
14	4800307	SCR\SET\SQ\3/8X1\NC		1	EA.
15	4800393	BOLT\HEX\5/16X7/8\GR8		54	EA.
16	4900001	NUT\HEX\1/2\NC		12	EA.
17	4900002	NUT\HEX\3/8\NC		4	EA.
18	4900026	NUT\JAM\3/8\NC		1	EA.
19	4900027	NUT\FLG\TPLCK\5/16\NC		4	EA.
20	4900099	NUT\TPLCK\5/16\GR8\NC		54	EA.
21	4900104	NUT\JAM\3/4\NC		8	EA.
22	5000001	WASH\FLAT\3/8		8	EA.
23	5000004	WASH\FLAT\1/2		24	EA.
24	5000006	WASH\LOCK\1/2		12	EA.
25	5000019	WASH\LOCK\3/8		4	EA.
26	6200005	KEY\SQ\1/4X1-1/2		3	EA,
27	6200011	KEY\WDF\1/4X1		1	EA.
28	6200014	KEY\SQ\1/4X1-1/4		1	EA.
29	8100449	GUARD\TWINE\CNVYR		2	EA.
30	8100779	SHFT\IDLER\CNVYR		1	EA.
31	8100780	SHFT\DRIVE\76\CNVYR		1	EA.
32	8100783	BRKT\SHAFT\IDLER\CNVYR		1	EA.
33	8101022	BRKT\SHAFT\IDLER\NO-TAP		1	EA.
34	8101048	MNT\CNVYR\3\BRK		2	EA.
35	8101052	PL\RUB\CHAIN\CNVYR		2	EA.
36	8101053	PLT\SLAT\2640		9	EA.
37	8101460	CNVYR\FRM\70-1/2\HVY		1	EA
38	8101696	MNT\BRG\CNVYR		1	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	8101699	MNT\SHFT\CNVYR		1	EA.

2564 Balebuster Parts Reference

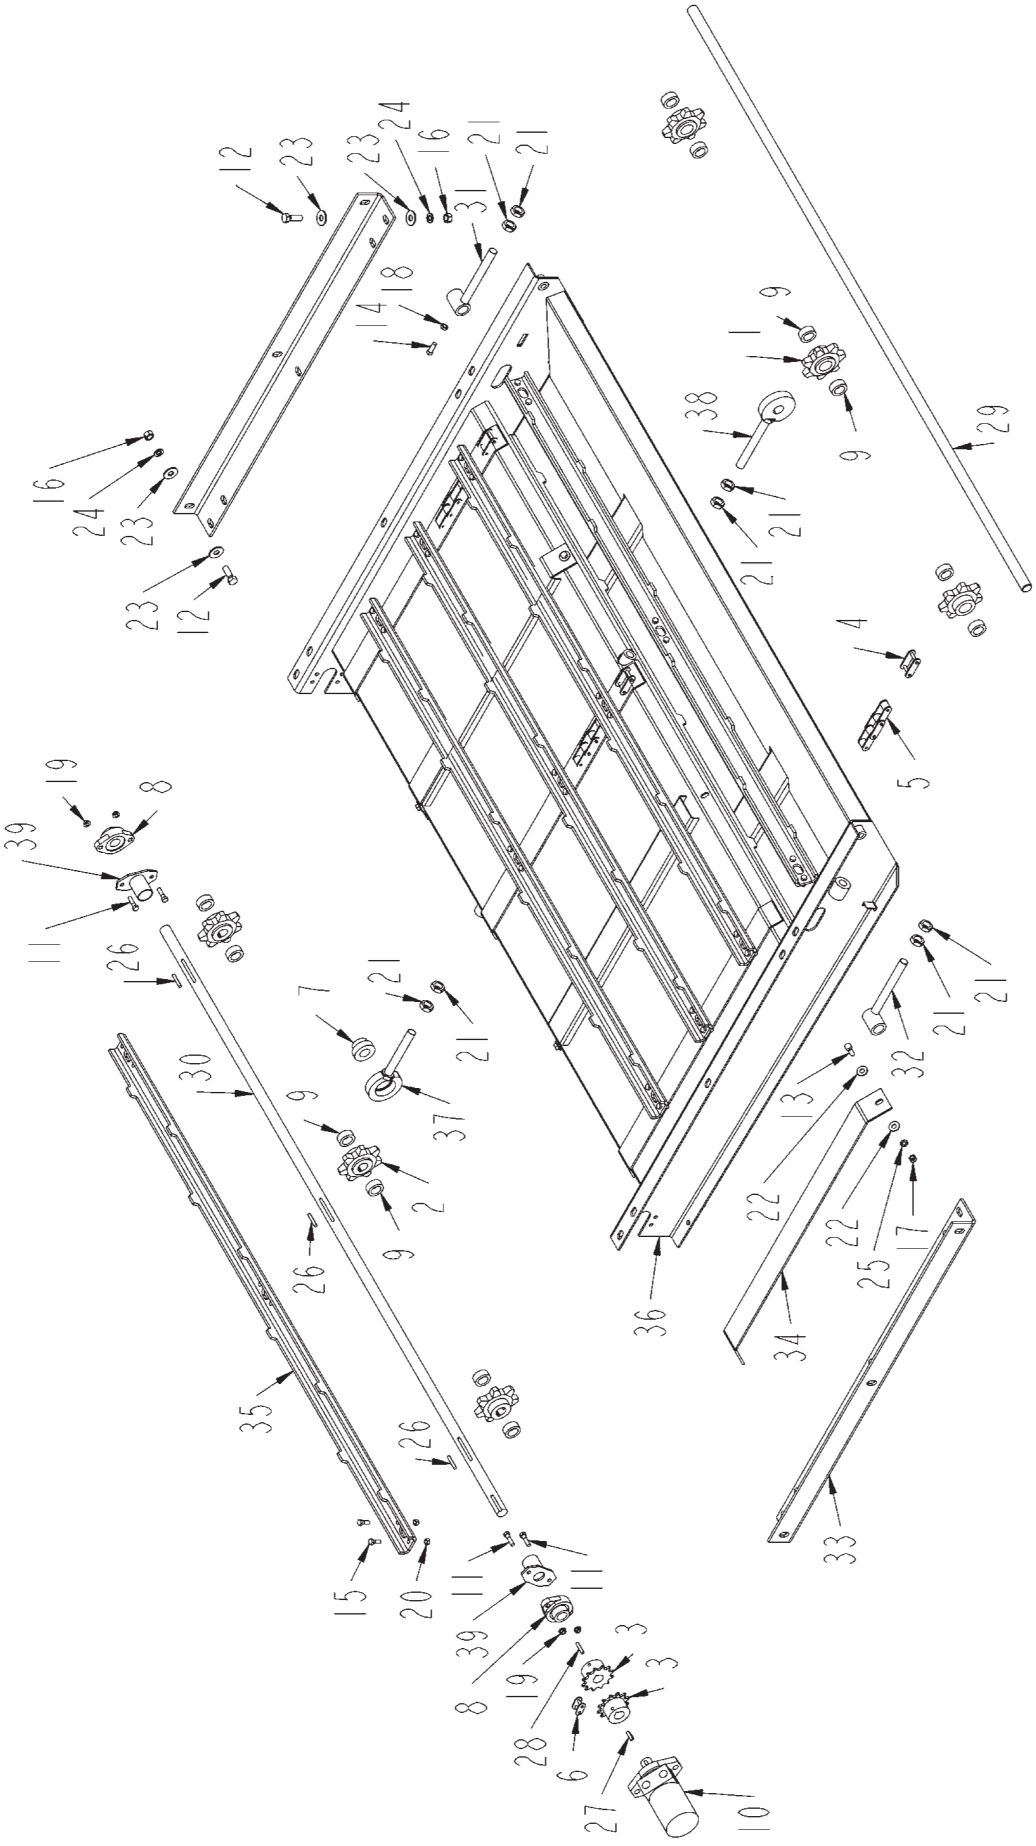


CONVEYOR ASSEMBLY (S.N. 10089164 THRU 12101564)

Item	Part No.	Name	Remarks	Qty	Uom
1	1000088	SPKT\662\7\1\IDLER\CA		3	EA.
2	1000089	SPKT\662\7\1\1/4KW\DR	10% Discount @50pc, ORDER 4800143 SET SCREW	3	EA.
3	1000233	SPKT\60\B\12\1\1/4KW		2	EA.
4	1100103	CHAIN\620CA\CL		3	EA.
5	1100150	CHAIN\620CA\53\W/ATTCH		3	EA.
6	1100240	CHAIN\60\12\CPLNG\W-CL	Includes connecting link 1100062	1	EA.
7	2000047	BRG\W/CLLR\1\FHR\205-16		1	EA
8	2000310	BRG\FLG\CAST\1\2BOLT		2	EA.
9	2000809	CLLOR\SHFT\1\(SET)		12	EA.
10	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT		1	EA.
11	4800071	BOLT\HEX\5/16X1-1/4		4	EA.
12	4800082	BOLT\HEX\1/2X1-1/2		12	EA.
13	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
14	4800307	SCR\SET\SQ\3/8X1\NC		1	EA.
15	4800393	BOLT\HEX\5/16X7/8\GR8		54	EA.
16	4900001	NUT\HEX\1/2\NC		12	EA.
17	4900002	NUT\HEX\3/8\NC		4	EA.
18	4900026	NUT\JAM\3/8\NC		1	EA.
19	4900027	NUT\FLG\TPLCK\5/16\NC		4	EA.
20	4900099	NUT\TPLCK\5/16\GR8\NC		54	EA.
21	4900104	NUT\JAM\3/4\NC		10	EA.
22	5000001	WASH\FLAT\3/8		8	EA.
23	5000004	WASH\FLAT\1/2		24	EA.
24	5000006	WASH\LOCK\1/2		12	EA.
25	5000019	WASH\LOCK\3/8		4	EA.
26	6200005	KEY\SQ\1/4X1-1/2		3	EA,
27	6200011	KEY\WDF\1/4X1		1	EA.
28	6200014	KEY\SQ\1/4X1-1/4		1	EA.
29	8100779	SHFT\IDLER\CNVYR		1	EA.
30	8100780	SHFT\DRIVE\76\CNVYR		1	EA.
31	8100783	BRKT\SHAFT\IDLER\CNVYR		1	EA.
32	8101022	BRKT\SHAFT\IDLER\NO-TAP		1	EA.
33	8101048	MNT\CNVYR\3\BRK		2	EA.
34	8101052	PL\RUB\CHAIN\CNVYR		2	EA.
35	8101053	PLT\SLAT\2640		9	EA.
36	8101460	CNVYR\FRM\70-1/2\HVY		1	EA
37	8101696	MNT\BRG\CNVYR		1	EA
38	8101699	MNT\SHFT\CNVYR		1	EA.

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	8101749	GUARD\TWINE\CNVYR		2	EA.
CA	8101659	PRICE ON REQUEST			EA.

2564 Balebuster Parts Reference

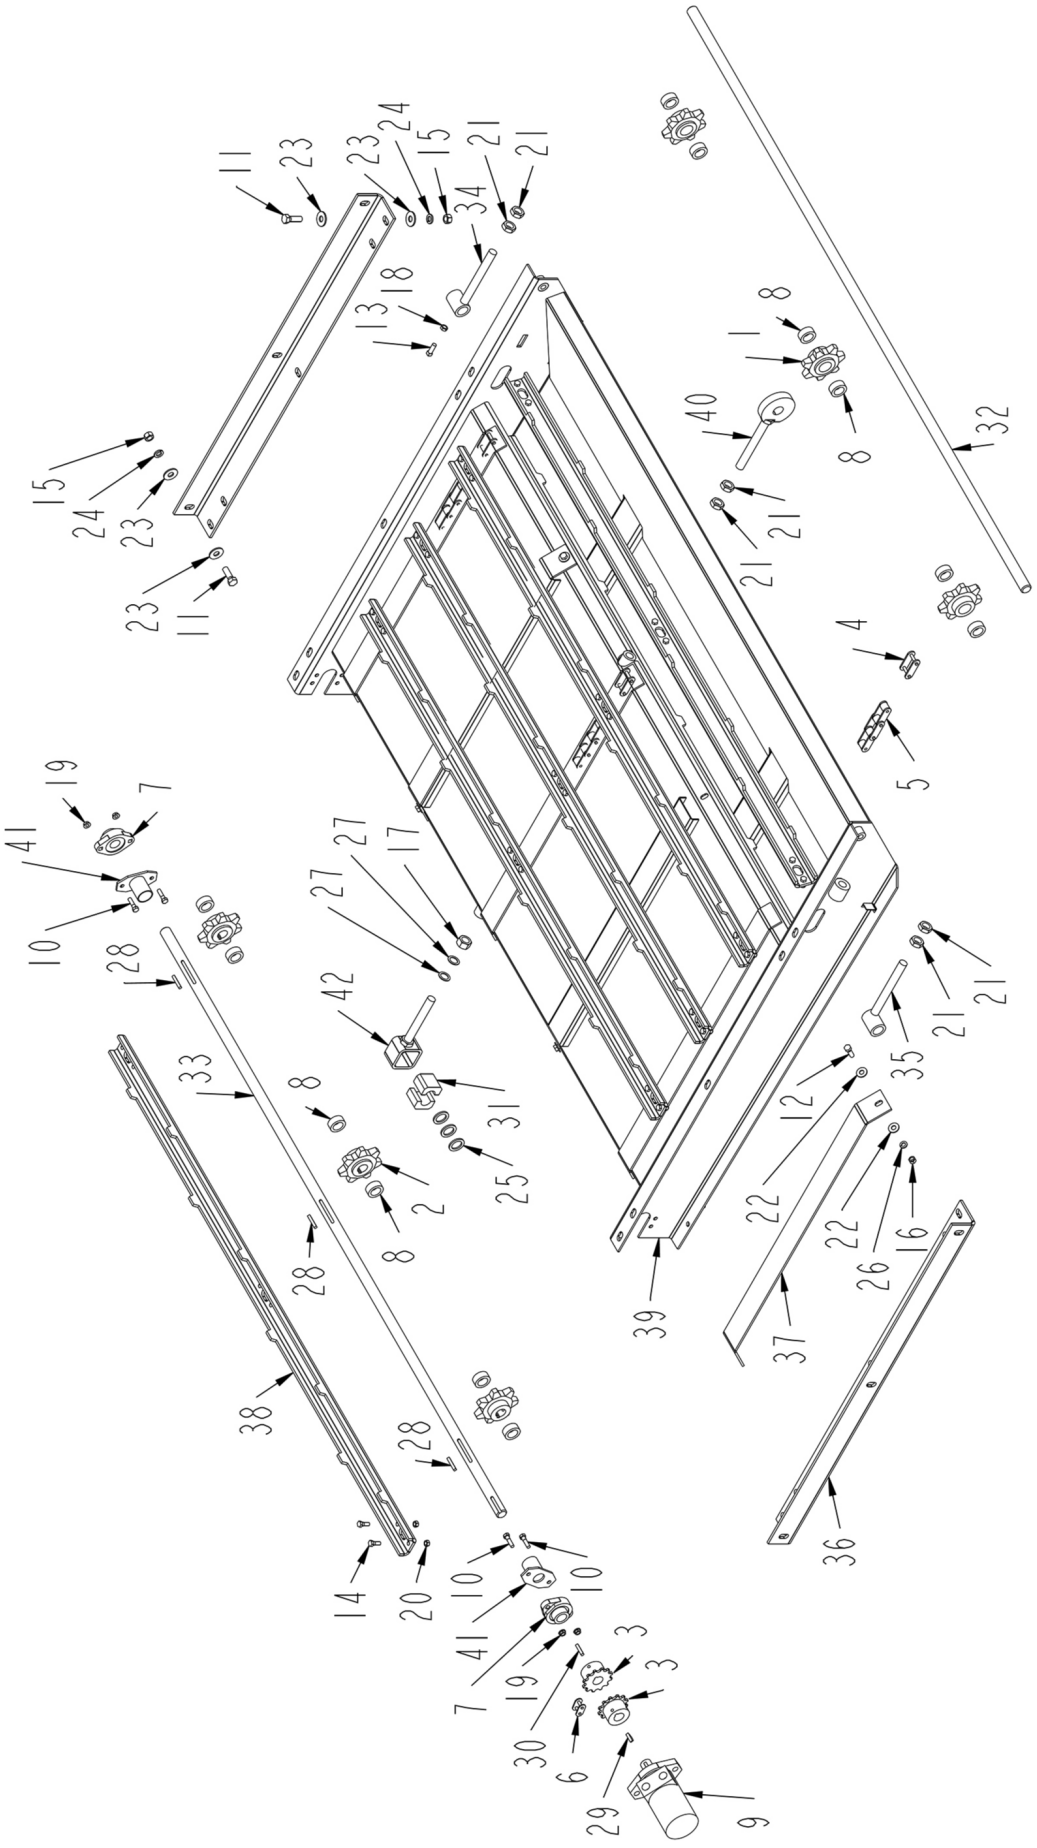


Item	Part No.	Name	Remarks	Qty	Uom
1	1000088	SPKT\662\7\1\IDLER\CA		3	EA.
2	1000089	SPKT\662\7\1\1/4KW\DR	10% Discount @50pc, ORDER 4800143 SET SCREW	3	EA.
3	1000233	SPKT\60\B\12\1\1/4KW		2	EA.
4	1100103	CHAIN\620CA\CL		3	EA.
5	1100150	CHAIN\620CA\53\W/ATTCH		3	EA.
6	1100240	CHAIN\60\12\CPLNG\W-CL	Includes connecting link 1100062	1	EA.
7	2000310	BRG\FLG\CAST\1\2BOLT		2	EA.
8	2000809	CLLOR\SHFT\1\(SET)		12	EA.
9	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT		1	EA.
10	4800071	BOLT\HEX\5/16X1-1/4		4	EA.
11	4800082	BOLT\HEX\1/2X1-1/2		12	EA.
12	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
13	4800307	SCR\SET\SQ\3/8X1\NC		1	EA.
14	4800393	BOLT\HEX\5/16X7/8\GR8		54	EA.
15	4900001	NUT\HEX\1/2\NC		12	EA.
16	4900002	NUT\HEX\3/8\NC		4	EA.
17	4900004	NUT\HEX\3/4\NC		1	EA.
18	4900026	NUT\JAM\3/8\NC		1	EA.
19	4900027	NUT\FLG\TPLCK\5/16\NC		4	EA.
20	4900099	NUT\TPLCK\5/16\GR8\NC		54	EA.
21	4900104	NUT\JAM\3/4\NC		8	EA.
22	5000001	WASH\FLAT\3/8		8	EA.
23	5000004	WASH\FLAT\1/2		24	EA.
24	5000006	WASH\LOCK\1/2		12	EA.
25	5000018	WASH\FLAT\1\10GA\1-1/2 O.D.		3	EA.
26	5000019	WASH\LOCK\3/8		4	EA.
27	5000041	WASH\3/4ID\1-1/8OD\16GA		2	EA.
28	6200005	KEY\SQ\1/4X1-1/2		3	EA,
29	6200011	KEY\WDF\1/4X1		1	EA.
30	6200014	KEY\SQ\1/4X1-1/4		1	EA.
31	7501506	BRG\NYLTRN\1\HALF\1"ID\2SQ-OD		2	EA.
32	8100779	SHFT\IDLER\CNVYR		1	EA.
33	8100780	SHFT\DRIVE\76\CNVYR		1	EA.
34	8100783	BRKT\SHAFT\IDLER\CNVYR		1	EA.
35	8101022	BRKT\SHAFT\IDLER\NO-TAP		1	EA.
36	8101048	MNT\CNVYR\3\BRK		2	EA.
37	8101052	PL\RUB\CHAIN\CNVYR		2	EA.
38	8101053	PLT\SLAT\2640		9	EA.

This page intentionally left blank


Item	Part No.	Name	Remarks	Qty	Uom
39	8101460	CNVYR\FRM\70-1/2\HVY		1	EA
40	8101699	MNT\SHFT\CNVYR		1	EA.
41	8101749	GUARD\TWINE\CNVYR		2	EA.
42	8101852	MNT\BRG\SPLIT\CNVYR		1	EA.

2564 Balebuster Parts Reference

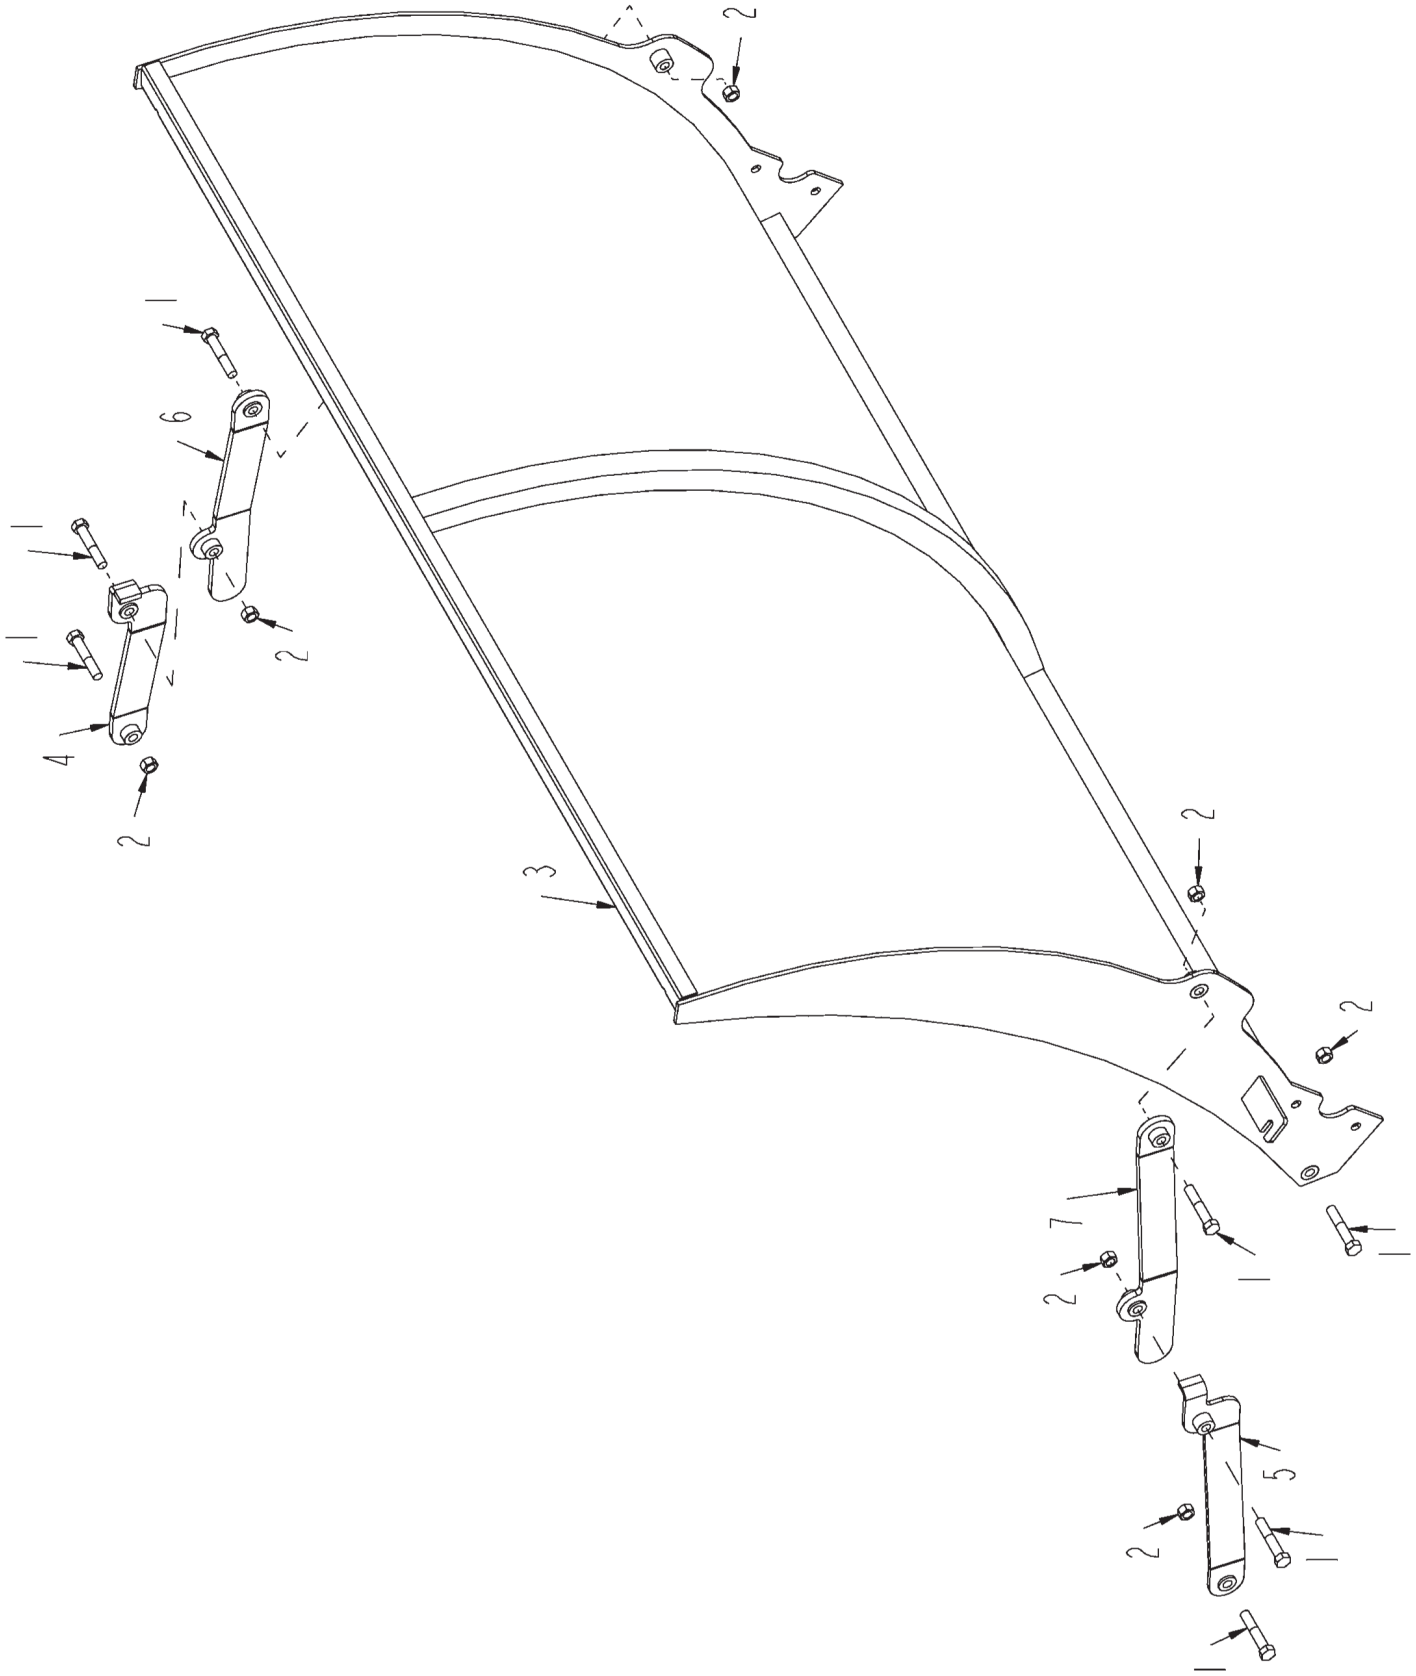


Item	Part No.	Name	Remarks	Qty	Uom
1	4800351	BOLT\HEX\1/2X2-3/4		8	EA.
2	4900014	NUT\TPLCK\1/2\NC		8	EA.
3	8101750	RACK\2650		1	EA
4	8101090	BRKT\STRAP\RACK\W-STOP\FRONT		1	EA.
5	8101091	BRKT\STRAP\RACK\W-STOP\REAR		1	EA.
6	8101092	BRKT\STRAP\RACK\FRONT		1	EA.
7	8101093	BRKT\STRAP\RACK\REAR		1	EA.

2564 Balebuster Parts Reference

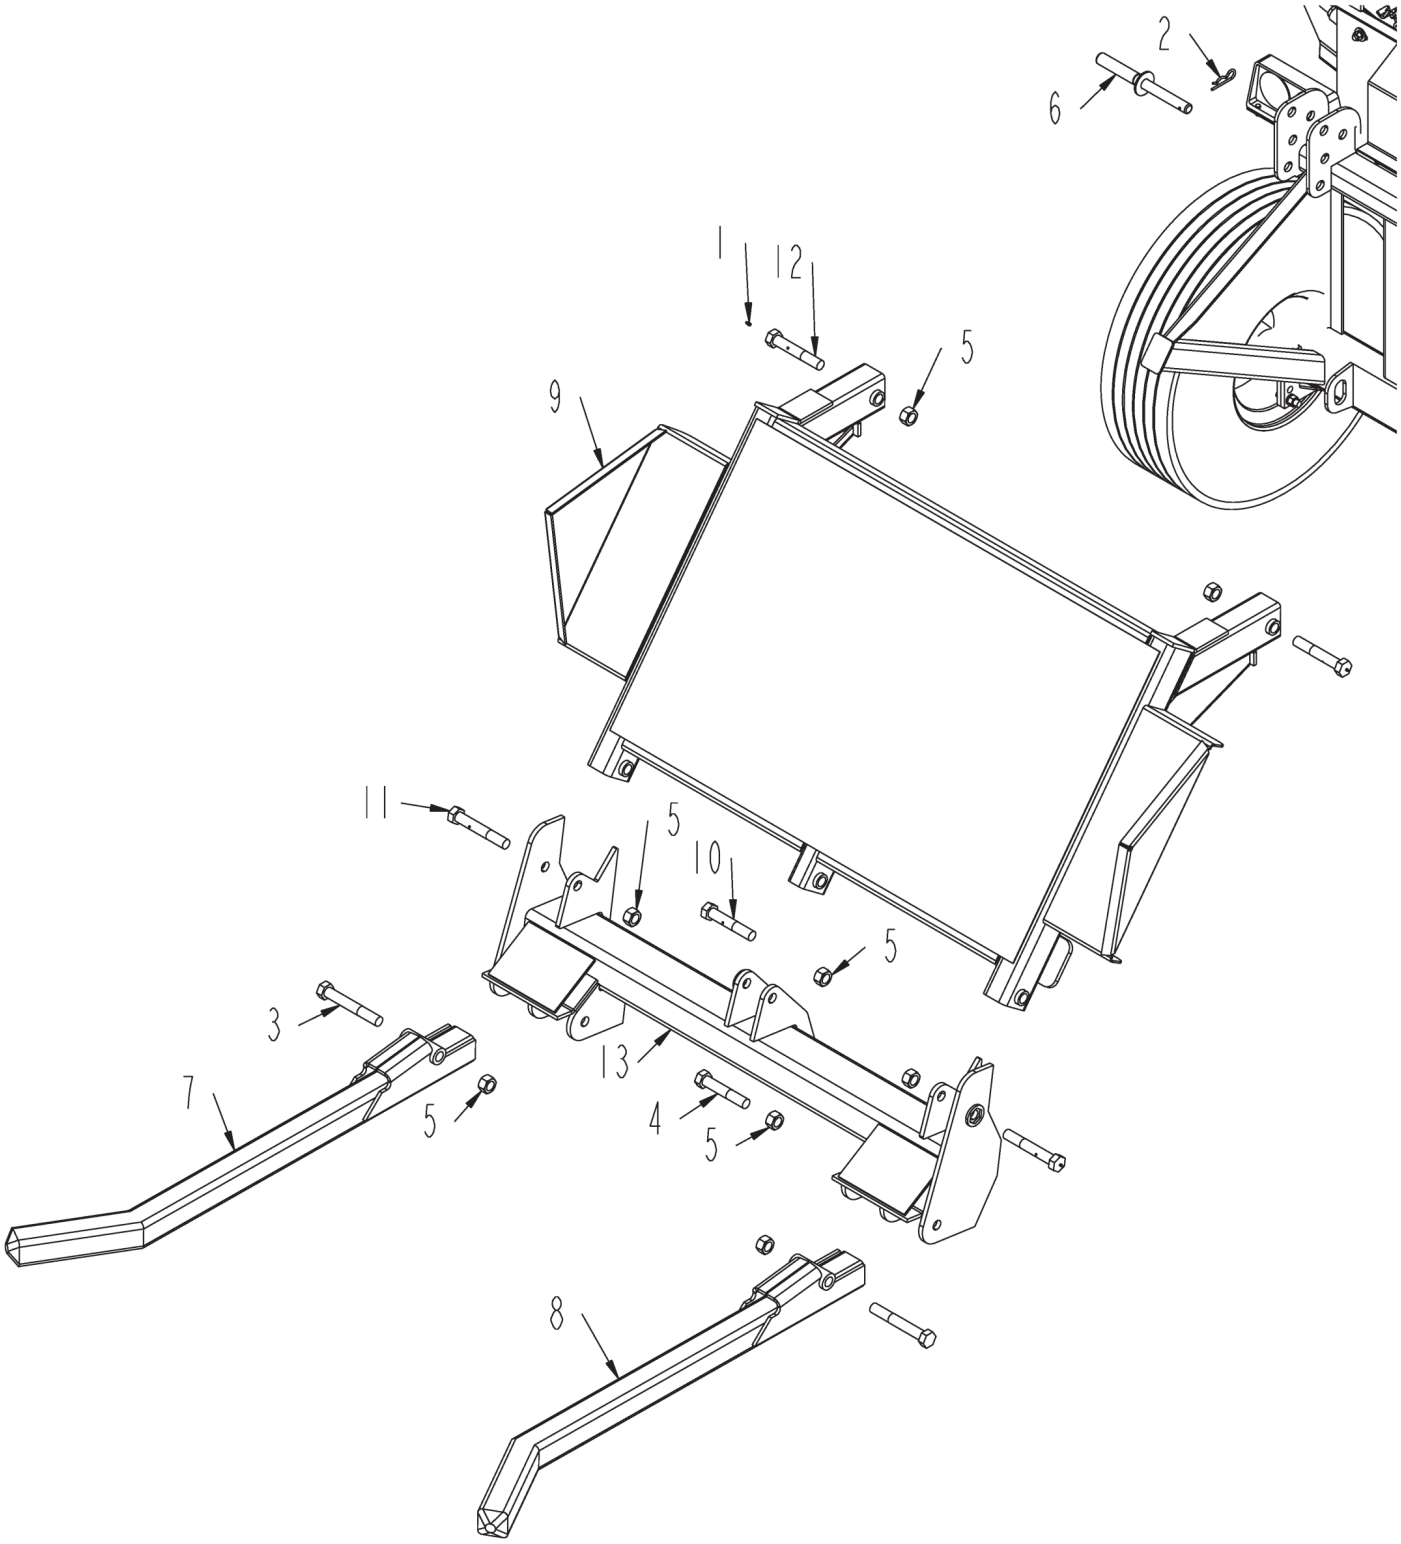

Item	Part No.	Name	Remarks	Qty	Uom
1	3800082	FTG\LUB\1/4NFXZERK\ADAPT		5	EA.
2	4800056	PIN\HAIR\3/16(#3)		2	EA.
3	4800471	BOLT\HEX\1X7\NC		2	EA.
4	4800633	BOLT\HEX\1X5-1/2\NC\GR5\PLT		1	EA.
5	4900127	NUT\TPLCK\1\NC		8	EA.
6	8100794	PIN\LOCK\TRANSPORT		2	EA.
7	8101033	TINE\SQ\LEFTHAND		1	EA.
8	8101075	TINE\SQ\RIGHTHAND		1	EA.
9	8101115	LOADER\UPPER\		1	EA
10	8101311	BOLT\HEX\1X5-1/2\GREASE		1	EA.
11	8101312	BOLT\HEX\1X6-1/2\GREASE		2	EA.
12	8101352	BOLT\HEX\1X6\GREASE		2	EA.
13	8101513	FRM\LOADER\LOWER\		1	EA.


2564 Balebuster Parts Reference

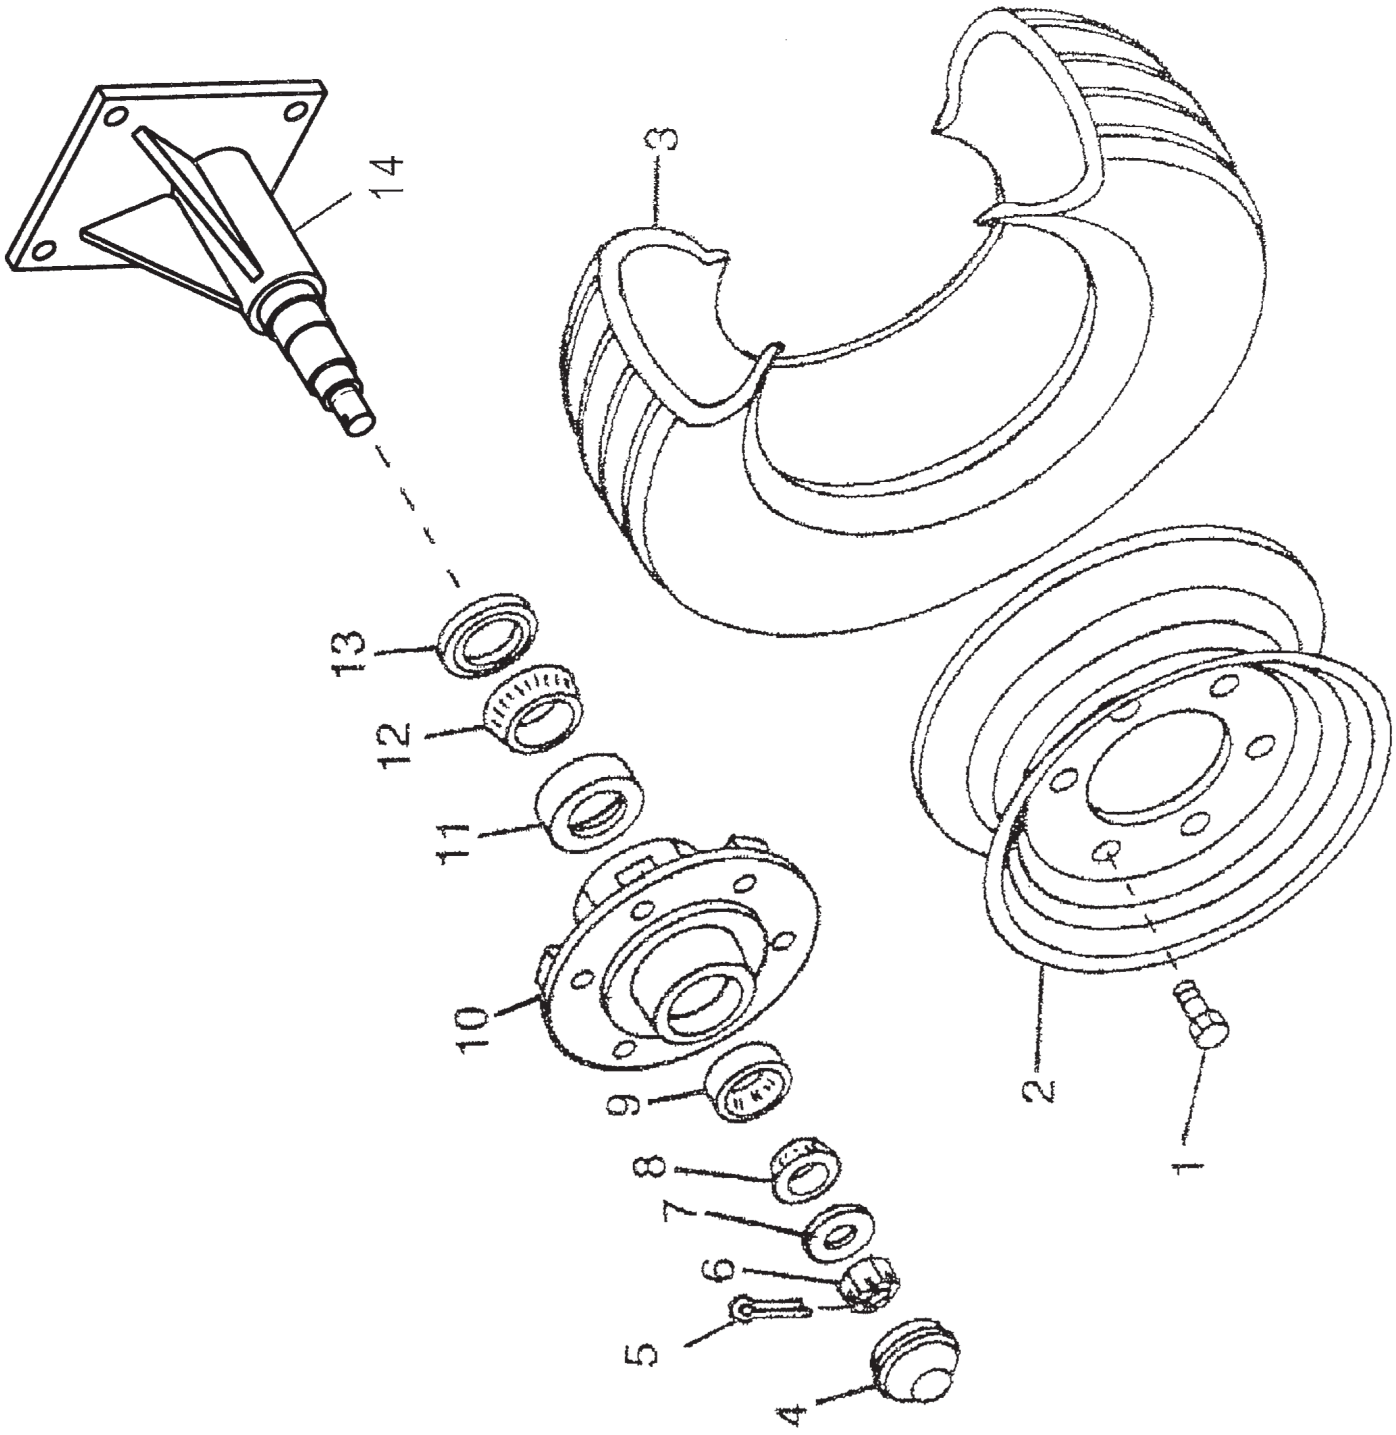

WHEEL AND BEARING ASSEMBLY (THRU S.N. IJ084-064)


Item	Part No.	Name	Remarks	Qty	Uom
1	2900161	BOLT\WHL\1/2-20 UNF\13/16HEX>		6	EA
2	2600624	WHL\6-BOLT\15"X10"		2	EA.
3	2600041	TIRE\31X10.5X15\LOAD;C		2	EA.
3A	2600046	TIRE\12.5LX15\10PLY\RIBIM		2	EA
4	2900013	CAP\DUST\WHL;HUB(DC-13)		1	EA
5	4800157	PIN\COT\3/16X2		1	EA
6	4900054	NUT\CASTLE\7/8\NF		1	EA.
7	5000055	WASH\SPNDL\7/8 FLAT		1	EA.
8	2900018	CONE\OUTER\WHL;HUB(67048		1	EA
9	2900004	CUP\INNER\WHEEL HUB		1	EA
10	2900069	HUB\6BOLT\631\COMP	Complete Hub Includes 1, 4, 5, 6, 7, 8, 9, 11, 12 &13	1	EA
11	2900006	CUP\INNER\WHEEL HUB		1	EA
12	2900007	CONE\OUTER\WHL;HUB(2900069)		1	EA
13	2900008	SEAL\GREASE(2900069HUB)		1	EA
	2600823	WHL\HWY\31X10.5X15\TIRE&RIM	Includes #2-2600624 and #3-2600041		EA.
	2600841	WHL\IMP\12.5L15\TIRE&RIM	Includes #2-2600624 and #3A-2600046		EA
14	8101703	SPNDL\BOLT-ON\LIGHT_DUTY			EA

2564 Balebuster Parts Reference

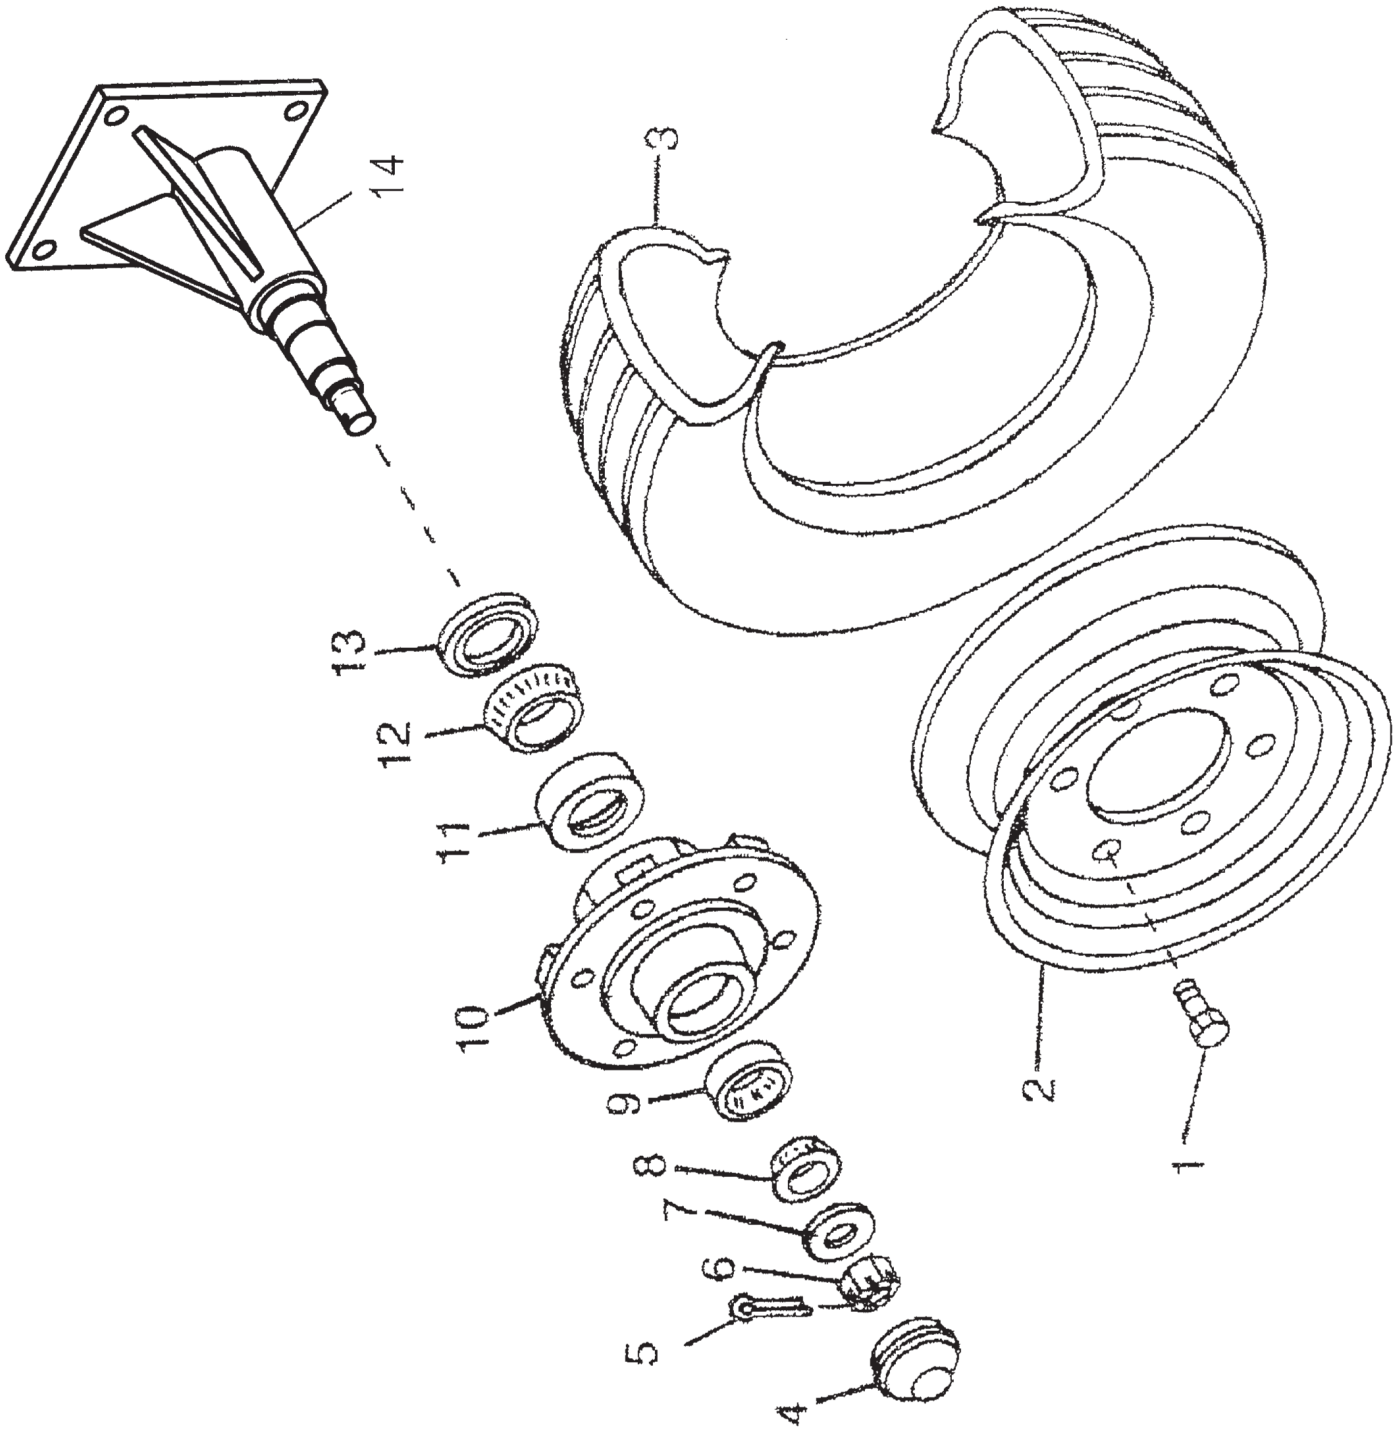

Item	Part No.	Name	Remarks	Qty	Uom
1	2600608	WHL\BOLT		6	EA
2	2600624	WHL\6-BOLT\15"X10"		2	EA.
3	2600041	TIRE\31X10.5X15\LOAD;C		2	EA.
3A	2600046	TIRE\12.5LX15\10PLY\RIBIM		2	EA
4	2900168	CAP\DUST\875		1	EA.
5	4800044	PIN\COT\5/32X1-1/2		1	EA.
6	4900054	NUT\CASTLE\7/8\NF		1	EA.
7	5000055	WASH\SPNDL\7/8 FLAT		1	EA.
8	2900166	ORDER 2900024 BRG\CONE\OUTER\875		1	EA
9	2900165	BRG\CUP\OUTER\875		1	EA.
10	2900163	HUB\6-BOLT\(875)COMPLETE	COMPLETE HUB ASSEMBLY	1	EA
11	2900164	BRG\CUP\INNER\875		1	EA.
12	2900029	CONE INNER/WHEL HUB\25590		1	EA.
13	2900169	SEAL\GREASE\875 *VERIFY* O.D. MUST BE 3-3/8, for O.D. 3-5/8 order 2900030	VERIFY O.D. MUST BE 3-3/8, for 3-5/8 order 2900030	1	EA.
	2600823	WHL\HWY\31X10.5X15\TIRE&RIM	INCLUDES 2600041 AND 2600624		EA.
	2600841	WHL\IMP\12.5L15\TIRE&RIM	INCLUDES 2600046 AND 2600624		EA
14	8101828	SPNDL\BOLT-ON\HVY_DUTY			EA.
	8101778	Order 8101958			EA
	8101958	SPNDL\HUB\STUD\ASSY\			EA.


2564 Balebuster Parts Reference

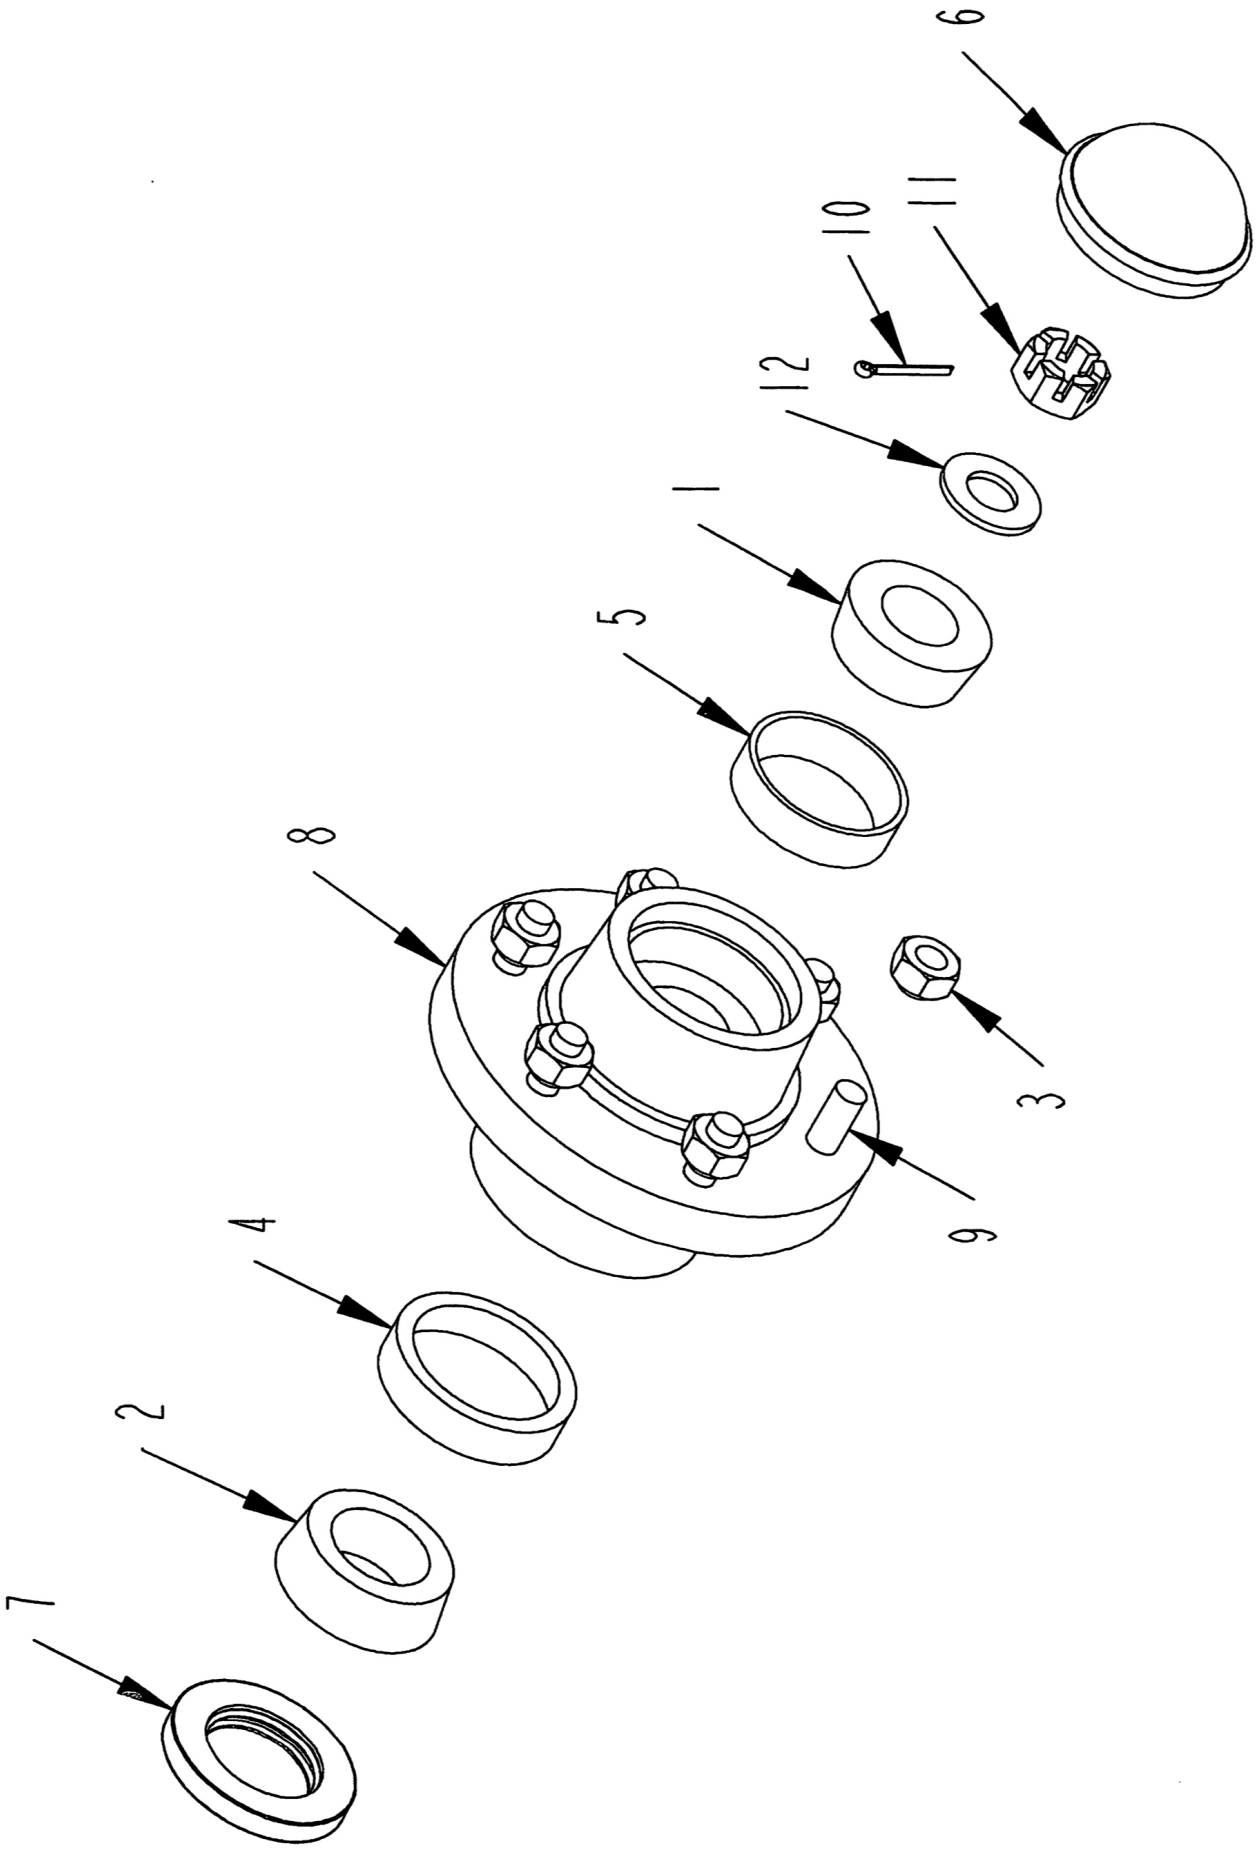

WHEEL AND BEARING ASSEMBLY (S.N. 16131664 AND UP)


Item	Part No.	Name	Remarks	Qty	Uom
1	2900024	CONE\BRG\OUTER\25877		1	EA.
2	2900029	CONE INNER/WHEL HUB\25590		1	EA.
3	2900083	NUT\WHL\9/16-18\UNF		6	EA.
4	2900164	BRG\CUP\INNER\875		1	EA.
5	2900165	BRG\CUP\OUTER\875		1	EA.
6	2900168	CAP\DUST\875		1	EA.
7	2900169	SEAL\GREASE\875 *VERIFY* O.D. MUST BE 3-3/8, for O.D. 3-5/8 order 2900030	VERIFY O.D. MUST BE 3-3/8, for 3-5/8 order 2900030	1	EA.
8	2900171	HUB\6-BOLT\STUDS\COMPLETE	Complete Assembly	1	EA.
9	2900172	STUD\WHL\9/16-18X2-1/8\GR5\P151403		6	EA.
10	4800044	PIN\COT\5/32X1-1/2		1	EA.
11	4900054	NUT\CASTLE\7/8\NF		1	EA.
12	5000055	WASH\SPNDL\7/8 FLAT		1	EA.

2564 Balebuster Parts Reference

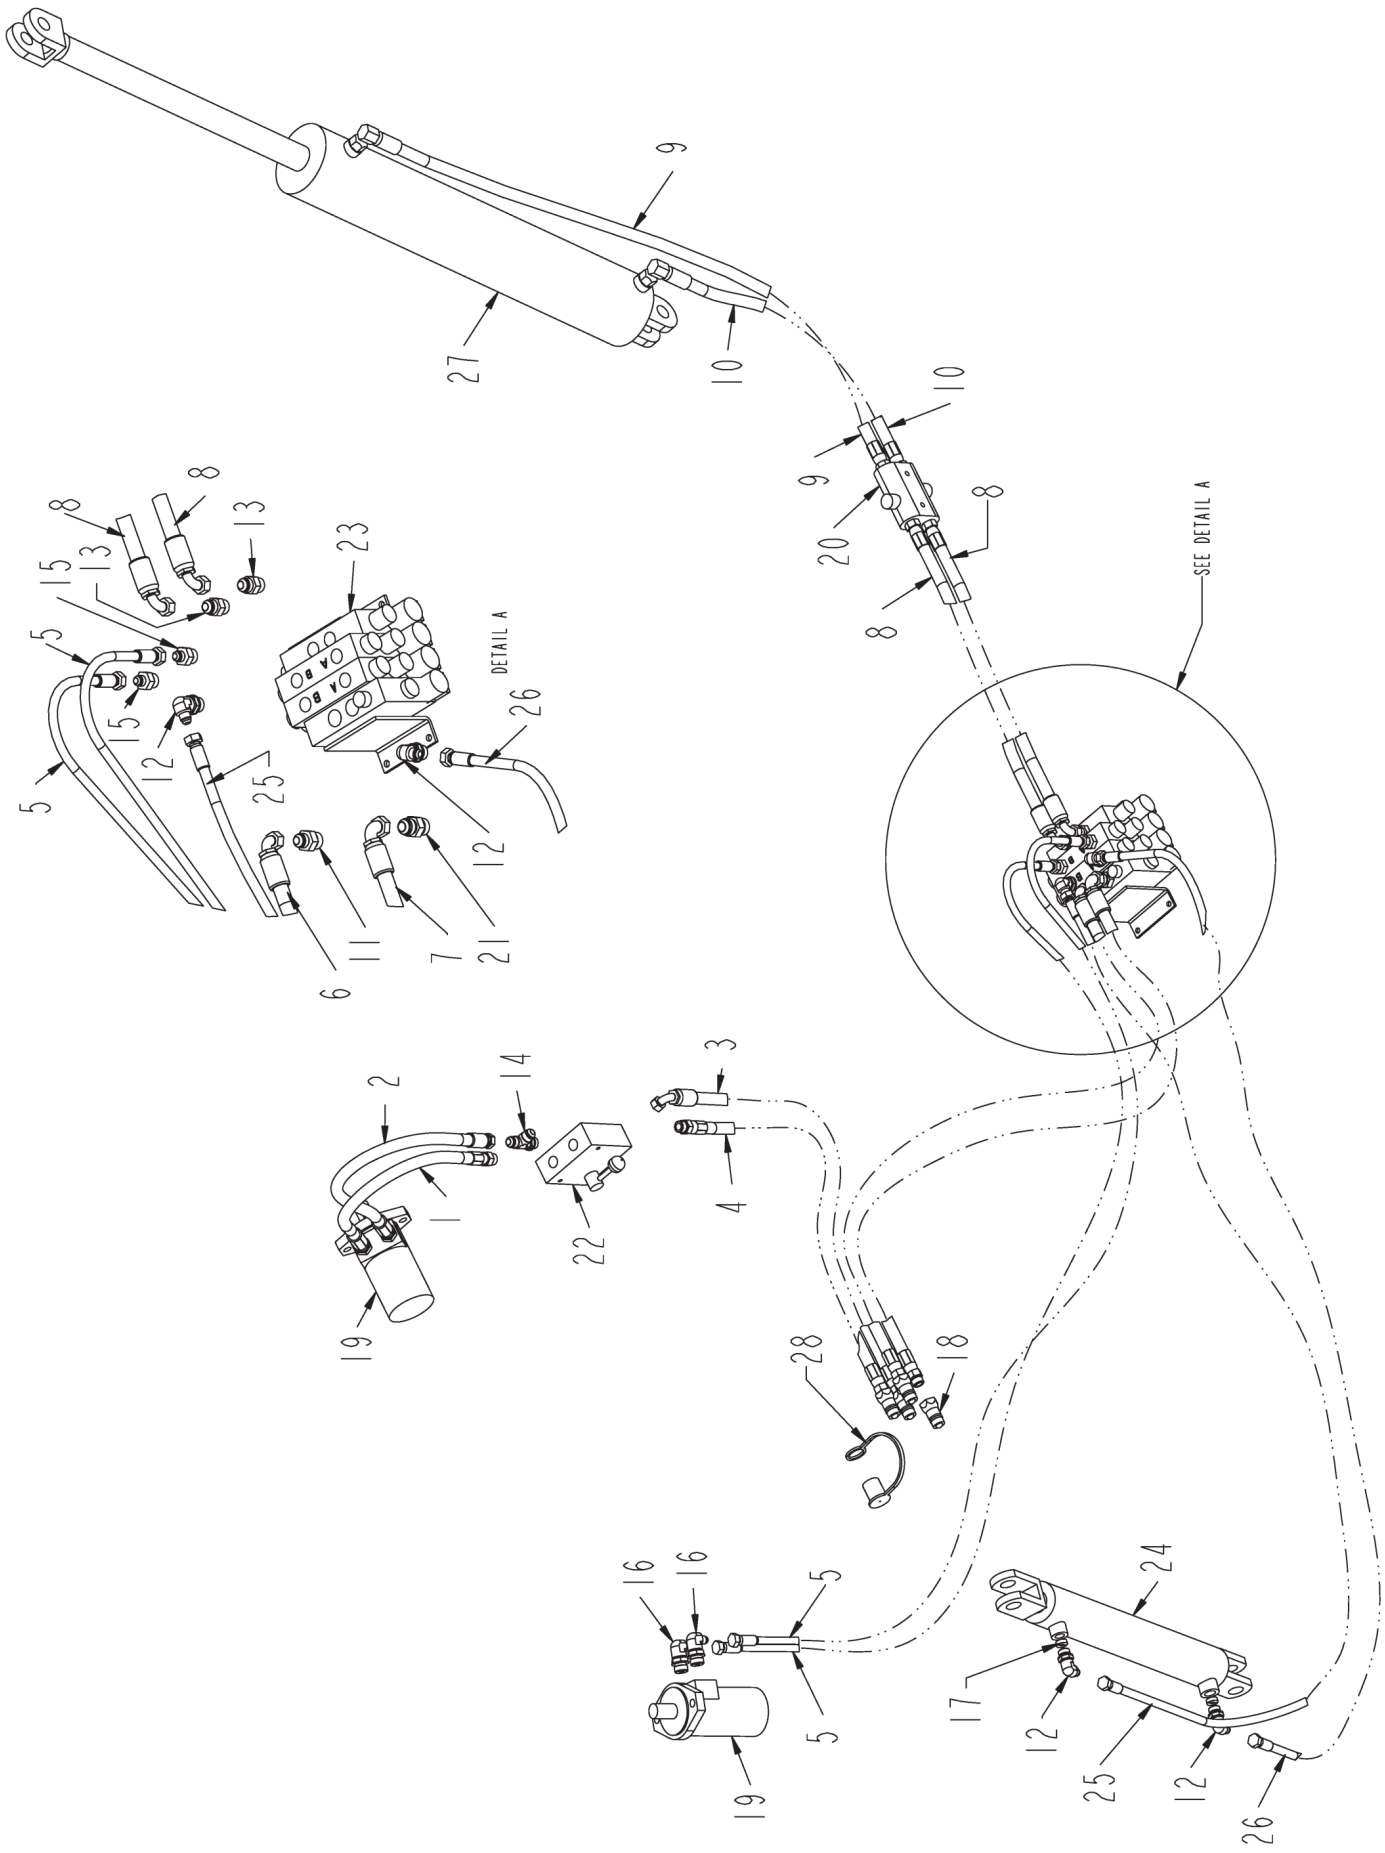


Item	Part No.	Name	Remarks	Qty	Uom
1	3700741	HOSE\HYD\1/2X24\7/8MORS>		1	EA
2	3700742	HOSE\HYD\1/2X24\7/8MORS>		1	EA
3	3700743	HOSE\HYD\1/2X155\3/4MORS>		1	EA
4	3700744	HOSE\HYD\1/2X150\3/4MORS>		1	EA
5	3700747	HOSE\HYD\1/4X126\9/16FJICX9/16FJIC		2	EA.
6	3700748	HOSE\HYD\1/2X162\3/4MORSX3/4FJIC90		1	EA.
7	3700749	HOSE\HYD\1/2X162\3/4MORSX7/8FJIC90		1	EA.
8	3700750	HOSE\HYD\1/2X36\3/4MORS>		2	EA
9	3700752	HOSE\HYD\1/2X70\3/4MORSX3/4MORS_90DEG		1	EA.
10	3700753	HOSE\HYD\1/2X44\3/4MORSX3/4MORS_90DEG		1	EA.
11	3800328	FTG\7/8MORX3/4MJIC\ADPT		1	EA.
12	3800453	FTG\3/4MORX9/16MJIC\90		4	EA.
13	3800477	FTG\3/4MORX3/4MJIC\ADPT		2	EA.
14	3800483	FTG\3/4MORX3/4MJICX3/4MJIC\RUN;TEE		1	EA.
15	3800530	FTG\3/4MORX9/16MJIC\ST		2	EA.
16	3800538	FTG\7/8MORX9/16MJIC\90		2	EA.
17	3800683	FTG\3/4MOR\ORFICE\0.0490"		2	EA.
18	3800694	FTG\3/4FOR\QUICK;CPLR\FEMALE		4	EA.
19	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT		2	EA.
20	4000234	VALVE\RELIEF\CROSS\RC13BB		1	EA.
21	4000288	FTG\7/8MORX7/8MJIC\ST\CHCK		1	EA.
22	4000331	VALVE\FLW-CRTL\#8FOR		1	EA.
23	4000344	VLV\HYD\BRAND\3-BANK		1	EA
24	4100224	CYL\HYD\2-1/2X16\1-1/2ROD\3/4OR\RED		1	EA.
	4100235	KIT\SEAL\CYL\HYD\2-1/2X16\1-1/2RD			EA
25	3700745	HOSE\HYD\1/4X90\9/16FJICX9/16FJIC		1	EA
26	3700746	HOSE\HYD\1/4X75\9/16FJIC>		1	EA
27	4100273	CYL\HYD\4-1/2X24\1-3/4 -CANADIAN TOOL & DIE		1	EA.
	4100223	KIT\SEAL\4-1/2X1-3/4RD\CTD			EA
	4100272	ROD\YOKE\CYL\HYD\24\1-3/4\			EA
28	7501361	CAP\YELLOW\DUST\HOSE\HYD		2	EA.
28A	7501362	CAP\RED\DUST\HOSE\HYD		2	EA.

2564 Balebuster Parts Reference

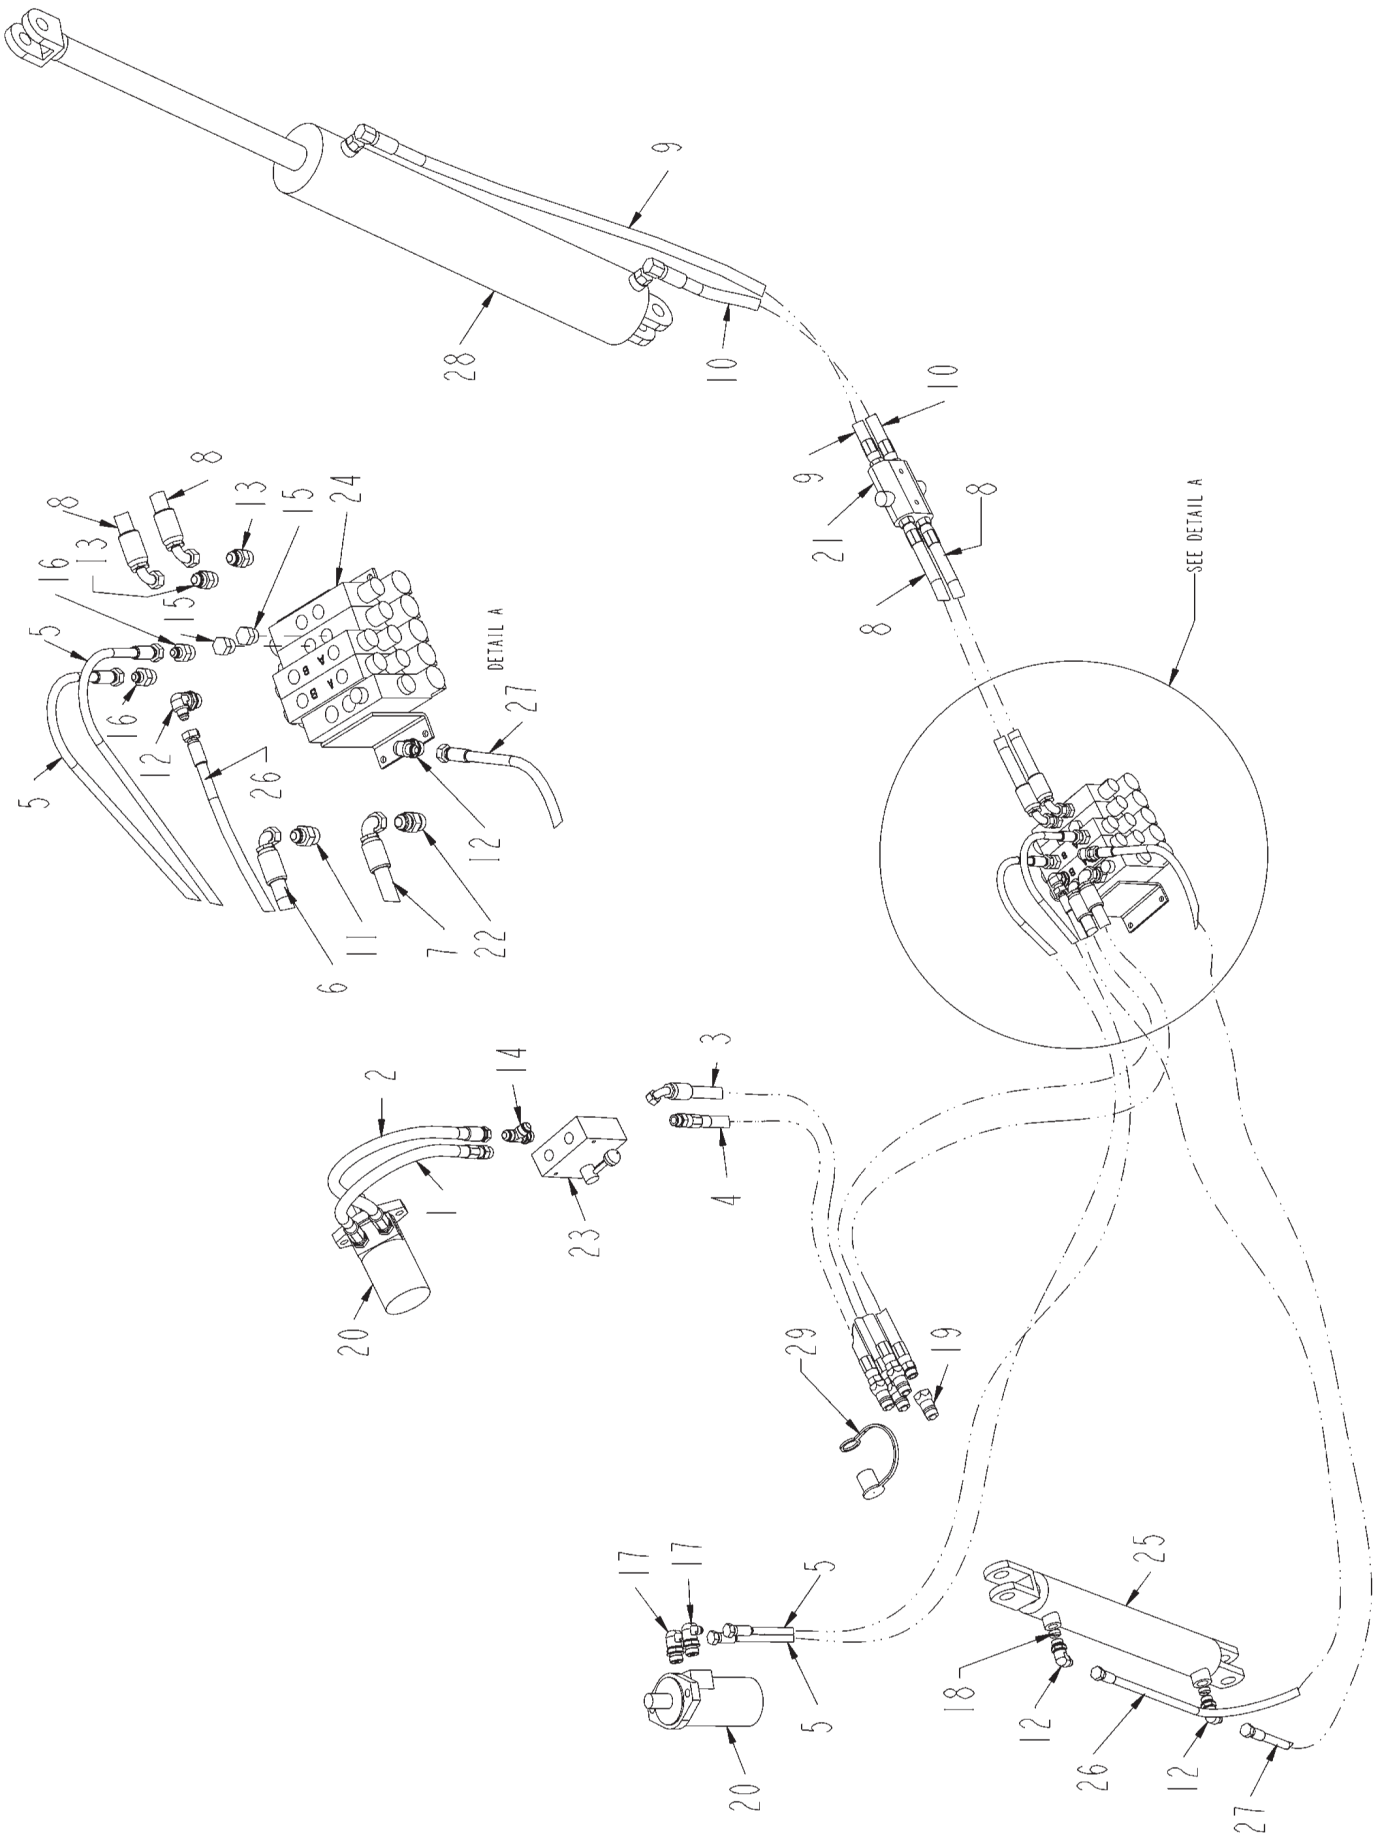


Item	Part No.	Name	Remarks	Qty	Uom
1	3700741	HOSE\HYD\1/2X24\7/8MORS>		1	EA
2	3700742	HOSE\HYD\1/2X24\7/8MORS>		1	EA
3	3700743	HOSE\HYD\1/2X155\3/4MORS>		1	EA
4	3700744	HOSE\HYD\1/2X150\3/4MORS>		1	EA
5	3700747	HOSE\HYD\1/4X126\9/16FJICX9/16FJIC		2	EA.
6	3700748	HOSE\HYD\1/2X162\3/4MORSX3/4FJIC90		1	EA.
7	3700749	HOSE\HYD\1/2X162\3/4MORSX7/8FJIC90		1	EA.
8	3700750	HOSE\HYD\1/2X36\3/4MORS>		2	EA
9	3700752	HOSE\HYD\1/2X70\3/4MORSX3/4MORS_90DEG		1	EA.
10	3700753	HOSE\HYD\1/2X44\3/4MORSX3/4MORS_90DEG		1	EA.
11	3800328	FTG\7/8MORX3/4MJIC\ADPT		1	EA.
12	3800453	FTG\3/4MORX9/16MJIC\90		4	EA.
13	3800477	FTG\3/4MORX3/4MJIC\ADPT		2	EA.
14	3800483	FTG\3/4MORX3/4MJICX3/4MJIC\RUN;TEE		1	EA.
15	3800490	FTG\3/4MOR\PLUG\HEX		2	EA.
16	3800530	FTG\3/4MORX9/16MJIC\ST		2	EA.
17	3800538	FTG\7/8MORX9/16MJIC\90		2	EA.
18	3800683	FTG\3/4MOR\ORFICE\0.0490"		2	EA.
19	3800694	FTG\3/4FOR\QUICK;CPLR\FEMALE		4	EA.
20	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT		2	EA.
21	4000234	VALVE\RELIEF\CROSS\RC13BB		1	EA.
22	4000288	FTG\7/8MORX7/8MJIC\ST\CHCK		1	EA.
23	4000331	VALVE\FLW-CRTL\#8FOR		1	EA.
24	4000479	VLV\HYD\BRAND\4-BANK		1	EA
25	4100224	CYL\HYD\2-1/2X16\1-1/2ROD\3/4OR\RED		1	EA.
	4100235	KIT\SEAL\CYL\HYD\2-1/2X16\1-1/2RD			EA
26	3700745	HOSE\HYD\1/4X90\9/16FJICX9/16FJIC		1	EA
27	3700746	HOSE\HYD\1/4X75\9/16FJIC>		1	EA
28	4100273	CYL\HYD\4-1/2X24\1-3/4 -CANADIAN TOOL & DIE		1	EA.
	4100223	KIT\SEAL\4-1/2X1-3/4RD\CTD			EA
	4100272	ROD\YOKE\CYL\HYD\24\1-3/4\			EA
28A	4100324	Order 4100273		1	EA.
	4100214	KIT\SEAL\CYL\HYD\4-1/2X24\1-3/4" ROD			EA
29	7501361	CAP\YELLOW\DUST\HOSE\HYD		2	EA.
29A	7501362	CAP\RED\DUST\HOSE\HYD		2	EA.

2564 Balebuster Parts Reference

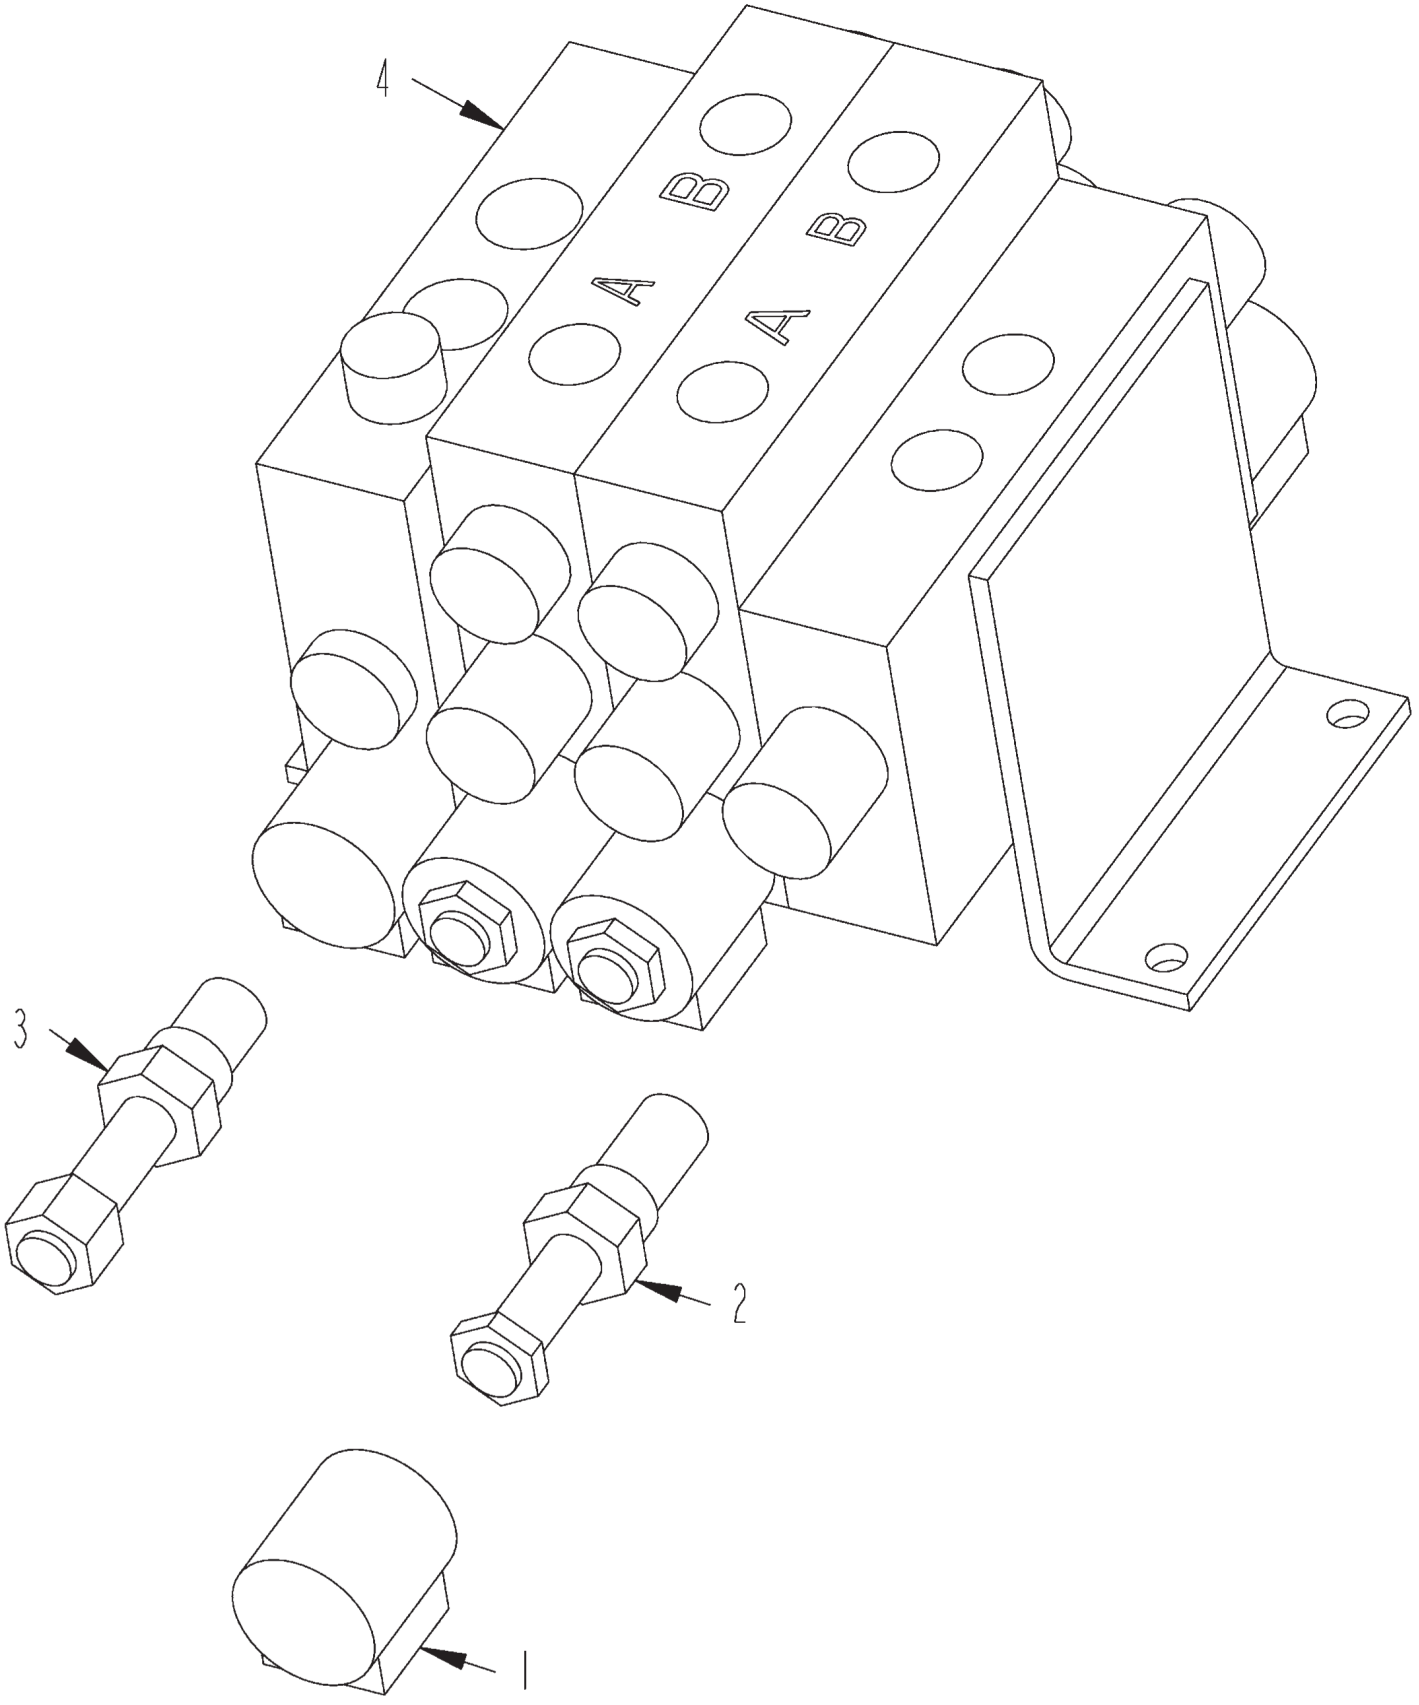


Item	Part No.	Name	Remarks	Qty	Uom
1	4000174	SOL\HYD\12VDC\HYDRAFORCE		7	EA.
2	4000176	VALVE\HYD\CART\WORK		6	EA.
3	4000179	VALVE\HYD\CART\UNLDR		1	EA.
4	4000344	VLV\HYD\BRAND\3-BANK	COMPLETE ASSEMBLY	1	EA
NS	4000197	VALVE\HYD\HIGHSEC\36SER			EA.
NS	4000473	KIT\LOCK\LOAD			EA.
NS	4000528	VALVE\HYD\UNLOADER\36\BRAND			EA.

2564 Balebuster Parts Reference

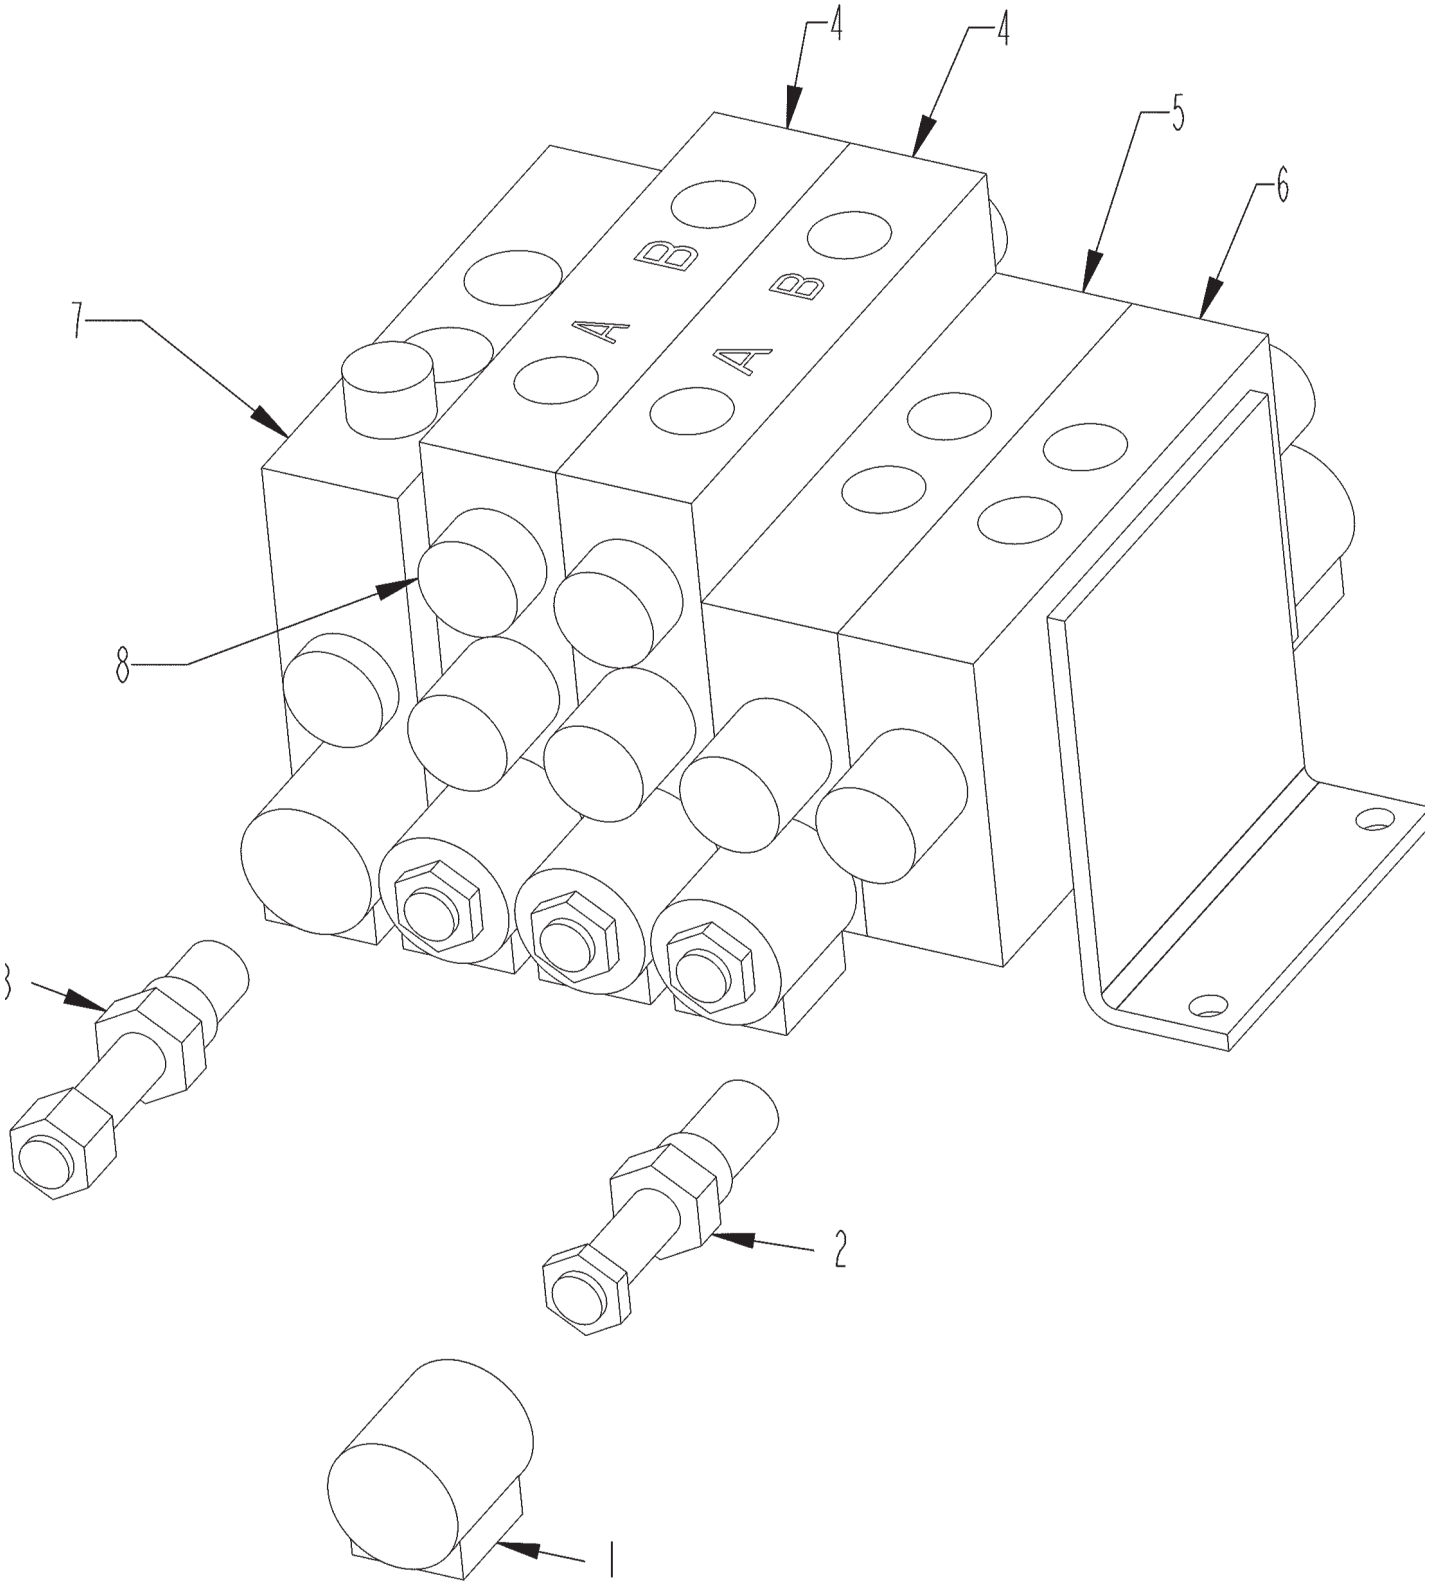


Item	Part No.	Name	Remarks	Qty	Uom
1	4000174	SOL\HYD\12VDC\HYDRAFORCE		8	EA.
2	4000176	VALVE\HYD\CART\WORK		7	EA.
3	4000179	VALVE\HYD\CART\UNLDR		1	EA.
4	4000197	VALVE\HYD\HIGHSEC\36SER		2	EA.
5	4000322	VALVE\HYD\LOWSEC\36SER		1	EA.
6	4000533	VALVA\HYD\LOWSEC\36SER		1	EA.
7	4000528	VALVE\HYD\UNLOADER\36\BRAND		1	EA.
8	4000473	KIT\LOCK\LOAD		2	EA.
CA	4000479	VLV\HYD\BRAND\4-BANK			EA
NS	7501292	SEAL\KIT\VLV\BRAND\SECTION\WORK			EA.

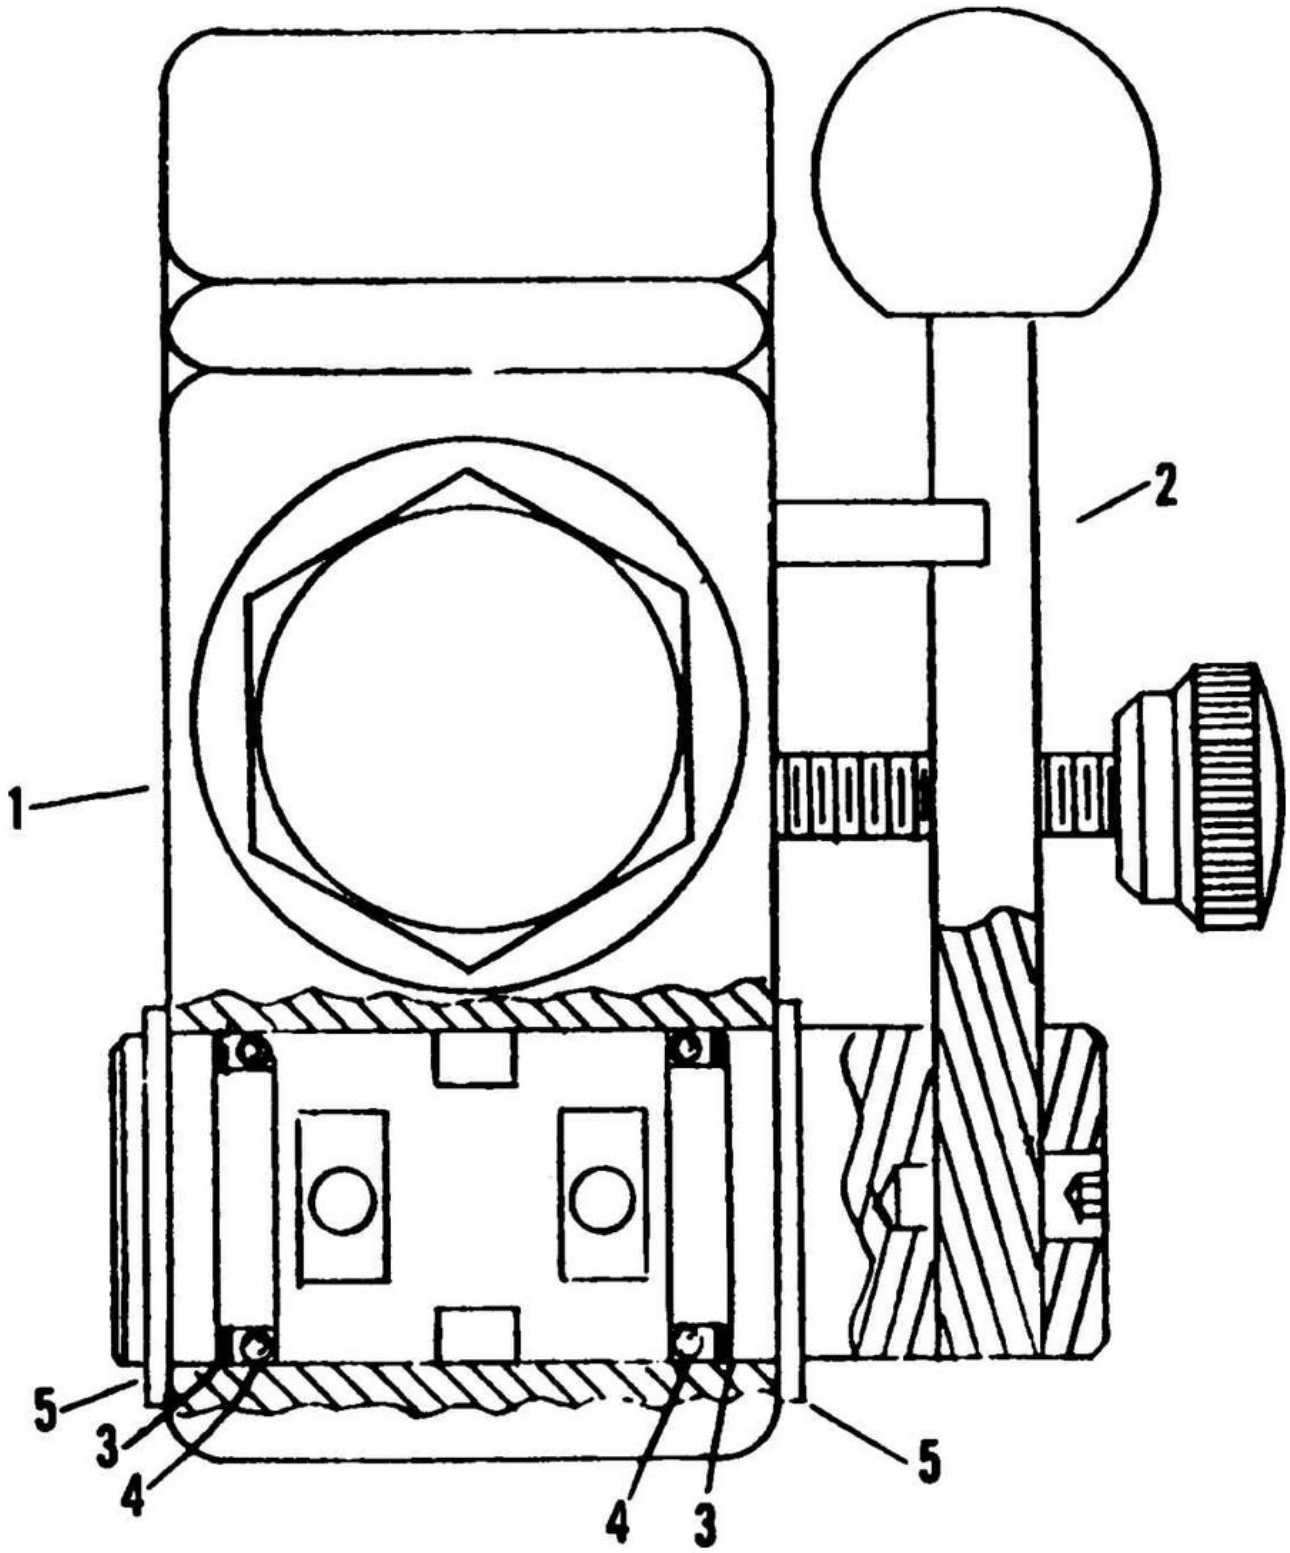
1
2
5
3
4
4
3
5


Item	Part No.	Name	Remarks	Qty	Uom
1	4000213	VALVE\CONTROL\FLOW\3/4MOR		1	EA.
2	4000031	Handle Assembly		1	EA
3 & 4	4000091	Seal\Kit\FlowControl		1	EA
5	4000034	Snap Ring		2	EA

2564 Balebuster Parts Reference

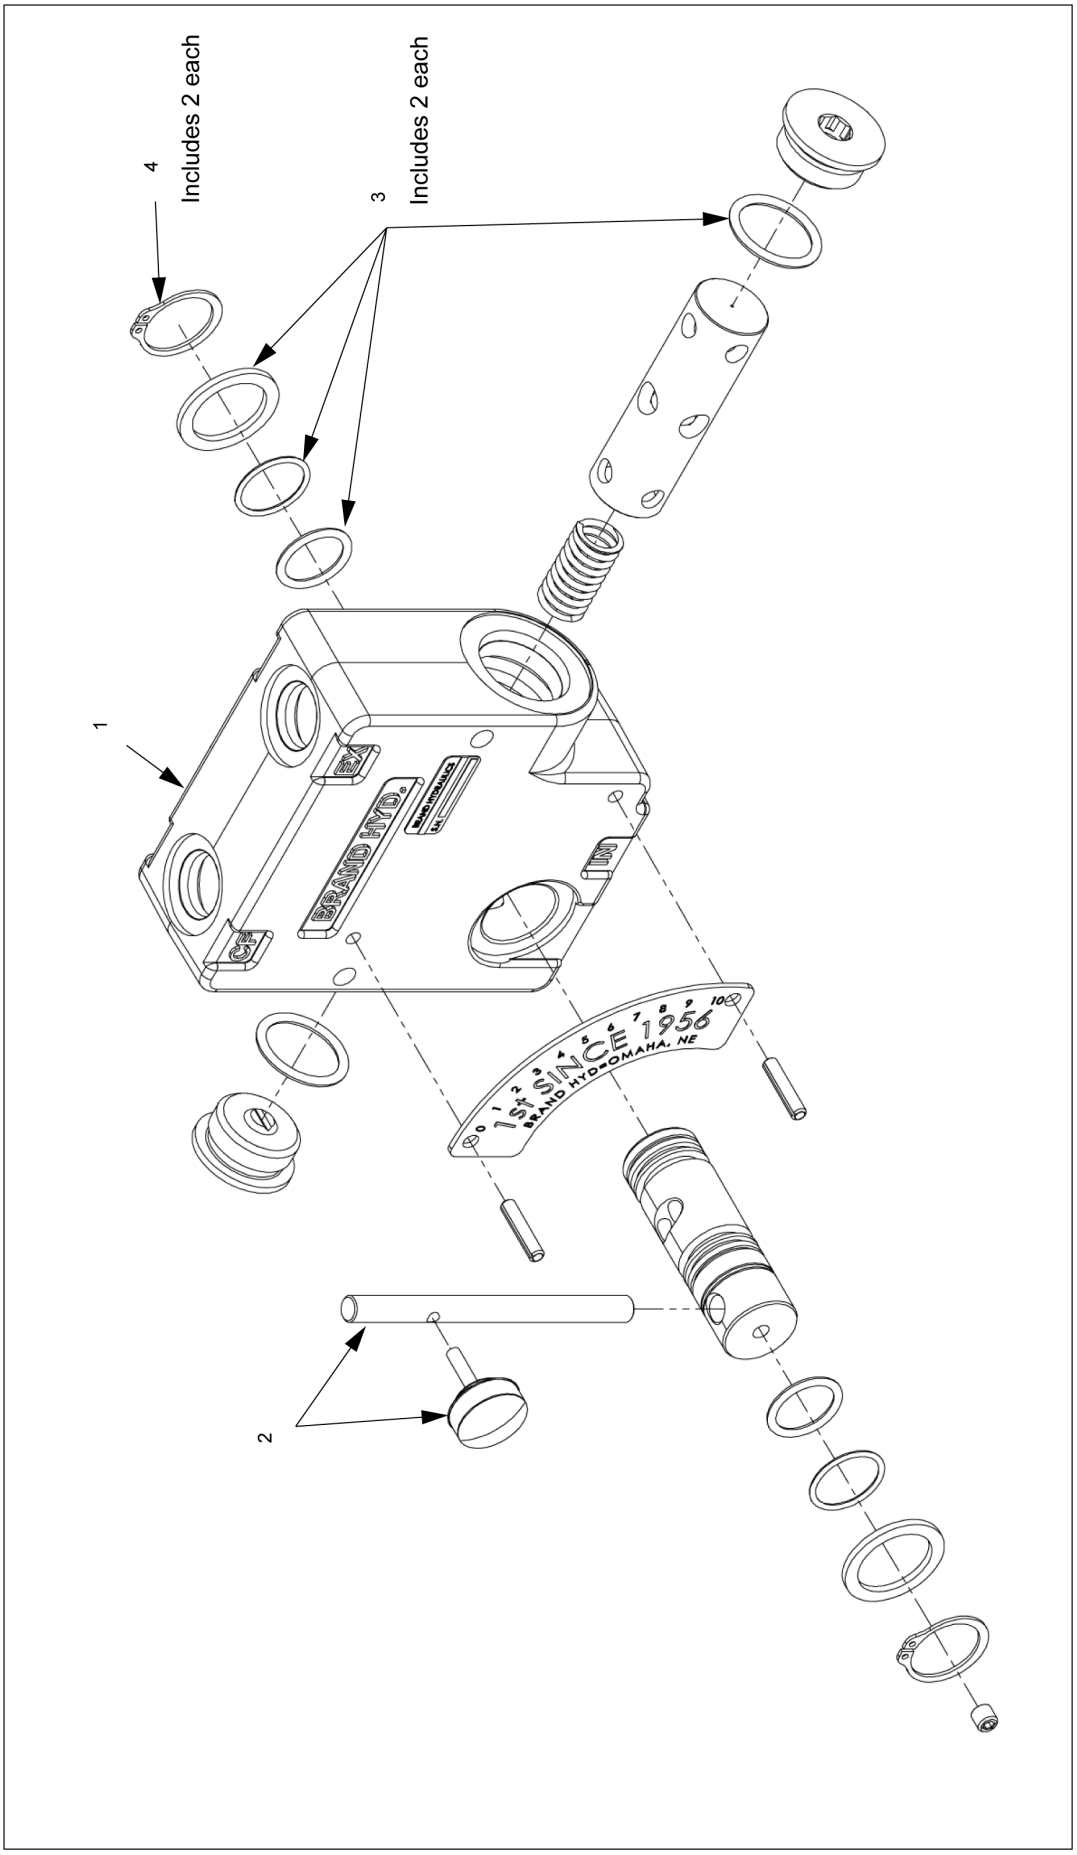


Item	Part No.	Name	Remarks	Qty	Uom
1	4000331	VALVE\FLW-CRTL\#8FOR			EA.
2	4000334	HDL\ASSY\V\HYD			EA.
3	4000335	SEAL\KIT\V\HYD			EA.
4	4000336	SNAP RING\V\HYD			EA.


2564 Balebuster Parts Reference

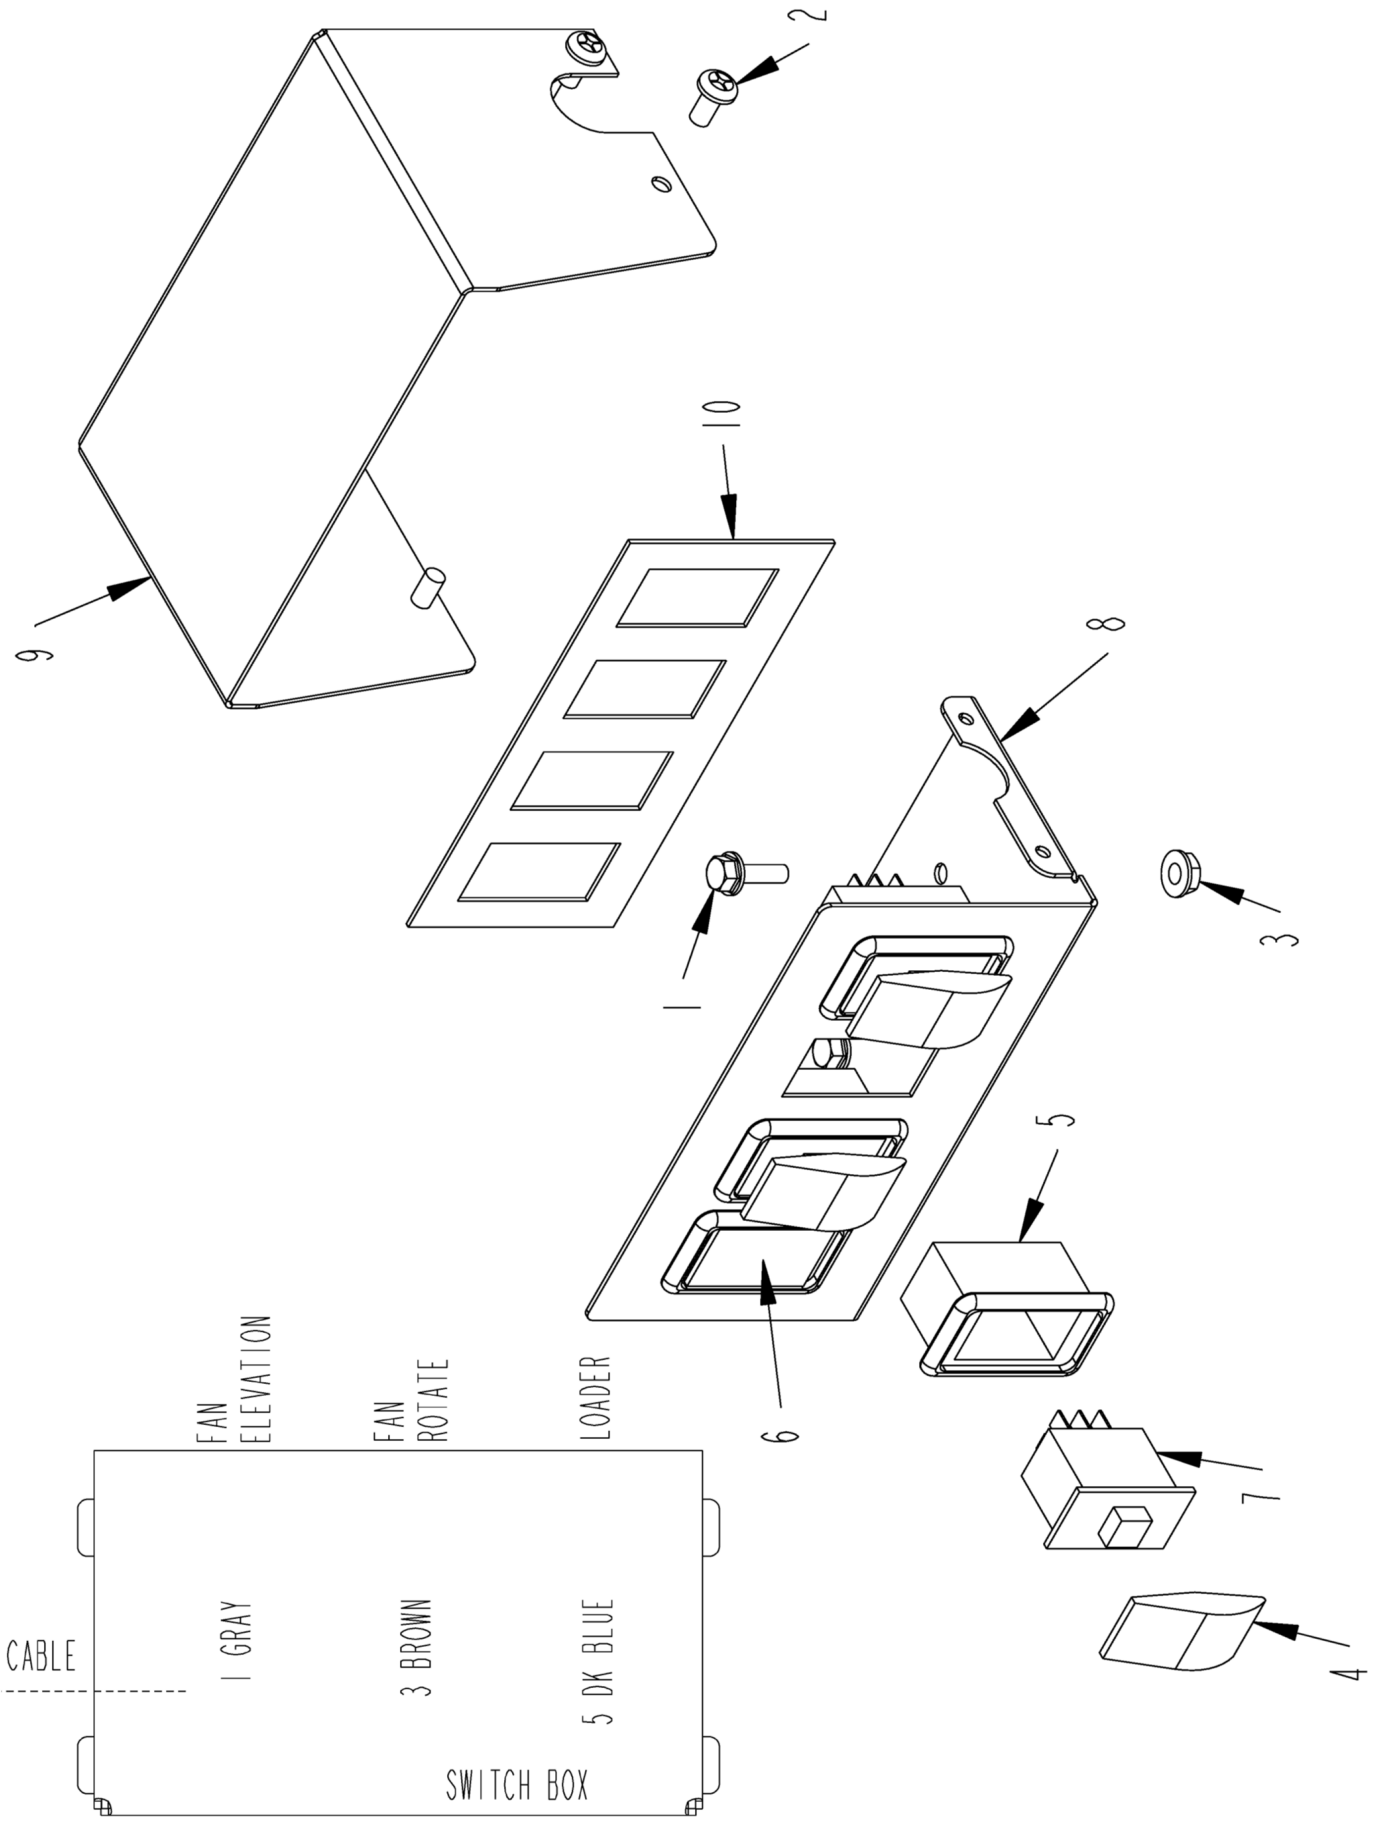

Item	Part No.	Name	Remarks	Qty	Uom
1	4800301	SCR\FLG\SERR\1/4X3/4\NC		2	EA.
2	4800963	SCR\PAN\PHL\#14X1/2\TYPE A		4	EA.
3	4900040	NUT\FLG\SERR\1/4\NC		2	EA.
4	5700324	SWITCH\RCKR\ACTR\BLK		3	EA
5	5700328	SWITCH\RCKR\MNT\PNL\SNGL		4	EA.
6	5700329	SWITCH\RCKR\PLUG		1	EA
7	5700432	ORDER 5700542		3	EA
8	8101397	SH\PANEL\SWITCH\2564		1	EA
9	8101398	SH\PANEL\SWITCH\2564		1	EA
10	8101686	SH\HSG\SWITCH\2564		1	EA
NS	5700708	HARN\TRACTOR\2564		1	EA
CA	8101728	HSG\CNTRL\ASSY\TRACTOR\2564			EA


2564 Balebuster Parts Reference

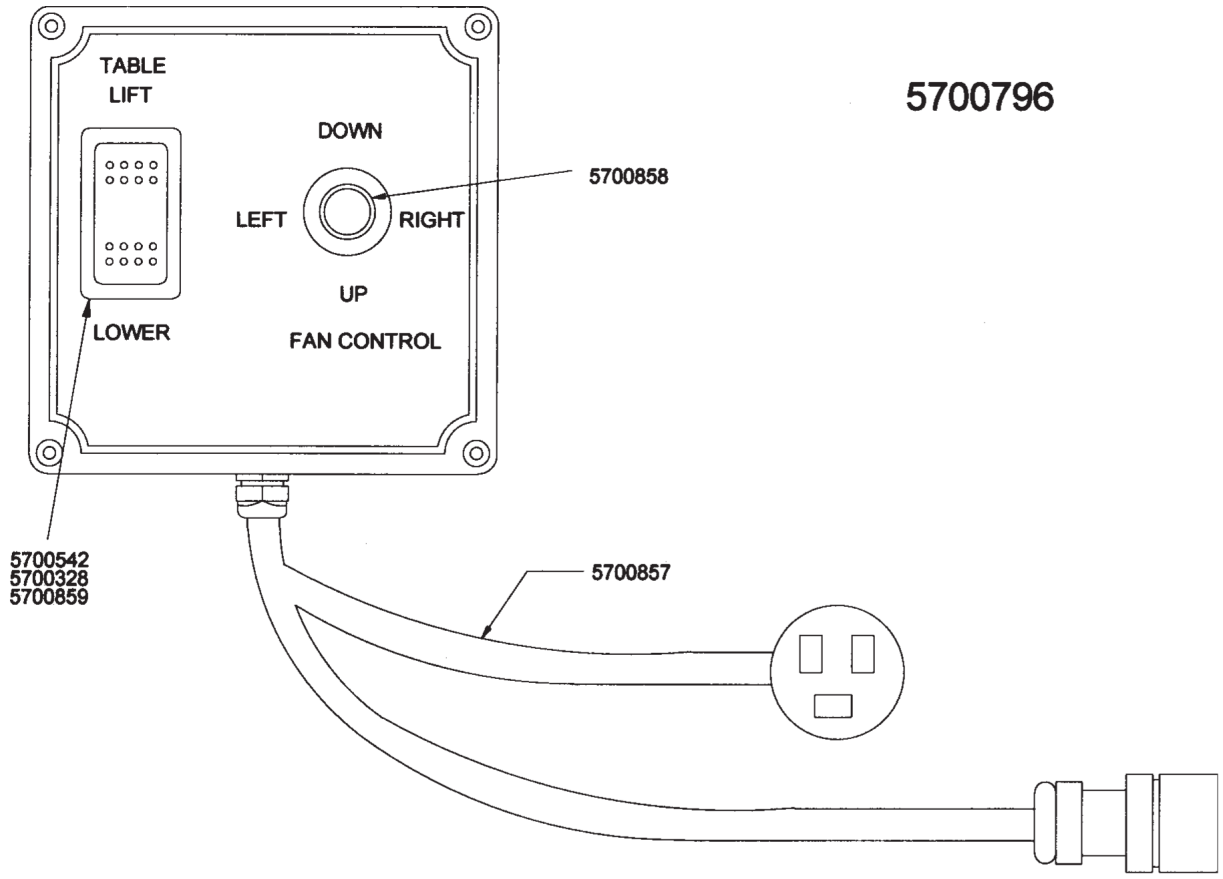

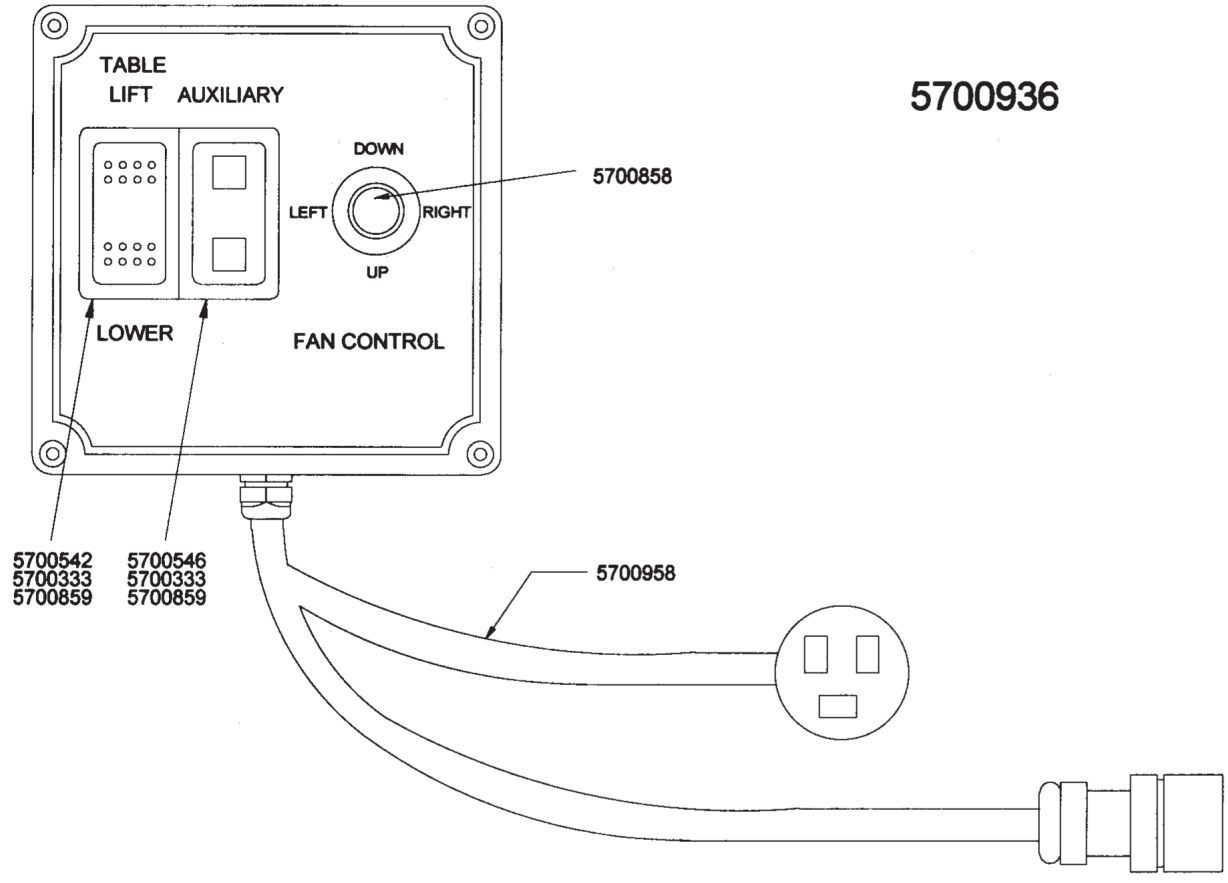


Item	Part No.	Name	Remarks	Qty	Uom
CA	5700796	ORDER 5700936	FOR SN UP TO 10089064	1	EA
	5700328	SWITCH\RCKR\MNT\PNL\SNGL		1	EA.
	5700542	SWITCH\RCKR\DPDT\24VUNLIT\15A\MOMNTRY\W/RAISED BRCKT		1	EA.
	5700857	HARN\2564\CNTRLBX\		1	EA
	5700858	SW\JOYSTICK\2;AXIS		1	EA.
	5700859	GASKET\SWITCH\RCKR\CARLING		1	EA.
CA	5700936	JOYSTICK\CNTRBX\4-FNCTN\W-HR	FOR SN 10084164 AND UP	1	EA
	5700333	SWITCH\RCKR\MNT\PNL\MTPL		2	EA.
	5700542	SWITCH\RCKR\DPDT\24VUNLIT\15A\MOMNTRY\W/RAISED BRCKT		1	EA.
	5700546	SWITCH\RCKR\DPDT\12V\2LIT		1	EA.
	5700958	HARN\2564\CNTRLBX\4-FNCTN		1	EA.
	5700858	SW\JOYSTICK\2;AXIS		1	EA.
	5700859	GASKET\SWITCH\RCKR\CARLING		1	EA.
NS	5700528	FUSE\BLADE\ATO-ATC\5AMP			EA.

2564 Balebuster Parts Reference

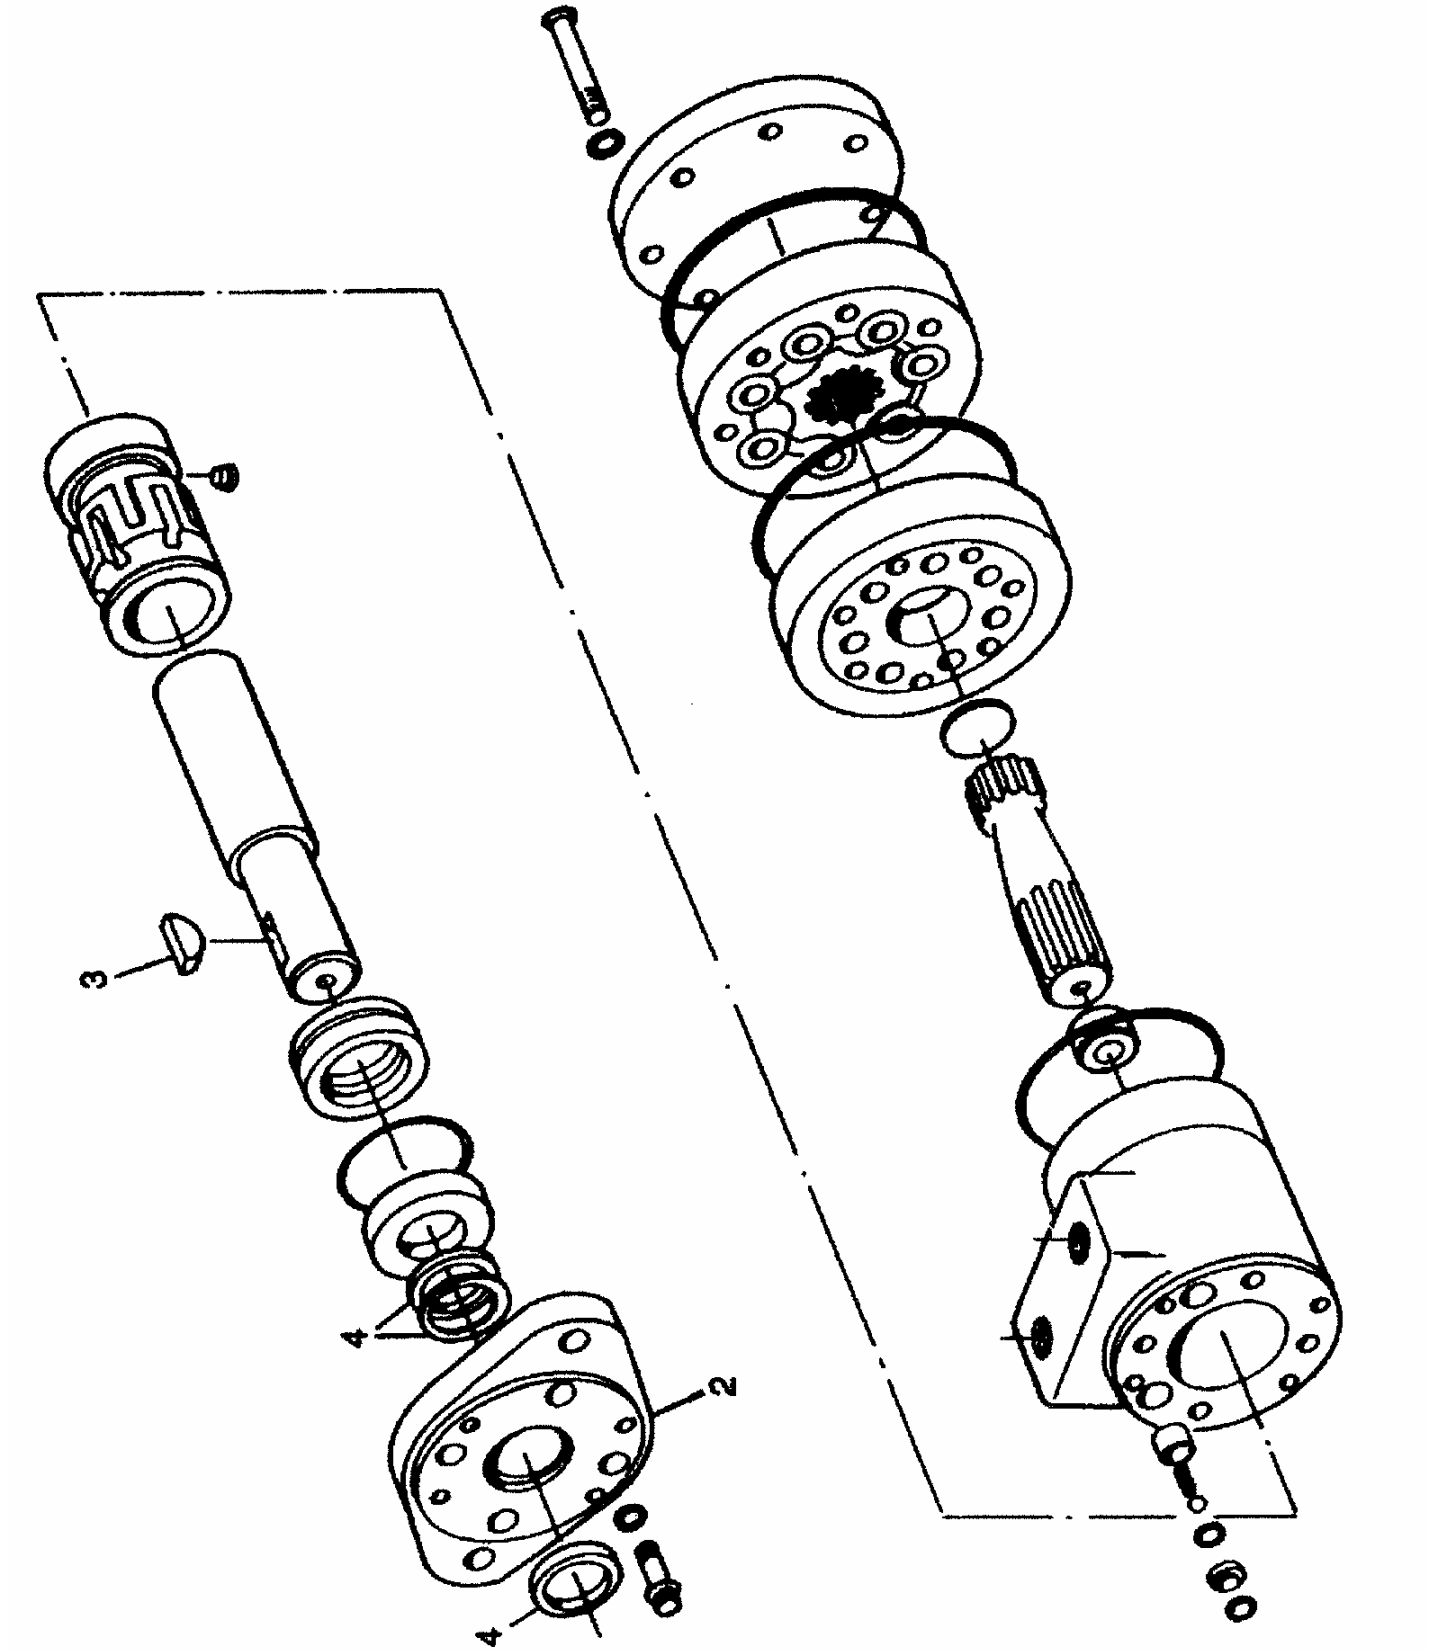


Item	Part No.	Name	Remarks	Qty	Uom
1	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT			EA.
2	3900002	MOUNTING FLANGE		1	EA.
3	6200011	KEY\WDF\1/4X1		1	EA.
4	7501038	UNI SEAL KIT 007-009		1	EA.

2564 Balebuster Parts Reference

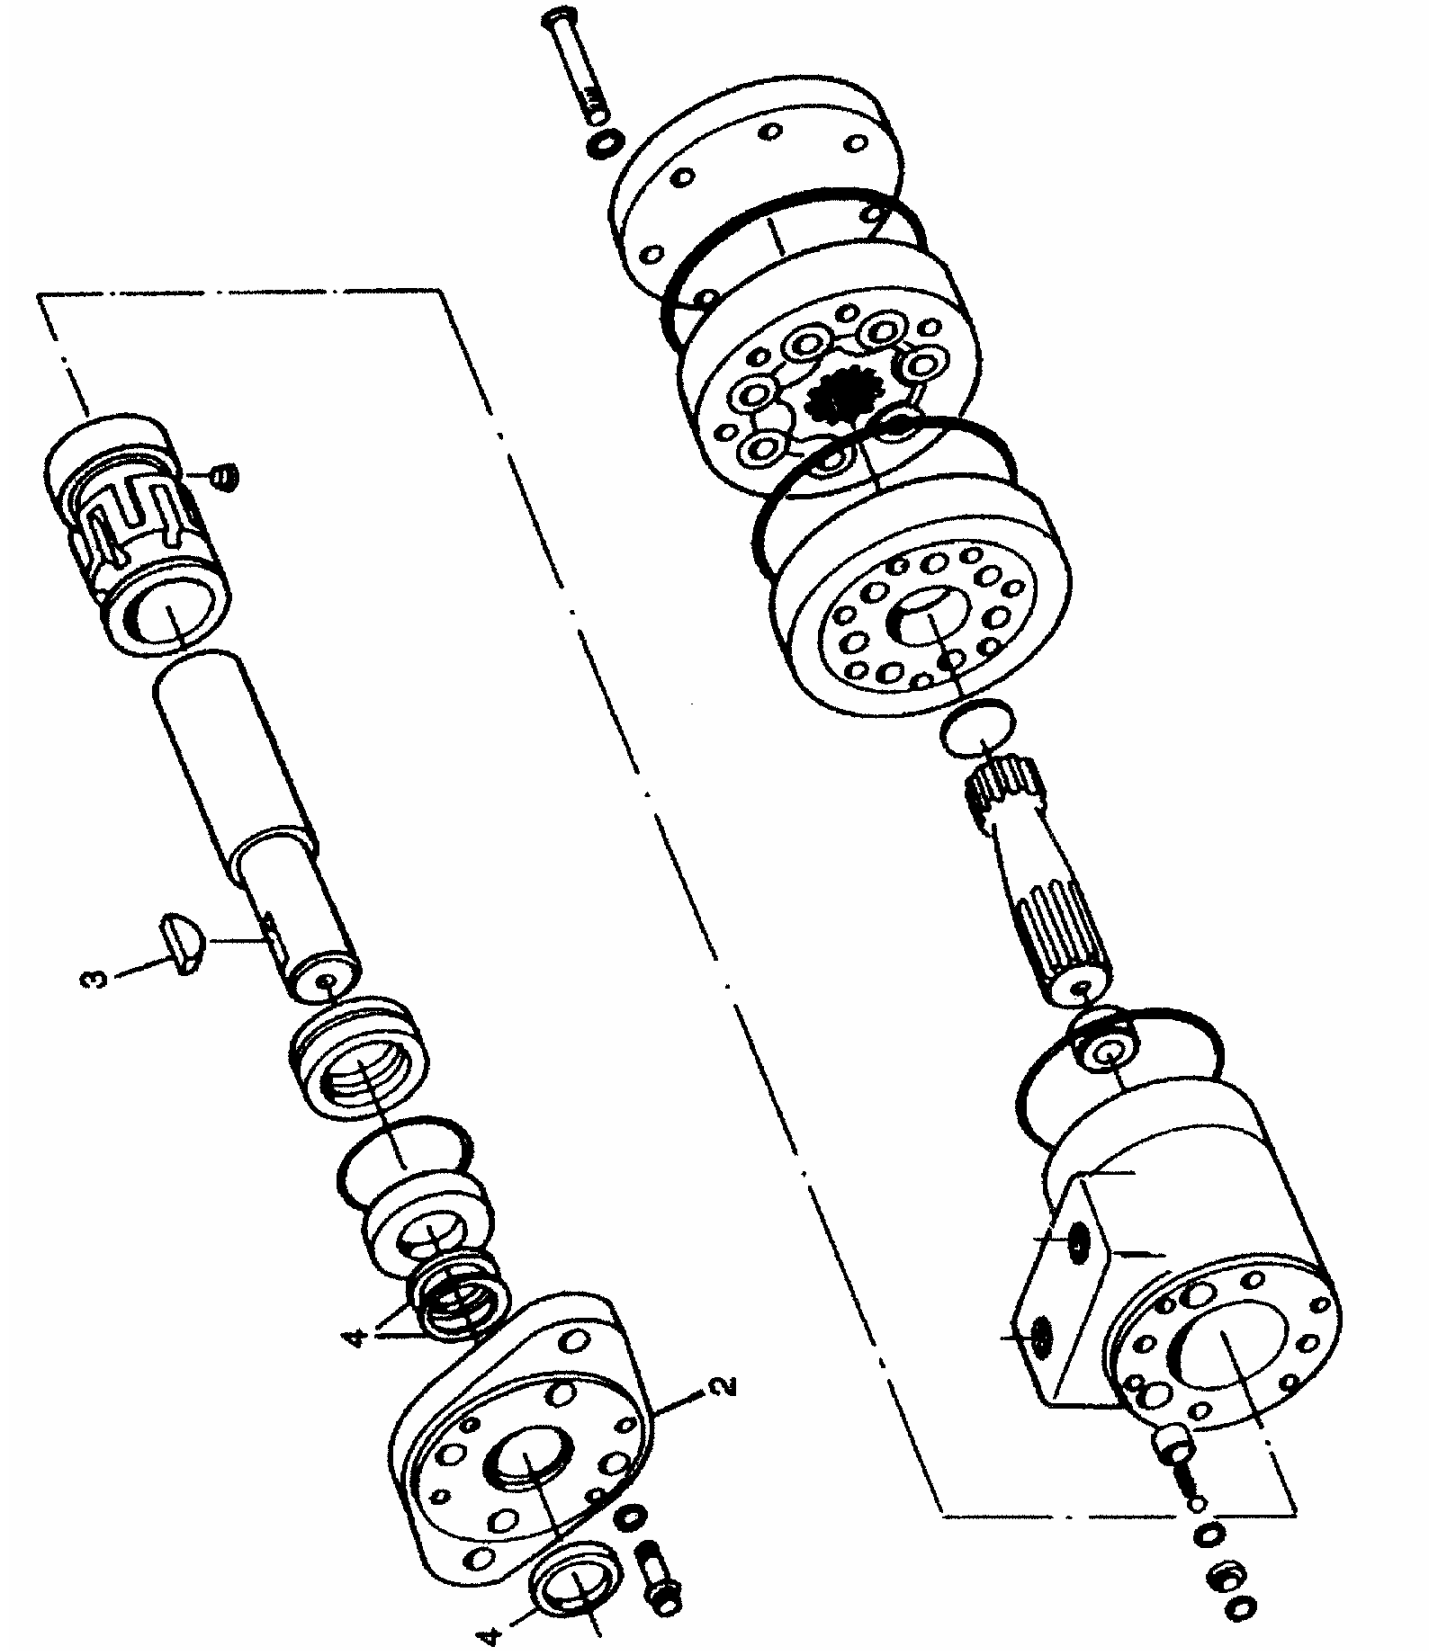

Item	Part No.	Name	Remarks	Qty	Uom
1	3900033	MTR\HYD\101-1038\14.1CI\7/8FOR			EA.
4	7501038	UNI SEAL KIT 007-009		1	EA.


2564 Balebuster Parts Reference

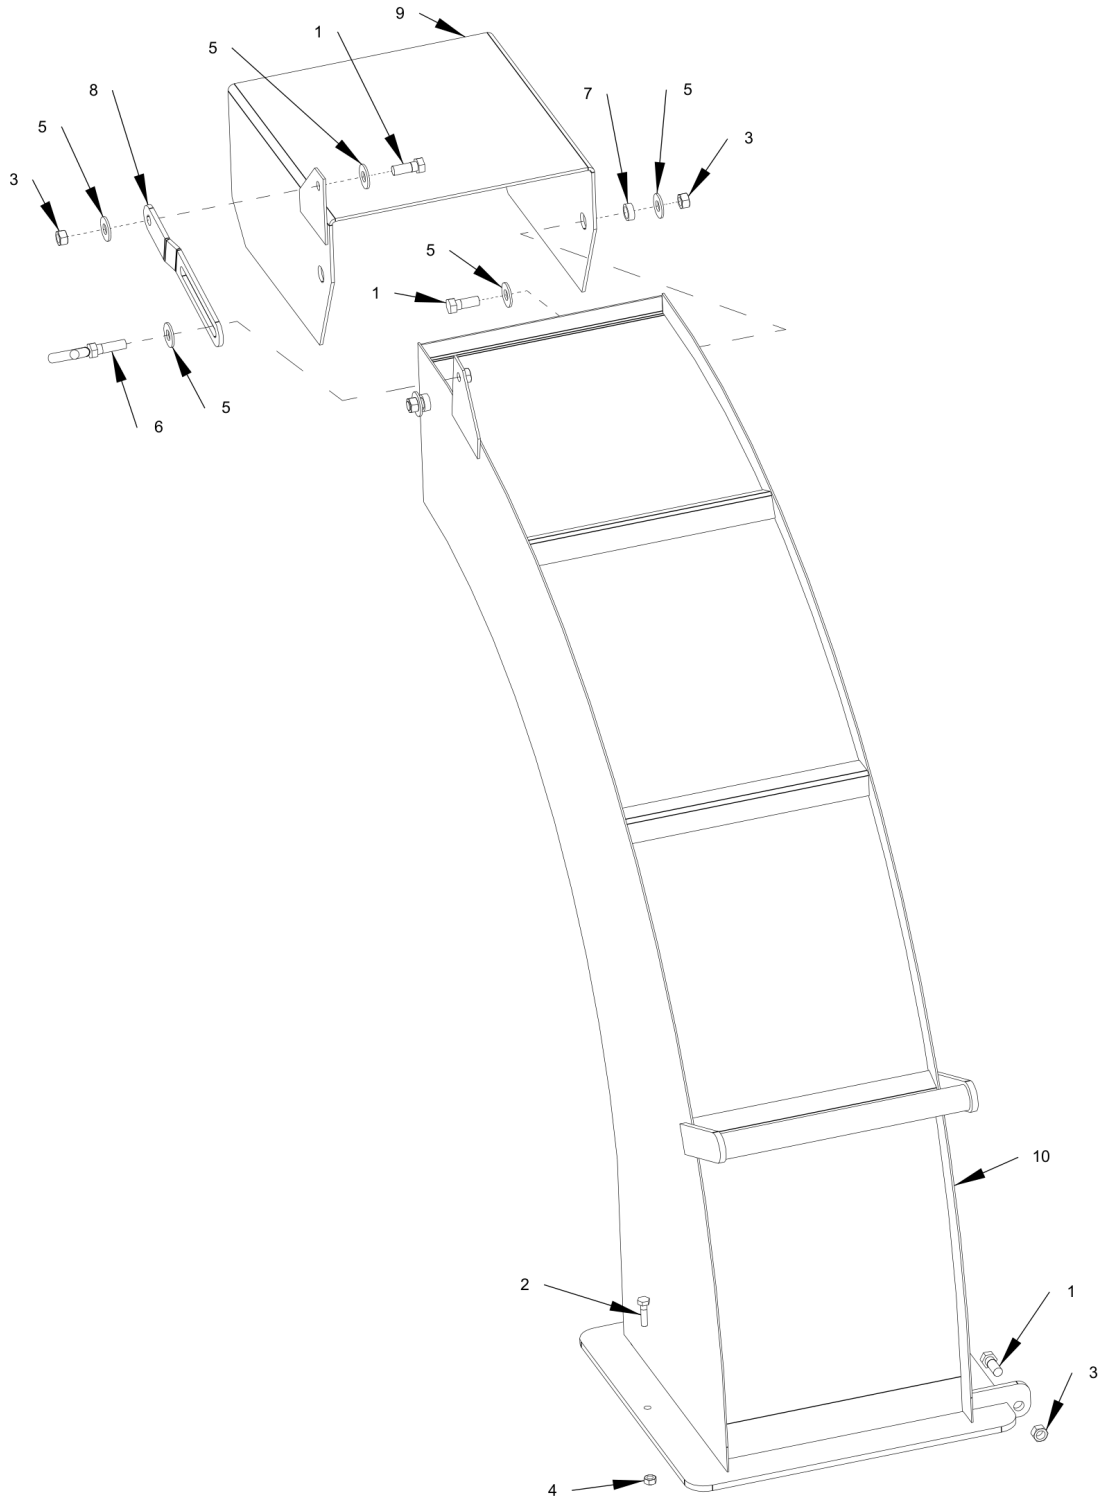

Optional Curved Spout

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		5	EA.
2	4800277	BOLT\HEX\1/4X1		1	EA.
3	4900023	NUT\TPLCK\3/8\NC		5	EA.
4	4900084	NUT\TPLCK\1/4\NC		1	EA.
5	5000001	WASH\FLAT\3/8		7	EA.
6	8100247	BOLT\ADJ\SPOUT		1	EA.
7	8100257	BUSH\DFLCTR\SPOUT		2	EA.
8	8100299	STRAP\ADJ\SPOUT		1	EA.
9	8100500	DFLCTR\SPOUT\DISCH		1	EA.
10	8101298	SPOUT\NO3\2564		1	EA.
CA	8101691	#3\CURVED\SPOUT\KIT			EA.


2564 Balebuster Parts Reference

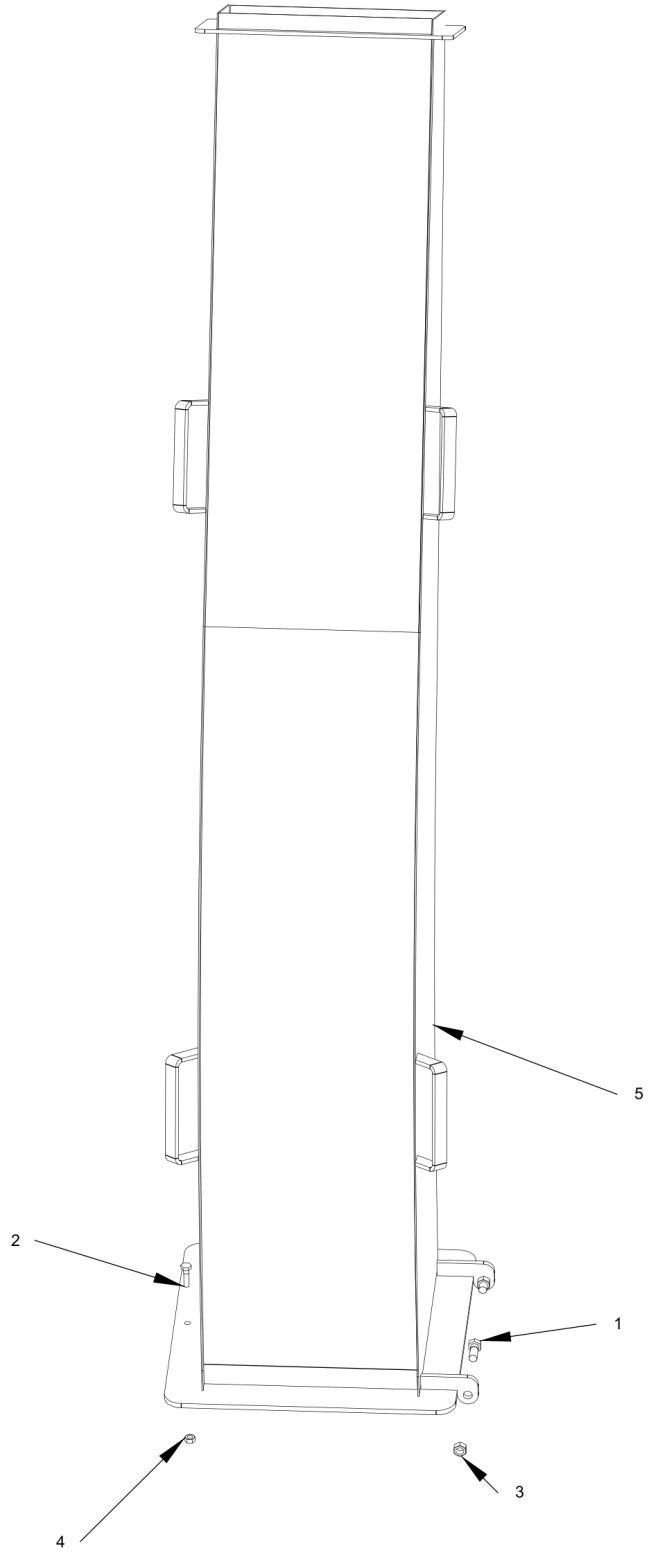

Optional 5-1/2 Ft. Straw Cannon Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		2	EA.
2	4800277	BOLT\HEX\1/4X1		1	EA.
3	4900023	NUT\TPLCK\3/8\NC		2	EA.
4	4900084	NUT\TPLCK\1/4\NC		1	EA.
5	8101723	SPOUT\CANNON\5-1/2 FT		1	EA.
CA	8101746	#5\STRAW\CANNON\KIT			EA.
NS	6500276	DECAL\LOGO\STRAW;CANNON		2	EA.


2564 Balebuster Parts Reference

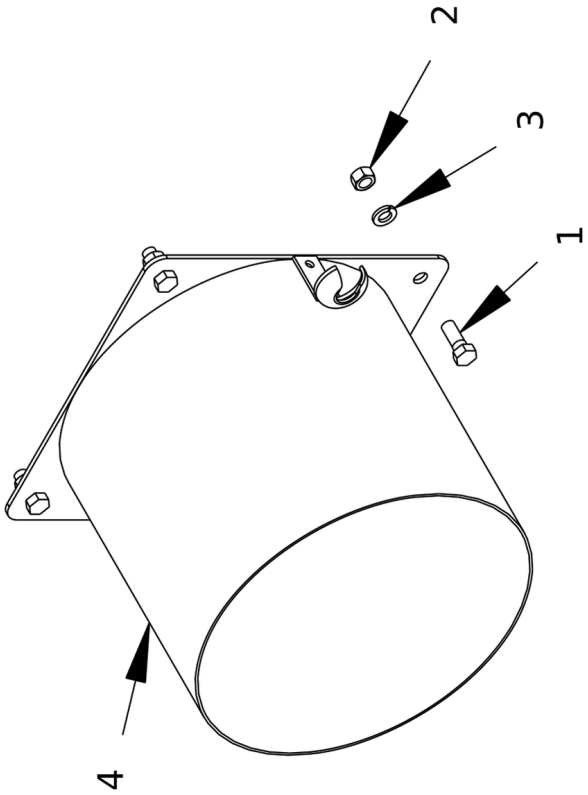

Optional Spout Hose Bracket

Item	Part No.	Name	Remarks	Qty	Uom
CA	8101758	KIT\HOSE\10"X25FT			EA.
1	4800003	BOLT\HEX\3/8X1		4	EA.
2	4900002	NUT\HEX\3/8\NC		4	EA.
3	5000019	WASH\LOCK\3/8		4	EA.
4	8101767	BRKT\HOSE\SPOUT		1	EA.
NS	3700847	HOSE\BLWR\10\25FT		1	EA.
NS	7501372	CLAMP\WORM\12\SWIVEL\LOCK		2	EA.
NS	8101756	COUPLER\10" HOSE\2564		1	EA.
NS	8101757	SPOUT\HANDLE\10" HOSE\2564		1	EA.


2564 Balebuster Parts Reference

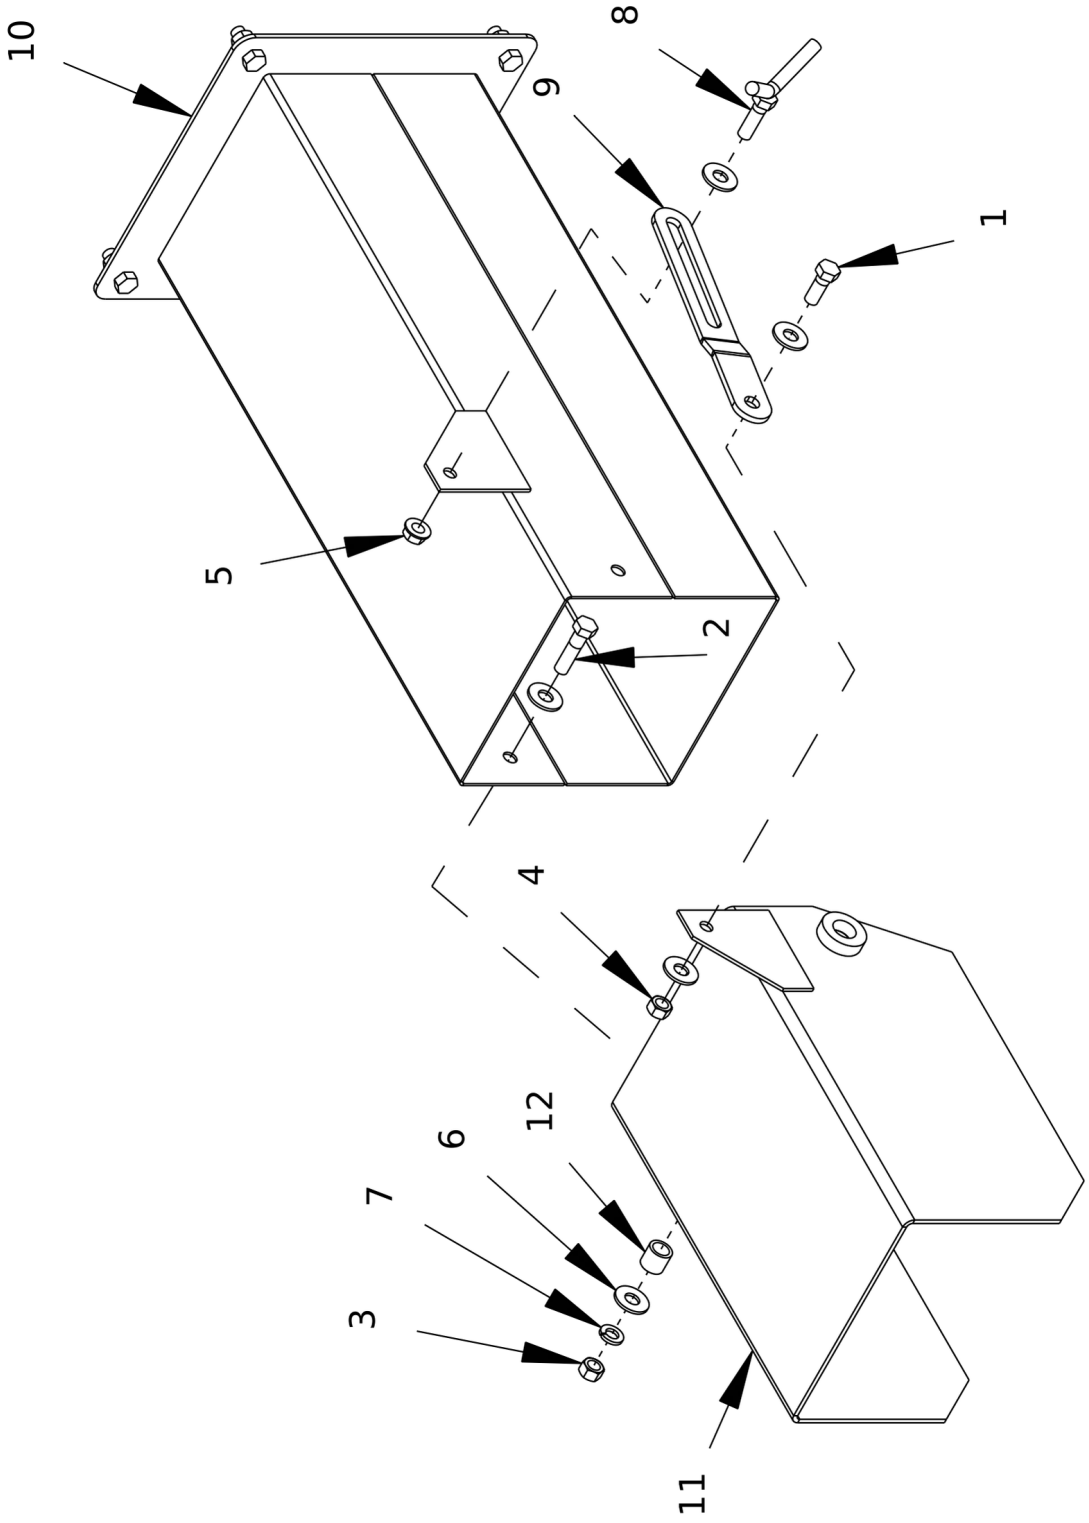

Optional Spout Mini-Gun

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		5	EA.
2	4800034	BOLT\HEX\3/8X1-1/2		2	EA.
3	4900002	NUT\HEX\3/8\NC		6	EA.
4	4900023	NUT\TPLCK\3/8\NC		1	EA.
5	4900076	NUT\FLG\SERR\3/8\NC		1	EA.
6	5000001	WASH\FLAT\3/8		7	EA.
7	5000019	WASH\LOCK\3/8		6	EA.
8	8100247	BOLT\ADJ\SPOUT		1	EA.
9	8100299	STRAP\ADJ\SPOUT		1	EA.
10	8101768	ORDER 8101782 SPOUT\MINI-GUN		1	EA.
11	8101769	DFLCTR\SPOUT\DISCH		1	EA.
12	8101776	BSH\SPOUT\11/16"		2	EA.
CA	8101782	SPOUT\MINI-GUN\KIT			EA.


2564 Balebuster Parts Reference

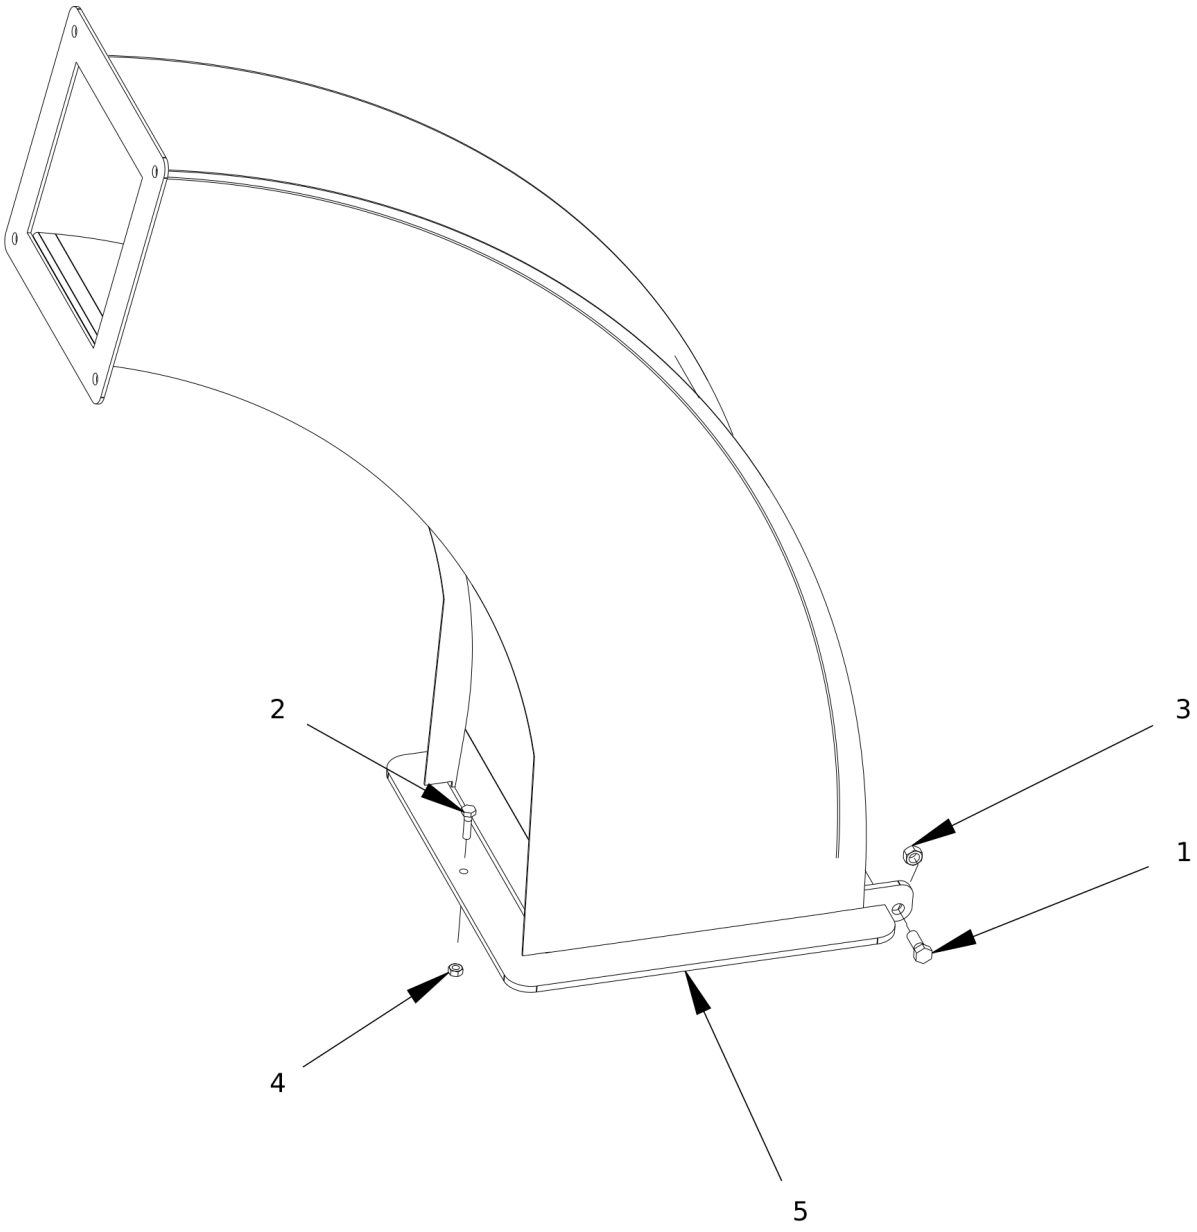

Optional 80 Degree Spout


Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		2	EA.
2	4800277	BOLT\HEX\1/4X1		1	EA.
3	4900023	NUT\TPLCK\3/8\NC		2	EA.
4	4900084	NUT\TPLCK\1/4\NC		1	EA.
5	8102049	SPOUT\3FT\HOSE\2564		1	EA.

2564 Balebuster Parts Reference

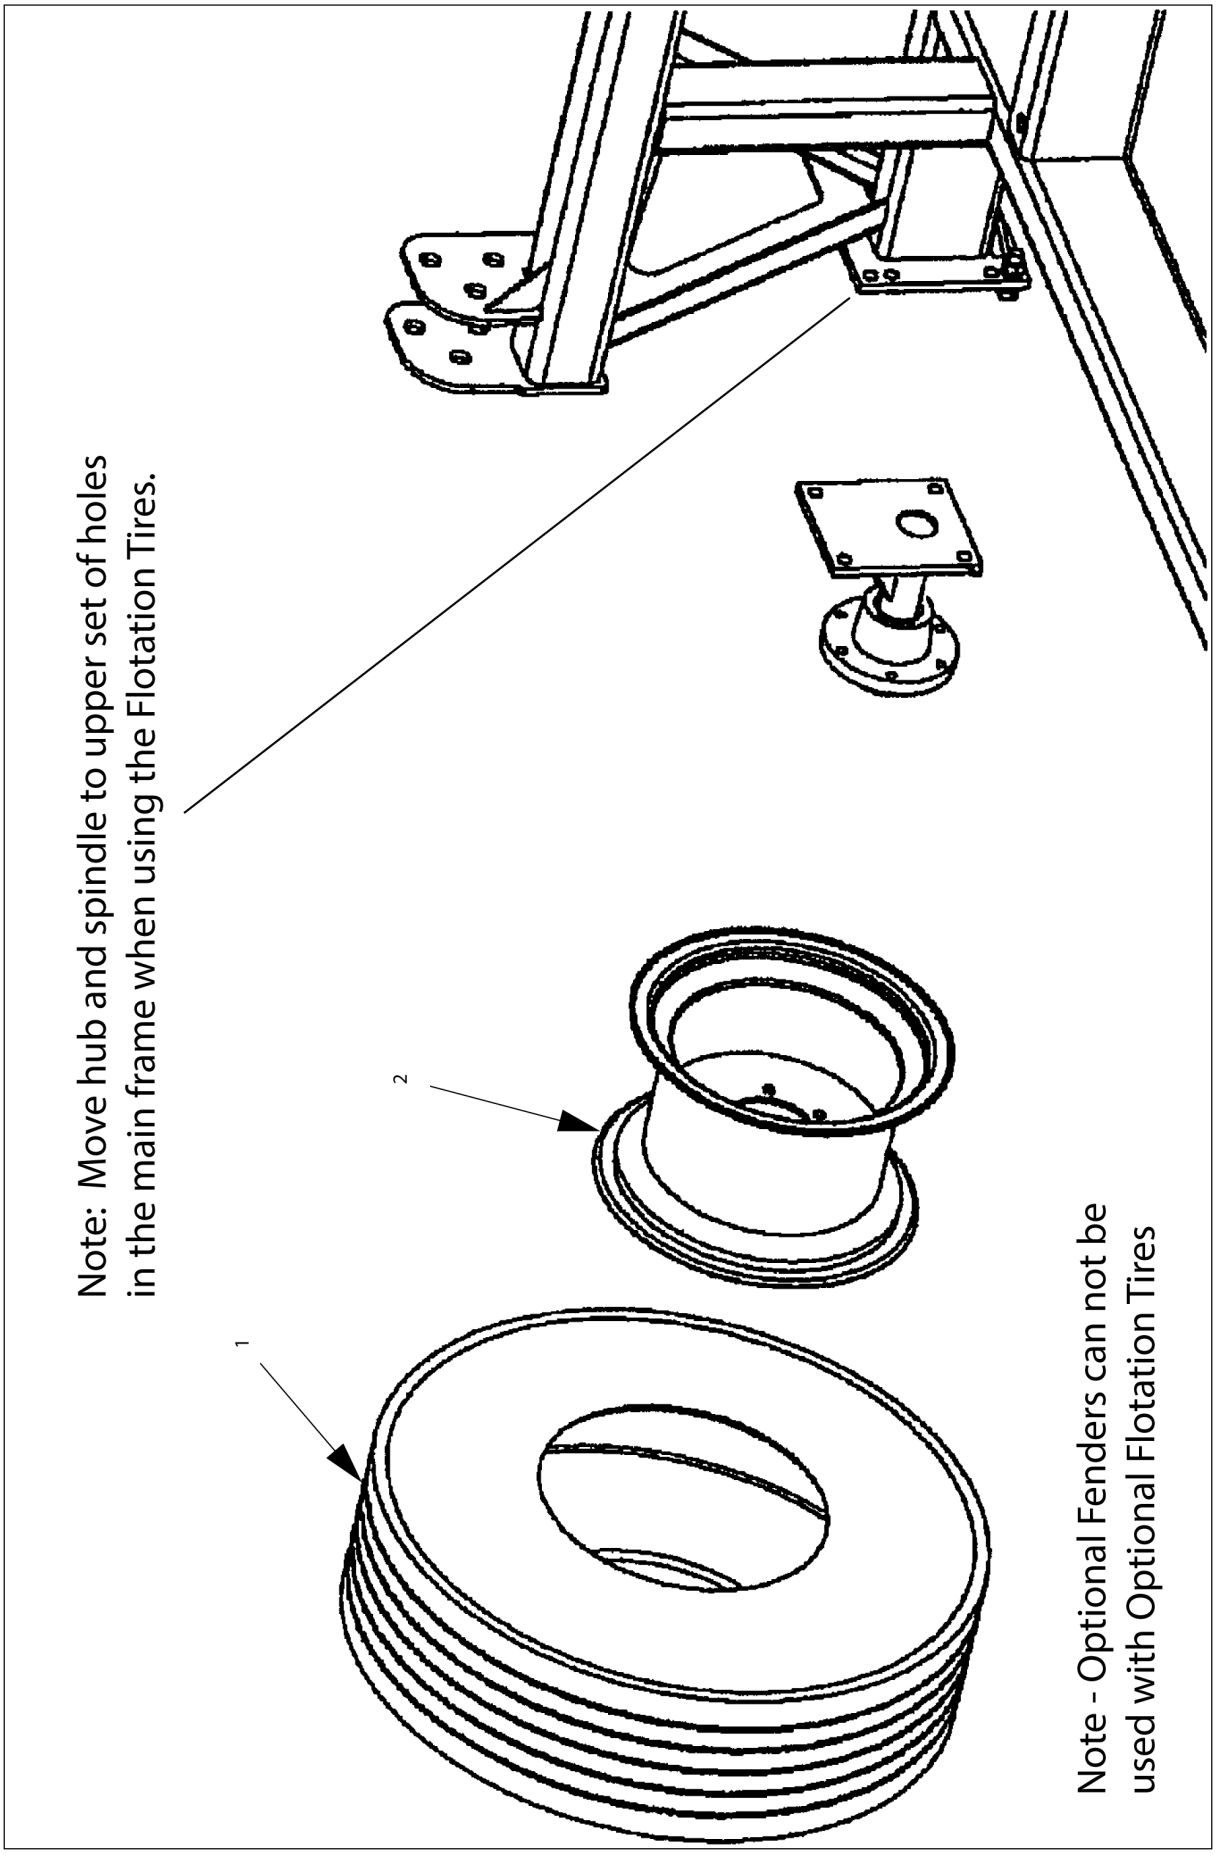

Item	Part No.	Name	Remarks	Qty	Uom
CA	2600849	WHL\IMP-2\ASSY\14LX16.1	(Includes (2) of each item #1 and #2)	1	EA.
1	2600846	TIRE\14LX16.1\8PLY		2	EA.
2	2600652	WHL\6-BOLT\16.1X11		2	EA.
CA	2600848	WHL\IMP-1\ASSY\14LX16.1	(Includes (1) of each item #1 and #2)	2	EA.


2564 Balebuster Parts Reference

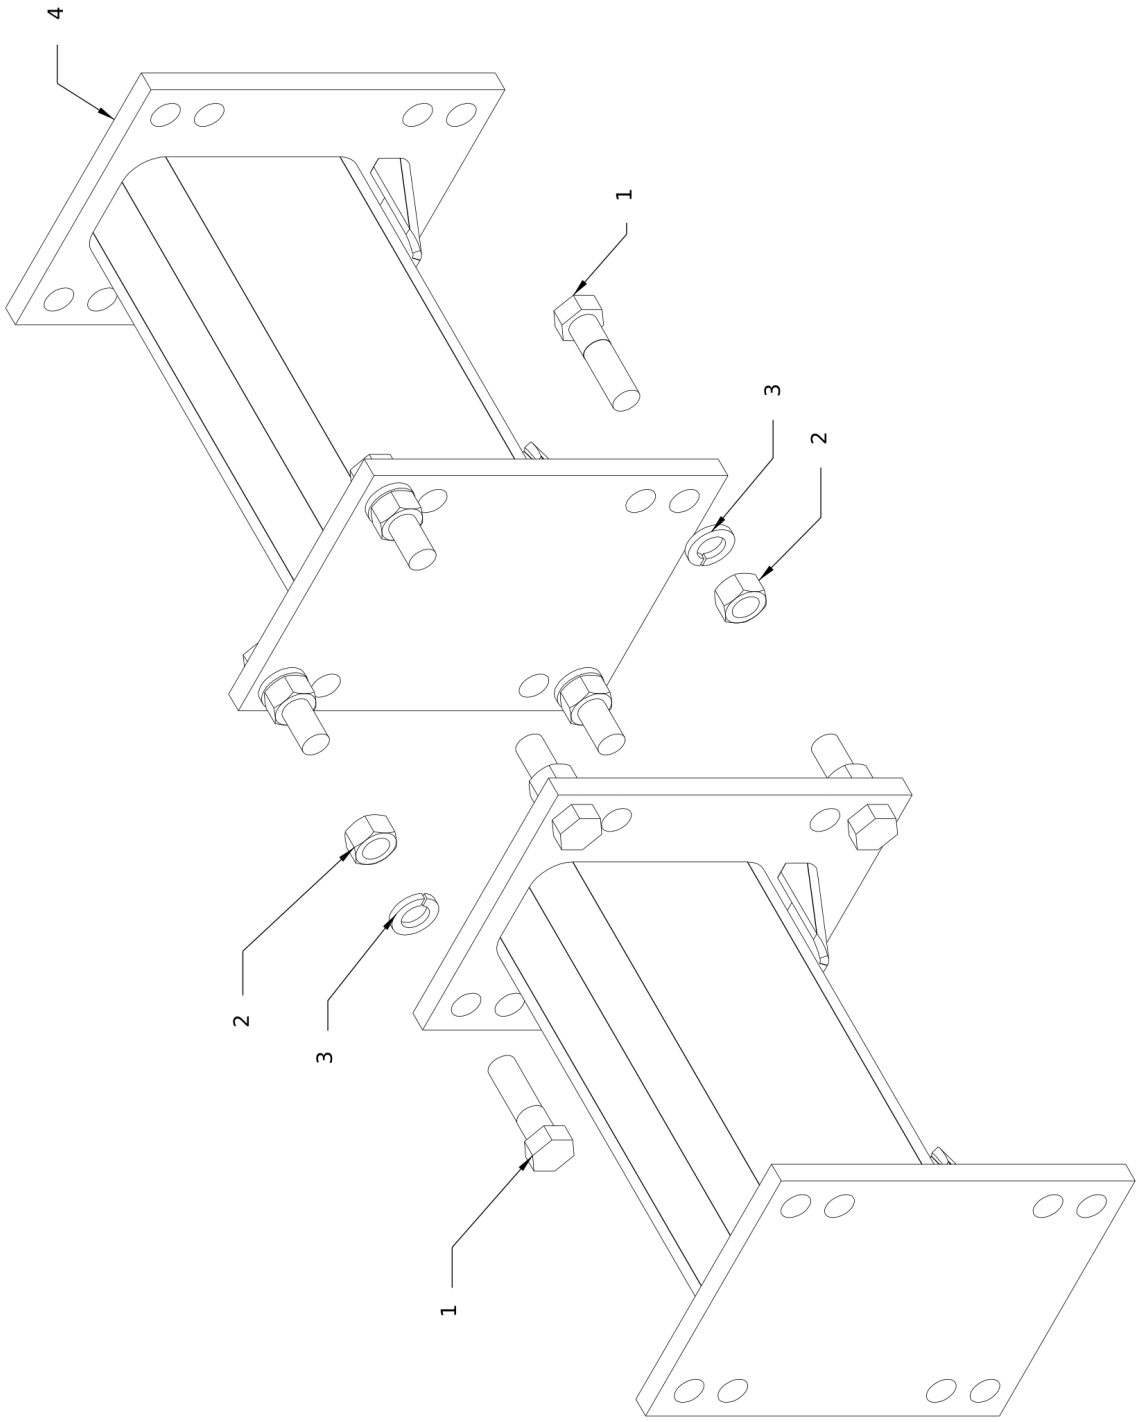

Optional Axle Extensions

Item	Part No.	Name	Remarks	Qty	Uom
1	4800350	BOLT\HEX\5/8X2-1/4		8	EA.
2	4900005	NUT\HEX\5/8\NC		8	EA.
3	5000003	WASH\LOCK\5/8		8	EA.
4	8101267	EXTENSION\AXLE\12"		2	EA.
CA	8101276	EXTENSION\AXLE\KIT			EA.


2564 Balebuster Parts Reference

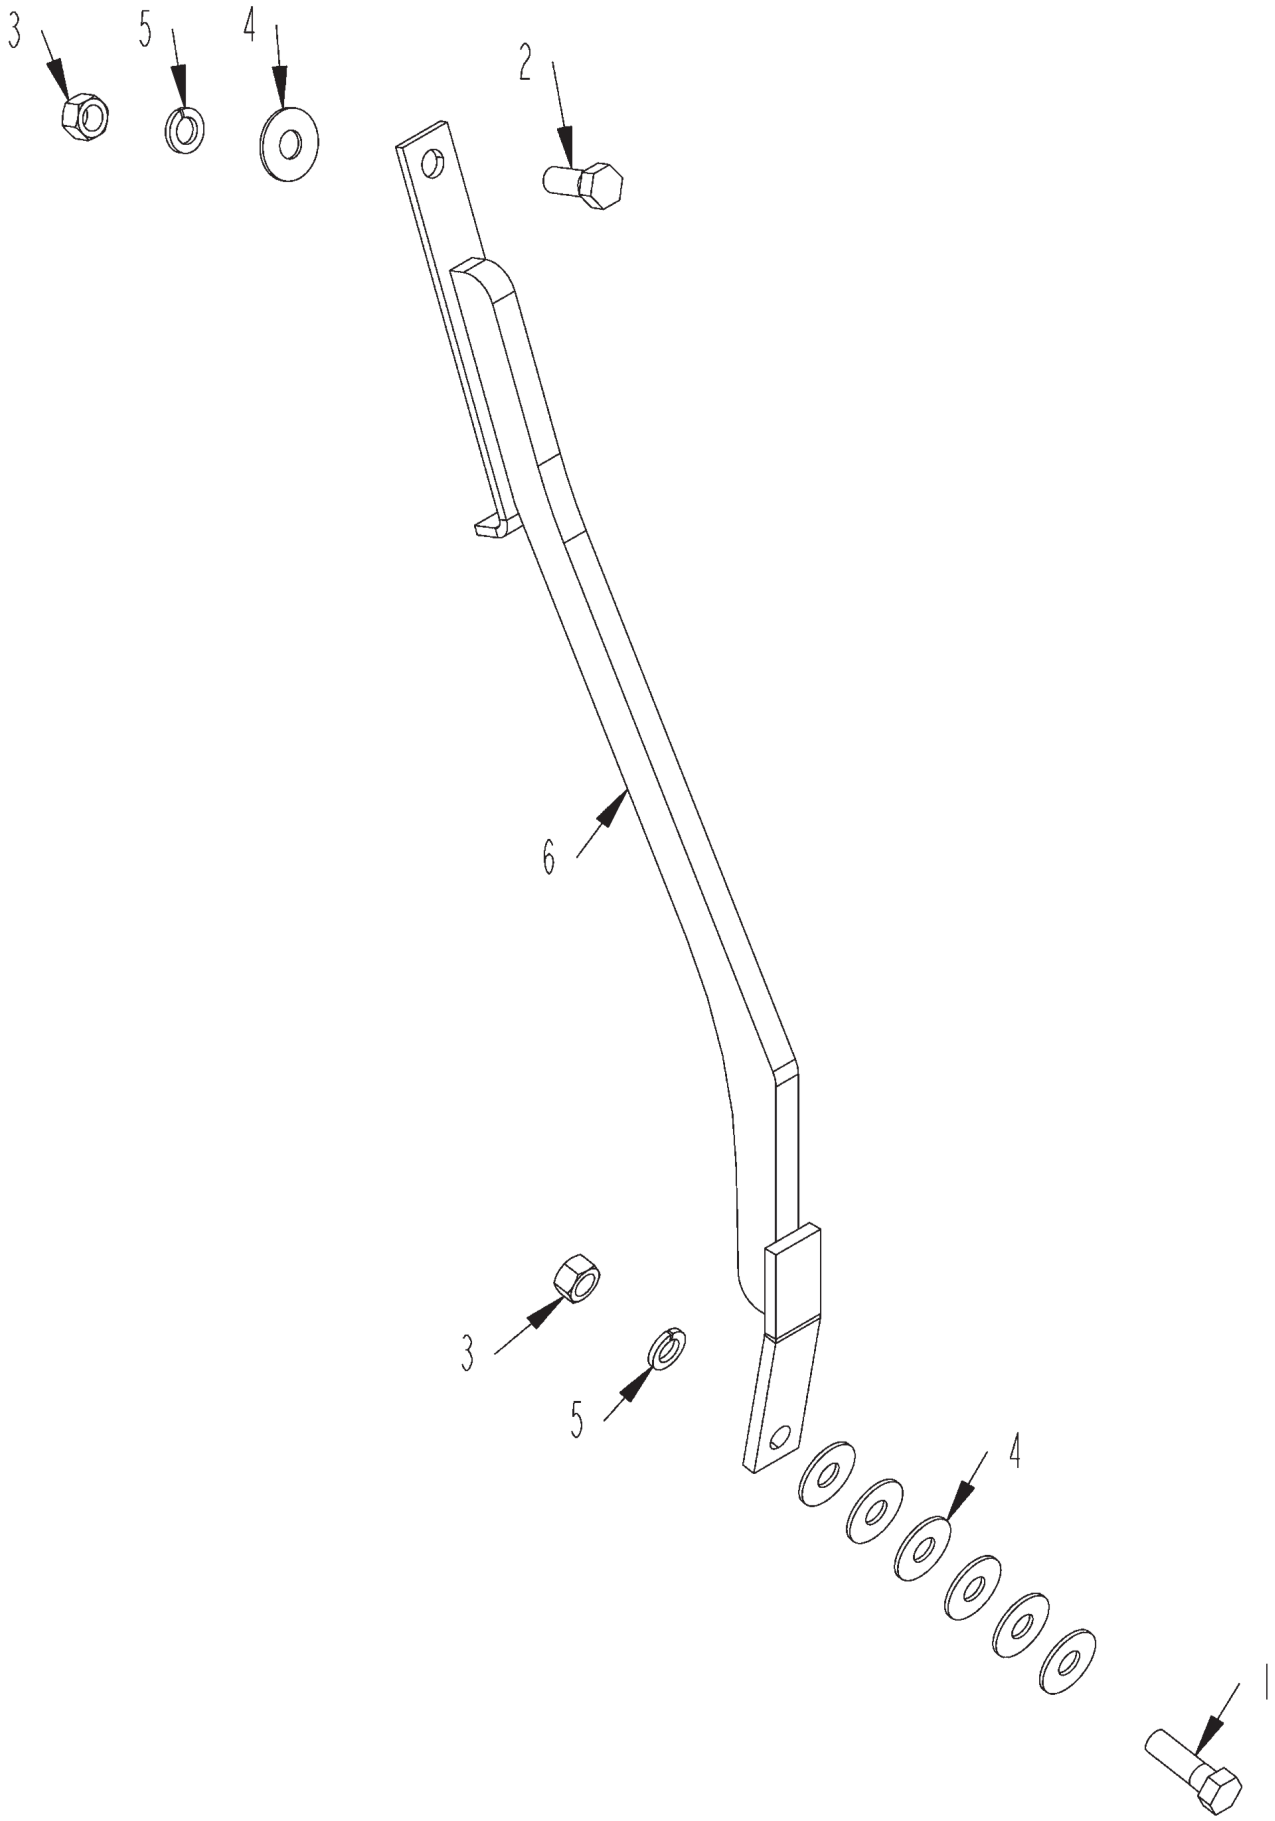

OPTIONAL STATIONARY SLUG BAR ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
CA	8101693	SLUGBAR\KIT\2564			EA
1	4800010	BOLT\HEX\5/8X2		1	EA.
2	4800106	BOLT\HEX\5/8X1-1/2		1	EA.
3	4900005	NUT\HEX\5/8\NC		2	EA.
4	5000002	WASH\FLAT\5/8		7	EA.
5	5000003	WASH\LOCK\5/8		2	EA.
6	8101680	SLUGBAR\2-BEND\2564		1	EA


2564 Balebuster Parts Reference

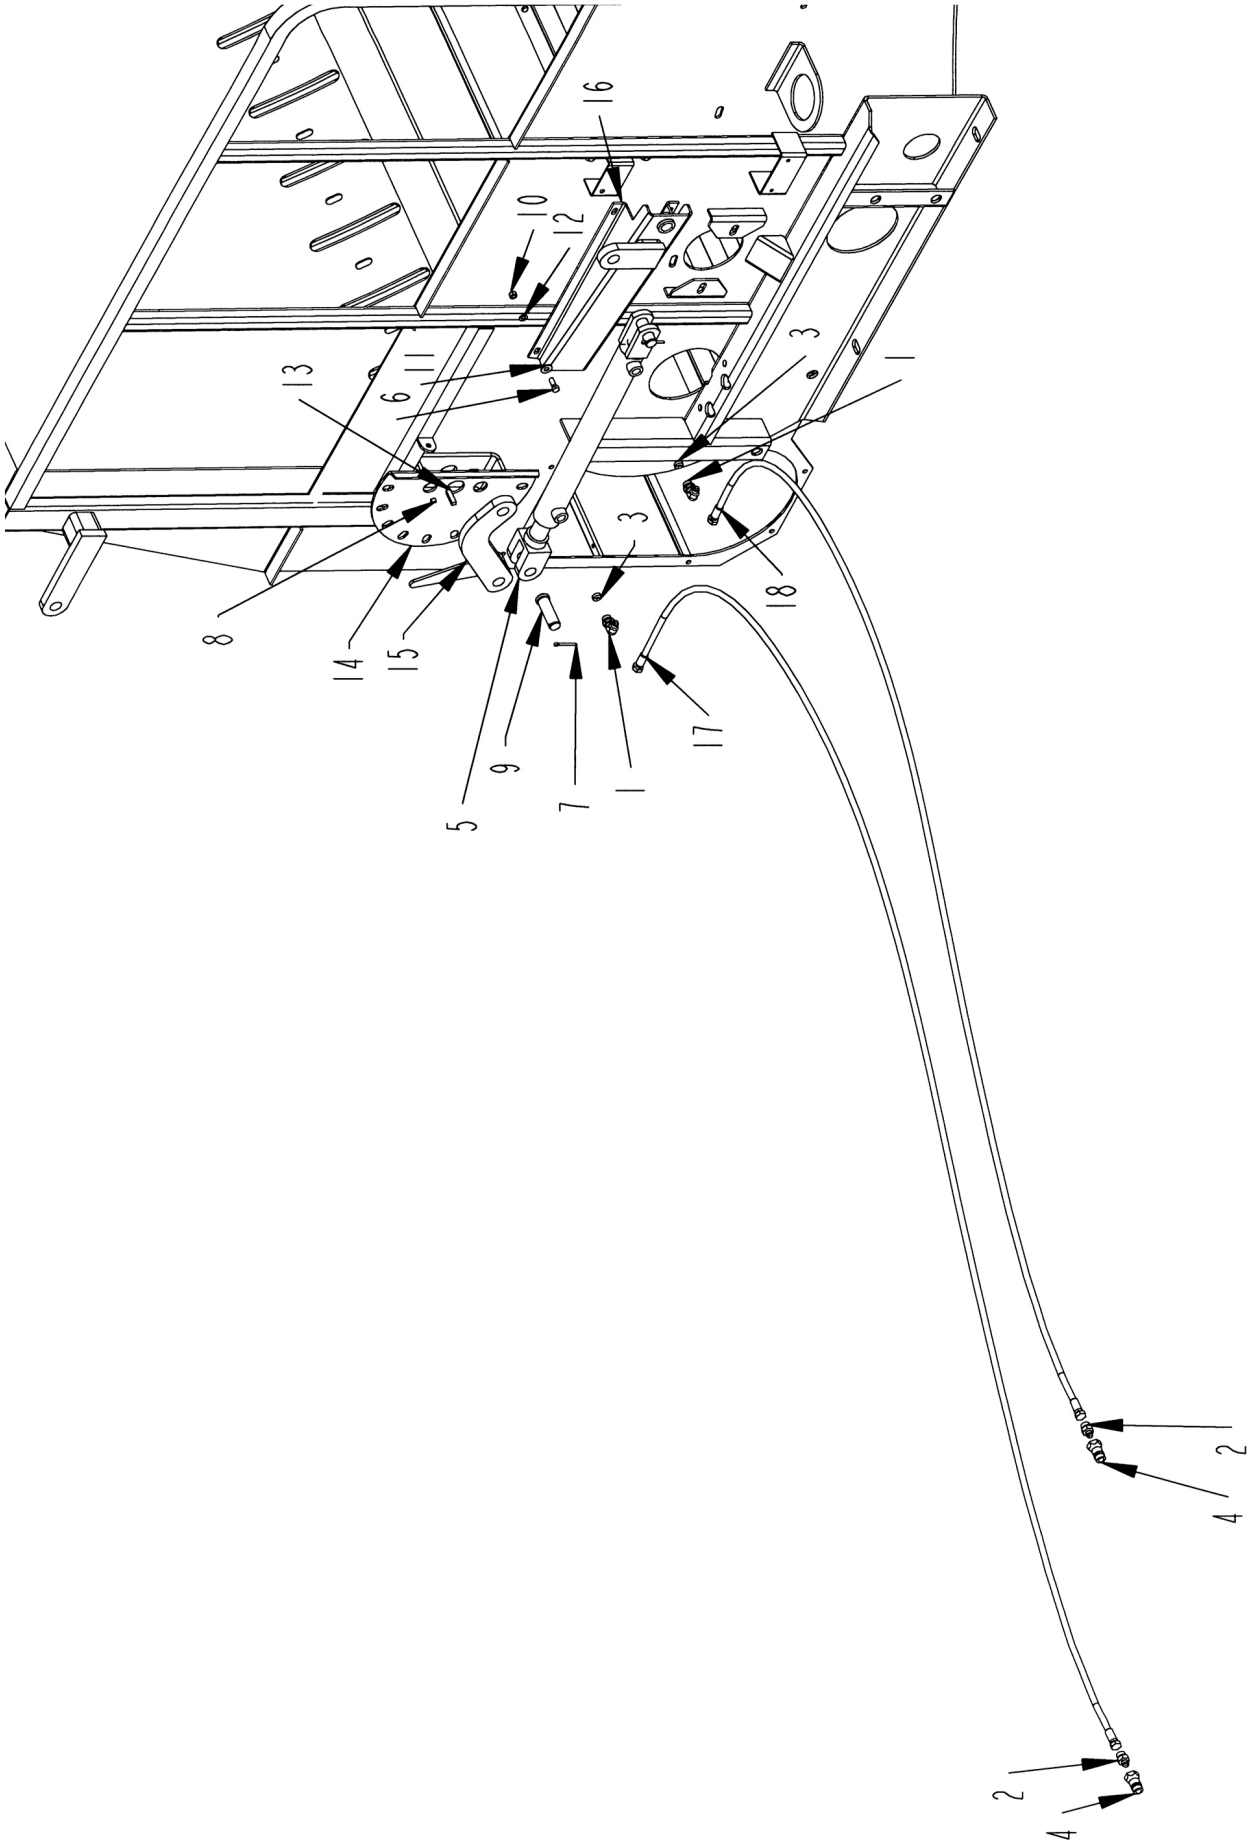

OPTIONAL HYDRAULIC SLUG BAR

Item	Part No.	Name	Remarks	Qty	Uom
1	3800453	FTG\3/4MORX9/16MJIC\90		2	EA.
2	3800530	FTG\3/4MORX9/16MJIC\ST		2	EA.
3	3800683	FTG\3/4MOR\ORFICE\0.0490"		2	EA.
4	3800694	FTG\3/4FOR\QUICK;CPLR\FEMALE		2	EA.
5	4100326	CYL\HYD\2X18\1-1/4ROD-RAM INDUSTRIES		1	EA.
6	4800003	BOLT\HEX\3/8X1		4	EA.
7	4800120	PIN\COT\3/16X1-3/4		2	EA.
8	4800143	SCR\SET\ALN\3/8X3/8\NC		2	EA.
9	4800185	PIN\CLEVIS\1X3		2	EA.
10	4900002	NUT\HEX\3/8\NC		4	EA.
11	5000001	WASH\FLAT\3/8		4	EA.
12	5000019	WASH\LOCK\3/8		4	EA.
13	6200021	KEY\SQ\3/8X1-1/2\HARDEND		1	EA.
14	8101038	BRKT\INDEX\SLUGBAR		1	EA.
15	8101880	MNT\CYL\HYD\SLGBR\2574		1	EA.
16	8101881	MNT\CYL\SHRDR\SLGBR		1	EA.
17	3700609	HOSE\HYD\1/4X162\9/16FJC9/16FJIC		1	EA.
18	3700651	HOSE\HYD\1/4X144\9/16FJIC		1	EA.
CA	8101883	CNTRL\SLGBR\HYD\KIT\2564			EA


2564 Balebuster Parts Reference

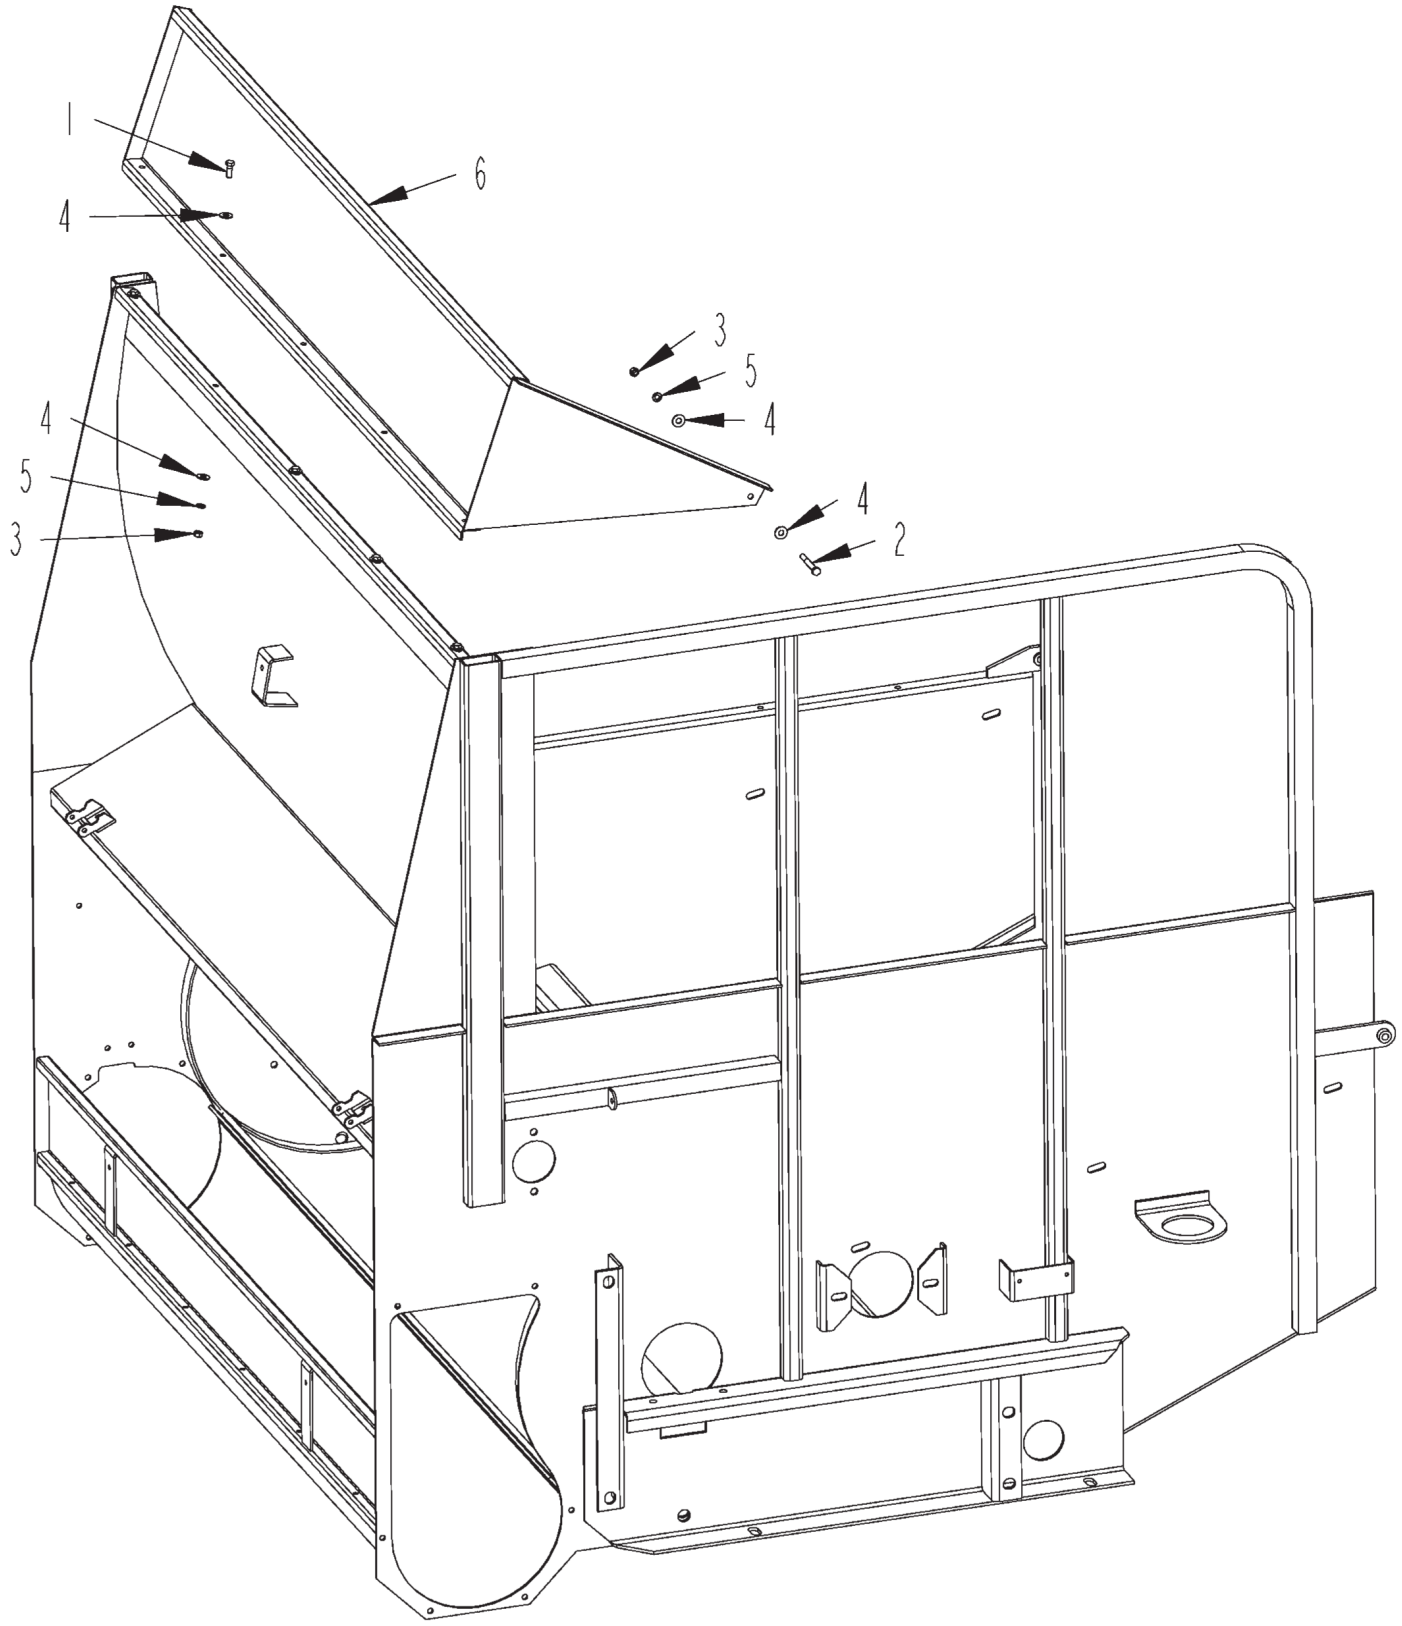

OPTIONAL SHREDDER EXTENSION ASSEMBLY

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		5	EA.
2	4800156	BOLT\HEX\3/8X3		1	EA.
3	4900002	NUT\HEX\3/8\NC		6	EA.
4	5000001	WASH\FLAT\3/8		12	EA.
5	5000019	WASH\LOCK\3/8		6	EA.
6	8100796	EXT\SHRDR\77-1/2>		1	EA
CA	8100833	EXT\SHDR\KIT\2620-40\2564			EA


2564 Balebuster Parts Reference

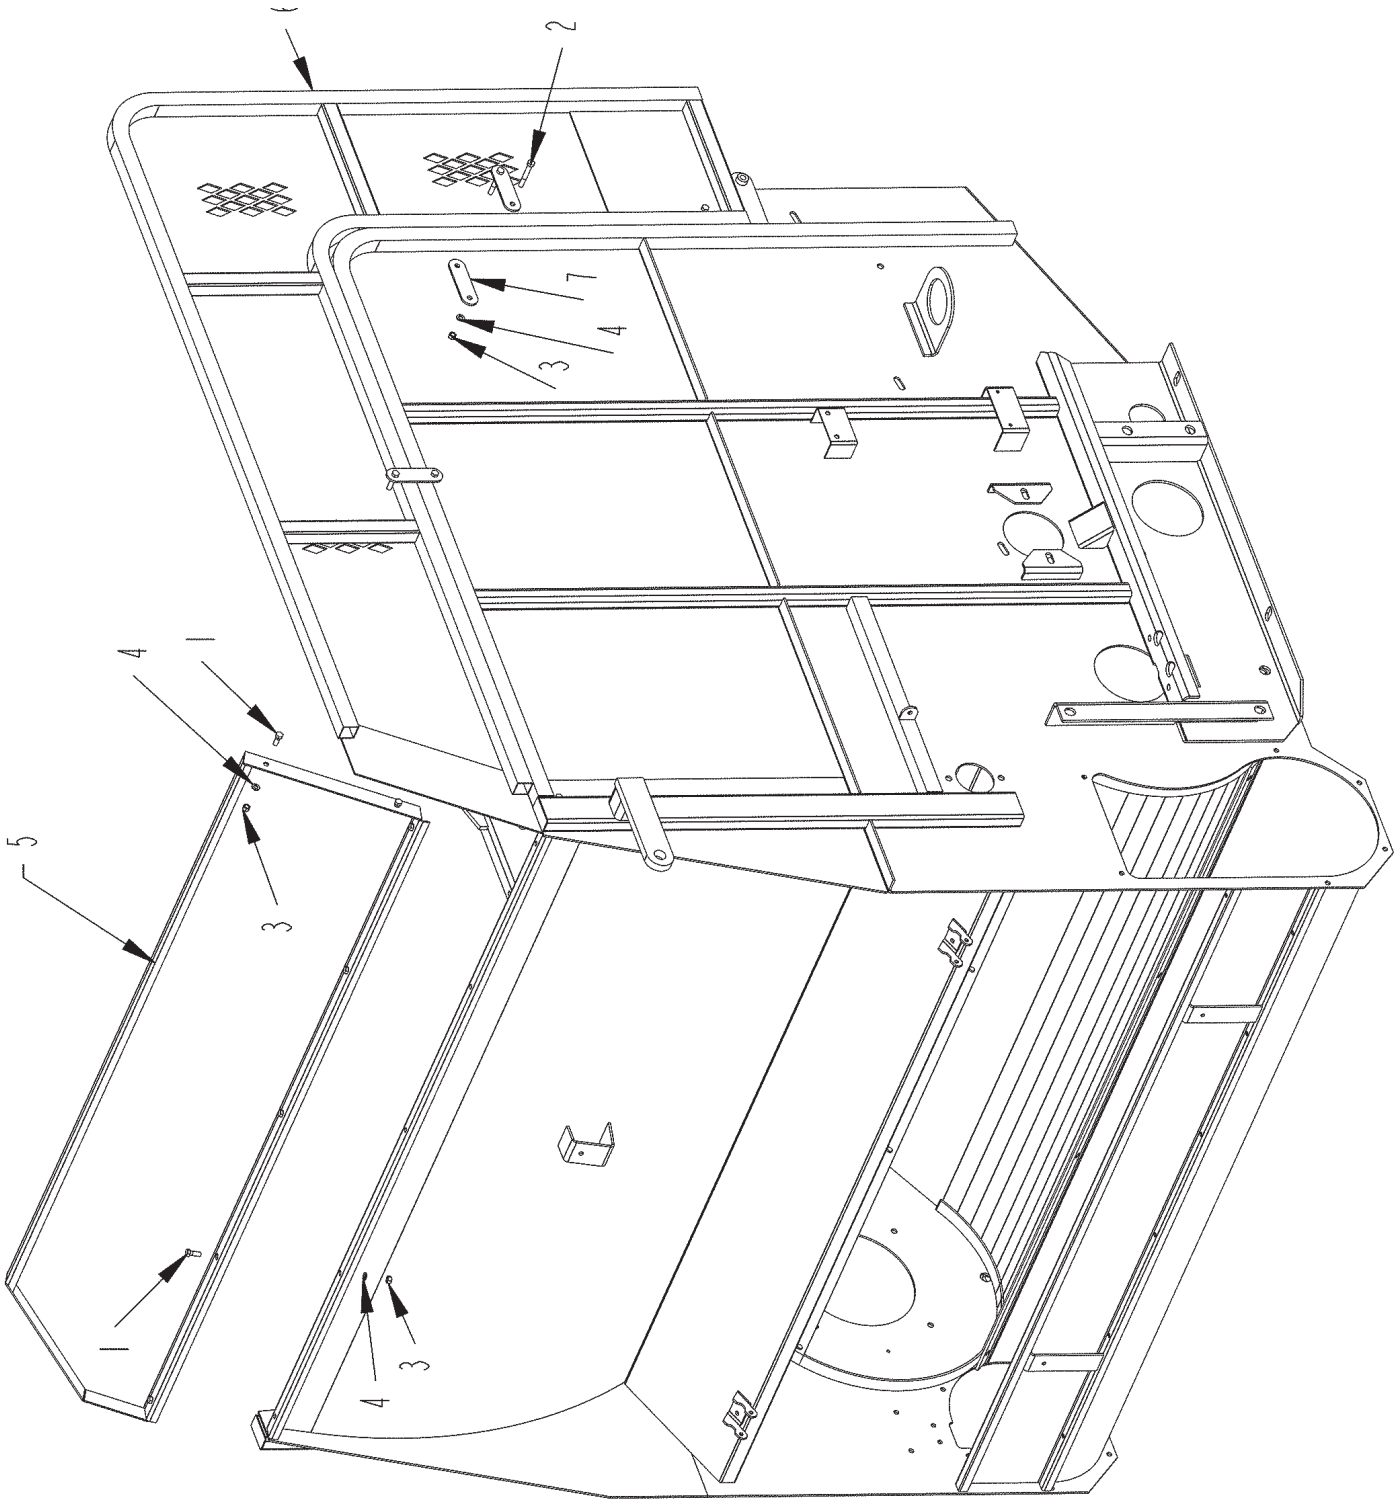

OPTIONAL SHREDDER EXTENSION KIT

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		9	EA.
2	4800514	BOLT\HEX\3/8X2-3/4		4	EA.
3	4900002	NUT\HEX\3/8\NC		13	EA.
4	5000019	WASH\LOCK\3/8		13	EA.
5	8101851	EXT\SIDE\16"\2564		1	EA
6	8101854	EXT\FRNT\SHRDR\2564		1	EA
7	8101870	STRAP\FRNT\EXT\2564		4	EA
CA	8101871	EXT\KIT\SHRDR\2564			EA


2564 Balebuster Parts Reference

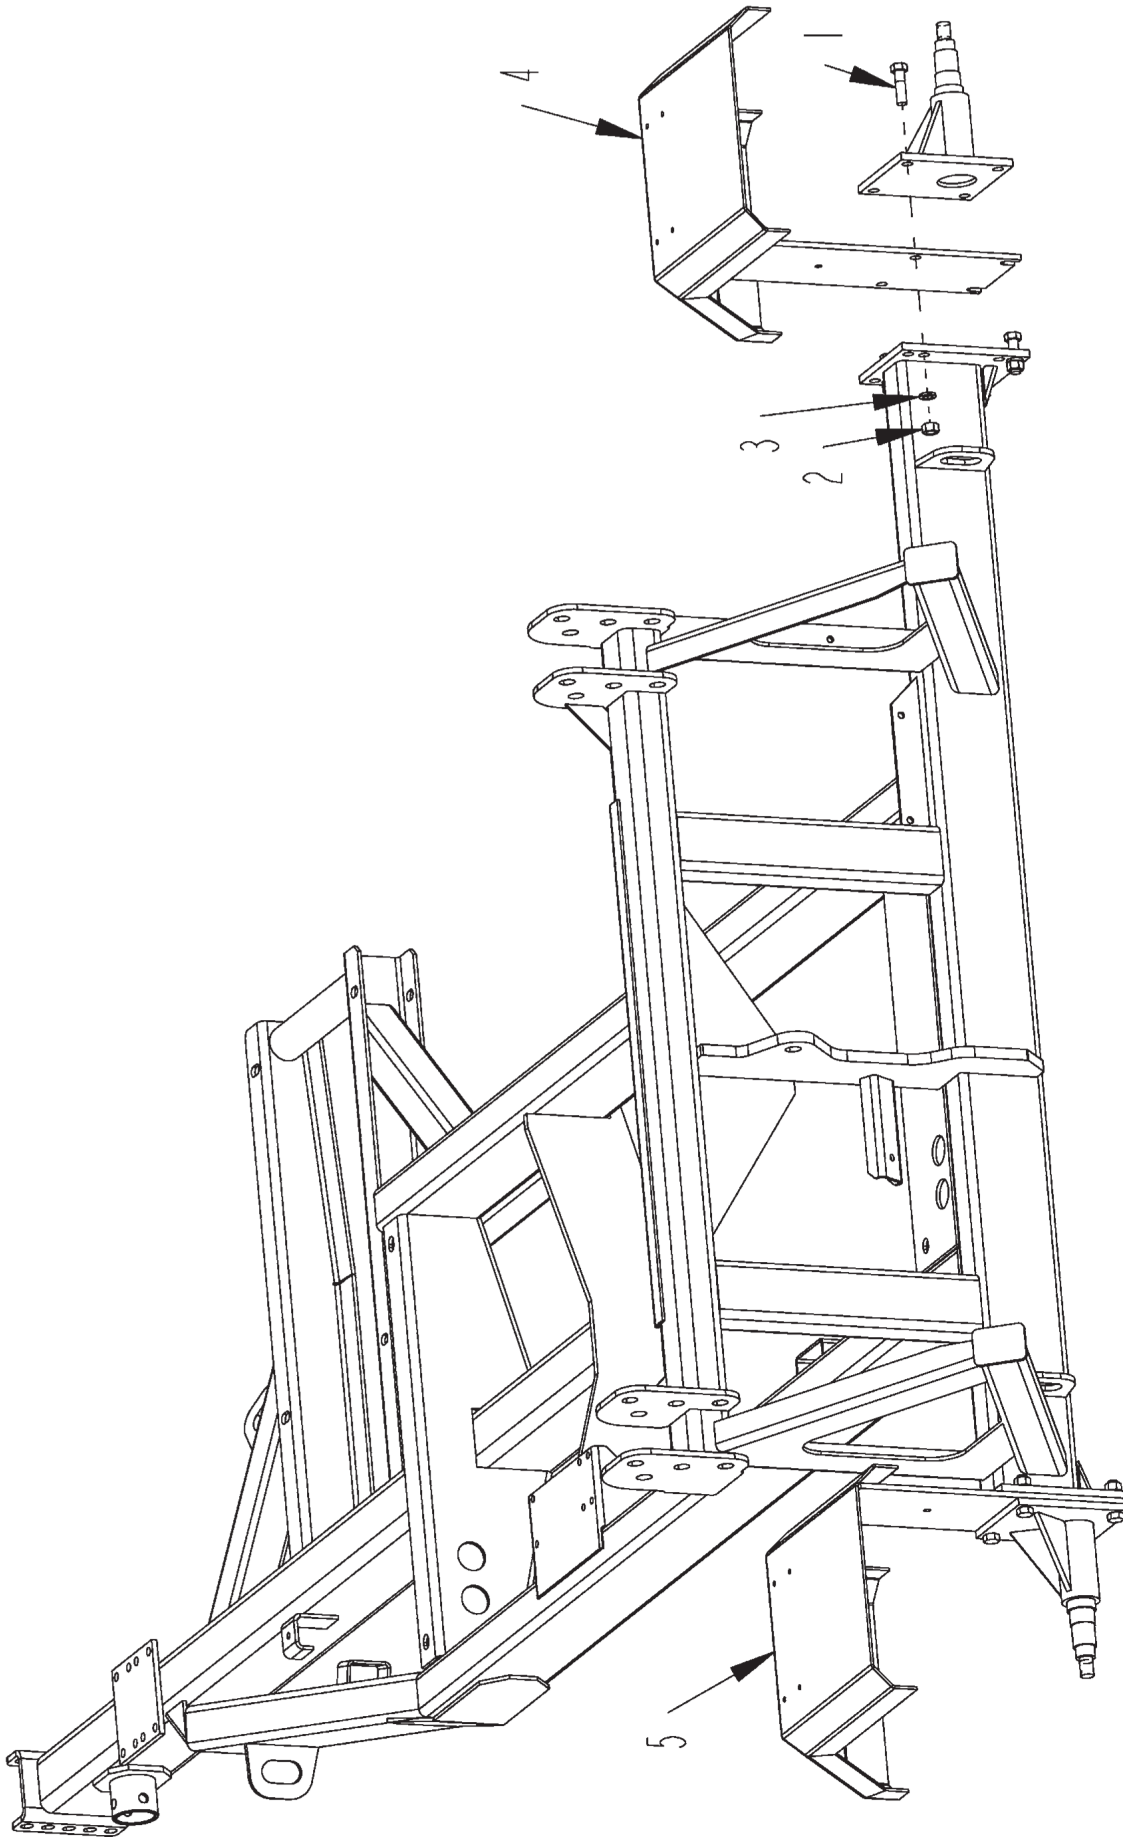

OPTIONAL FENDER ASSEMBLY


Item	Part No.	Name	Remarks	Qty	Uom
1	4800350	BOLT\HEX\5/8X2-1/4		8	EA.
2	4900005	NUT\HEX\5/8\NC		8	EA.
3	5000003	WASH\LOCK\5/8		8	EA.
4	8100827	FNDR\2620\2640\2650\RH		1	EA.
5	8100828	FNDR\2620\2640\2650\LH		1	EA.

2564 Balebuster Parts Reference

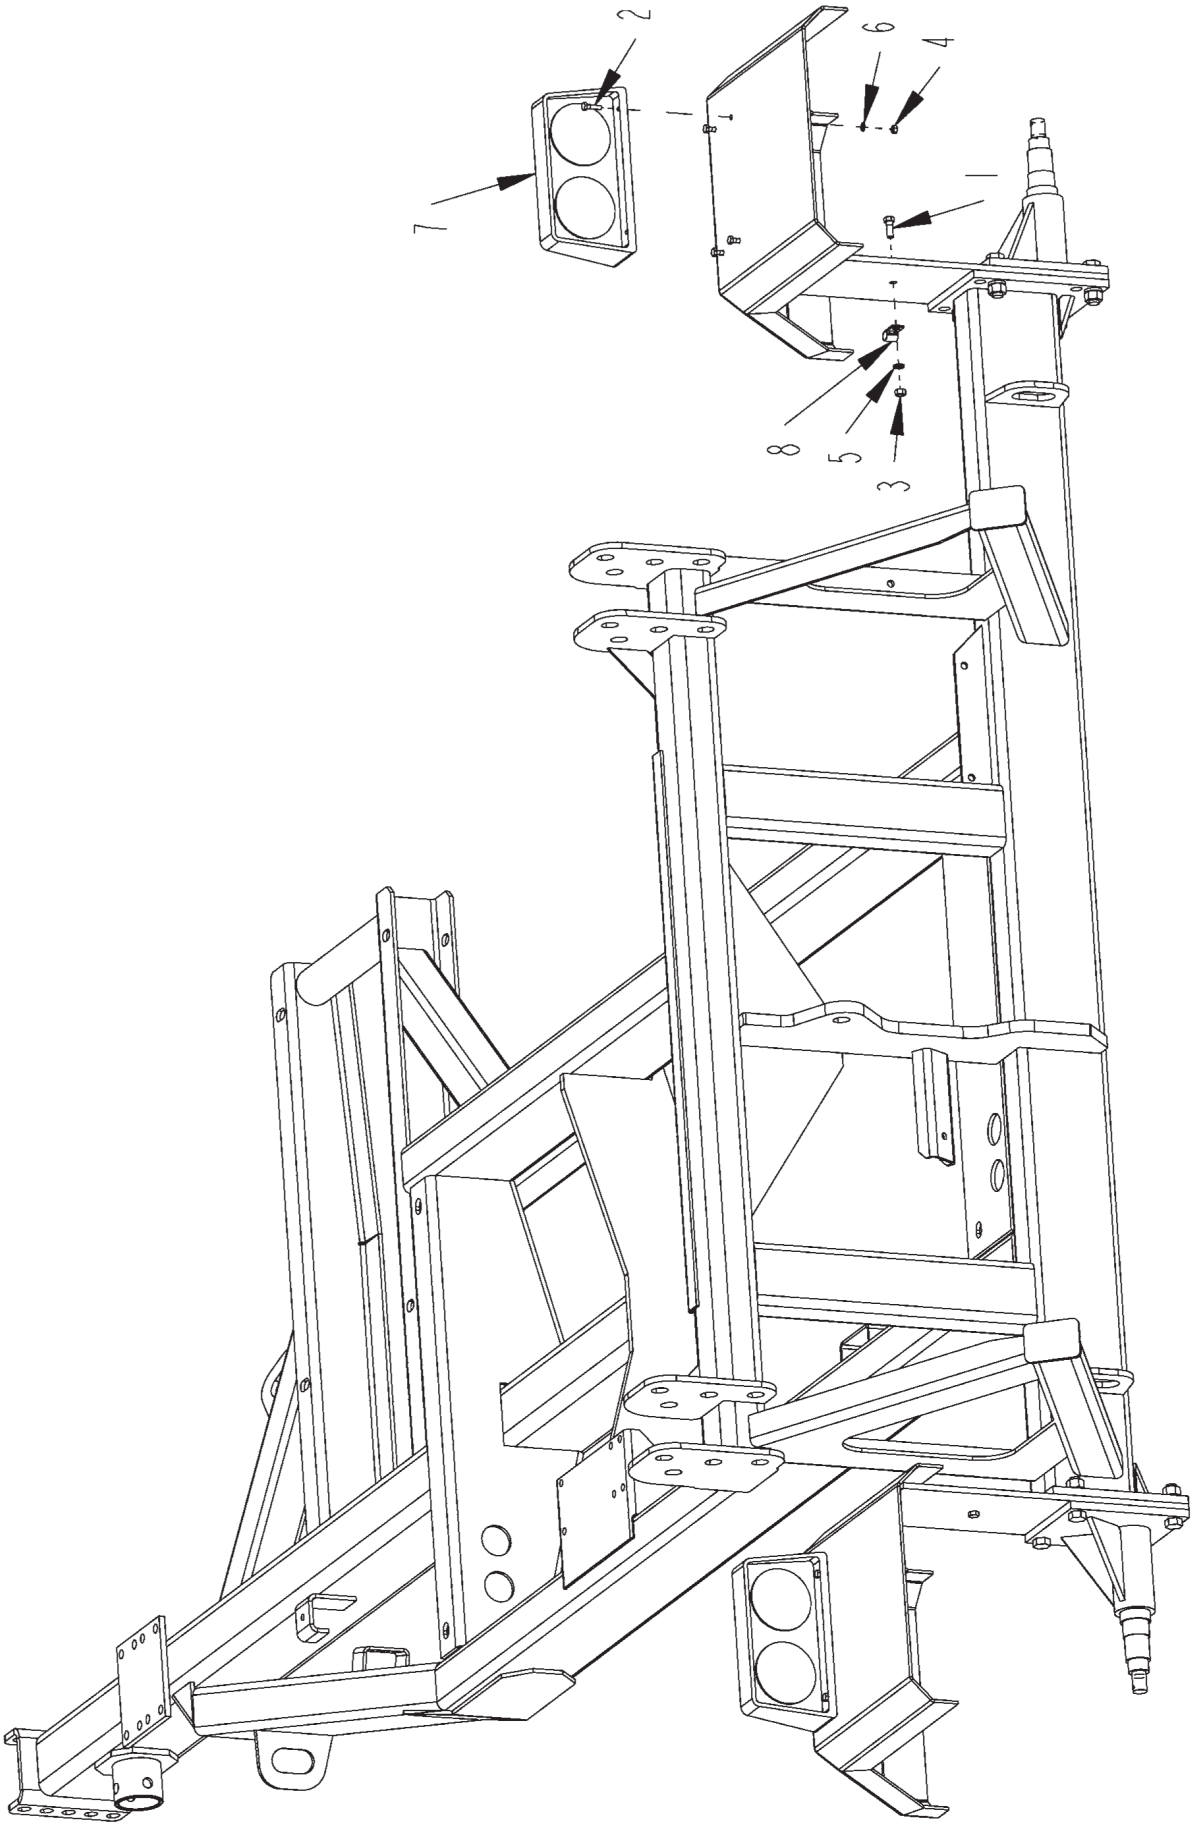

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		2	EA.
2	4800277	BOLT\HEX\1/4X1		8	EA.
3	4900002	NUT\HEX\3/8\NC		2	EA.
4	4900009	NUT\HEX\1/4\NC		8	EA.
5	5000019	WASH\LOCK\3/8		2	EA.
6	5000024	WASH\LOCK\1/4		8	EA.
7	5700423	KIT\LIGHT	(Includes 5700827, 5700828, 5700842) NOTE: 5701079 4 PIN KIT WILL FIT OLDER MACHINES IF ORDERING COMPLETE KIT.	1	EA
	5700827	TAILLIGHT\RED;RIGHT\ASSY\3PIN		1	EA
	5700828	TAILLIGHT\RED;LEFT\ASSY\3PIN	TAILLIGHT\RED;LEFT\ASSY\3PIN	1	EA
	5700842	HARN\TAIL;LIGHTS\for 5700423		1	EA
7A	5701079	KIT\LIGHT\LED\2-LIGHT\4-PIN	NOTE: 5701079 4 PIN KIT WILL FIT OLDER MACHINES IF ORDERING COMPLETE KIT		EA.
	5700924	HARN\TAIL;LIGHTS\SHREDDR\4PIN			EA.
	5701083	TAILLIGHT\RED;RIGHT\LED\ASSY\3PIN			EA
	5701084	TAILLIGHT\RED;LEFT\LED\ASSY\3PIN			EA
8	7500713	CLAMP\CUSH\HD\1/2		7	EA.
NS	7500700	LOOM\POLY\SPLIT\3/8		10	EA.
NS	7500835	LOOM\POLY\SPLIT\1/2		32	FT


2564 Balebuster Parts Reference

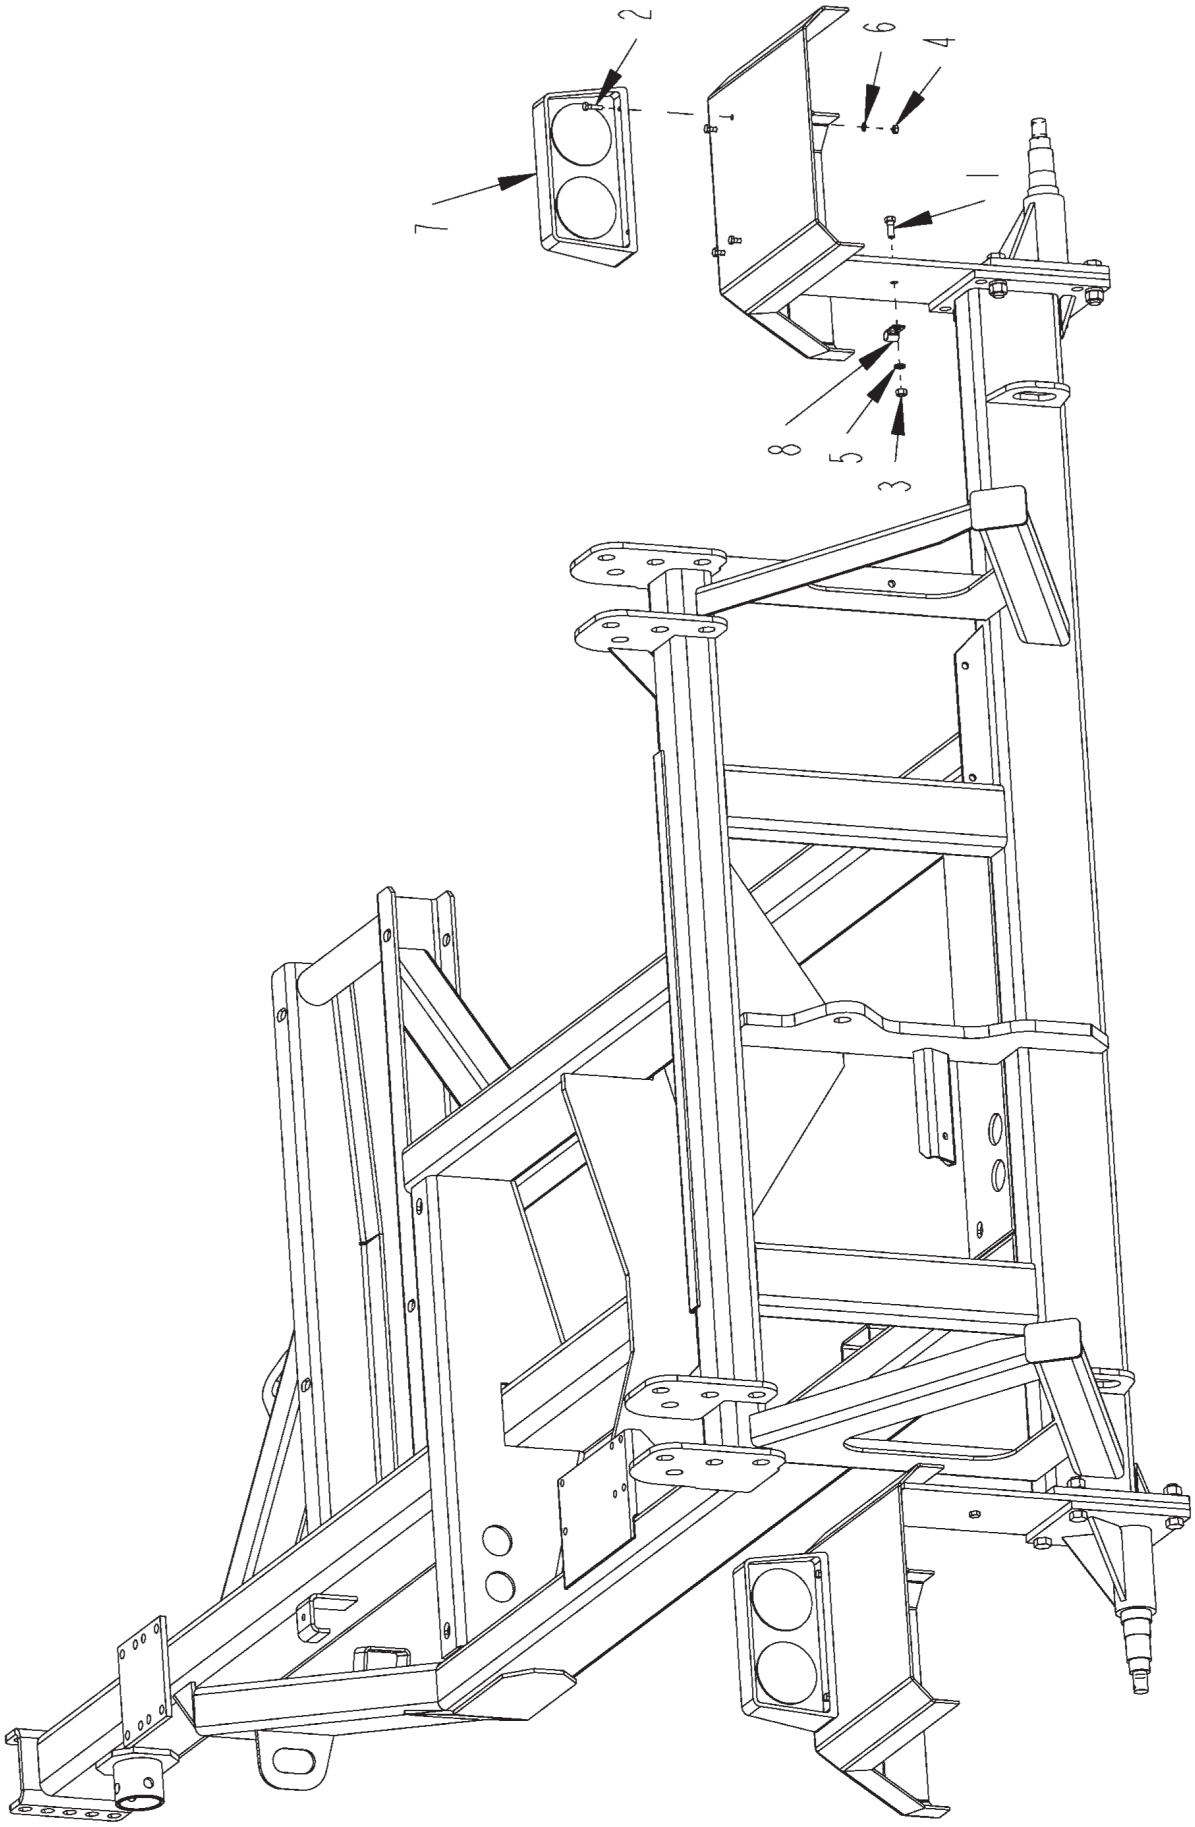

2564 OPTIONAL TAILLIGHT - FENDER MOUNTING (FOR SN 10089164 & UP)

Item	Part No.	Name	Remarks	Qty	Uom
1	4800003	BOLT\HEX\3/8X1		2	EA.
2	4800277	BOLT\HEX\1/4X1		8	EA.
3	4900002	NUT\HEX\3/8\NC		2	EA.
4	4900009	NUT\HEX\1/4\NC		8	EA.
5	5000019	WASH\LOCK\3/8		2	EA.
6	5000024	WASH\LOCK\1/4		8	EA.
7	5700925	KIT\LIGHT	(INCLUDES 5700715, 5700716, 5700924)	2	EA.
	5700715	TAILLIGHT\RED;RIGHT\ASSY\4PIN	N/A (Order 5701285 and 5701283)	1	EA.
	5700716	TAILLIGHT\RED;LEFT\ASSY\4PIN	N/A (Order 5701285 and 5701283)	1	EA.
	5700924	HARN\TAIL;LIGHTS\SHREDDR\4PIN			EA.
7A	5701079	KIT\LIGHT\LED\2-LIGHT\4-PIN	(INCLUDES 5700924, 5701058, 5701059)		EA.
	5700924	HARN\TAIL;LIGHTS\SHREDDR\4PIN			EA.
	5701083	TAILLIGHT\RED;RIGHT\LED\ASSY\3PIN			EA
	5701084	TAILLIGHT\RED;LEFT\LED\ASSY\3PIN			EA
8	7500713	CLAMP\CUSH\HD\1/2		7	EA.
NS	7500700	LOOM\POLY\SPLIT\3/8		10	EA.
NS	7500835	LOOM\POLY\SPLIT\1/2		32	FT

2564 Balebuster Parts Reference

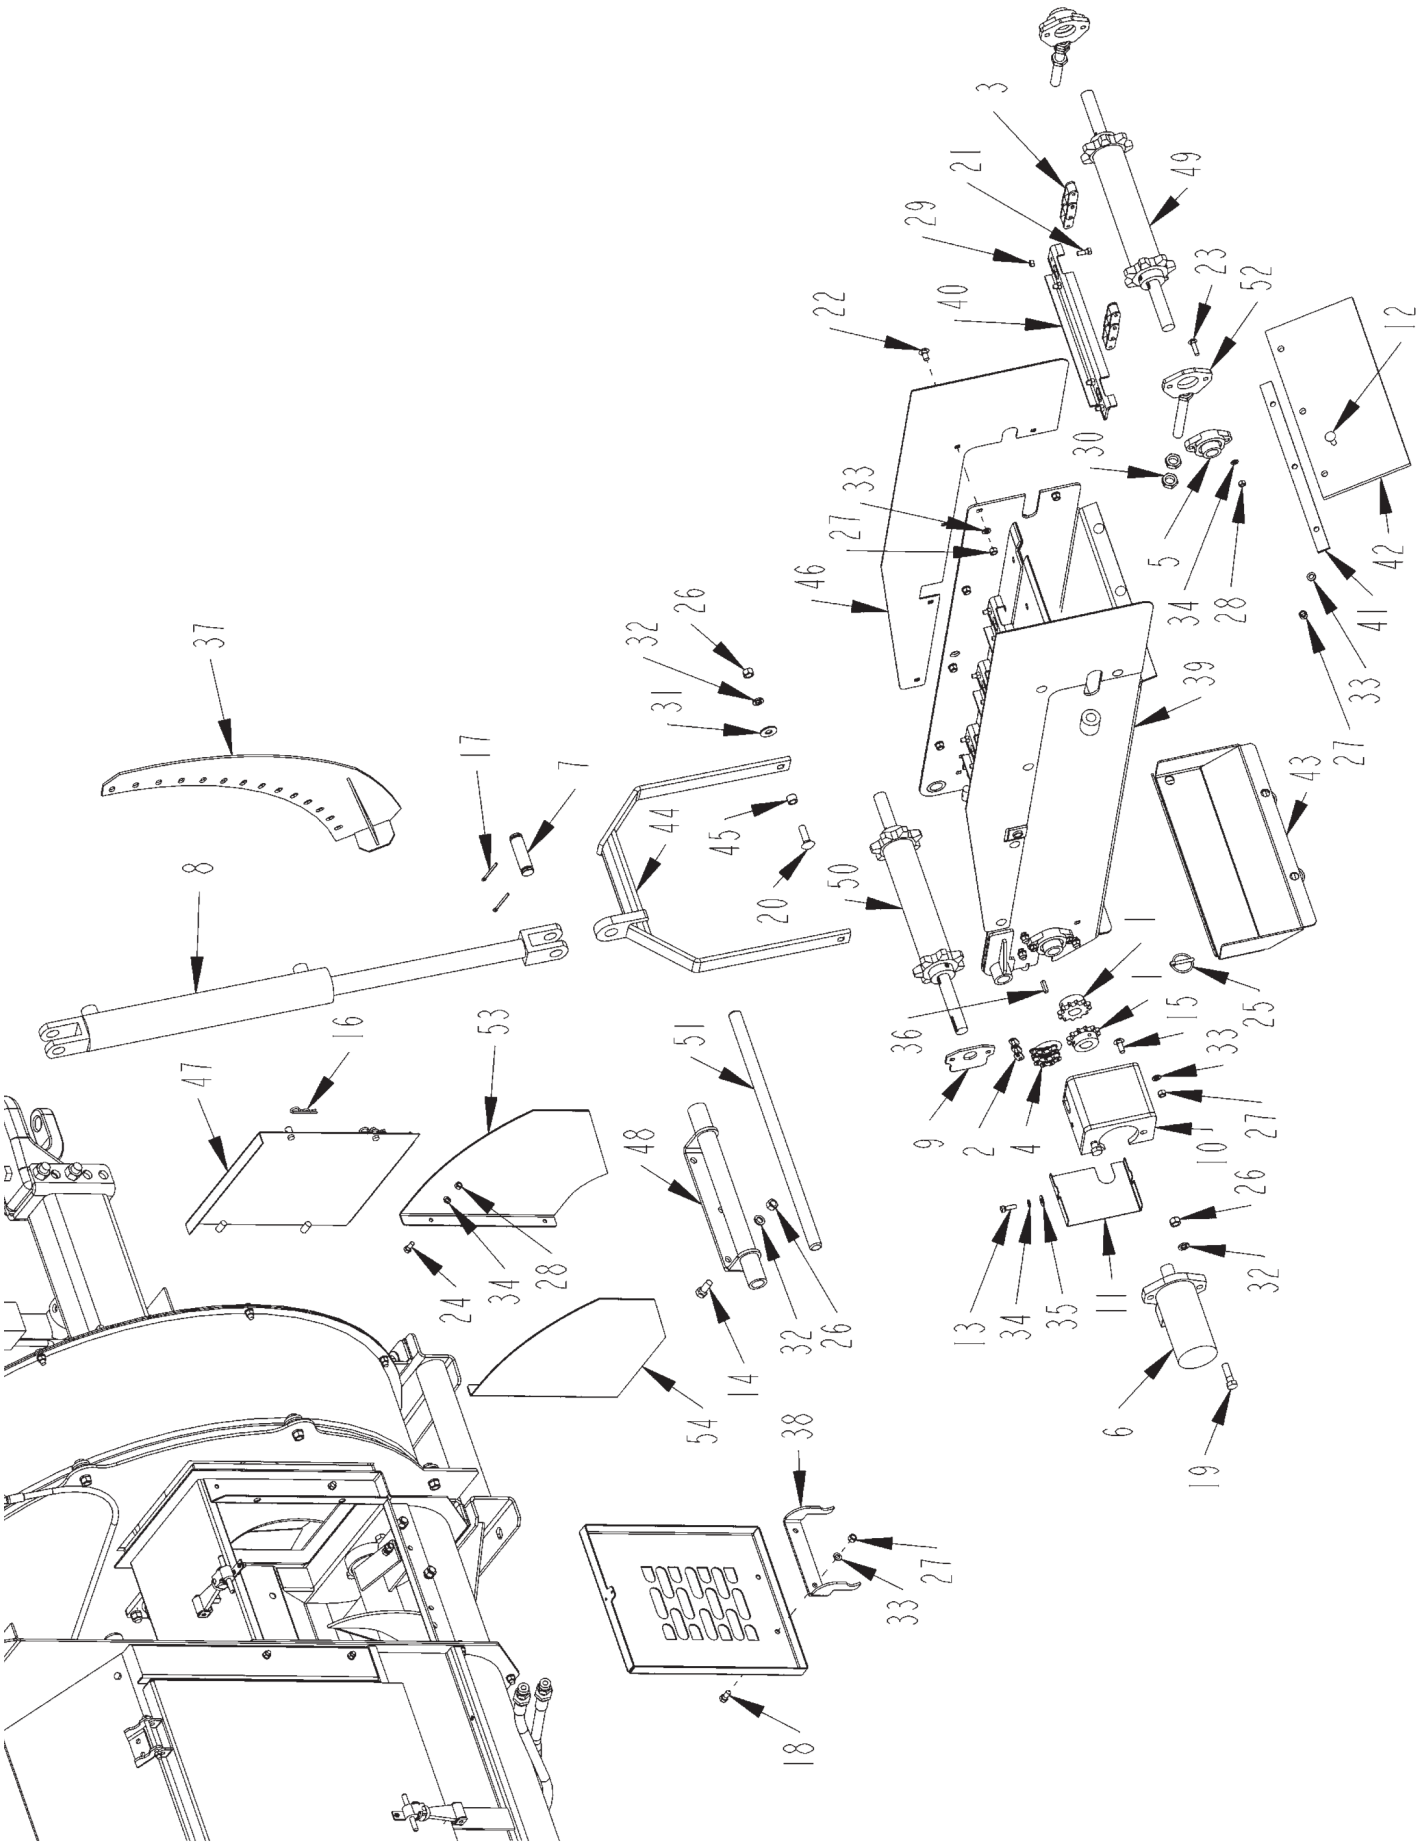


Item	Part No.	Name	Remarks	Qty	Uom
1	1000055	SPKT\50\B\12\1\1/4KW		2	EA.
2	1100099	CHAIN\50DBL\CL		1	EA
3	1100150	CHAIN\620CA\53\W/ATTCH		2	EA.
4	1100271	CHAIN\50DBL\11		1	EA
5	2000310	BRG\FLG\CAST\1\2BOLT		4	EA.
6	3900033	MTR\HYD\101-1038\14.1CI\7/8FOR		1	EA.
7	4100030	PIN 1" X 3-1/2" HYD. CYL.		2	EA.
8	4100224	CYL\HYD\2-1/2X16\1-1/2ROD\3/4OR\RED		1	EA.
9	4704327	GUARD\CNVYR		2	EA
10	4704558	MNT\MTR\CNVYR\CMF		1	EA
11	4704559	SHLD\CPLR\CNVYR		1	EA
12	4800012	BOLT\CRG\3/8X1-1/4\NC		3	EA.
13	4800013	BOLT\HEX\5/16X1		2	EA.
14	4800018	BOLT\HEX\1/2X1-1/4		3	EA.
15	4800053	BOLT\CRG\3/8X1\NC		4	EA.
16	4800107	PIN\HAIR\1/8(#9)		2	EA.
17	4800157	PIN\COT\3/16X2		4	EA
18	4800164	BOLT\HEX\3/8X3/4		2	EA
19	4800178	BOLT\HEX\1/2X1-3/4		2	EA.
20	4800201	BOLT\CRG\1/2X1-3/4\NC\GR5		2	EA
21	4800393	BOLT\HEX\5/16X7/8\GR8		36	EA.
22	4800394	BOLT\CRG\3/8X3/4\NC		10	EA
23	4800474	BOLT\CRG\5/16X1-1/4\NC		8	EA.
24	4800643	BOLT\HEX\5/16X3/4		4	EA.
25	4801236	PIN\LYNCH\1/4X1-9/16\ZN_PLT		4	EA
26	4900001	NUT\HEX\1/2\NC		7	EA.
27	4900002	NUT\HEX\3/8\NC		17	EA.
28	4900003	NUT\HEX\5/16\NC		17	EA.
29	4900099	NUT\TPLCK\5/16\GR8\NC		36	EA.
30	4900104	NUT\JAM\3/4\NC		4	EA.
31	5000004	WASH\FLAT\1/2		2	EA.
32	5000006	WASH\LOCK\1/2		7	EA.
33	5000019	WASH\LOCK\3/8		17	EA.
34	5000022	WASH\LOCK\5/16		14	EA.
35	5000023	WASH\FLAT\5/16		2	EA.
36	6200010	KEY\SQ\1/4X1		1	EA.
37	8100733	BRKT\STOP\FAN		1	EA
38	8101335	PRICE ON REQUEST		1	EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
39	8101798	FRM\CNVYR\BUNK		1	EA
40	8101799	SLAT\CHAIN\EXT\CNVYR\2564		9	EA
41	8101800	FLAT\WIPER\CNVYR\2564		1	EA
42	8101801	BELT\DEFL\EXT\CNVYR\2564		1	EA
43	8101802	SH\COVER\CNVYR\2564		1	EA
44	8101804	LINK\MNT\CYL\CNVYR		1	EA
45	8101805	PRICE ON REQUEST		2	EA
46	8101808	EXT\SIDE\CNVYR		2	EA
47	8101809	END\WALL\XTNSN		1	EA
48	8101812	PRICE ON REQUEST		1	EA
49	8101815	IDLER\ASSYICNVYR	Includes 1000089, 4800143, 6200005 & 8101813	1	EA
	1000089	SPKT\662\7\1\1/4KW\DR	10% Discount @50pc, ORDER 4800143 SET SCREW	2	EA.
	4800143	SCR\SET\ALN\3/8X3/8\NC		4	EA.
	6200005	KEY\SQ\1/4X1-1/2		2	EA,
	8101813	IDLER\WELD\CNVYR\2564		1	EA
50	8101816	PRICE ON REQUEST	Includes 1000089, 4800143, 6200005 & 8101814	1	EA
	1000089	SPKT\662\7\1\1/4KW\DR	10% Discount @50pc, ORDER 4800143 SET SCREW	2	EA.
	4800143	SCR\SET\ALN\3/8X3/8\NC		4	EA.
	6200005	KEY\SQ\1/4X1-1/2		2	EA,
	8101814	PRICE ON REQUEST		1	EA
51	8101818	PIN/HINGE\CNVYR		1	EA
52	8101831	PRICE ON REQUEST		2	EA
53	8101832	PRICE ON REQUEST		1	EA
54	8101833	PRICE ON REQUEST		1	EA

2564 Balebuster Parts Reference

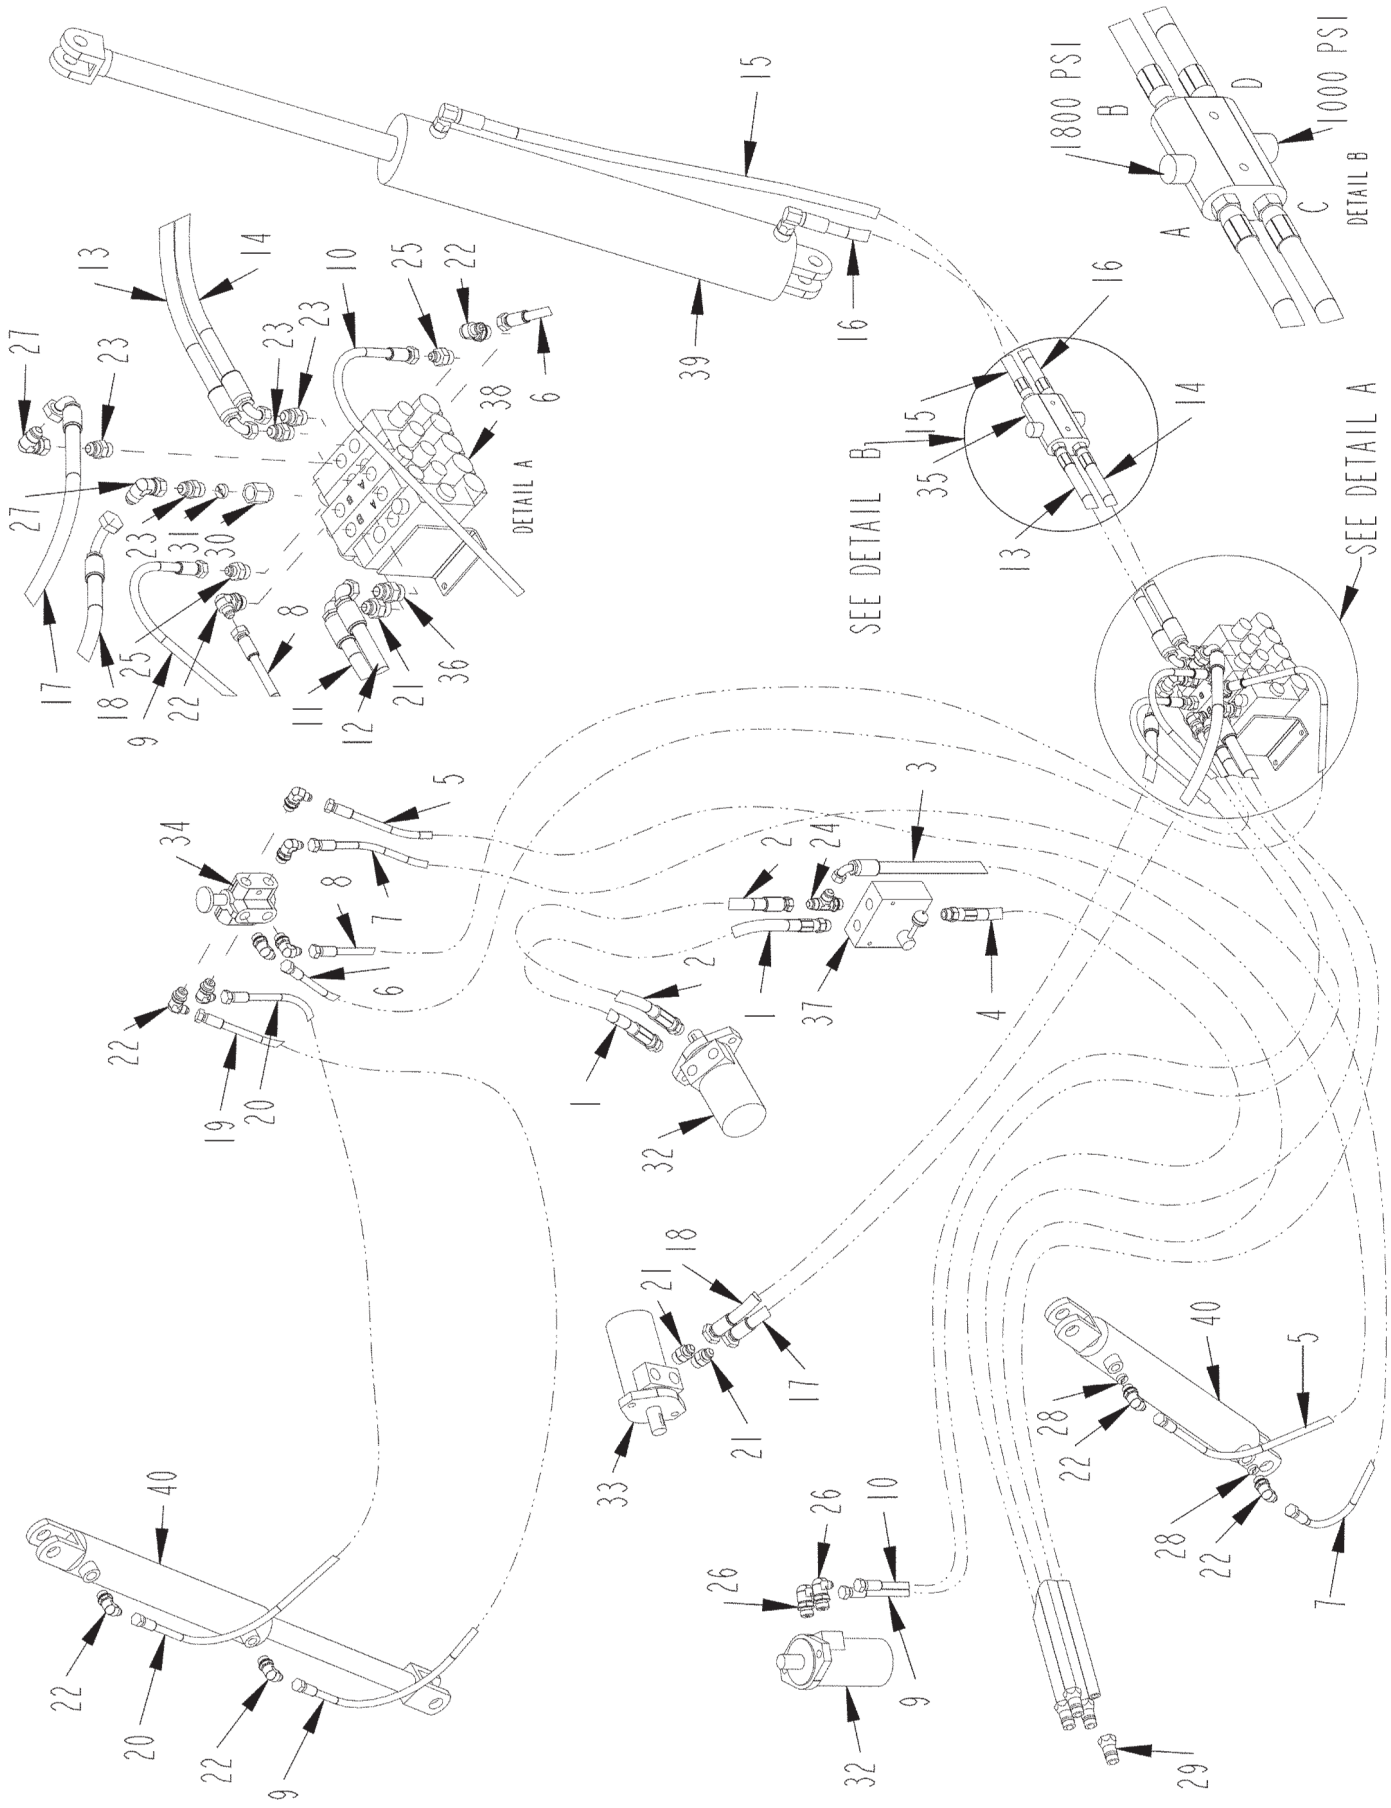

HYDRAULICS ASSEMBLY WITH BUNK CONVEYOR OPTION

Item	Part No.	Name	Remarks	Qty	Uom
1	3700741	HOSE\HYD\1/2X24\7/8MORS>		1	EA
2	3700742	HOSE\HYD\1/2X24\7/8MORS>		1	EA
3	3700743	HOSE\HYD\1/2X155\3/4MORS>		1	EA
4	3700744	HOSE\HYD\1/2X150\3/4MORS>		1	EA
5	3700745	HOSE\HYD\1/4X90\9/16FJICX9/16FJIC		1	EA
6	3700745	HOSE\HYD\1/4X90\9/16FJICX9/16FJIC		1	EA
7	3700745	HOSE\HYD\1/4X90\9/16FJICX9/16FJIC		1	EA
8	3700746	HOSE\HYD\1/4X75\9/16FJIC>		1	EA
9	3700747	HOSE\HYD\1/4X126\9/16FJICX9/16FJIC		1	EA.
10	3700747	HOSE\HYD\1/4X126\9/16FJICX9/16FJIC		1	EA.
11	3700748	HOSE\HYD\1/2X162\3/4MORSX3/4FJIC90		1	EA.
12	3700749	HOSE\HYD\1/2X162\3/4MORSX7/8FJIC90		1	EA.
13	3700750	HOSE\HYD\1/2X36\3/4MORS>		1	EA
14	3700750	HOSE\HYD\1/2X36\3/4MORS>		1	EA
15	3700752	HOSE\HYD\1/2X70\3/4MORSX3/4MORS_90DEG		1	EA.
16	3700753	HOSE\HYD\1/2X44\3/4MORSX3/4MORS_90DEG		1	EA.
17	3701026	HOSE\HYD\1/2X82\3/4FJICX3/4FJIC90		1	EA
18	3701026	HOSE\HYD\1/2X82\3/4FJICX3/4FJIC90		1	EA
19	3701027	HOSE\HYD\1/4X82\9/16FJICX9/16FJIC		1	EA
20	3701028	HOSE\HYD\1/4X95\9/16FJICX9/16FJIC		1	EA.
21	3800328	FTG\7/8MORX3/4MJIC\ADPT		3	EA.
22	3800453	FTG\3/4MORX9/16MJIC\90		12	EA.
23	3800477	FTG\3/4MORX3/4MJIC\ADPT		4	EA.
24	3800483	FTG\3/4MORX3/4MJICX3/4MJIC\RUN;TEE		1	EA.
25	3800530	FTG\3/4MORX9/16MJIC\ST		2	EA.
26	3800538	FTG\7/8MORX9/16MJIC\90		2	EA.
27	3800546	FTG\3/4MJICX3/4FJIC\90\SW		2	EA
28	3800683	FTG\3/4MOR\ORFICE\0.0490"		2	EA.
29	3800694	FTG\3/4FOR\QUICK;CPLR\FEMALE		4	EA.
30	3800944	FTG\3/4MORX3/4FOR		1	EA
31	3800945	FTG\3/4MOR\ORIFICE\0.093		1	EA
32	3900025	MOTOR\HYD\17.9\H\AMNT\7/8FOR\1SHFT		2	EA.
33	3900033	MTR\HYD\101-1038\14.1CI\7/8FOR		1	EA.
34	4000144	VALVE\HYD\SEL\OR\DS-08-20		1	EA
35	4000234	VALVE\RELIEF\CROSS\RC13BB		1	EA.
	4000417	VALVE\HYD\RELF\1000PSI>			EA
	4000418	VALVE\HYD\RFLF\1800PSI>			EA

This page intentionally left blank

Item	Part No.	Name	Remarks	Qty	Uom
36	4000288	FTG\7/8MORX7/8MJIC\ST\CHCK		1	EA.
37	4000331	VALVE\FLW-CRTL\#8FOR		1	EA.
38	4000479	VLV\HYD\BRAND\4-BANK		1	EA
39	4100273	CYL\HYD\4-1/2X24\1-3/4 -CANADIAN TOOL & DIE		1	EA.
	4100223	KIT\SEAL\4-1/2X1-3/4RD\CTD			EA
	4100272	ROD\YOKE\CYL\HYD\24\1-3/4\			EA
39A	4100324	Order 4100273		1	EA.
	4100214	KIT\SEAL\CYL\HYD\4-1/2X24\1-3/4" ROD			EA
40	4100224	CYL\HYD\2-1/2X16\1-1/2ROD\3/4OR\RED		2	EA.
	4100235	KIT\SEAL\CYL\HYD\2-1/2X16\1-1/2RD			EA
40A	4100325	CYL\HYD\2-1/2X16\1-1/2ROD\3/4OR\RED		2	EA
	4100327	KIT\SEAL\CYL\HYD\2-1/2X16\1-1/2"			EA
NS	7501361	CAP\YELLOW\DUST\HOSE\HYD		2	EA.
NS	7501362	CAP\RED\DUST\HOSE\HYD		2	EA.

2564 Balebuster Parts Reference




1.



2.



3.

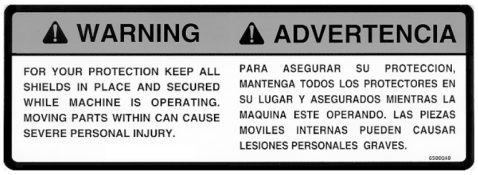

4.



6.




7.



8.




9.

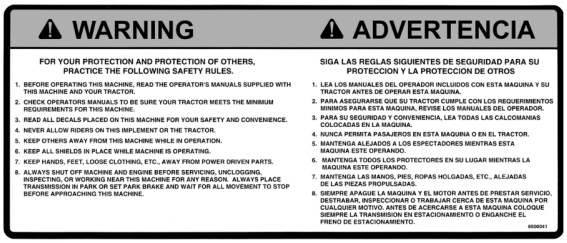


5.

HAYBUSTER


10.

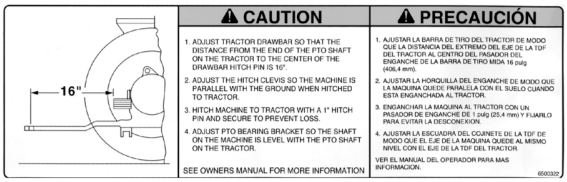


11.



12.

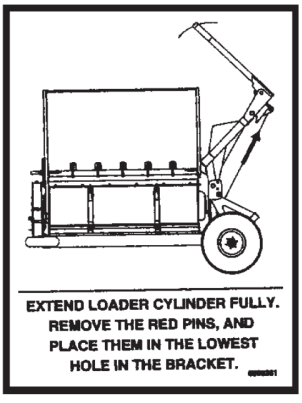

13.



14.



15.


16.




17.

Item	Part No.	Name	Remarks	Qty	Uom
1	6500034	DECAL\DNGR\FLYG;HAY\RACK		2	EA.
2	6500035	DECAL\DNGR\ROTATNG;FLAILS		1	EA.
3	6500036	DECAL\INFO\BALE;ROTATION>		1	EA.
4	6500040	DECAL\WARN\SHIELD\PROT		1	EA.
5	6500041	DECAL\WARN\PROTECTION		1	EA.
6	6500085	DECAL\DNGR\ROTATNG;DR-LNE		1	EA.
7	6500119	DECAL\CAUT\KEEP;HNDS;CLER		1	EA
8	6500253	DECAL\INFO\FLUID;LEVEL\INDICATOR		1	EA
9	6500303	DECAL\INFO\SLUGBAR\ADJ		1	EA
10	6500304	DECAL\LOGO\HYBST\1-3/4\W/		1	EA.
11	6500322	DECAL\CAUTION\ADJ.DRAWBAR		1	EA.
12	6500354	DECAL\BOLTS\FLAIL		1	EA
13	6500361	DECAL\PIN\LOADER\2650		2	EA.
14	6500422	DECAL\LOGO\2564W/STRIP		2	EA
15	6500434	DECAL\2X9\RED\REFCT		5	EA.
16	6500435	DECAL\2X9\AMBER\REFCT		3	EA.
17	6500366	DECAL\SMV		1	EA
17a	7501353	SIGN\SMV\PLSTC-BCKNG			EA.
	7500092	Yellow Paint			EA.
	7500091	Yellow Paint			EA.
	7500078	Red Spray Paint			EA.
	7500105	Red Paint			EA.
	7500104	Red Paint			EA.


2564 Balebuster Parts Reference

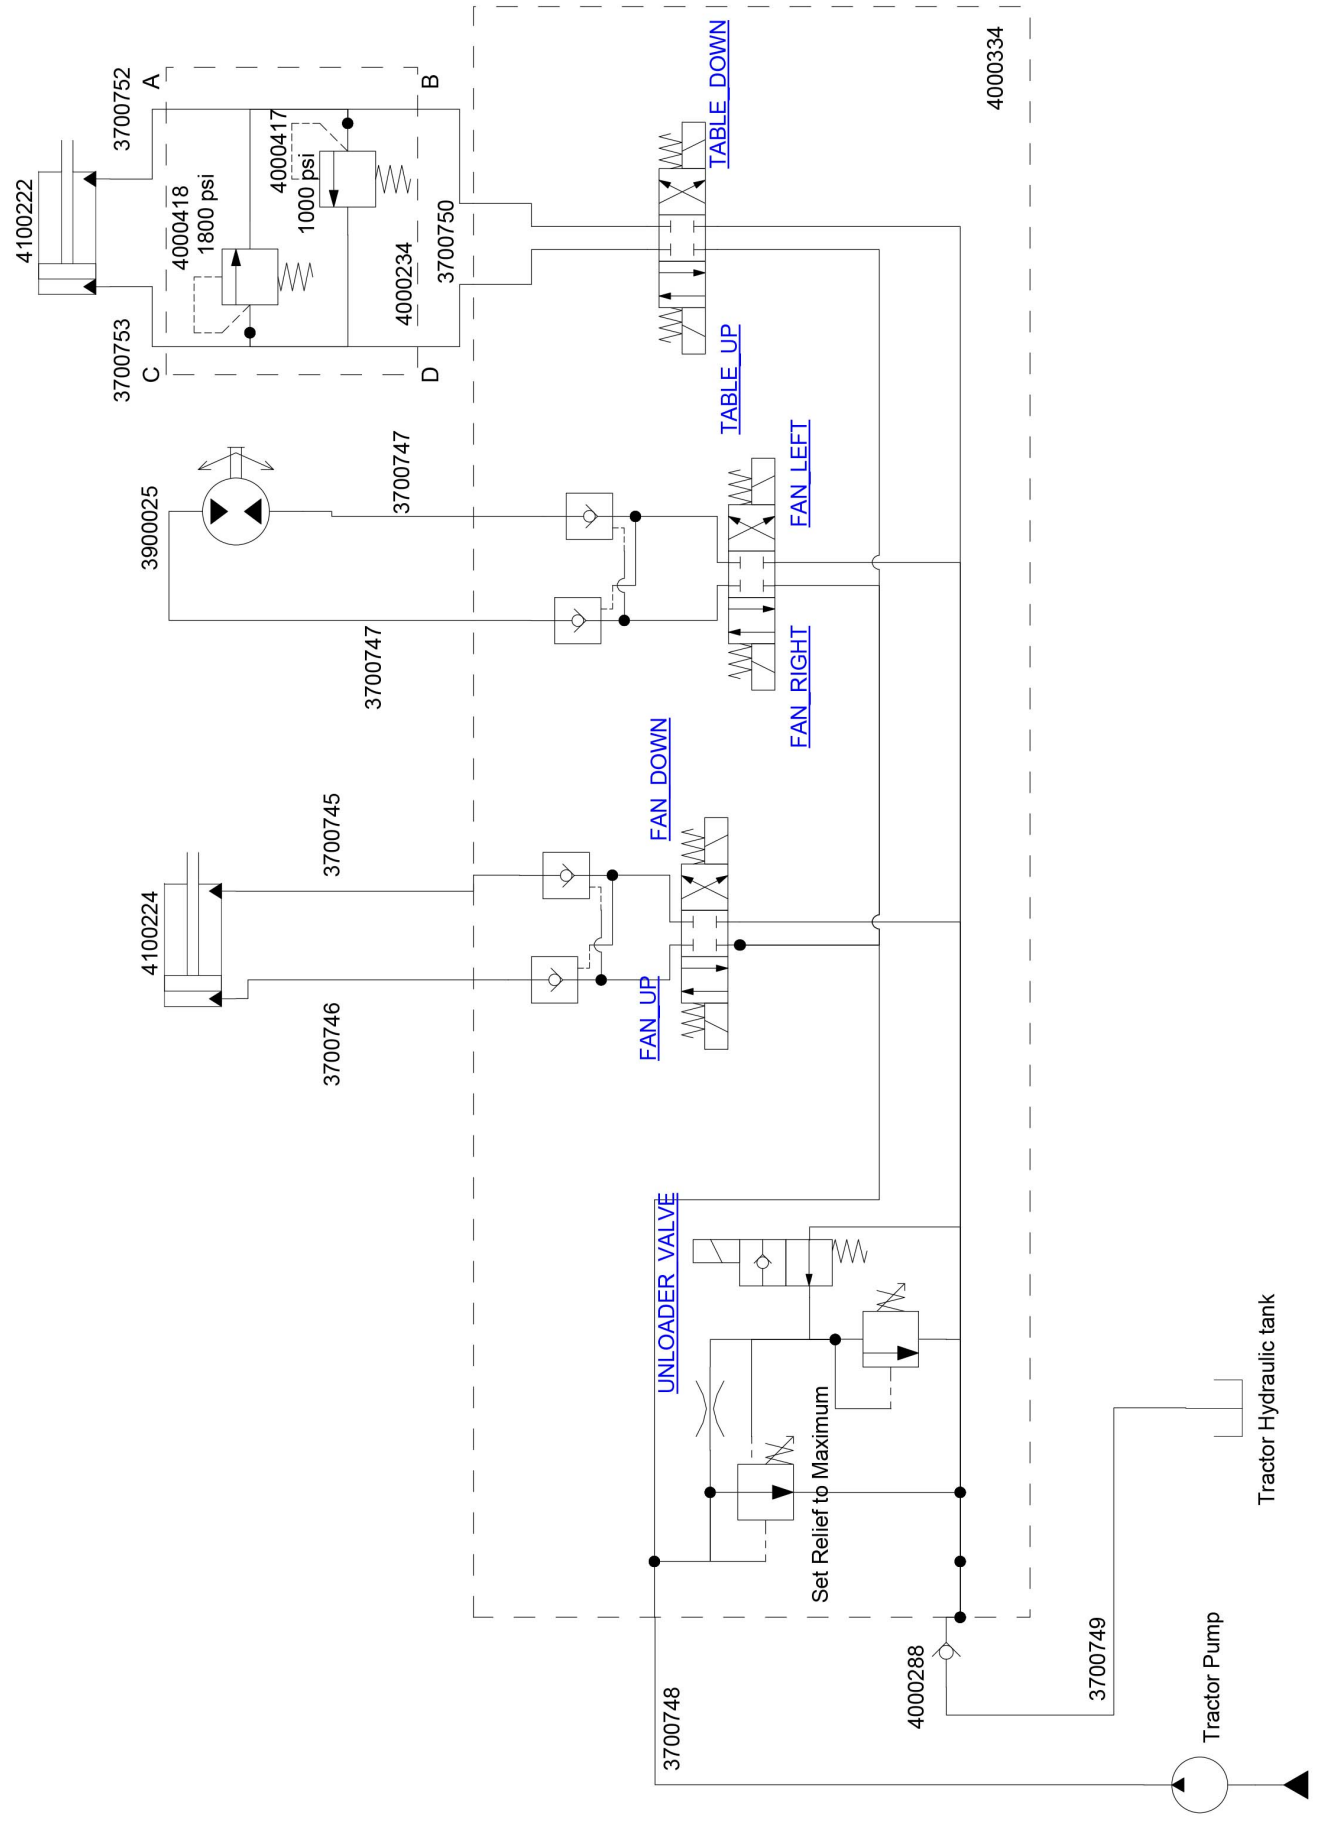


2564 Balebuster Parts Reference

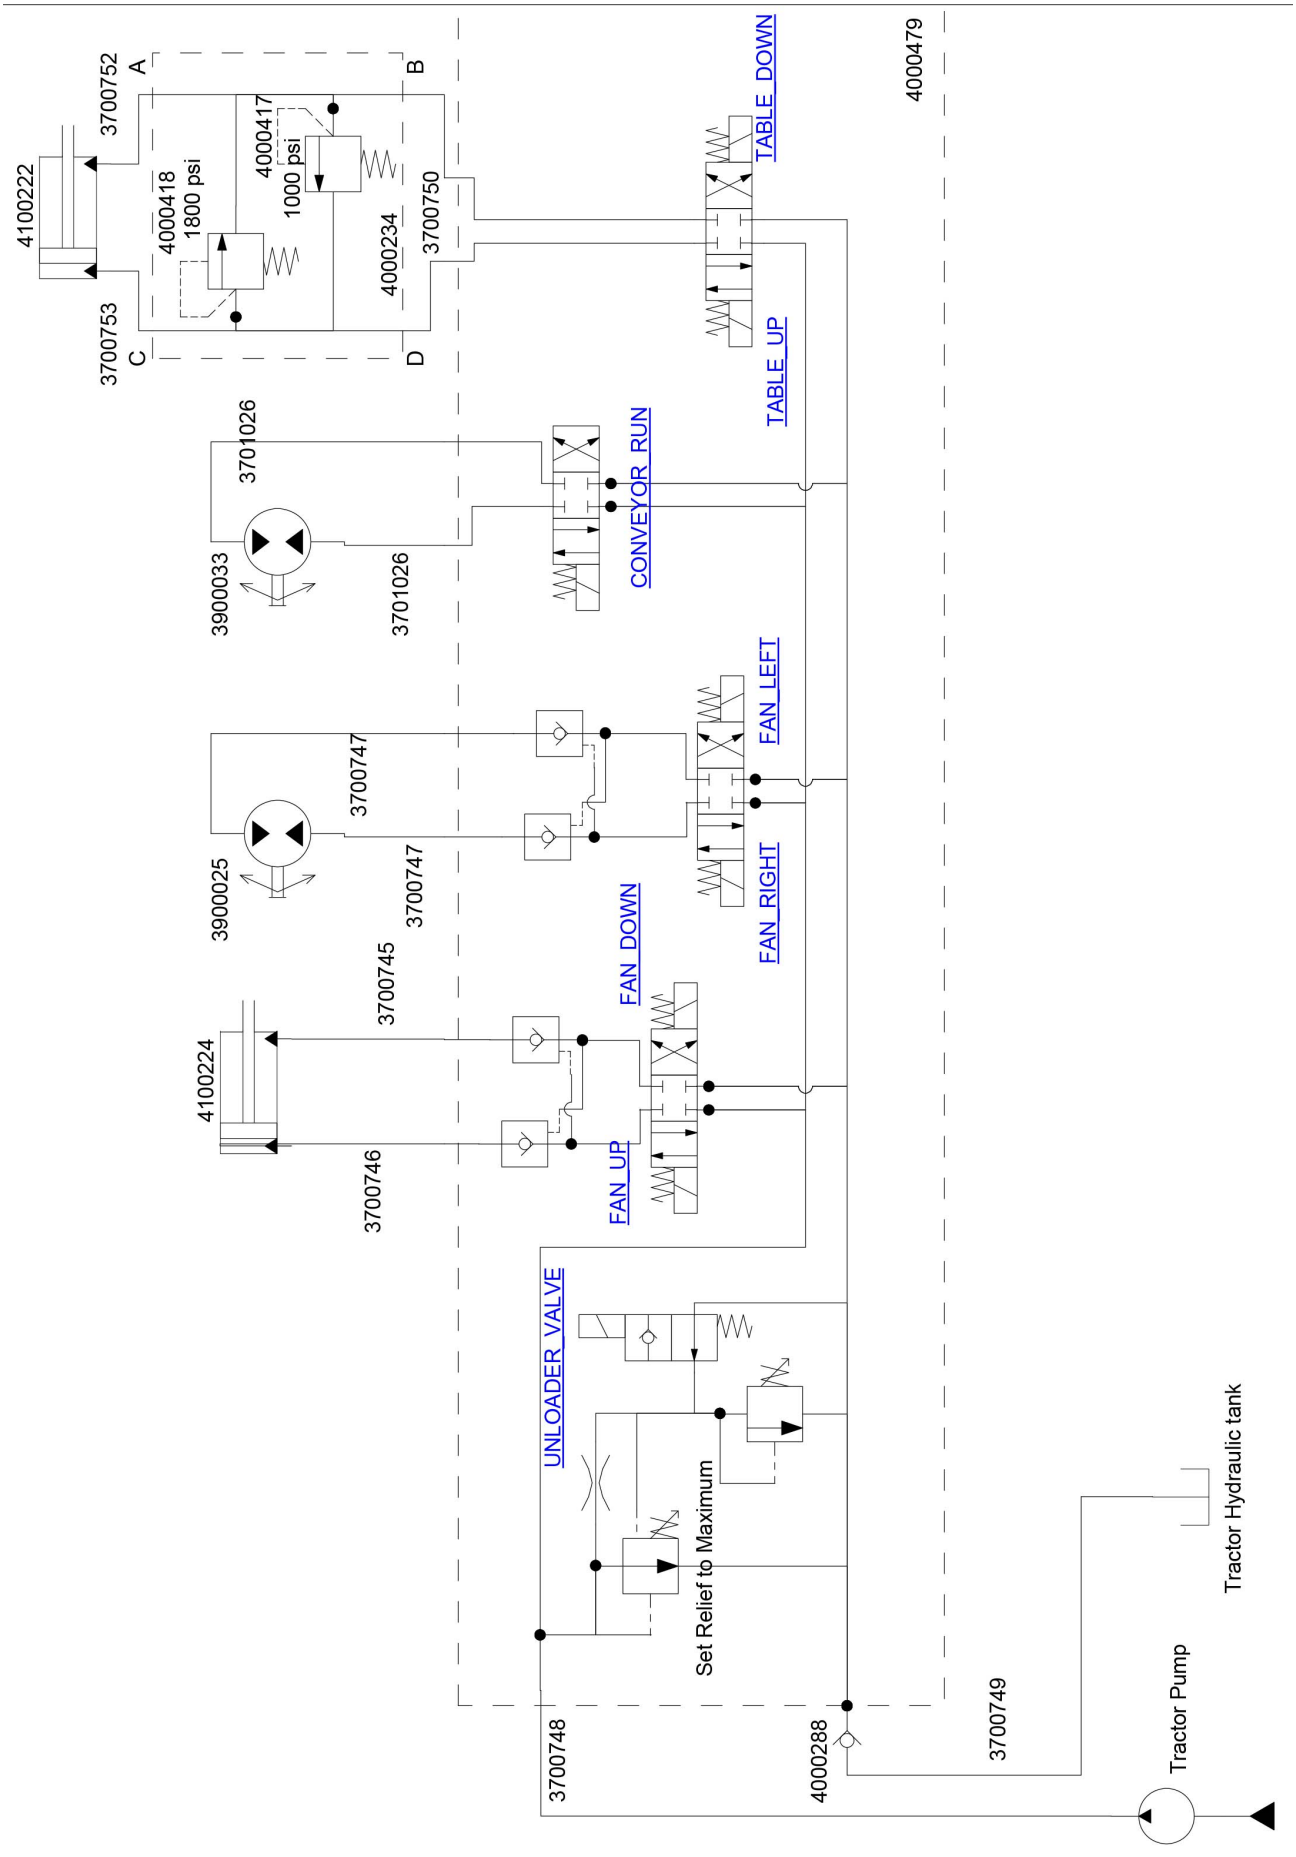


2564 Balebuster Parts Reference

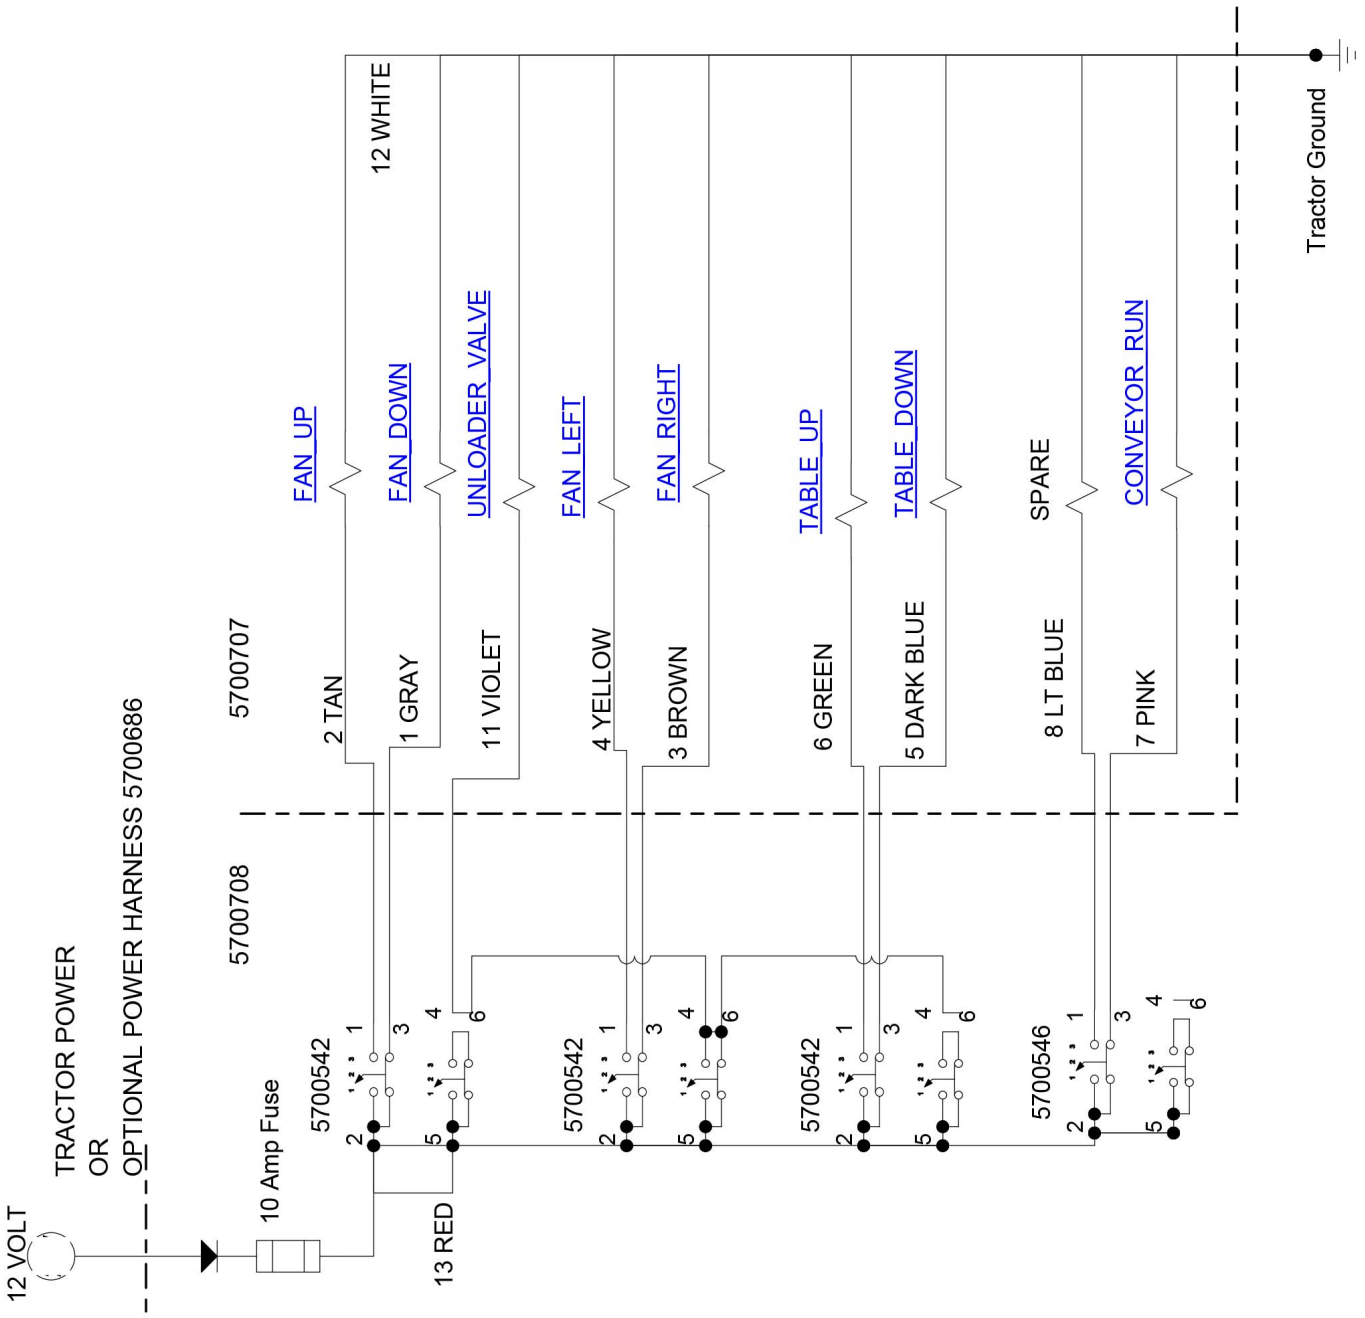


2564 Balebuster Parts Reference

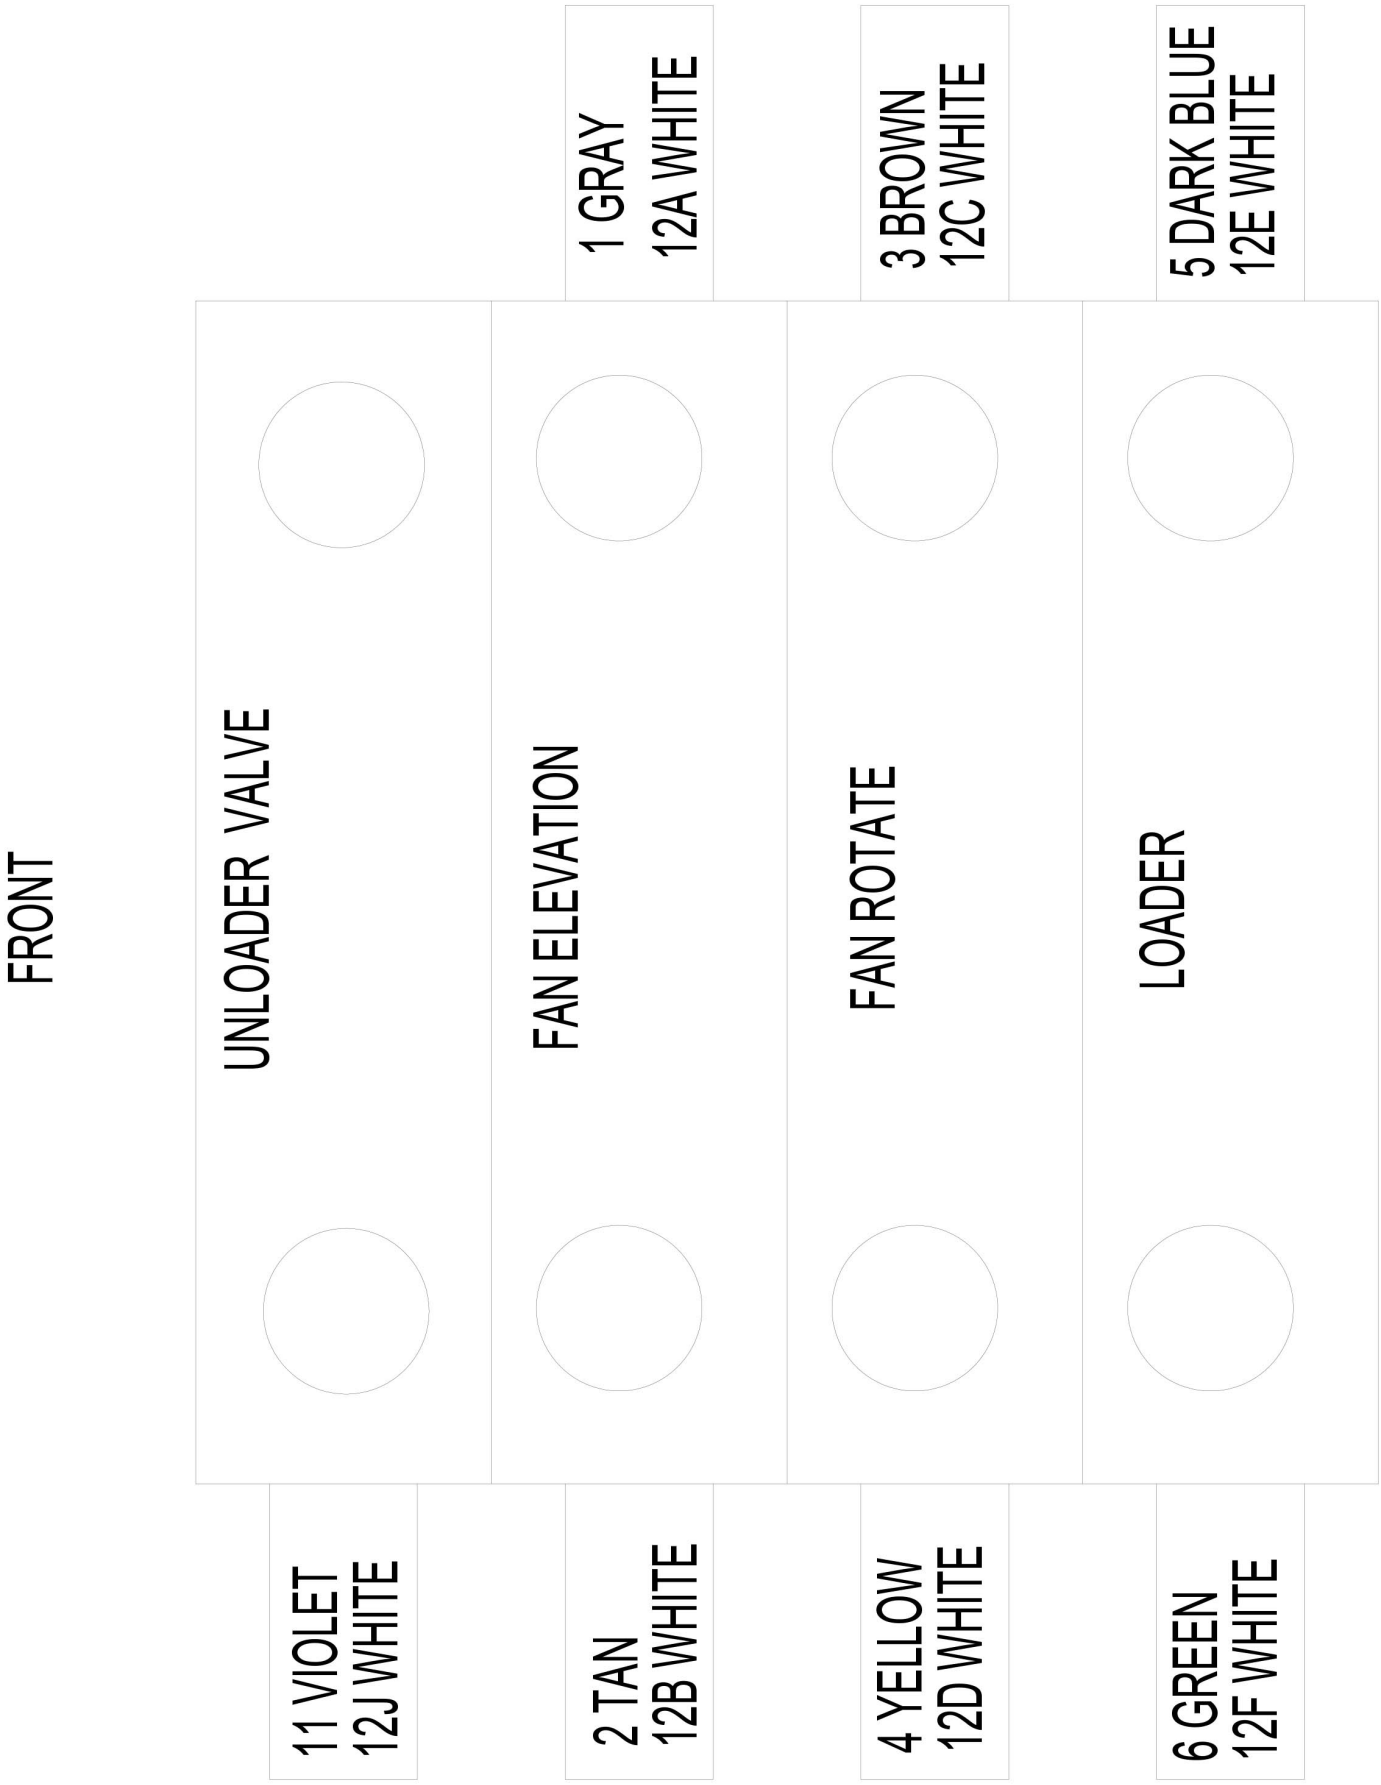


2564 Balebuster Parts Reference

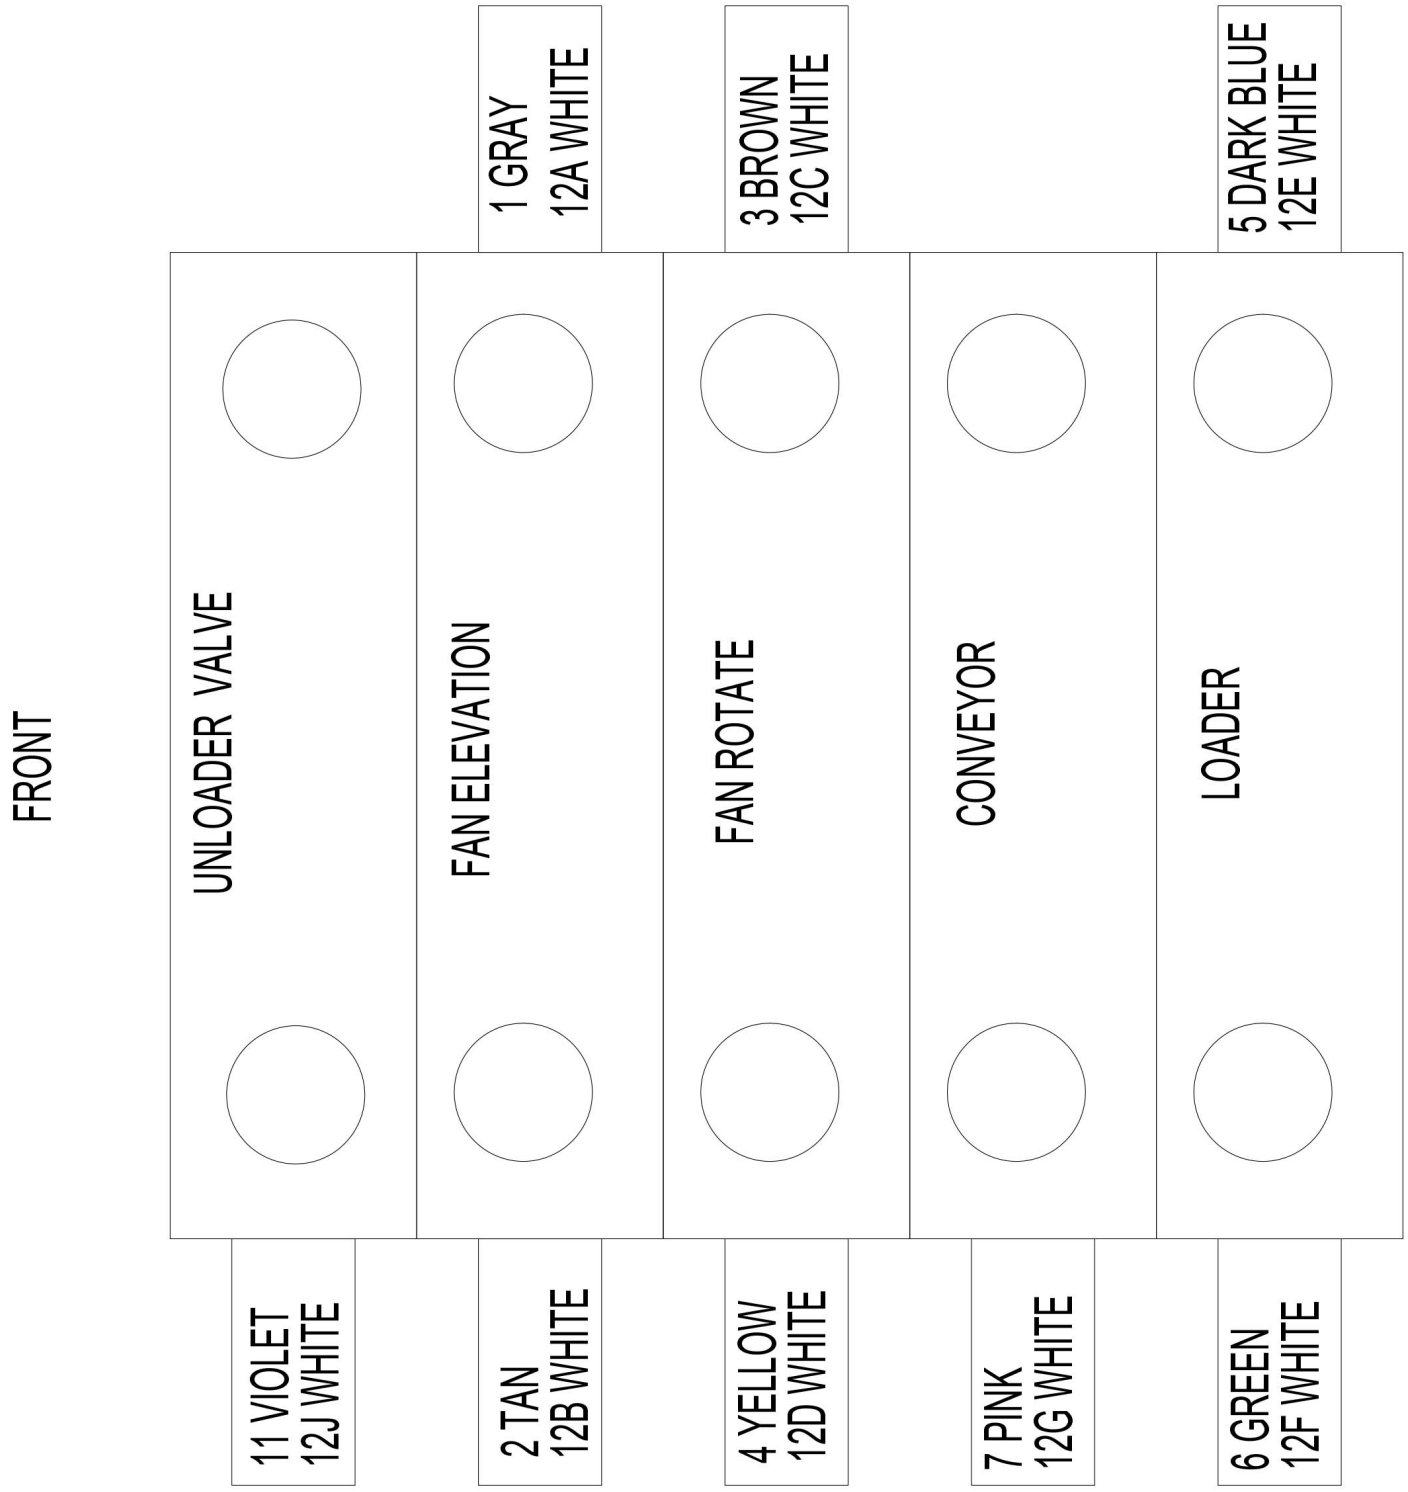

2564 Balebuster Parts Reference

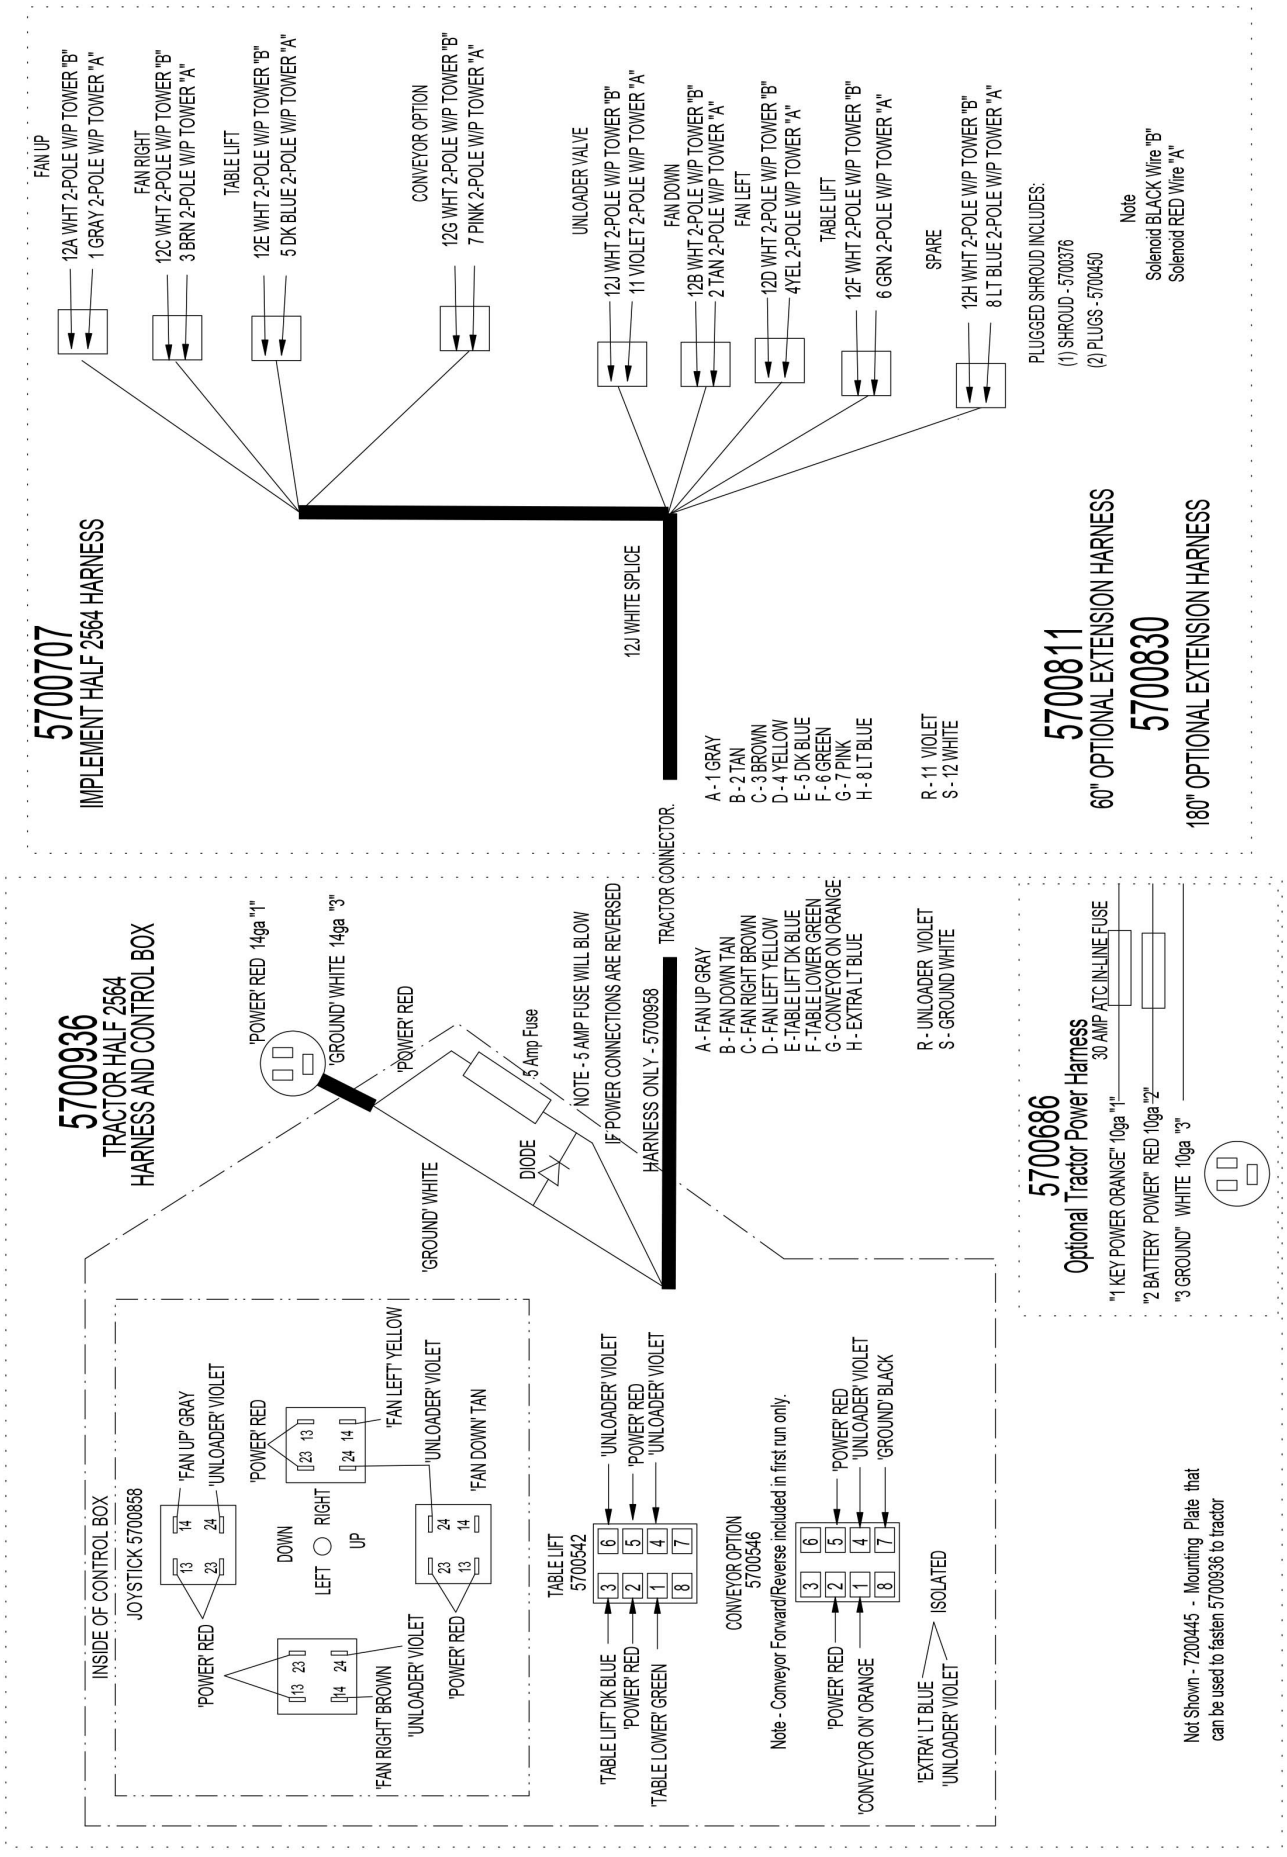

2564 Balebuster Parts Reference

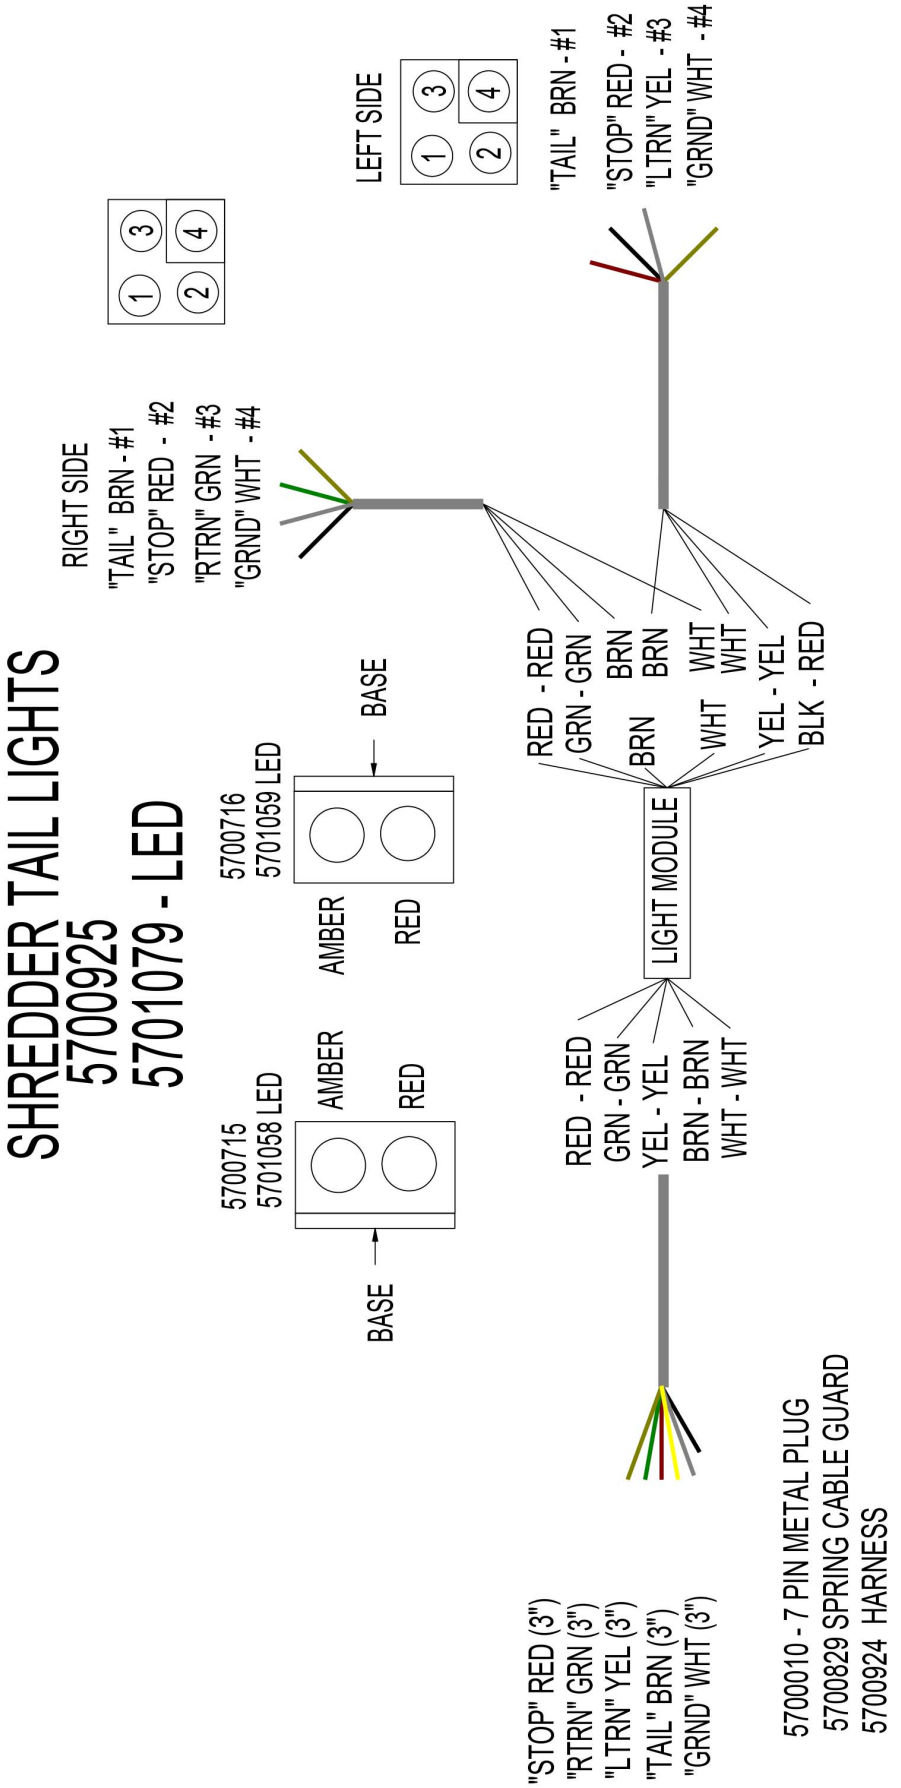

Delivery Report

Delivery Date	Machine Model	Serial No.	
Dealer Name		Engine Serial No.	
Dealer Address		Invoice No.	
Dealer City		State	Zip
Dealer Email		Phone	

Customer Name		
Customer Address	Phone	
Customer City	State	Zip
Customer Email		


The following items are to be checked as they are explained to the owner / operator at the time of delivery

- ☐ Explain the delivery packet and present the operators manual(s) to the owner / operator.
- ☐ Review and inspect the machine safety signs (decals) and the operator's manual.
- ☐ Advise the owner that the dealer is the source to obtain operator training, and information regarding the correct application of the machine to the job, as well as service and warranty information.
- ☐ Explain the capabilities and restrictions of the machine as it applies to the owner's application as defined in the operator's manual.
- ☐ Explain the operation of the controls and start up and shut down procedures of the engine and power transmission components of the machine.
- ☐ Explain rated lift or carrying capacity and loading and unloading procedures of the machine to maintain safety and stability of the machine.
- ☐ Explain proper folding, unfolding, and transporting procedures to the owner / operator.
- ☐ Explain recommended fueling procedures on engine equipped machines.
- ☐ Explain proper loading and unloading of materials from the tub or grinding chamber of the machine.
- ☐ Objects thrown by shredding or spinning rotors may represent a hazard to personnel and property in the area. Minimize risks by planning and by keeping personnel and property clear of hazaard area.
- ☐ Explain the availability and use of the tub cover to further reduce risks of thrown objects.
- ☐ Review maintenance and lubrication procedures with the operator / maintenance person as defined in the operators manual.
- ☐ Advise never to use the machine in an environment with explosive or flammable materials present.
- ☐ Explain warranty policy and limitations to the owner / operator.

⚠ Warning

Misuse of the machine or modification or removal of the guards, safety devices, or control interlocks can cause injury or death.

The above delivery information has been explained to me. I understand the operation and maintenance of this machine. I also acknowledge the warranty conditions and limitations as outlined.	
Owner / Operator Signature	**Date**
Dealer Representative Signature	**Date**

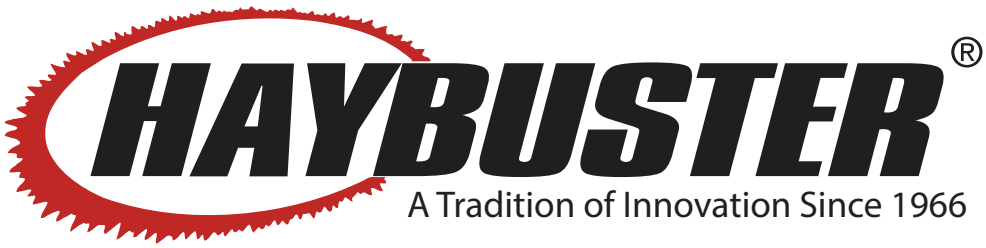
HAYBUSTER®
A Tradition of Innovation Since 1966