

H-1030TM ***PTO Driven Tub Grinder***



Operating Instructions



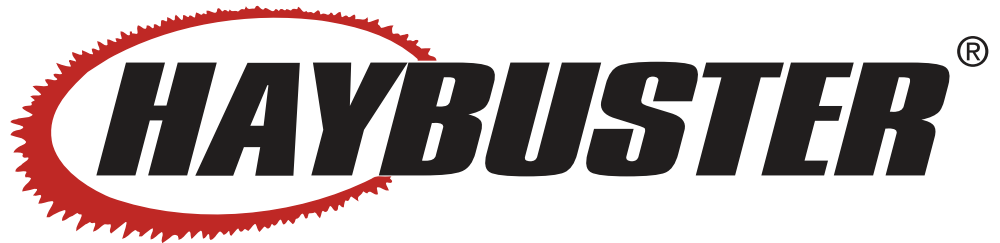
and Parts Reference



0500154 • November 2025

DuraTech Industries International Inc.
PO Box 1940, Jamestown, ND 58402-1940
Tel: (701)-252-4601
www.duratechindustries.net www.haybusters.com





H-1030TM ***PTO Driven Tub Grinder***

Operating Instructions



and Parts Reference

DuraTech Industries International Inc. (DuraTech Industries) has made every effort to assure that this manual completely and accurately describes the operation and maintenance of the H-1030 PTO Driven Tub GrinderTM as of the date of publication. DuraTech Industries reserves the right to make updates to the machine from time to time. Even in the event of such updates, you should still find this manual to be appropriate for the safe operation and maintenance of your unit.


This manual, as well as materials provided by component suppliers to DuraTech Industries are all considered to be part of the information package. Every operator is required to read and understand these manuals, and they should be located within easy access for periodic review.



& are registered trademarks of DuraTech Industries International, Inc. H-1030 and BIG BITE with logo are trademarks of DuraTech Industries International, Inc.







FOREWORD



Foreword

All personnel must read and understand the following sections before operating the H-1030 Tub Grinder.

- Foreword and Section 1, important safety information.
- Section 2, “Machine operation,” which explains normal operation of the machine.
- Section 2.1, “Pre-Operation Inspection”.

Appropriate use of unit

The H-1030 Tilt Tub Grinder is designed to grind material into more palatable or manageable rations for your operation. It has multiple uses:

1. Grind most types of hay
 - Big round bales
 - Loose hay
 - Square bales
2. Grind most types of grain
 - Ear corn
 - Shell corn
 - High moisture corn
 - Most small grains




TABLE OF CONTENTS

3. Grind most types of crop residue
 - Stover
 - Straw
4. Grind various sizes
 - Screens are available from 1/8" to 8"
 - Combine screen sizes to get desired cut

Operator protection

As with all machinery, care needs to be taken in order to insure the safety of the operator and those in the surrounding area.



WARNING: The **OPERATOR IS RESPONSIBLE** for the safety of the operator and those in the surrounding area. Operators and those observing the operation of the H-1030 Tub Grinder are required to wear head, eye, and ear protection. No loose clothing is allowed.

Serial Number Locations

The serial number of the H-1030 can be found in two locations. The first location is the serial number decal located on the right hand side of the machine by the operators manual canister. The second is stamped into the hitch frame by the hydraulic hose minder.

The model number and serial number are required when communicating with the DuraTech's service and/or parts departments.



← **decal location of serial number**



↑ **stamped location of serial number**




TABLE OF CONTENTS

Part 1: Operating Instructions	1
Introduction	2
Purpose	2
Section 1: Safety.....	4
1.1 Safety-alert symbols.....	4
1.2 Operator - personal equipment.....	6
1.3 Machine safety labels	7
1.4 Thrown objects and operator safety	11
1.5 Shielding	12
1.6 Personal protection equipment.....	12
1.7 Safety Review	13
1.8 Fire Prevention	15
1.9 Fire Extinguishers:	16
1.10 Towing	17
1.11 Service and maintenance.....	18
Section 2: Operation	19
2.1 Pre-Operating Inspection	19
2.2 Introduction to the machine	21
2.2.1 Description of the H-1030 Tub Grinder	21
2.2.2 Overview of Operator's Controls (For S.N. Up to 1018012030).....	22
2.2.2a Overview of Operator's Controls (For S.N. 1020012130 & Up).....	22
2.2.3 Electronic governor (For S.N. Up to 1018012030)	23
2.2.3a Electronic governor (For S.N. 1020012130 & Up)	28
2.2.4 Rotor.....	33
2.2.5 Screens	34
2.2.6 Tub.....	34
2.2.7 Slug Buster and Mill Grate	34
2.2.8 Conveyors, Lifting and Folding	35
2.2.9 Hydraulic Tilt Platform	35
2.3 Machine Operation	37
2.3.1 Tractor Set Up	37
2.3.2 How to hook up to tractor	38
2.3.3 How to disconnect from tractor	38
2.3.4 How to operate machine as a unit	39
2.4 Shutdown procedures.....	41
2.4.1 Normal Shutdown Procedure	41
2.4.2 Emergency Shutdown Procedure	41





TABLE OF CONTENTS

2.5	Storage.....	41
2.5.1	Preparing for storage	41
2.5.2	Removing from storage	42
2.6	Road Transport.....	42
2.6.1	Set up to transport	42
2.6.2	Change back to operate	42
2.7	Raising the Tub Platform	43
2.8	Operation of the Electronic Governor (For S.N. Up to 1018012030)	44
2.8a	Operation of the Electronic Governor (For S.N. 1020012130 and Up).....	50
2.9	Adjusting the conveyor belt tension	56
2.10	Adjusting the conveyor belt tracking	57
2.11	Adjusting tub chain tension	58
2.12	Main drive belt adjustment	59
2.13	Sensor test	61
2.14	Belly auger drain covers	61
Section 3: General Maintenance		62
3.1	Lubrication	63
3.2	Hydraulic system.....	69
3.3	Screens	70
3.4	Hammermill maintenance	71
3.5	Balanced Hammer maintenance and replacement (For S.N. Up to 107007030)	72
3.5A	Balanced Hammer Maintenance and Replacements (For S.N. 1018007130 & UP)	76
3.6	Dodge Rotor bearing installation	79
3.7	Cleaning the display unit	81
Section 4: Troubleshooting the H-1030		82
4.1	Control parameters for electronic governor	82
4.1.1	Monitor parameters for electronic governor	83
4.2	Fault Codes.....	84
4.3	General Troubleshooting.....	85
Appendix A: Warranty		86
Appendix B: H-1030 Specifications		87
Appendix C: Required for operation		88

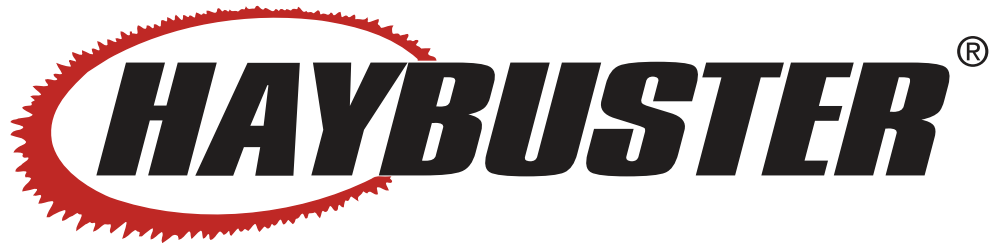

H-1030TM ***PTO Driven Tub Grinder***

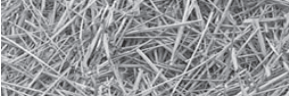
Operating Instructions

DuraTech Industries International Inc. (DuraTech Industries) has made every effort to assure that this manual completely and accurately describes the operation and maintenance of the H-1030 PTO Driven Tub GrinderTM as of the date of publication. DuraTech Industries reserves the right to make updates to the machine from time to time. Even in the event of such updates, you should still find this manual to be appropriate for the safe operation and maintenance of your unit.

This manual, as well as materials provided by component suppliers to DuraTech Industries are all considered to be part of the information package. Every operator is required to read and understand these manuals, and they should be located within easy access for periodic review.



& are registered trademarks of DuraTech Industries International, Inc. H-1030 and BIG BITE with logo are trademarks of DuraTech Industries International, Inc.



Introduction

The H-1030 Tub Grinder is designed to grind material into more palatable or manageable rations for your operation. It has multiple uses:

1. Grind most types of hay
 - Big round bales
 - Loose hay
 - Square bales
2. Grind most types of grain
 - Ear corn
 - Shell corn
 - High moisture corn
 - Most small grains
3. Grind most types of crop residue
 - Stover
 - Straw
4. Grind various sizes
 - Screens are available from 1/8" to 8"
 - Combine screen sizes to get desired cut

To avoid possible damage to the machine and risk of injury to the operator, consult with a DuraTech Industries International, Inc. (DuraTech Industries) representative before attempting to shred materials other than livestock forage.

Purpose


The purpose of this owner's manual is to explain maintenance requirements and routine adjustments for the most efficient operation of your H-1030 Tub Grinder. There is also a trouble shooting section that may help in case of problems in the field. Any information not covered in this manual may be obtained from your dealer.



Special Note: When reference is made as to front, rear, left hand, or right hand of this machine, the reference is always made from standing at the rear end of the machine and looking toward the hitch. Always use serial number and model number when referring to parts or problems. Please obtain your serial number and write it below for your future reference.

MODEL: H-1030

SERIAL NO. _____



How to use this manual

Manual organization

This manual is organized into the following parts:

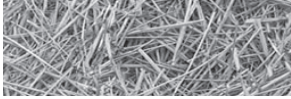
- **Part 1:** Operating Instructions
 - **Section 1:** Safety decals, safety instructions and information
 - **Section 2:** Describes the purposes of each part, and safe operating procedures.
 - **Section 3:** Describes how to maintain the H-1030 Tub Grinder.
 - **Section 4:** Describes how to trouble shoot problems with the H-1030 Tub Grinder.
- **Part 2:** Part's reference contains diagrams of each assembly, with the part number of each part. A key on the same or facing page contains a description of the part and the quantity used.

Dealer responsibilities

- Perform a daily pre-operation inspection as described in Section 2, "Operation."
- Upon delivery of the unit to the customer, it is your responsibility to conduct a training session on the safe operation of the unit for the primary operator(s). You must also conduct a "walk-around" inspection of all safety instructional decals on the machine itself. Decals are illustrated in **Part 2: Parts Reference**.
- Complete and return the Warranty Registration postcard. DuraTech Industries must receive this form before activating the warranty. Appendix A provides details of the warranty.

Operator responsibilities

- Note the important safety information in the Foreword and in Section 1, "Safety."
- Thoroughly review sections 1 and 2, which explain normal operation of the machine, and section 3, which explains maintenance requirements. These sections will function as your textbook during the dealer - conducted training course that is required before you can use the unit.
- Manuals for certain allied supplier's components are provided separately. You should also be familiar with their contents.
- Keep copies of all manuals in a readily accessible location for future reference.



Section 1: Safety

The safety of the operator is of great importance to DuraTech Industries/Haybuster. We have provided decals, shield and other safety features to aid you in using your machine safely. In addition, we ask you to be a careful operator who will properly use and service your Haybuster equipment.



WARNING: FAILURE TO COMPLY WITH SAFETY INSTRUCTIONS THAT FOLLOW WITHIN THIS MANUAL COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH. BEFORE ATTEMPTING TO OPERATE THIS MACHINE, CAREFULLY READ ALL INSTRUCTIONS CONTAINED WITHIN THIS MANUAL. ALSO READ THE INSTRUCTION MANUAL PROVIDED WITH YOUR TRACTOR.

THIS MACHINE IS NOT TO BE USED FOR ANY PURPOSE OTHER THAN THOSE EXPLAINED IN THE OPERATOR'S MANUAL, ADVERTISING LITERATURE OR OTHER DURATECH INDUSTRIES WRITTEN MATERIAL PERTAINING TO THE H-1030 TUB GRINDER.

1.1 Safety-alert symbols

Decals are illustrated in **Part 2: Parts Reference**.

The safety decals located on your machine contain important and useful information that will help you operate your equipment safely.

To assure that all decals remain in place and in good condition, follow the instructions below:

- Keep decals clean. Use soap and water - not mineral spirits, adhesive cleaners and other similar cleaners that will damage the decal.
- Replace all damaged or missing decals. When attaching decals, surface temperature of the machine must be at least 40° F (5° C). The surface must be also be clean and dry.
- When replacing a machine component to which a decal is attached, be sure to also replace the decal.
- Replacement decals can be purchased from your Haybuster dealer.

DuraTech Industries uses industry accepted **ISO/ANSI** standards in labeling its products for safety and operational characteristics.



Safety-Alert Symbol

Read and recognize safety information. Be alert to the potential for personal injury when you see this safety-alert symbol.



DANGER: Indicates an imminently hazardous situation that, if not avoided, will result in death or serious injury. This signal word is to be limited to the most extreme situations, typically for machine components that, for functional purposes, cannot be guarded.

WARNING: Indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.

CAUTION: Indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

This manual uses the symbols to the right to denote important safety instructions and information.

The **DANGER**, **WARNING** and **CAUTION** symbols are used to denote conditions as stated in the text above. Furthermore, the text dealing with these situations is surrounded by a box with a white background, will begin with **DANGER**, **WARNING**, or **CAUTION**.

The **INFORMATION** symbol is used to denote important information or notes in regards to maintenance and use of the machine. The text for this information is surrounded by a box with a light grey background, and will begin with either **IMPORTANT** or **NOTE**.



DANGER:
Signal word - White Lettering/Red Background
Safety Alert Symbol - White Triangle/Red Exclamation Point






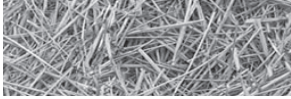
WARNING:
Signal word - Black Lettering/Orange Background
Safety Alert Symbol - Black Triangle/Orange Exclamation Point



CAUTION:
Signal word - Black Lettering/Yellow Background
Safety Alert Symbol - Black Triangle/Yellow Exclamation Point



	1. Yellow warning triangle/black graphical symbol, indicates what the hazard is. Hazard Identification
	2. Red circle-with-slash/black graphical symbol indicates a prohibited action to avoid the hazard. Prohibited Action
	3. Blue mandatory action circles/white graphical symbol - indicates an action to take to avoid the hazard. Mandatory Action



1.2 Operator - personal equipment

THE OPERATOR

Physical Condition

You must be in good physical condition and mental health and not under the influence of any substance (drugs, alcohol) which might impair vision, dexterity or judgment.

Do not operate a **H-1030** when you are fatigued. Be alert - If you get tired while operating your **H-1030**, take a break. Fatigue may result in loss of control. Working with any farm equipment can be strenuous. If you have any condition that might be aggravated by strenuous work, check with your doctor before operating

Proper Clothing



Clothing must be sturdy and snug-fitting, but allow complete freedom of movement. Avoid loosefitting jackets, scarfs, neckties, jewelry, flared or cuffed pants, unconfined long hair or anything that could become entangled with the machine.



Protect your head with a hard hat to reduce the risk of injury from flying debris.



Protect your hands with gloves when handling hammers, screens, etc... Heavy-duty, nonslip gloves improve your grip and protect your hands.




Good footing is most important. Wear sturdy boots with nonslip soles. Steel-toed safety boots are recommended.



To reduce the risk of injury to your eyes never operate a **H-1030** unless wearing goggles or properly fitted safety glasses with adequate top and side protection.



Tractor noise may damage your hearing. Always wear sound barriers (ear plugs or ear muffs) to protect your hearing. Continual and regular users should have their hearing checked regularly.



1.3 Machine safety labels

The safety decals located on your machine contain important information that will help you operate your equipment. Become familiar with the decals and their locations.



DANGER: ROTATING PARTS WITHIN CAN KILL OR DISMEMBER. WAIT FOR ALL MOVEMENT TO STOP BEFORE SERVICING, UNLOADING, OR INSPECTING MACHINE.



6500082



DANGER: ROTATING DRIVELINE, CONTACT CAN CAUSE DEATH, KEEP AWAY!

DO NOT OPERATE WITHOUT

- ALL DRIVELINE GUARDS, TRACTOR AND EQUIPMENT SHIELDS IN PLACE
- DRIVELINES SECURELY ATTACHED AT BOTH ENDS
- DRIVELINE GUARDS THAT TURN FREELY ON DRIVELINE



6500085



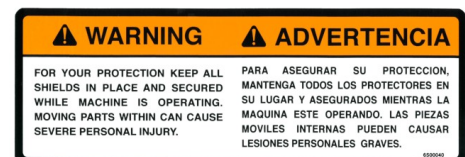
DANGER: OBJECTS THROWN BY MACHINE
DO NOT OPERATE WITHOUT WEARING SAFETY GLASSES AND A HARD HAT.
KEEP UNAUTHORIZED PERSONNEL OUT OF THE GRINDING AREA




6500118



WARNING: FOR YOUR PROTECTION KEEP ALL SHIELDS IN PLACE AND SECURED WHILE MACHINE IS OPERATING MOVING PARTS WITHIN CAN CAUSE SEVERE PERSONAL INJURY.



6500040



WARNING: FOR YOUR PROTECTION AND PROTECTION OF OTHERS, PRACTICE THE FOLLOWING SAFETY RULES.

1. BEFORE OPERATING THIS MACHINE, READ THE OPERATOR'S MANUALS SUPPLIED WITH THIS MACHINE AND YOUR TRACTOR.
2. CHECK OPERATORS MANUALS TO BE SURE YOUR TRACTOR MEETS THE MINIMUM REQUIREMENTS FOR THIS MACHINE.
3. READ ALL DECALS PLACED ON THIS MACHINE FOR YOUR SAFETY AND CONVENIENCE.
4. NEVER ALLOW RIDERS ON THIS IMPLEMENT OR THE TRACTOR.
5. KEEP OTHERS AWAY FROM THIS MACHINE WHILE IN OPERATION.
6. KEEP ALL SHIELDS IN PLACE WHILE MACHINE IS OPERATING.
7. KEEP HANDS, FEET, LOOSE CLOTHING, ETC., AWAY FROM POWER DRIVEN PARTS.
8. ALWAYS SHUT OFF MACHINE AND ENGINE BEFORE SERVICING, UNCLOGGING, INSPECTING, OR WORKING NEAR THIS MACHINE FOR ANY REASON. ALWAYS PLACE TRANSMISSION IN PARK OR SET PARK BRAKE AND WAIT FOR ALL MOVEMENT TO STOP BEFORE APPROACHING THIS MACHINE.



WARNING: NO RIDERS

SERIOUS INJURY COULD RESULT FROM RIDING ON THE MACHINE.



WARNING: THROWN OBJECT HAZARD

TO PREVENT SERIOUS INJURY OR DEATH DO NOT RAISE TUB WHEN ROTOR IS TURNING.

1. DISENGAGE ROTOR AND ALLOW TO COME TO A COMPLETE STOP.
2. BE CERTAIN THAT ALL PERSONNEL ARE CLEAR OF MACHINERY AREA.
3. RAISE TUB TO FULL VERTICAL POSITION.
4. STOP ENGINE AND REMOVE KEY BEFORE APPROACHING TUB AND ROTOR AREA.

WARNING

FOR YOUR PROTECTION AND PROTECTION OF OTHERS, PRACTICE THE FOLLOWING SAFETY RULES.

1. BEFORE OPERATING THIS MACHINE, READ THE OPERATOR'S MANUALS SUPPLIED WITH THIS MACHINE AND YOUR TRACTOR.
2. CHECK OPERATORS MANUALS TO BE SURE YOUR TRACTOR MEETS THE MINIMUM REQUIREMENTS FOR THIS MACHINE.
3. READ ALL DECALS PLACED ON THIS MACHINE FOR YOUR SAFETY AND CONVENIENCE.
4. NEVER ALLOW RIDERS ON THIS IMPLEMENT OR THE TRACTOR.
5. KEEP OTHERS AWAY FROM THIS MACHINE WHILE IN OPERATION.
6. KEEP ALL SHIELDS IN PLACE WHILE MACHINE IS OPERATING.
7. KEEP HANDS, FEET, LOOSE CLOTHING, ETC., AWAY FROM POWER DRIVEN PARTS.
8. ALWAYS SHUT OFF MACHINE AND ENGINE BEFORE SERVICING, UNCLOGGING, INSPECTING, OR WORKING NEAR THIS MACHINE FOR ANY REASON. ALWAYS PLACE TRANSMISSION IN PARK OR SET PARK BRAKE AND WAIT FOR ALL MOVEMENT TO STOP BEFORE APPROACHING THIS MACHINE.

ADVERTENCIA

SIGLAS LAS REGLAS SIGUIENTES DE SEGURIDAD PARA SU PROTECCION Y LA PROTECCION DE OTROS

1. LEA LOS MANUALES DEL OPERADOR INCLUIDOS CON ESTA MAQUINA Y SU TRACTOR ANTES DE OPERAR ESTA MAQUINA.
2. PARA ASEGURARSE QUE SU TRACTOR CUMPLE CON LOS REQUERIMIENTOS MÍNIMOS PARA ESTA MAQUINA, REVISE LOS MANUALES DEL OPERADOR.
3. PARA SU SEGURIDAD Y CONVENIENCIA, LEA TODAS LAS CALCOMANÍAS COLGADAS EN LA MAQUINA.
4. NUNCA PERMITA PASAJEROS EN ESTA MAQUINA O EN EL TRACTOR.
5. MANTENGA ALEJADOS A LOS ESPECTADORES MIENTRAS ESTA MAQUINA ESTE OPERANDO.
6. MANTENGA TODOS LOS PROTECTORES EN SU LUGAR MIENTRAS LA MAQUINA ESTE OPERANDO.
7. MANTENGA LAS MANOS, PIES, ROPAS SOLTADAS, ETC., ALEJADAS DE LAS PIEZAS PROPIAS.
8. SIEMPRE APAGUE LA MAQUINA Y EL MOTOR ANTES DE PRESTAR SERVICIO, DESATAR, INSPECCIONAR O TRABAJAR CERCA DE ESTA MAQUINA POR CUALQUIER MOTIVO. ANTES DE ACERCARSE A ESTA MAQUINA COLOQUE SIEMPRE LA TRANSMISION EN ESTACIONAMIENTO O ENGANCHE EL FRENO DE ESTACIONAMIENTO.

6500041

WARNING

No Riders

Serious personal injury could result from riding on the machine.



ADVERTENCIA

Pasajeros Prohibidos

Podrian resultar lesiones personales graves al viajar en la maquina.

6500043



WARNING

THROWN OBJECT HAZARD

DO NOT RAISE TUB WHEN ROTOR IS TURNING

1. DISENGAGE ROTOR AND ALLOW TO COME TO A COMPLETE STOP.

2. BE CERTAIN THAT ALL PERSONNEL ARE CLEAR OF MACHINERY AREA.

3. RAISE TUB TO FULL VERTICAL POSITION.

4. STOP ENGINE AND REMOVE KEY BEFORE APPROACHING TUB AND ROTOR AREA.

ADVERTENCIA

PELIGRO DE OBJETOS DESPEDIDOS

NO ELEVE LA CUBA CUANDO EL ROTOR ESTE GIRANDO

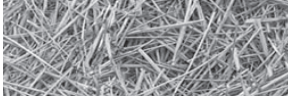
1. DESACOPLE EL ROTOR Y PERMITA QUE SE DETENGA COMPLETAMENTE.

2. ASEGURESE DE QUE TODA LA PERSONAL ESTE ALEJADA DEL AREA DE LA MAQUINA.

3. ELEVE LA CUBA HASTA LA POSICION VERTICAL COMPLETA.

4. APAGUE EL MOTOR Y REMUEVA LA LLAVE ANTES DE ACERCARSE A LA CUBA O AL ROTOR.

6500209



WARNING: OVERHEAD CONVEYOR HAZARD
TO PREVENT SERIOUS INJURY OR DEATH:

DO NOT WALK UNDER CONVEYOR AT ANY TIME.
STAY CLEAR OF CONVEYOR DURING OPERATION,
RAISING, AND LOWERING. LOWER CONVEYOR
FULLY BEFORE SERVICING.

KEEP OTHERS AWAY.



6500214



WARNING: HIGH-PRESSURE FLUID HAZARD, TO PREVENT SERIOUS INJURY OR DEATH:

- RELIEVE PRESSURE ON SYSTEM BEFORE REPAIRING OR ADJUSTING OR DISCONNECTING.
- WEAR PROPER HAND AND EYE PROTECTION WHEN SEARCHING FOR LEAKS. USE WOOD OR CARDBOARD INSTEAD OF HANDS.
- KEEP ALL COMPONENTS IN GOOD REPAIR.



6500220



WARNING: TIPPING HAZARD
TO PREVENT SERIOUS INJURY OR DEATH

1. DO NOT Tilt WITH MATERIAL IN TUB.
- 2.. DO NOT Tilt ON SLOPED GROUND.
3. DO NOT Tilt ON SOFT GROUND.
4. DO NOT USE OTHER EQUIPMENT TO ASSIST Tilt.




6500282



WARNING: TO PREVENT SERIOUS INJURY OR DEATH DURING OPERATION:

1. DO NOT OVERFILL THE TUB.
2. DO NOT APPROACH THE GRINDER OR MAKE MACHINE ADJUSTMENTS WHILE IT IS BEING LOADED.



6500283



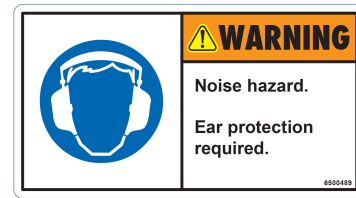
WARNING: PINCH POINT STAY BACK



6500339




WARNING: Noise hazard.
Ear protection required.



6500489



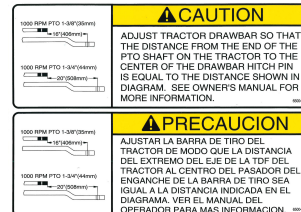CAUTION: ADJUST TRACTOR DRAWBAR SO THAT THE DISTANCE FROM THE END OF THE PTO SHAFT ON THE TRACTOR TO THE CENTER OF THE DRAWBAR HITCH PIN IS EQUAL TO THE DISTANCE SHOWN IN DIAGRAM. SEE OWNER'S MANUAL FOR MORE INFORMATION.



6500440



CAUTION: Do not operate machine unless an approved fire extinguisher is installed.



6500497



1.4 Thrown objects and operator safety

An operational characteristic of all grinders is that objects may be thrown out of the hopper. Thrown objects may present a safety hazard to persons in the area. This section is to inform the operator of this characteristic, and what can be done to reduce the risk of injury to the operator and persons in the area. Keep all observers away from the machine.

Figure 1.1 shows an object being hit as the hammer is on the upswing. A general pattern for where thrown objects may land is shown in Figure 1.2.

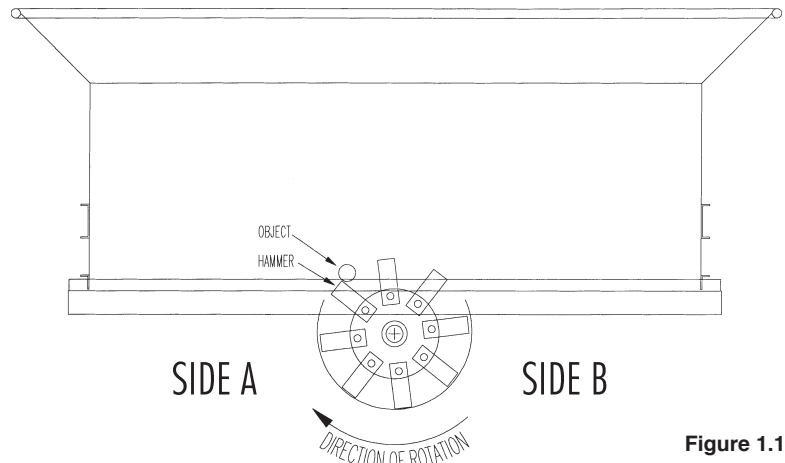


Figure 1.1

VIEWED FROM THE REAR OF THE H-1030



NOTE: The difference in the size of the area for side A versus side B. Side B is larger.

Dimensioning the size of this area is not practical. The distance a thrown object may travel is dependent on several conditions, including, but not limited to, rotor speed and diameter, condition of the hammers, style of hammers, object mass, object shape, amount of material in the tub, and how the hammer strikes the object.


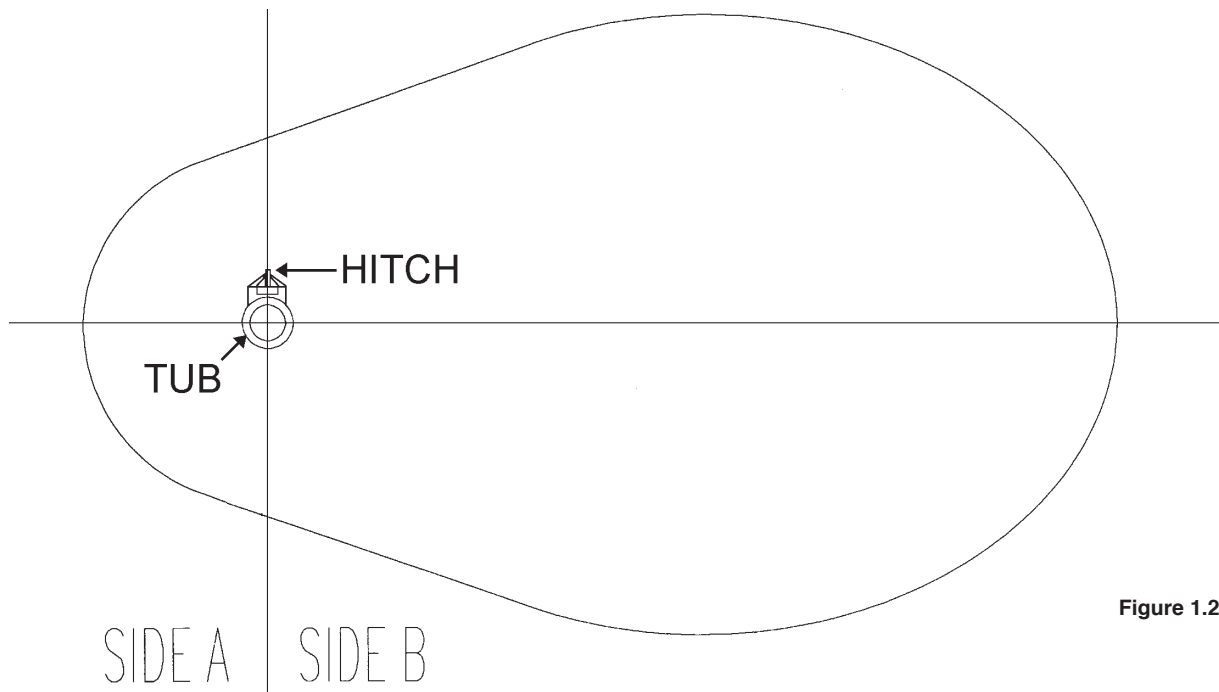


Figure 1.2

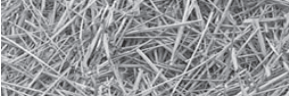

The amount of material in the tub can dampen or stop the object's potential flight. Keeping the tub full will reduce the risks. Filling the tub at least 1/2 full when starting will reduce the risk. Using a geyser plate can help reduce thrown objects. A risk may arise when the tub is being emptied, such as at the end of the grind. Running the engine at slower speeds when starting or finishing the grind will also help, especially slowing down when emptying the tub.



WARNING: To minimize the potential risk of injury or property damage, the operator must:

- a) Place side B towards open areas, away from property and people.
- b) Load the grinder from side A with a loader equipped with an enclosed cab.
- c) Keep observers out of the area.
- d) Wear a hard hat and safety glasses, at a minimum, and require that any other persons in the area are similarly equipped.

1.5 Shielding

This H-1030 Tub Grinder is equipped with shielding at all major points of potential injury. All Shields should be kept in place during operation. Bodily injury may occur if the unit is operated without shields.



WARNING: Shields are installed for your protection and to keep material off machine parts. Do not operate this Industrial Tub Grinder without shields in place.

1.6 Personal protection equipment

Operators and authorized observers of the H-1030 Tub Grinder are required to wear head, eye, and ear protection. No loose clothing is allowed.



1.7 Safety Review



WARNING: Before attempting to operate your H-1030 Tub Grinder, carefully read and follow instructions given below and contained elsewhere in this manual.

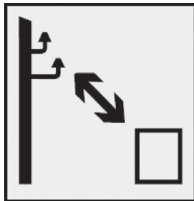
BEFORE OPERATING

1. Read and follow all instructions contained in:
 - Operators Manual
 - Tractor Operators Manual
 - Decals placed on H-1030 Tub Grinder.




NOTE: Your dealer has additional copies of these materials.

2. Allow only properly instructed, responsible individuals to operate your machine. Carefully supervise inexperienced operators.
3. Use a tractor that meets the requirements contained in this manual. **See Appendix C, Required for Operation, page 63.**
4. Make sure the H-1030 Tub Grinder is in good operating condition and that all protective shields are in place and in proper working order. Replace damaged shields before operating.
5. Be sure all bystanders and other workers are clear before starting tractor and grinder.
6. Make no modifications to the H-1030 Tub Grinder unless specifically recommended or requested by DuraTech Industries.
7. Check periodically for broken or worn parts and make necessary repairs.
8. Be sure the unit is securely attached to tractor during grinder operation and road transport.



Keep sufficient distance away from electrical power lines.

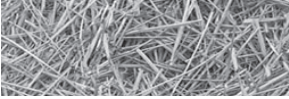WARNING: Electrocution is possible when running this machine during an electric storm or heavy fog.



DURING OPERATION

1. Enforce the following safety precautions to prevent serious personal injury.
 - Keep everyone clear of work area except operator seated at tractor controls.
 - **Never work on or near grinder unless engine is off, and all motion has stopped.**
 - Disengage PTO before starting engine.
2. Power take off shafts must be locked in place with protective PTO shields in place.
3. Keep hands, feet, and clothing away from power driven parts.
4. Keep shields in place and in good condition.
5. Watch out for and avoid any object that might interfere with the proper operation of the machine.
6. Loose clothing, necklaces, and similar items are more easily caught in moving parts. Avoid the use of these items and keep long hair confined.
7. Because it is possible that your H-1030 may be used in dry areas or the presence of combustibles, special precautions should be taken to prevent fires and fire fighting equipment should be readily available.



NO SMOKING IN THIS AREA



DANGER! NO OPEN FLAMES IN THIS AREA

8. Never allow riders on the machine at any time.




NORMAL SHUTDOWN PROCEDURE



WARNING: For your safety and the safety of others, you must use the following normal shutdown procedure before leaving the controls unattended for any reason, including servicing, cleaning, or inspecting. A variation of the following procedure may be used if so instructed within this manual or if an extreme emergency requires it.

1. Run H-1030 Tub Grinder until discharge conveyor is empty, and grind as much of the material in the tub as possible.
2. Reduce engine speed to idle.
3. Disengage PTO
4. Disengage hydraulics.
5. Place transmission in park and set parking brake.
6. Shut off tractor engine and remove key.
7. Wait for all movement to stop.
8. Disconnect PTO driveline from tractor.



1.8 Fire Prevention

Grinding wood, hay, and other products in a tub grinder produces a large amount of potentially combustible material. The risks of fire can be significantly reduced with proper operating and maintenance procedures. This does include frequent removal of dust, debris, and other combustible materials.

Most of the products that are ground are dry and the grinding process can produce fine, dusty material. The grinding process can produce heat and the spinning rotor will circulate air within the grinding chamber. For a fire to start, fuel, oxygen and heat in sufficient quantity, must be present. During normal operation and with a properly maintained tub grinder, the material being ground will move through the grinding chamber so quickly that it doesn't have a chance to heat up sufficiently to start a fire. Also, the rapid rate that a tub grinder can pile material will quickly smother small hot spots that might occur during normal grinding operations. Keeping the material moving through the machine and across the top of the rotor is important to keep frictional heating of the material to a minimum.


NEVER leave the vicinity of the unit with the engine running.

PROPER OPERATION OF THE TUB GRINDER:

- Do not grind materials any finer than necessary. Finely ground materials will produce more dust and increase the risk of fire. If finely ground materials are required, it is better to grind the materials coarse first with large opening screens installed in the grinder and then regrind them to the desired consistency by installing smaller opening screens in the grinder. Be especially cautious when grinding materials that can burn easily.
- When filling the tub grinder during start-up begin by filling the rear of the tub and avoid placing materials on the spinning rotor. When material begins to fall over the rotor, set the governor control on "Manual" and rotate the tub slowly while continuing to fill the tub. Use the tub cover to control thrown objects as much as possible. When the tub is 1/2 to 2/3 full, the governor control can be set to "auto" and grinding operations can resume normally. Do not allow the tub to stop for any significant amount of time with material over the rotor to minimize frictional heating.
- Do not smoke when working with combustible materials.

REMOVAL AND CLEANING INSTRUCTIONS:

- Clean the engine compartment or electric motor area daily or more often if conditions require it be done more frequently. When cleaning the engine compartment, always clean the top of the engine and the areas around exhaust manifolds, exhaust plumbing and turbochargers.
- Check the rotor box for debris built up around the rotor. Remove material that may be packed tight near the bearings, on shaft or other rotating components because it will become hot due to friction.
- At shutdown, always clean and remove all dust, debris, or combustible material off the entire grinder. Use high-pressure air or water if necessary. Always move the grinder and all other equipment away from the ground material pile before leaving the job site in case of smoldering combustion in the ground material.



TUB GRINDER MAINTENANCE:

- Repair any fuel or hydraulic leaks as quickly as they are discovered. Clean up spills immediately. Fuel or oil soaked materials can contribute significantly to the rapid spreading of a fire once it has begun.
- Inspect all electrical wiring periodically. Any chafed or damaged wires should be repaired immediately. Keep all electrical connections tight to prevent arcs or sparks.
- Contact between the rotor and any stationary component of the grinding chamber such as contact between the hammers and the screens must be corrected immediately.

1.9 Fire Extinguishers:



CAUTION: Do not operate machine unless an approved fire extinguisher is installed.

The fire extinguishers should be ABC dry chemical extinguishers that are appropriate for use with materials normally encountered on a tub grinder.

If a fire does start, CALL THE LOCAL FIRE DEPARTMENT IMMEDIATELY. Then, use the fire extinguisher if you feel confident that you can extinguish the fire. A 10# extinguisher will last about 15-20 seconds and a 20# extinguisher will last about 20-24 seconds, so they will not stop a large fire. The fire extinguishers should be at least 10#, but the preferred are 20#.


When using a fire extinguisher, use the P A S S method:

- Approach the fire with the wind at your back.
- Pull the pin,
- Aim the spout,
- Squeeze the trigger, and
- Sweep along the base of the fire from about 6-8 feet away.

Read the label on your extinguisher now, most extinguishers have descriptions of this method, and an estimated working time.

If an extinguisher is only partially used, the dry chemical will jam in the seals, allowing the extinguisher to lose its pressure charge in less than an hour, making it useless to you. It must be recharged before placing it back on the machine. Have the extinguisher recharged today; a fire will not wait for you to recharge your extinguisher tomorrow!

Fire extinguishers should be inspected and recharged by a professional at least annually to keep them at optimum performance! A “verification of service” collar that confirms the month and year of service should be attached to the neck of the container to confirm when the extinguisher was last serviced.




1.10 Towing



CAUTION: DO NOT TRANSPORT THE H-1030 TUB GRINDER without first securing the conveyor in the transport position (see 2.6.1, page 30).

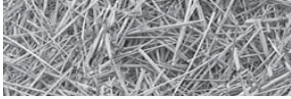1. Be sure all loose parts are securely fastened down.
2. Make sure all bystanders are clear.
3. Hitch H-1030 Tub Grinder to a tow vehicle with adequate load carrying and braking capacity. Be sure to attach safety chains between tow vehicle and H-1030 Tub Grinder. Tongue weight is 1,925 lbs. (873 kg).
4. Pull PTO apart and attach to transport bracket on the right hand side of the grinder.
5. Ensure that hitch jack is stored in the up position.
6. Check the turning clearance between H-1030 Tub Grinder and the towing vehicle.
7. Connect H-1030 light harness to the towing vehicle.
8. Check local ordinances regarding restrictions for H-1030 Tub Grinder travel on your planned route.
9. Be aware of machine width at all times and do not exceed 20 miles per hour.
10. Check your state laws regarding the use of lights, slow moving vehicle signs, and other possible requirements.
11. Use good judgment and drive carefully, especially over rough and uneven roads.



1.11 Service and maintenance



WARNING: Before performing any maintenance on the machine or getting into the tub, be sure rotor and all moving parts have come to a complete stop. Shut off engine and remove the key.

Before working on or near the Tub Grinder or any reason such as servicing, inspecting or unclogging the machine:

- Follow the normal shutdown procedure found in Section 2.4.1 of this manual.
- If the unit is still attached to a towing vehicle, place the towing vehicle's transmission in park and set the parking/emergency brake.
- Relieve all pressure in the hydraulic system before disconnecting hydraulic lines or performing work on the system. Make sure all connections are tight and the hoses and lines are in good condition before applying pressure to the system.



WARNING: Hydraulic fluid escaping under pressure can be invisible and have enough force to penetrate the skin. When searching for a suspected leak, use a piece of wood or a cardboard rather than your hands. If injured, seek medical attention immediately to prevent serious infection or reaction.

- If performing maintenance or servicing which requires the tub to be tilted up, make sure that the tub cylinder stop is in place on the tub tilt cylinder before you begin. For more information, see sections 2.2.9 and 2.7.

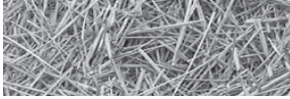


WARNING: For your protection **ALWAYS** install the tub cylinder stop on the tub tilt cylinder when the tub is tilted. **NEVER** engage tractor PTO when the tub is raised.



WARNING: FAILURE TO COMPLY WITH SAFETY INSTRUCTIONS THAT FOLLOW WITHIN THIS MANUAL COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH. BEFORE ATTEMPTING TO OPERATE THIS MACHINE, CAREFULLY READ ALL INSTRUCTIONS CONTAINED WITHIN THIS MANUAL. ALSO READ THE INSTRUCTION MANUAL PROVIDED WITH YOUR TRACTOR.

THIS MACHINE IS NOT TO BE USED FOR ANY PURPOSE OTHER THAN THOSE EXPLAINED IN THE OPERATOR'S MANUAL, ADVERTISING LITERATURE OR OTHER DURATECH INDUSTRIES WRITTEN MATERIAL PERTAINING TO THE H-1030 TUB GRINDER.



Section 2: Operation

There is no substitute for a sound preventative maintenance program and a well-trained operator.

To insure long life and economical operation, learn how to operate the H-1030 Tub Grinder and how to use the controls properly. Thoroughly instruct the operator in maintenance and operation of the H-1030 Tub.

GENERAL OPERATING CONDITIONS

Operating Temperature

This equipment will operate correctly in its intended ambient, at a minimum between +5°C and +40°C (41°F and 104°F).

Relative Humidity

The equipment will operate correctly within an environment at 50% RH, +40°C (104°F). Higher RH may be allowed at lower temperatures.

Measures shall be taken by the Purchaser to avoid the harmful effects of occasional condensation.

Altitude

This equipment will operate correctly up to 1000 m (3,280 ft.) above mean sea level.

Transportation and Storage

This equipment will withstand, or has been protected against, transportation and storage temperatures of -25°C to +55°C (-13°F to +131°F) and for short periods up to +70°C (+158°F).


It has been packaged to prevent damage from the effects of normal humidity, vibration and shock.

2.1 Pre-Operating Inspection

Prior to the starting the H-1030 Tub Grinder, make a visual inspection of the machine. This can be done when lubricating the machine. Any items that are worn, broken, missing or needing adjustment must be serviced accordingly before operating the H-1030 Tub Grinder.



WARNING: Before inspecting the machine, use the normal shutdown procedure found on page 28.



BEFORE OPERATING CHECKS

Before operating the H-1030 Tub Grinder, follow these instructions:

- ☐ Read and understand the operator's manual.
- ☐ Learn how to operate the controls properly. Do Not let anyone operate without instruction.
- ☐ Know the machine's safety features and understand the safety precautions.
- ☐ Be sure the machine is hitched properly to the tractor.
- ☐ Be sure to lubricate all lubrication points. See lubrication chart, in Section 3.1 of this manual.
- ☐ Check for loose bolts.
- ☐ Make sure machine is properly adjusted.
- ☐ Check hydraulic oil level
- ☐ Check hydraulic components for leaks or damage.



WARNING: Hydraulic fluid escaping under pressure can be almost invisible and can have sufficient force to penetrate the skin. When searching for suspected leaks, use a piece of wood or cardboard rather than your hands. If injured, seek medical attention immediately to prevent serious infection or reaction.

- ☐ Visually examine rotor to see if any parts have excessive wear. These parts include shaft, plates, rods, hammers and moveable plate.
- ☐ Check screens and screen hold downs for wear and tightness.
- ☐ Check installation and condition of hammers.
- ☐ Visually examine rotor bearings and mounting bolts.
- ☐ Check all bearings for wear.
- ☐ Check chains and belts for proper tension and condition.
- ☐ Make sure all shields and guards are in place.
- ☐ Check condition of decals, replace if excessively worn.
- ☐ Check lug nuts for correct tightness. Lug nut should be tightened to a minimum of 120 ft-lbs (17 Kg-M).
- ☐ Check condition of tire rims.
- ☐ Check tires for proper air pressure. 36 PSI (2.5 BAR)
- ☐ Always grind with the machine and tractor stationary on level ground.
- ☐ In cold weather, allow five minutes for the machine to warm up before grinding.
- ☐ Start the machine and check the tub direction, speed control governor for proper operation.
- ☐ Watch for unusual or excessive vibration. If any occur, immediately shut off the power. Check to see what is wrong and correct it before starting the grinder again.
- ☐ If grinding grain, be sure proper grain attachment is in place.

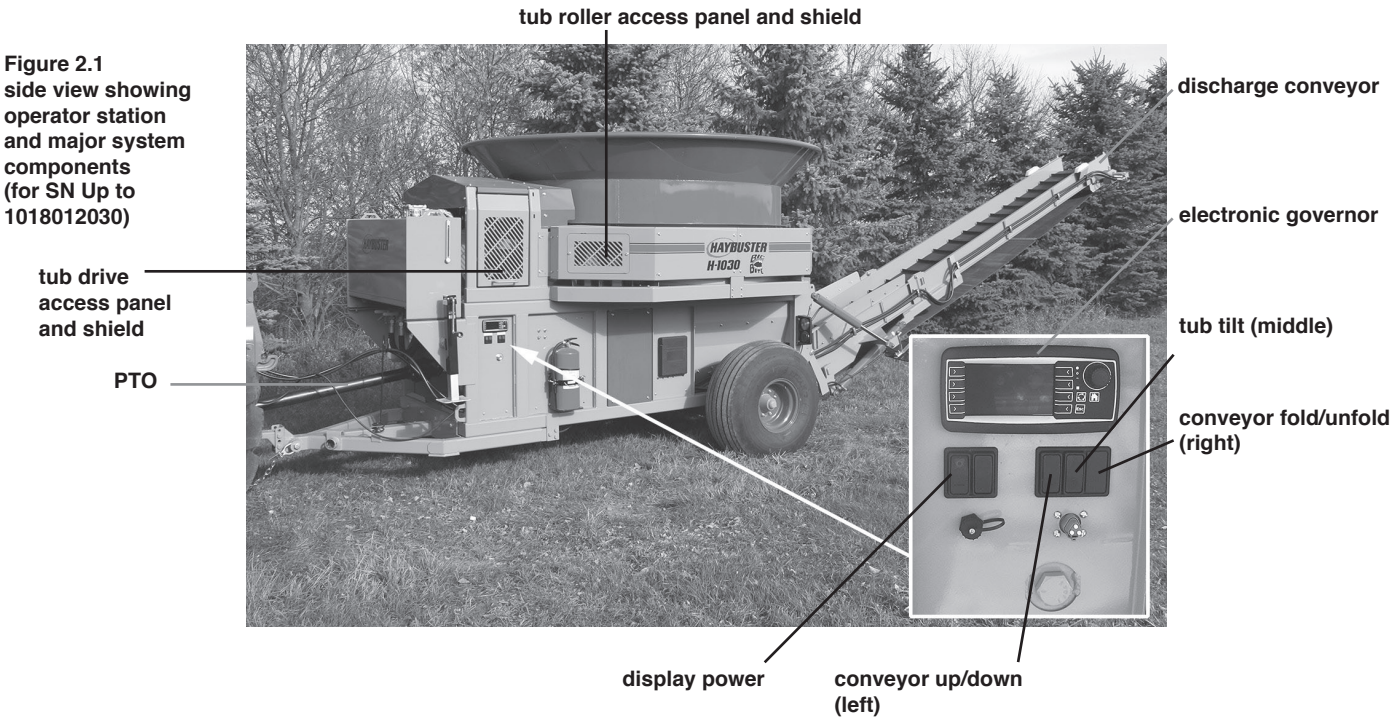


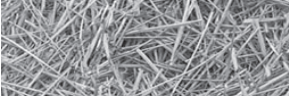
2.2 Introduction to the machine

2.2.1 Description of the H-1030 Tub Grinder

The Tub Grinder is designed to grind most types of hay, grain and crop residue such as stover and straw. The unit incorporates a number of basic features including the rotating tub, the electronic governor, the rotor and hammer assemblies, the tub chain and drive assemblies, belly auger and discharge conveyor, and the axle and hitch assemblies.

Material is fed into the tub of the unit by appropriate means, such as a wheel loader. As the tub rotates, the material is exposed to the rotating hammers. The hammers then grind the material before the material is discharged by the belly auger and discharge conveyors.





2.2.2 Overview of Operator's Controls (for SN Up to 1018012030)

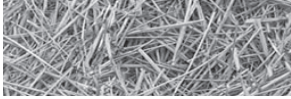
Operator controls include:

- **Electronic governor:** The electronic governor regulates tub rotational speed range.
- **Electric/hydraulic conveyor switches:** The first switch controls the up/down of the conveyor and the third switch controls the fold/unfold of the conveyor. One continuous hydraulic circuit is required to power the conveyor and tub tilt functions.
- **Tractor engine speed:** The tractor engine speed should be set so 1000 PTO shaft is running at 1000 RPM.
- **Tractor PTO lever:** Engaging the tractor's PTO lever spins rotor, runs both conveyor belts and power the tub hydraulic drive. The conveyor must be unfolded to working position before the PTO can be engaged.
- **Electric/hydraulic tub tilt switch:** The second switch uses the tractor's continuous hydraulic circuit to raise and lower the tub platform.

2.2.2a Overview of Operator's Controls (for SN 1020012130 and Up)

Operator controls include:

- **Electronic governor:** The electronic governor controls all functions of the H-1030 Tub Grinder. They include tub raise/lower, tub forward/reverse, tub speed, rotor speed, conveyor fold/unfold and conveyor raise/lower.
- **Tractor engine speed:** The tractor engine speed should be set so 1000 PTO shaft is running at 1000 RPM.
- **Tractor PTO lever:** Engaging the tractor's PTO lever spins rotor, runs both conveyor belts and power the tub hydraulic drive. The conveyor must be unfolded to working position before the PTO can be engaged.



2.2.3 Electronic governor (For S.N. Up to 1018012030)

General:

The Wachendorf A35 with ECU 710 control system will control the Tub and Discharge Conveyor functions of a Tub Grinder.

Display

Start up screen:

Company logo

Screen will show when power is applied to the display for approx. 10 sec.



Loading screen:

Company logo, with loading bar

Screen will show right after Start up screen for approx. 10 sec.



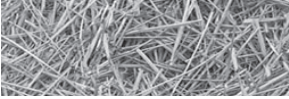


Home screen:

Home Screen will show right after the loading screen.




- Tub FWD/REV buttons will control the Tub FWD/REV outputs as described later in this manual.
- The Tub Speed gauge will indicate the Tub Speed output with a scale of 0-100.
 - o When the Tub Speed button is pressed the Encoder knob will be linked to the Tub Speed setting and the Tub Speed icon will change to red in color.
- The Engine Load gauge will indicate the Engine Load setting with a scale of 0-100.
 - o When the Engine Load button is pressed the Encoder knob will be linked to the Engine Load setting and the Engine Load icon will change to red in color.
- When the Display Light button is pressed the Encoder knob will be linked to the Display Backlight setting and the Display Light icon will change to red in color.
- The Set Speed button will set the Rotor Speed Max as described later in this manual and will be indicated by a blue arrow on the outside edge of the Rotor Speed gauge. The Rotor Speed Min will also be described later in this manual and is indicated by the green arrow.
- The Rotor RPM gauge will display the Rotor RPM with a scale of 0-3,000.
- A fault icon will pop up anytime there is a fault triggered in the controller.




Hours screen:

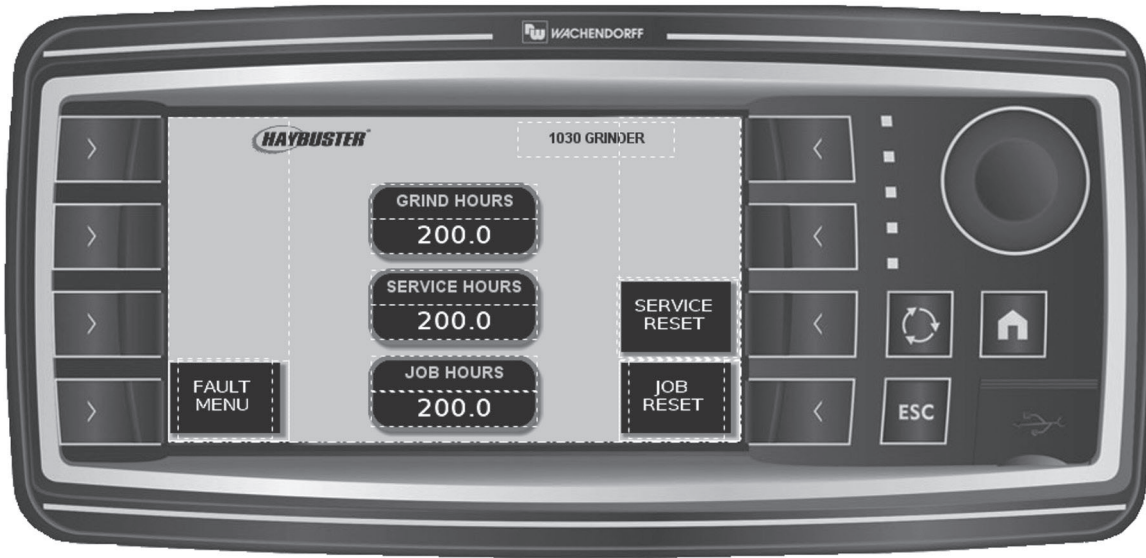The Hours screen will be accessed by pressing the next button on the Home Page.




- Pressing the Fault Menu button will take the operator to the Fault Screen page.
- The Grind Hours window will display the total number of hours the machine has run with the Rotor ON.
- The Service Hours window will display the total number of hours the machine has run with the Rotor ON since the last Service Hours Reset. Pressing the Service Hours Reset button will reset the Service Hours window to zero.
- The Job Hours window will display the total number of hours the machine has run with the Rotor ON since the last Job Hours Reset. Pressing the Job Hours Reset button will reset the Job Hours window to zero.

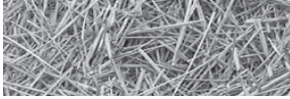

Fault screen:

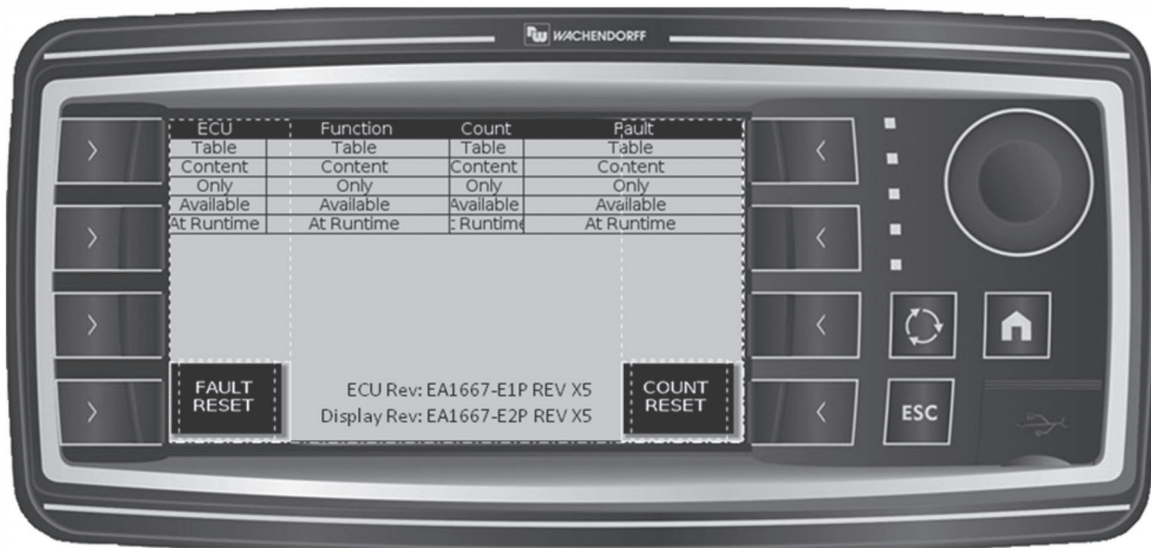The faults will show up in the fault table screen when they occur.



- The ECU column indicates which controller the fault is coming from. This system will have one ECU named ECU-0710.
- The Function column indicates which input or output has the fault.
 1. Tub Forward Coil
 2. Tub Reverse Coil
 3. Tub Speed Coil
 4. Bypass Coil
 5. Speed Sensor
- The Count column indicates how many times the fault has occurred. Press the Count Reset button to reset the count values.
- The Fault column describes the fault condition using the following J1939 FMI codes (Failure Mode Identifier). The FMI description will be listed in the table.


FMI 1: Below Normal

The pulse frequency is below what the ECU can measure.

FMI 5: Open or Short to Ground

An Open will indicate there is a break in a wire, or a bad connection at a connector.

A Short to Ground indicates there is a break in the output wire insulation and the bare wire is touching a negative battery wire or the machine frame.



FMI 6: Short to Battery

A Short to Battery indicates the output wire is touching a positive battery wire.

- The Fault Reset button will reset any fault that does not automatically clear (ex. Speed Sensor Fault).

Hardkeys:

Next

- When the Next button is pressed, the display changes to the next screen.

Home Button

- When the home button is pressed the display will go to the home screen.

ESC Button

- When the ESC button is pressed the display will go back to the previous screen or view.

Encoder

- When the Encoder button is pressed, the display changes to the next screen.





2.2.3a Electronic governor (For S.N. 1020012130 & Up)

General:

The Wachendorf A3X with an HFX32 (for sn 1020012130 and up) control system will control the Tub and Discharge Conveyor functions of a Tub Grinder.

Display

Start up screen:

Company logo

Screen will show when power is applied to the display for approx. 10 sec.

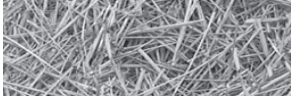


Loading screen:

Company logo, with loading bar

Screen will show right after Start up screen for approx. 10 sec.






Home screen:

Home Screen will show right after the loading screen, when the Home button is pressed from any of the other pages, or when the Encoder is pressed from the Manual Function screen.



- Tub FWD/REV buttons will control the Tub FWD/REV outputs as described later in this manual.
- The Tub Speed gauge will indicate the Tub Speed output with a scale of 0-100.
 - o When the Tub Speed button is pressed the Encoder knob will be linked to the Tub Speed setting and the Tub Speed icon will change to red in color.
 - o The Tub Speed can also be adjusted by using the Tub Speed Inc. and Dec. buttons on the radio remote.
- The Engine Load gauge will indicate the Engine Load setting with a scale of 0-100.
 - o When the Engine Load button is pressed the Encoder knob will be linked to the Engine Load setting and the Engine Load icon will change to red in color.
- When the Display Light button is pressed the Encoder knob will be linked to the Display Backlight setting and the Display Light icon will change to red in color.
- The Set Speed button will set the Rotor Speed Max will be indicated by a blue arrow on the outside edge of the Rotor Speed gauge. The Rotor Speed Min is indicated by the green arrow. **(See Also Section 2.8)**
- The Rotor RPM gauge will display the Rotor RPM with a scale of 0-3,000.
- A fault icon will pop up anytime there is a fault triggered in the controller.
- A radio icon will pop up when the transmitter is connected to the receiver.




Manual Function Screen:

The Manual Function screen will be accessed by pressing the next button or the encoder on the Home Page.




The following functions can be operated on the Manual Function screen. Functions marked with and (*) can also be operated with the radio remote.

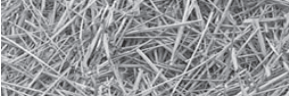1. Conveyor Raise*
 2. Conveyor Lower*
 3. Conveyor Fold
 4. Conveyor Unfold
 5. Tub Raise
 6. Tub Lower
- When a button for one of the functions is pressed the corresponding output will be momentarily turned ON and the button will change color. When the button is released the output will be turned OFF.
 - Interlocks:
 - o The Tub Raise output will be de-activated if there are pulses detected on the Rotor Speed input. An alarm window will show if the Tub Raise button is pressed while the function is locked out. If there are no pulses detected on the Rotor Speed input, the Tub Raise output will be activated after the Tilt Enable Timer expires. The Tilt Enable Time can be changed using the Impulse Service tool.




Hours screen:

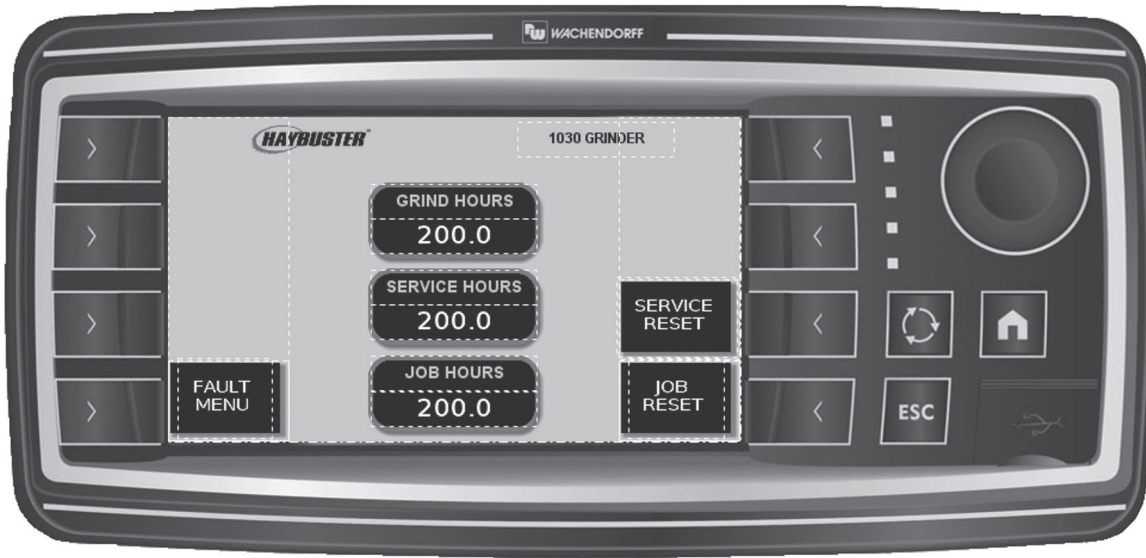The Hours screen will be accessed by pressing the next button on the Manual Function screen.



- Pressing the Fault Menu button will take the operator to the Fault Screen page.
- The Grind Hours window will display the total number of hours the machine has run with the Rotor ON.
- The Service Hours window will display the total number of hours the machine has run with the Rotor ON since the last Service Hours Reset. Pressing the Service Hours Reset button will reset the Service Hours window to zero.
- The Job Hours window will display the total number of hours the machine has run with the Rotor ON since the last Job Hours Reset. Pressing the Job Hours Reset button will reset the Job Hours window to zero.

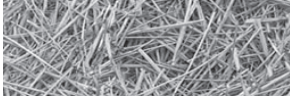

Fault screen:

The faults will show up in the fault table screen when they occur.



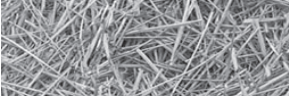
The Active Fault screen will display a table indicating the J1939 DM1 message fault codes. The fault codes will be displayed as numerical values unless otherwise specified in the Fault Codes table. (See section 4.2)

- The ECU (electronic control unit) column indicates which controller the fault is coming from.
- The SPU (suspect parameter number) column indicated what function has a fault.
- The OC (occurrence count) column indicated how many times the fault has occurred.
- The FMI (fault mode indicator) column indicated the reason for the fault.

Fault Reset Button

- The Fault Reset button will reset all active faults.

The Display and Controller Software version will be displayed on this screen.



Hardkeys:

Next

- When the Next button is pressed, the display changes to the next screen.

Home Button

- When the home button is pressed the display will go to the home screen.

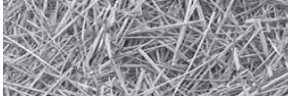
ESC Button

- When the ESC button is pressed the display will go back to the previous screen or view.

Encoder

- When the Encoder button is pressed, the display changes to the next screen.





2.2.4 Rotor

The Rotor and screens are the heart of the tub grinder. The rotor on this H-1030 Tub Grinder is equipped with 64 swinging hammers. Dull edges on the hammers and/or screens will result in a loss of capacity and increased horse power requirements.



IMPORTANT: Hammer and hammer rod life can be extended by keeping the rotor rotating at 2300 RPM. **Excessive tractor horsepower and/or overfeeding the rotor can cause the hammers to lay back resulting in excessive wear on both the hammers and hammer rods.**



CAUTION: Keep all foreign objects out of the tub and away from the rotor. Foreign objects may cause personal injury or damage to the H-1030 Tub Grinder.

CAUTION: At full speed, energy is stored in the rotor. **Do not use the tractor PTO brake to stop the rotor. Reduce engine speed before disengaging the PTO.**



2.2.5 Screens

All H-1030 Tub Grinders require two screens. They come equipped from the factory with a 2" (5 cm) diameter hole screen and a 3" (8 cm) diameter hole screen. Any combination of hole sizes may be used. As a general rule, use the largest diameter screens capable of doing the job.

When using a combination, place the smallest hole diameter on the right hand side of the rotor box where the material enters the rotor.

The size of the hole in the screen determines the coarseness of grind. The larger the hole diameter, the coarser the grind. Hole sizes can vary from 1/8" diameter through 8" diameter. In general, use the larger screen sizes for grinding hay.

As a general guide, DuraTech Industries recommends the following screen sizes:

Hay	2" to 8" (5 cm to 20 cm)
Ear Corn	5/8" to 1" (1.6 cm to 2.5 cm)
Shelled Corn	3/4" (1.9 cm) dry, 5/8" (1.6 cm) high moisture
Small Grains	1/4" (.6 cm) to 3/8" (.9cm)

2.2.6 Tub

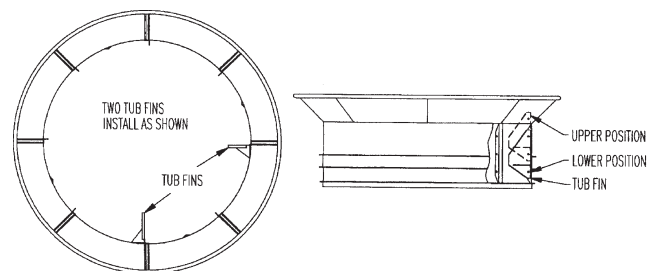
The purpose of the tub is to contain the material above the rotor, and to keep the rotor loaded

Tub Fins

Two tub fins are furnished with the H-1030 Tub Grinder.

When grinding large round bales, use only one of the tub fins, bolted in the upper position. Two tub fins across from each other may hold the bale up and reduce capacity.

When grinding small round bales, square bales, or loose hay, use two tub fins bolted in the lower position.



2.2.7 Slug Buster and Mill Grate

A slug buster or mill grate is installed above the rotor to regulate the amount of material entering the rotor chamber. The standard slug buster is used for ideal grinding conditions (dry hay). The mill grate is used for "less than ideal grinding", (wet hay or tough grasses).



2.2.8 Conveyors, Lifting and Folding

An electric switch on the H-1030 tub grinder controls the conveyor lift and fold. The tractor supplies hydraulic oil for operating the conveyor lift and fold system. Activate the tractors hydraulic circuit before operating the valve on the H-1030 tub grinder.

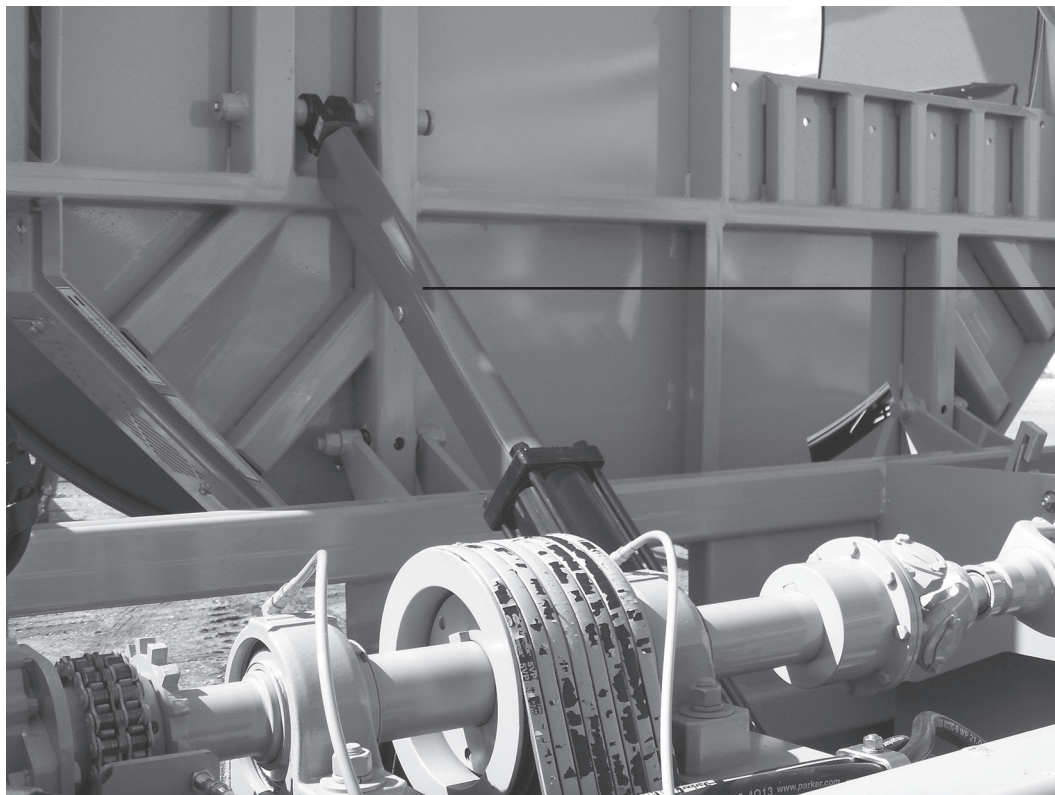
2.2.9 Hydraulic Tilt Platform

The H-1030 tub grinder can be tilted 90 degrees for access to the rotor, screens, and drive line. Operation of the tub tilt cylinder is performed using the controls for the tractor which is located on the tractor. After using the normal shut down procedures, the hopper platform can then be opened.




WARNING: To prevent serious injury or death, do not tilt platform on unlevel ground or with material in the tub.

WARNING: For your protection **ALWAYS** install the tub cylinder stop when the tub is tilted. **NEVER** engage tractor PTO when the tub is raised.



tub cylinder stop




2.3 Machine Operation

2.3.1 Tractor Set Up

A tractor drawbar and 3-point arms can cause interference with the PTO driveline. This interference can cause serious damage to the PTO guarding and the PTO telescoping members.


If this implement is attached to a tractor with a clevis hitch (hammer strap) style drawbar, the hammer-strap must be removed to prevent damage to the PTO guarding and the PTO telescoping members. See Figure 2.2.

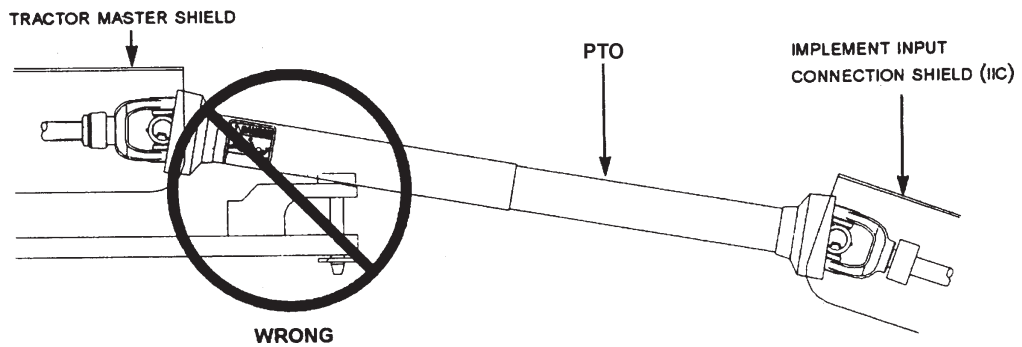Figure 2.2
incorrect clevis hitch
(hammer strap) style
drawbar set up




If this implement is attached to a tractor with an offset in the drawbar, be certain it is in the down position to prevent damage to the IID guarding and the IID telescoping members. See Figure 2.3.

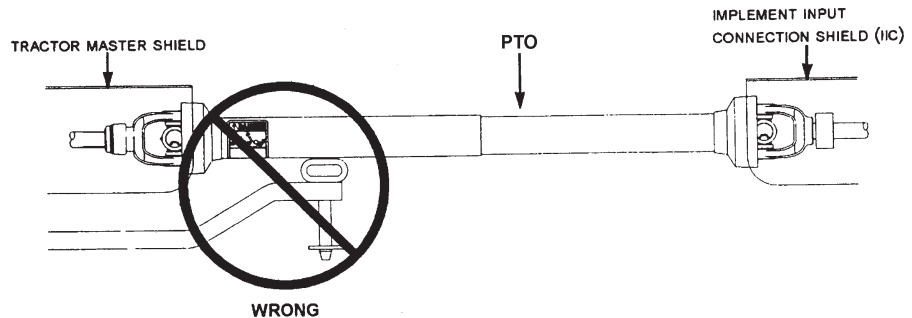Figure 2.3
incorrect offset style
drawbar set up



If this implement is attached to a tractor with 3-point arms, the arms must be fully raised and locked in position to prevent damage to the PTO guarding and the telescoping members. Adjust the tractor drawbar so the distance from the end of the PTO shaft on the tractor to the center of the drawbar hitch pin hole is 16" (41 cm.) for a 1-3/8" shaft, or 20" (51 cm.) for a 1-3/4" shaft, as shown in the illustration to the right.

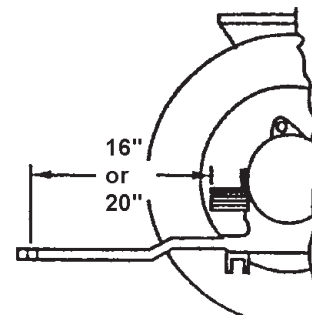



2.3.2 How to hook up to tractor

To hitch the H-1030 to a tractor, perform the following steps:

1. To reduce wear on the PTO shaft knuckle joints, tractor PTO shaft should be in line (parallel) with the H-1030 Tub Grinder. If tractor is equipped with swinging drawbar, adjust so the tractor PTO and H-1030 Tub grinder drive shaft are in line.
2. Connect hydraulic lines to the tractor.
3. Connect electrical lines to tractor.

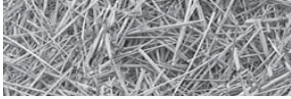


CAUTION: To insure a safe hook-up, the H-1030 Tub Grinder and tractor should be connected with a 1" locking pin.

2.3.3 How to disconnect from tractor

To disconnect the H-1030 from a tractor, perform the following steps:

1. Park H-1030 Tub Grinder and tractor on a level spot.
2. Lower jack to ground, place blocks under jack if ground is soft.
3. Disconnect electrical wires.
4. Disconnect hydraulic lines.
5. Disconnect PTO, place shaft in shaft holder.
6. Raise hitch of H-1030 Tub Grinder to remove weight from tractor hitch by adjusting jack.
7. Remove hitch pin.
8. Drive tractor away slowly.



2.3.4 How to operate machine as a unit

INTRODUCTION

Tractor engines are designed to reach maximum power at PTO speed (1000 rpm), and most tractors are capable of engine speeds from 10 to 20 percent over PTO speed. It will be necessary to operate tractor PTO at approximately 1000 rpm.

The Electronic Governor controls the feed rate to keep the tractor at its peak power point. The operator is able to select the operating range so that when the feed of material lugs down the tractor, the Electronic Governor will reduce the feed at a high enough PTO speed for the tractor to recover automatically if a slug is encountered.

GRINDING

Place materials to be ground directly into the tub. The best method for filling the H-1030 Tub Grinder is:

1. Engage Rotor and increase speed to 1000 RPM on the PTO shaft
2. Fill the tub about half full of unground materials before starting tub rotation.
3. Start tub.
4. Place additional materials in the tub.

LOOSE HAY

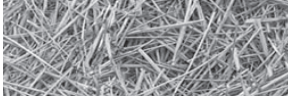
The best capacity will be obtained if the tub is consistently kept no less than half full of loose hay. When loading the tub, place materials slightly to the front rather than directly over the rotor. For best results feed the tub with small portions.

WET OR FROZEN HAY

This is the toughest material for any grinder to handle. When filling the tub with wet or frozen hay, deposit small quantities on a more frequent basis rather than filling the tub with one load.

LARGE ROUND BALES

Place large round bales in the tub on end or on the side. Try grinding bales each way to determine which method will work best for you.



IMPORTANT: Never drop a large round bale into the tub from a high level. Ease the bale over the edge and down into the tub carefully. Dropping a large bale directly on top of the rotor will cause damage to the rotor.

CROP RESIDUE

When grinding crop residues, use the same methods as with loose hay. Extremely wet or frozen materials should be placed sparingly into the tub.

SMALL GRAINS

Grinding small grains requires special attachments. These attachments fit directly over the rotor. It is not recommended that small grains be ground without the use of one of the small grain attachments. (See Appendix B: H-1030 Specifications under the heading “Options”.)

EAR CORN


Grinding ear corn requires a special attachment. This attachment fits directly over the rotor and uses crossbars in the tub to feed corncobs into the rotor. (See Appendix B: H-1030 Specifications under the heading “Options”.)

IF LODGING OCCURS

Materials may lodge against the side of the tub and not feed down to the rotor. If this occurs, reverse the tub direction briefly and then start the tub in a forward direction again. This practice normally dislodges any materials.



WARNING: Never attempt to dislodge material inside the rotor when the machine is in operation by physically pushing down on materials. **WHEN THE MACHINE IS IN OPERATION, STAY OUT OF THE TUB.**



2.4 Shutdown procedures

2.4.1 Normal Shutdown Procedure



CAUTION: At full speed, energy is stored in the rotor. **Do not use the tractor PTO brake to stop the rotor.**



WARNING: The stored up energy in the rotor causes it to rotate long after disengaging the tractor PTO. Before performing any maintenance on the machine or getting into the tub, be sure rotor and all moving parts have come to a complete stop.

Before working on or near the H-1030 Tub Grinder for any reason, including servicing, inspecting or unclogging machine:

1. Run H-1030 Tub Grinder until discharge conveyor is empty, and grind as much of the material in the tub as possible.
2. Reduce engine speed to idle.
3. Disengage PTO
4. Disengage hydraulics.
5. Place transmission in park and set parking brake.
6. Shut off tractor engine and remove key.
7. Wait for all movement to stop.
8. Disconnect PTO driveline from tractor.

2.4.2 Emergency Shutdown Procedure


Disengage PTO and tractor hydraulics

2.5 Storage

2.5.1 Preparing for storage

To prepare the unit for storage, perform the following steps:

1. Check the wheel bearings for lubrication requirements and adjustments at the end of the season.
2. Check the pressure roller bearings for lubrication and adjustments at the end of the season.
3. Clean the machine thoroughly to prevent rust and to make inspections easier. Clean and repaint the tub floor to prevent rust and sticking problems at start up time.
4. Check for loose or worn chains, belts, sprockets, and pulleys.
5. Check the condition of bearings.



2.5.2 Removing from storage

To prepare the unit for use after storage, perform the following steps:

1. Perform a thorough pre-operation inspection.

2.6 Road Transport

2.6.1 Set up to transport

Inspect H-1030 Tub Grinder for any loose parts, tools, or any materials. Remove them or fasten them securely to the H-1030 Tub Grinder.


To set up the H-1030 for transport, perform the following steps:

1. Fold the conveyor.
2. Check for local restrictions on towing.

2.6.2 Change back to operate

To set up H-1030 for operation, perform the following steps:

1. Connect H-1030 Tub grinder to tractor.
2. Connect hydraulic hoses and electrical cable to tractor
3. Lower the discharge conveyor.
4. Unfold conveyor to working length.



2.7 Raising the Tub Platform



WARNING: To prevent serious injury or death, do not tilt platform on unlevel ground or with material in the tub.

To raise the tub platform, perform the following steps:

1. Park machine on firm level ground or surface.
2. Remove all material from tub.
3. Disengage the PTO.
3. Clear personnel from work area.
4. Raise platform.
5. Install tub cylinder stop.

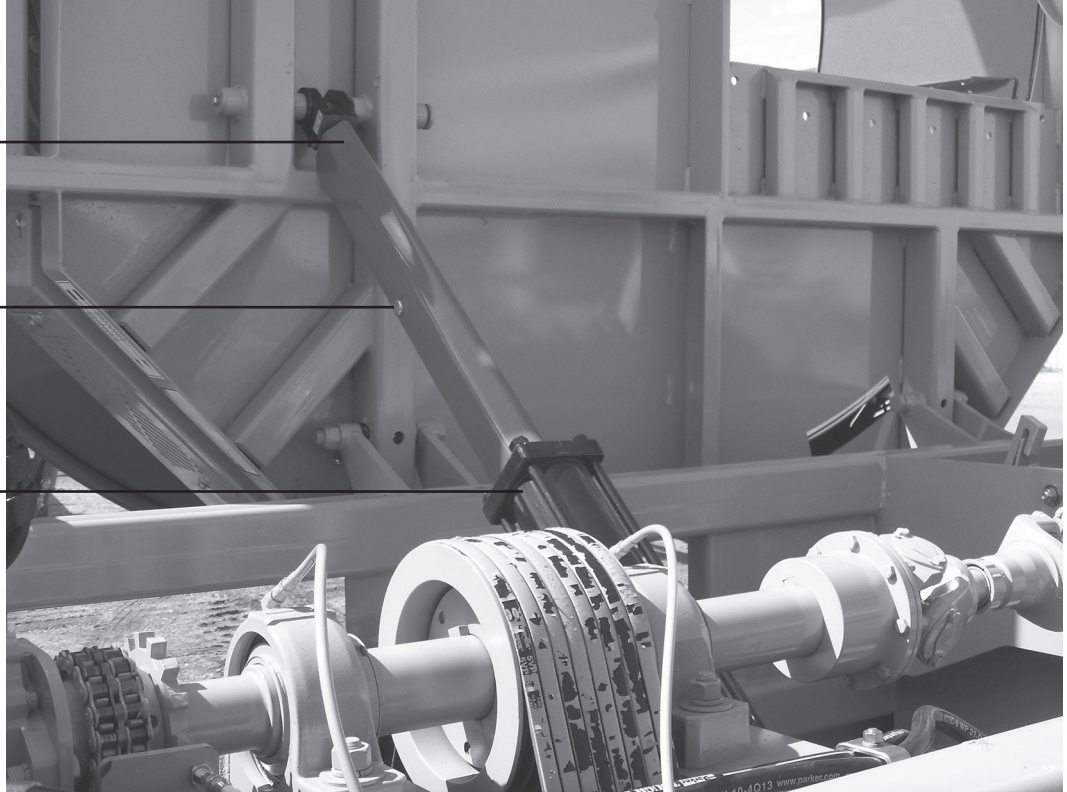


WARNING: For your protection **ALWAYS** install the tub cylinder stop when the tub is tilted. **NEVER** engage tractor PTO when the tub is raised.

tub cylinder stop in
working position on
tub tilt cylinder

tub cylinder stop lock
pin

tub tilt cylinder





2.8 Operation of the Electronic Governor (For S.N. Up to 1018012030)

Auto/Manual Mode

- o The system has two modes of operation: Auto Mode and Manual Mode. The mode of operation can be toggled using the Auto/Manual button on the display.

Tub

- **Tub Forward**



- o **ON**

If the Tub Forward button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and either the Rotor Speed input is greater than zero, or the system is in Manual Mode:

- Tub Forward output will be activated.
- Tub Speed output will be ramped from minimum output to the output setting indicated by the display.
- Tub Forward indicator on the display will change color from black to red.

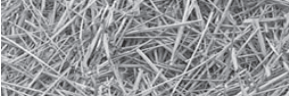
- o **OFF**

If the Tub Forward output is active, and the system is switched from Manual Mode to Auto Mode while the Rotor Speed input is zero, or the Tub Forward button is pressed, or the Tub Reverse button is pressed on the display:

- Tub Forward output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Forward indicator on the display will change color from red to black.

If the Rotor Speed input goes to zero when the Tub Forward output is active and the system is in Auto Mode:


- Tub Forward output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Forward indicator on the display will change color from red to black.
- Speed Sensor Fault will be activated.



o **Warning**


If the Tub Forward button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode:

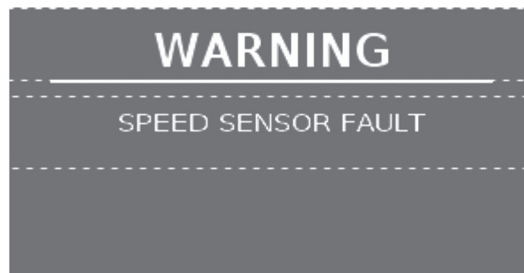- The following alarm window will be shown on the display for 3 seconds:



If the Tub Forward button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode, and the Speed Sensor Fault is active:

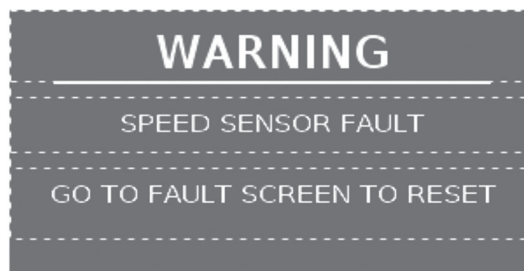- The following alarm window will be shown on the display for 3 seconds:




- **Tub Reverse**



o **ON**

If the Tub Reverse button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and either the Rotor Speed input is greater than zero, or the system is in Manual Mode:

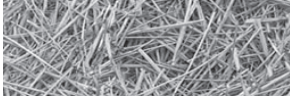- Tub Reverse output will be activated.
- Tub Speed output will be ramped from minimum output to the output setting indicated by the display.
- Tub Reverse indicator on the display will change color from black to red.



o **OFF**

If the Tub Reverse output is active, and the system is switched from Manual Mode to Auto Mode while the Rotor Speed input is zero, or the Tub Forward button is pressed, or the Tub Reverse button is pressed on the display:

- Tub Reverse output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Reverse indicator on the display will change color from red to black.

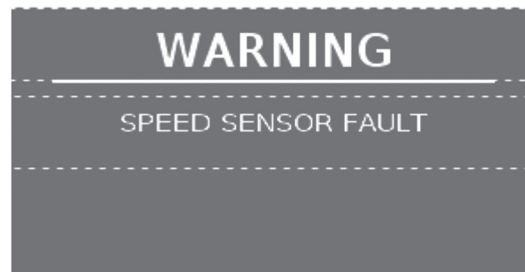
If the Rotor Speed input goes to zero when the Tub Reverse output is active and the system is in Auto Mode:

- Tub Reverse output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Reverse indicator on the display will change color from red to black.
- Speed Sensor Fault will be activated.

o **Warning**


If the Tub Reverse button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode:


- The following alarm window will be shown on the display for 3 seconds:



If the Tub Reverse button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode, and the Speed Sensor Fault is active:

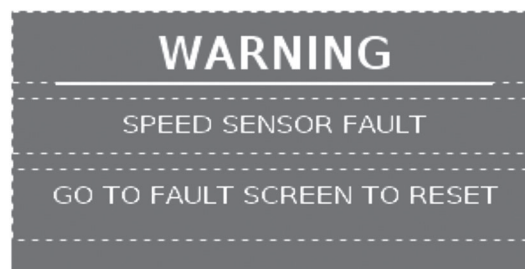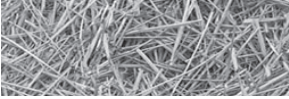- The following alarm window will be shown on the display for 3 seconds:






- **Tub Speed**


- o Manual Mode:

- The Tub will operate in an open loop control mode and will not compensate for rotor rpm changes.
 - There will be a Tub Speed gauge on the display to indicate the percentage of output from 0-100 percent.
 - The Tub Speed will be adjustable on Home Screen of the display.


- o Auto Mode:

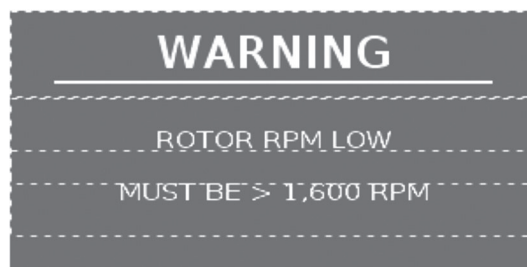- The Tub will operate in a closed loop control mode and will compensate for rotor rpm changes.
 - The Tub Speed will be adjustable on Home Screen of the display. This will be the maximum speed the Tub will operate at and is the same speed used in Manual Mode.
 - The Engine Load will be used to reduce the Tub Speed to provide an anti-stall function to the rotor. This setting will be adjustable on the Home Screen of the display and will be displayed as 0-100%.
 - Rotor Speed Max (Blue Arrow) is the setpoint at which the Tub starts to slow down. This is set using the Set Speed button on the display. This value will not be allowed to go above the Set Speed Limit High RPM and below the Set Speed Limit Low RPM. These values can be changed with the Impulse Service Tool.
 - If the Set Speed button is pressed when the Rotor Speed is less than the Set Speed Limit Low RPM:
 - The following alarm window will be shown on the display for 3 seconds.






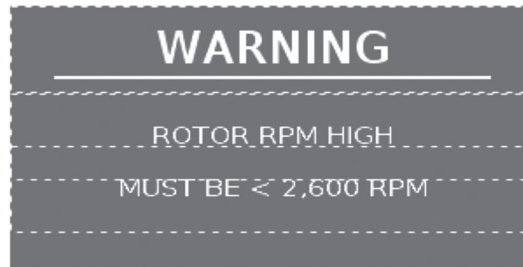- If the Set Speed button is pressed when the Rotor Speed is greater than the Set Speed Limit High RPM:
 - The following alarm window will be shown on the display for 3 seconds.



Engine Load Max

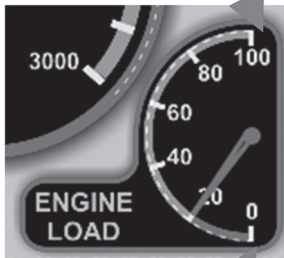



Engine Load Min

- Rotor Speed Min Limit is the RPM where the Tub will stop when the Engine Load is set to 100%.
- Rotor Speed Min (Green Arrow) is the setpoint the Tub will slow down to. If the Engine Load is set to less than 100%, the Tub will still start to slow down at the Rotor Speed Max setpoint but the Tub will be stopped at the Engine Load percentage between the Rotor Speed Max and the Rotor Speed Min Limit.
- Load Example:
 - Rotor Speed Max = 2,300 rpm
 - Rotor Speed Min Limit = 1,400 rpm
 - Engine Load Display = 75%

Calculate Engine Load RPM: $0.75 * (2300 - 1400) = 675 \text{ rpm}$

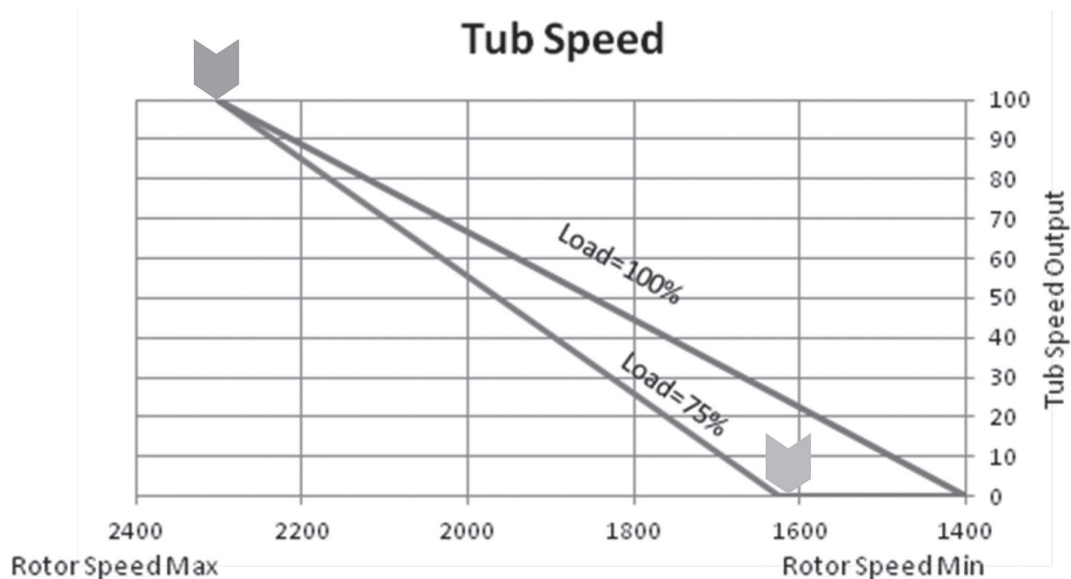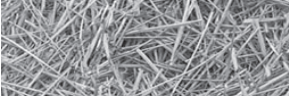
Calculate Rotor Speed Min: $2,300 - 675 = 1,625 \text{ rpm}$





Conveyor

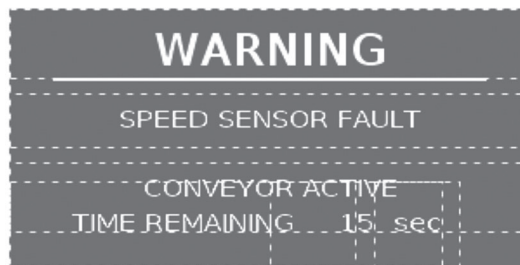- If the Conveyor button is pressed on the display and the Conveyor Forward output is de-active and the Rotor Speed input is greater than zero or the system is in Manual Mode:
 - Conveyor Forward output will be activated.
 - Conveyor Forward indicator on the display will change color from black to red.
- If the Conveyor Forward output is active, or the Conveyor button is pressed on the display:
 - Conveyor Forward output will be de-activated.
 - Conveyor Forward indicator on the display will change color from red to black.
- If the Conveyor Fwd output is active, and the Speed Sensor Fault is active:
 - Conveyor Forward output will be de-activated after the Conveyor Speed Off Timer expires. The Conveyor Speed Off Time can be changed with the Impulse Service Tool.
 - Conveyor Forward indicator on the display will change color from red to black.
 - The following alarm window will be shown on the display while the countdown is active:





2.8a Operation of the Electronic Governor (For S.N. 1020012130 and Up)

Auto/Manual Mode

- o The system has two modes of operation: Auto Mode and Manual Mode. The mode of operation can be toggled using the Auto/Manual button on the display.

Tub

- **Tub Forward**



- o **ON**

If the Tub Forward button is pressed on the display or the radio remote, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and either the Rotor Speed input is greater than zero, or the system is in Manual Mode:

- Tub Forward output will be activated.
- Tub Speed output will be ramped from minimum output to the output setting indicated by the display.
- Tub Forward indicator on the display will change color from black to red.

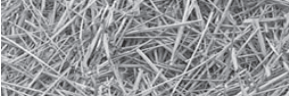
- o **OFF**

If the Tub Forward output is active, and the system is switched from Manual Mode to Auto Mode while the Rotor Speed input is zero, or the Tub Forward button is pressed on the display or radio remote, or the Tub Reverse button is pressed on the display:

- Tub Forward output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Forward indicator on the display will change color from red to black.

If the Rotor Speed input goes to zero when the Tub Forward output is active, and the system is in Auto Mode:


- Tub Forward output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Forward indicator on the display will change color from red to black.
- Speed Sensor Fault will be activated.



o **Warning**


If the Tub Forward button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode:

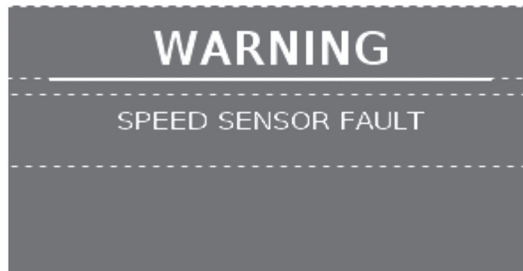- The following alarm window will be shown on the display for 3 seconds:



If the Tub Forward button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode, and the Speed Sensor Fault is active:

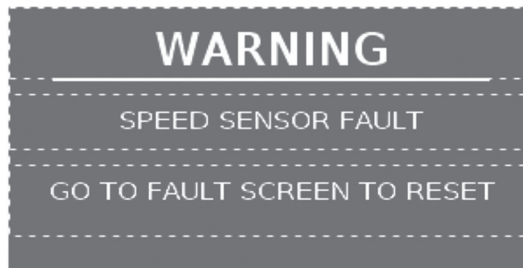- The following alarm window will be shown on the display for 3 seconds:




- **Tub Reverse**



o **ON**

If the Tub Reverse button is pressed on the display or radio remote, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and either the Rotor Speed input is greater than zero, or the system is in Manual Mode:

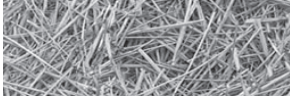- Tub Reverse output will be activated.
- Tub Speed output will be ramped from minimum output to the output setting indicated by the display.
- Tub Reverse indicator on the display will change color from black to red.



o **OFF**

If the Tub Reverse output is active, and the system is switched from Manual Mode to Auto Mode while the Rotor Speed input is zero, or the Tub Forward button is pressed on the display or the radio remote, or the Tub Reverse button is pressed on the display:

- Tub Reverse output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Reverse indicator on the display will change color from red to black.

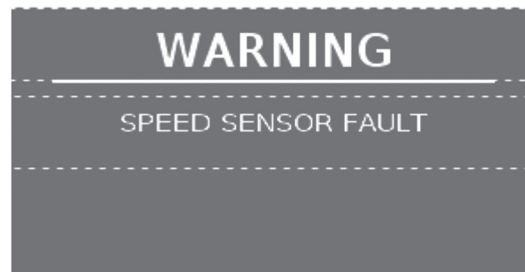
If the Rotor Speed input goes to zero when the Tub Reverse output is active and the system is in Auto Mode:

- Tub Reverse output will be de-activated.
- Tub Speed output will be de-activated.
- Tub Reverse indicator on the display will change color from red to black.
- Speed Sensor Fault will be activated.

o **Warning**


If the Tub Reverse button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode:


- The following alarm window will be shown on the display for 3 seconds:



If the Tub Reverse button is pressed on the display, and the Tub Forward output is de-active, and the Tub Reverse output is de-active, and the Rotor Speed input is less than zero, and the system is in Auto Mode, and the Speed Sensor Fault is active:

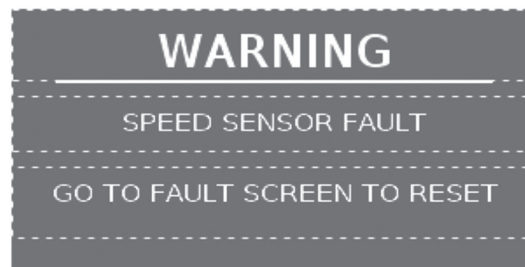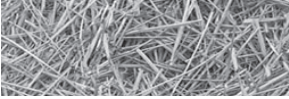- The following alarm window will be shown on the display for 3 seconds:






- **Tub Speed**


- o Manual Mode:

- The Tub will operate in an open loop control mode and will not compensate for rotor rpm changes.
 - There will be a Tub Speed gauge on the display to indicate the percentage of output from 0-100 percent.
 - The Tub Speed will be adjustable on Home Screen of the display.


- o Auto Mode:

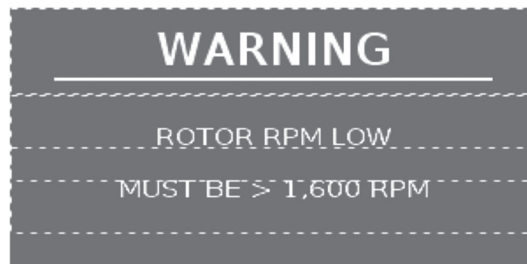- The Tub will operate in a closed loop control mode and will compensate for rotor rpm changes.
 - The Tub Speed will be adjustable on Home Screen of the display. This will be the maximum speed the Tub will operate at and is the same speed used in Manual Mode.
 - The Engine Load will be used to reduce the Tub Speed to provide an anti-stall function to the rotor. This setting will be adjustable on the Home Screen of the display and will be displayed as 0-100%.
 - Rotor Speed Max (Blue Arrow) is the setpoint at which the Tub starts to slow down. This is set using the Set Speed button on the display. This value will not be allowed to go above the Set Speed Limit High RPM and below the Set Speed Limit Low RPM. These values can be changed with the Impulse Service Tool.
 - If the Set Speed button is pressed when the Rotor Speed is less than the Set Speed Limit Low RPM:
 - The following alarm window will be shown on the display for 3 seconds.






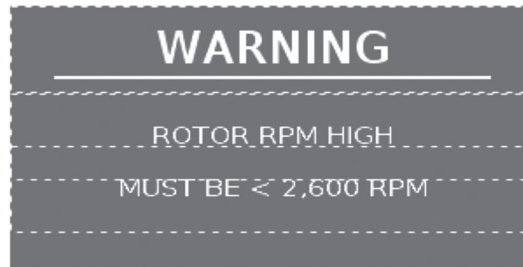- If the Set Speed button is pressed when the Rotor Speed is greater than the Set Speed Limit High RPM:
 - The following alarm window will be shown on the display for 3 seconds.



Engine Load Max

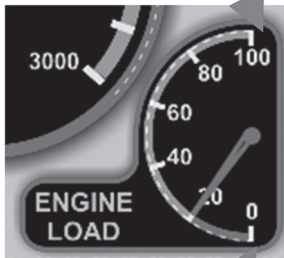



Engine Load Min

- Rotor Speed Min Limit is the RPM where the Tub will stop when the Engine Load is set to 100%.
- Rotor Speed Min (Green Arrow) is the setpoint the Tub will slow down to. If the Engine Load is set to less than 100%, the Tub will still start to slow down at the Rotor Speed Max setpoint but the Tub will be stopped at the Engine Load percentage between the Rotor Speed Max and the Rotor Speed Min Limit.
- Load Example:
 - Rotor Speed Max = 2,300 rpm
 - Rotor Speed Min Limit = 1,400 rpm
 - Engine Load Display = 75%

Calculate Engine Load RPM: $0.75 * (2300 - 1400) = 675 \text{ rpm}$

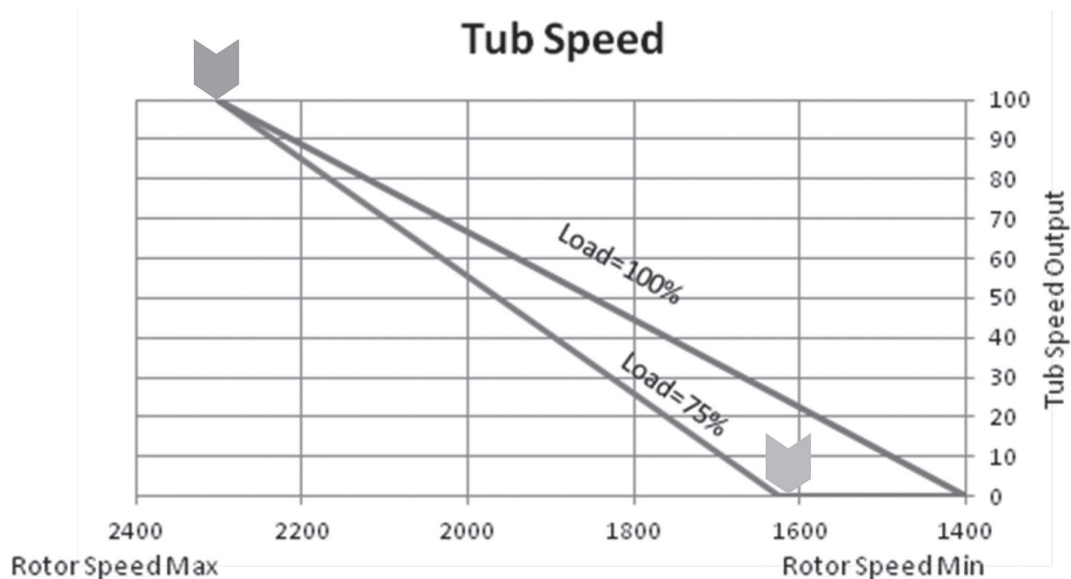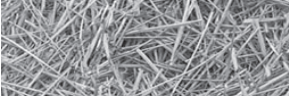
Calculate Rotor Speed Min: $2,300 - 675 = 1,625 \text{ rpm}$





Conveyor

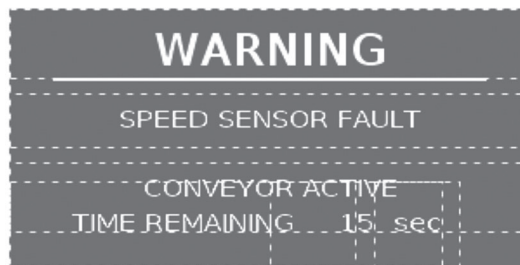- If the Conveyor button is pressed on the display and the Conveyor Forward output is de-active and the Rotor Speed input is greater than zero or the system is in Manual Mode:
 - Conveyor Forward output will be activated.
 - Conveyor Forward indicator on the display will change color from black to red.
- If the Conveyor Forward output is active, or the Conveyor button is pressed on the display:
 - Conveyor Forward output will be de-activated.
 - Conveyor Forward indicator on the display will change color from red to black.
- If the Conveyor Fwd output is active, and the Speed Sensor Fault is active:
 - Conveyor Forward output will be de-activated after the Conveyor Speed Off Timer expires. The Conveyor Speed Off Time can be changed with the Impulse Service Tool.
 - Conveyor Forward indicator on the display will change color from red to black.
 - The following alarm window will be shown on the display while the countdown is active:



Bypass

- If the Conveyor output is active and either the Tub FWD or Tub REV outputs are active the Bypass output will be activated.
- If the Conveyor output is de-active or the Tub FWD and Tub REV outputs are de-active the Bypass output will be de-activated.



2.9 Adjusting the conveyor belt tension

The rollers on the discharge conveyor are adjustable to allow for belt stretching and tracking. If the conveyor belt slows down or stops during operation, slippage may be the cause. To eliminate slippage, tighten the adjusting bolts on the conveyor equally. This will help to keep the belt centered on the rollers.




IMPORTANT: Do not overtighten conveyor belts. Use only enough tension to eliminate belt slippage.

Figure 2.6
discharge conveyor belt
adjusting bolts



belt adjusting bolt



2.10 Adjusting the conveyor belt tracking

A. When a new belt is installed: Use only genuine DuraTech Industries parts.

1. Begin by adjusting the drive roller so that the mounting bearings are the same distance from the end of the conveyor frame. This ensures that the roller centerline is square with conveyor frame. Adjust the idler roller tension bolts so that they are equal on both sides of the conveyor.

B. If the belt is running to the right side, perform the following steps:

1. Adjust the idler roller tension bolt on the right side of the conveyor. Increase tension by approximately 2 full turns of the adjusting nut.
2. Make certain that all personnel are clear of machine and the start engine. Engage the tractor PTO.

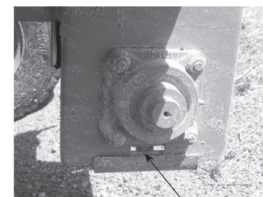


NOTE: The rotor will also be turning.


3. Observe conveyor belt tracking from a safe location.
4. If further adjustment is required, disengage tractor PTO, and shut down the machine using the normal shutdown procedure.
5. Some adjustment of the drive roller may be required if no improvement is noted by increasing the idler roller tension.
6. Repeat steps 1-5 until proper tracking is achieved.

C. If the belt is running to the left side, perform the following steps:

1. Adjust the idler roller tension bolt on the right side of the conveyor. Increase the tension by approximately 2 full turns of the adjusting nut.
2. Make certain that all personnel are clear of machine and start engine. Engage the tractor PTO.
3. Observe the tracking of the conveyor belt from a safe location.
4. If further adjustment is required, disengage tractor PTO and shutdown using the normal shutdown procedure.
5. Some adjustment of the drive roller may be required if no improvement is noted by increasing the idler roller tension.
6. Repeat steps 1-5 until proper tracking is achieved.




idler roller tension adjusting bolt

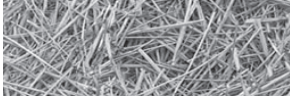


2.11 Adjusting tub chain tension

To adjust the tub chain tension, perform the following steps:

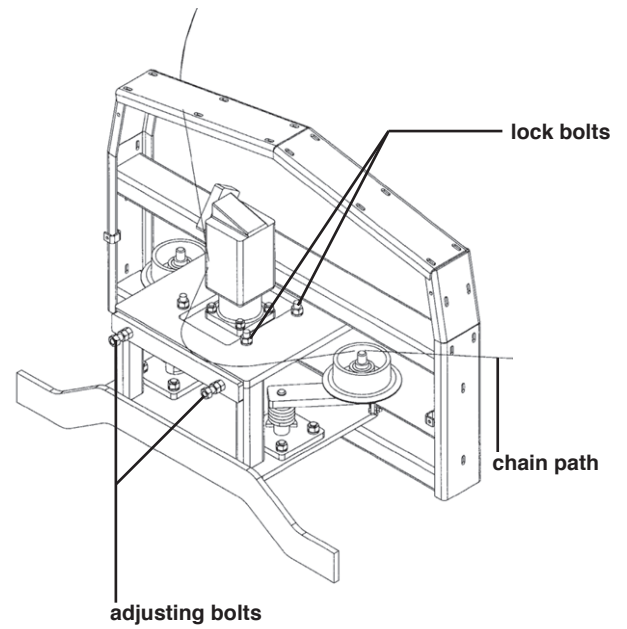1. Loosen (4) bolts holding motor mounting plate.
2. Turn (2) adjusting bolts to set chain tension.
3. Tighten the (4) bolts holding motor mounting plate.





2.12 Main drive belt adjustment

Power is transferred from the drive shaft to the rotor through drive belts and two sheaves. Maintaining the proper tension on these belts is critical for reaching optimum grinder performance. A spring tensioning system is used on the H-1030 grinder to maintain tension as belts stretch over time. To properly tension the drive belts turn the tensioning rod until the spring caps come into contact with the tubes that the springs are seated into. **DO NOT OVERTIGHTEN!**

The two sheaves must be running parallel, if they are not the belts will not track, premature belt wear or belts running off of the sheaves will result. Adjust sheave alignment if needed.

Discharge Conveyor Flow Control Valve

A flow control valve is located on the side of the discharge conveyor. This valve allows the operator to control the speed of the discharge conveyor; it will not vary the speed of the belly augers.

Adjusting the discharge conveyor flow control valve

The discharge conveyor flow control valve can be used to slow the discharge conveyor down which is helpful when grinding in windy conditions, when loading trucks, or when the grinder output is low. The flow to the hydraulic motor can be varied from approximately zero to the maximum flow by adjusting the valve from min (0) to max setting (10).



Note: Whenever this valve is used to decrease the speed of the discharge conveyor, heat will be generated. The hydraulic system may not be able to dissipate the excess heat generated in warm operating conditions. Always be aware of the hydraulic oil temperature; a thermometer is located on the side of the hydraulic reservoir. If the oil temperature becomes greater than 175°F (79°C) adjust the valve to max setting (10).






Figure 2.7
sheave alignment

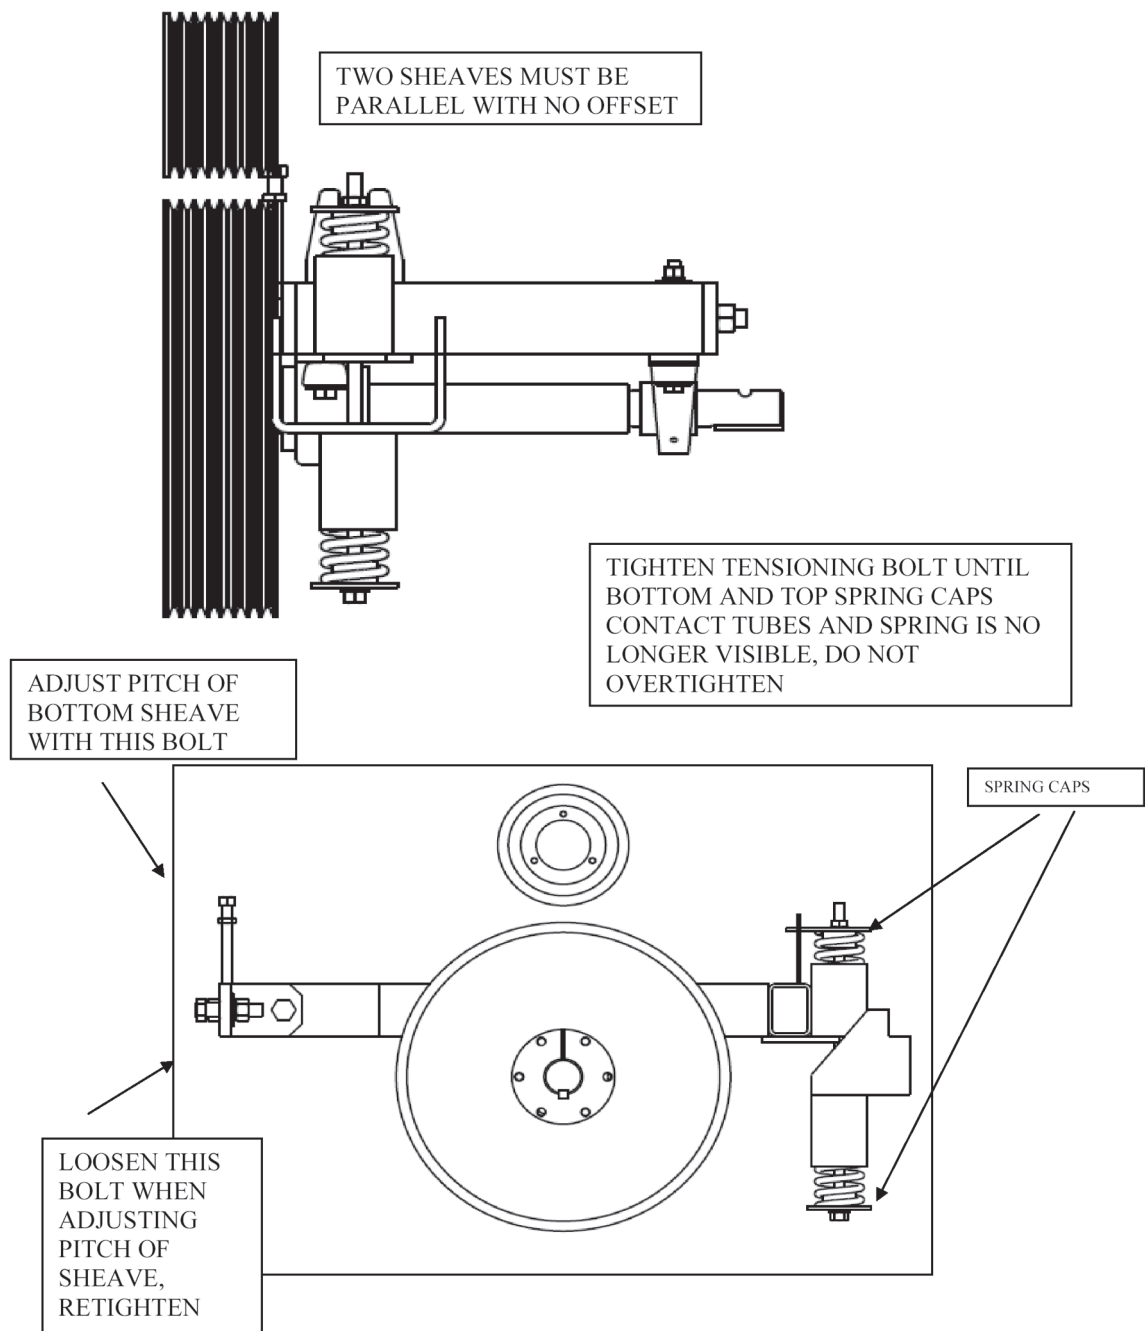

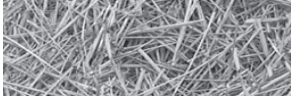



2.13 Sensor test

Set the gap between the sensor and the sprocket to 3/32" (2.4 mm). Sensor resistance should be 900 ohms +/- 10%.

2.14 Belly auger drain covers

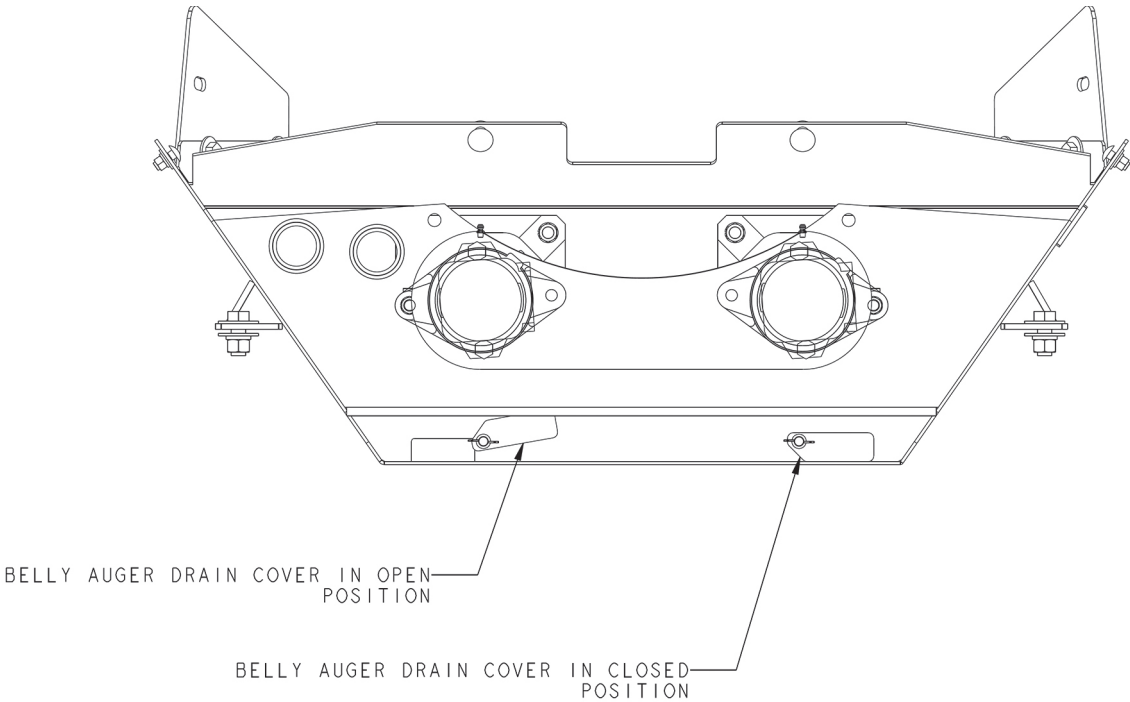Belly auger drain covers should be in the open position to allow any moisture to drain out.
When grinding small grains the belly auger covers should be in the closed position to keep the grain from spilling out.





Section 3: General Maintenance

SERVICE AND MAINTENANCE



CAUTION: If for any reason arc welding is to be done, always ground cylinder to frame of machine to prevent arcing in bearings.

1. Before working on or near the H-1030 Tub Grinder for any reason, including servicing, inspecting or unclogging machine:
 - a. Run H-1030 Tub Grinder until discharge conveyor is empty, and grind as much of the material in the tub as possible.
 - b. Reduce engine speed to idle.
 - c. Disengage PTO
 - d. Disengage hydraulics.
 - e. Place transmission in park and set parking brake.
 - f. Shut off tractor engine and remove key.
 - g. Wait for all movement to stop.
 - h. Disconnect PTO driveline from tractor.
2. When replacing any part on your H-1030 Tub Grinder, be sure to use only DuraTech Industries authorized parts.
3. Relieve all pressure in the hydraulic system before disconnecting the lines or performing other work on the system. Make sure all connections are tight and the hoses and lines are in good condition before applying pressure to the system.




WARNING: Hydraulic fluid escaping under pressure can be invisible and have enough force to penetrate the skin. When searching for a suspect leak, use a piece of wood or cardboard rather than your hands. If injured, seek medical attention immediately to prevent serious infection or reaction.

4. Visually examine to see if any internal parts show excessive wear. Repair or replace needed parts. These parts include rotor plates and holes in the plates that support the rods. Enlarged holes can cause rods to break.

Also check rods, rod locking and retaining devices, hammers, screens, screen tracks and hold downs, main shaft, hinges or anything else that could wear and perhaps fail if not properly maintained, and cause damage to the rotor and/or personnel safety. Check bearing alignment and mounting bolts to insure a firm foundation and reduced vibration.

Keep all foreign objects out of the tub and away from the rotor. Foreign objects may result in personal injury or cause severe damage to hammers, screens, rods, and other parts that will cause rotor failure.



5. Check for loose or worn chains, belts, sprockets and pulleys.
6. Keep sprockets and pulleys aligned.
7. Inspect rotor and all rotating parts for wrapped twine or wire build up.
8. If machine is going to sit idle for an extended period of time, tub floor should be cleaned to prevent rust and sticking problems at start up time.
9. The proper tire pressure is 36 PSI (2.5 BAR).
10. The wheel bearings should be checked for lubrication and adjustments yearly, preferably at the end of the season.

If a generous amount of grease is on the bearing and in the housing, and if the grease is soft, the grease will not need changing.

If the lubricant is caked and the bearing seems dry, wash the bearing to remove old grease. Repack the bearing.

3.1 Lubrication



CAUTION: Follow normal shutdown procedure before adjusting or lubricating.

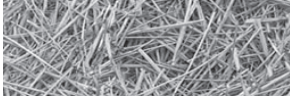
When operating the H-1030 Tub Grinder during cold weather, perform all lubrication after bearings are at operating temperatures.

BEARING LUBRICATION

Bearings operating in the presence of dust and water should contain as much grease as speed will permit, since a full bearing with a slight leakage is the best protection against entrance of foreign material. In the higher speed ranges, too much grease will cause overheating.

High-speed operation, abnormal bearing temperature may indicate faulty lubrication. Normal temperature may range from “cool to warm to the touch” up to a point. Unusually high temperatures “too hot to touch for more than a few seconds” accompanied by excessive leakage of grease indicates too much grease. High temperatures with no grease showing at the seals, particularly if the bearing seems noisy, usually indicate too little grease. Normal temperature and a slight showing of grease at the seals indicate proper lubrication.

The following chart is a general guide for relubrication. Certain conditions may require a change of lubrication periods as dictated by experience.



Lubrication Chart

REF. NO.	LOCATION	NUMBER OF GREASE FITTINGS	FREQUENCY	
1	Jack Shaft Bearings	2	10 hrs.	*
2	Tub Chain Idler Pivot	2	Daily	
3	Rotor Bearings	2	10 hrs.	*
4	Tub Pivot	2	40 hrs.	*
5	Belly Auger Bearings	4	10 hrs.	*
6	Bull Wheel	2	10 hrs.	
7	Discharge Conveyor Bearings	4	40 hrs.	*
8	Discharge Conveyor Lift Pivot	2	40 hrs.	
9	PTO	2	100 hrs	
10	Wheel Bearings	-	Annually	
11	Tub Pressure Roller	-	Sealed	
12	Roller Chains	-	Oil Daily in Dusty Conditions	


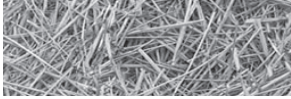


Figure 3.1
rotor bearing lubrication
point

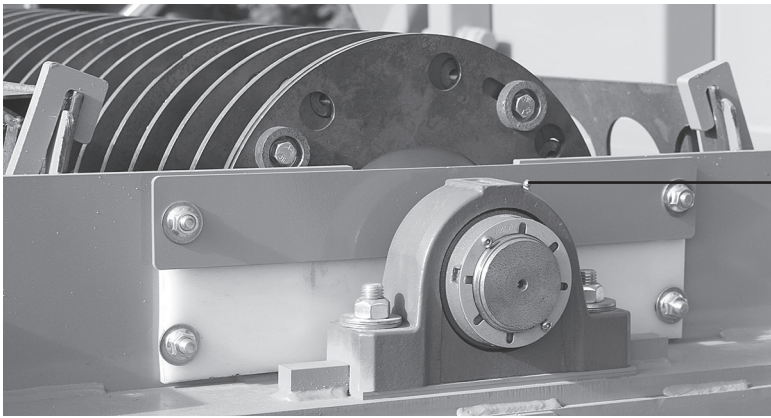

rotor bearing lubrication
points 1 of 2 (Ref # 3)


Figure 3.2
rotor bearing and belly
auger bearing lubrication
points



belly auger bearing lubrication
points (Ref # 5)

front rotor bearing lubrication points 2 of 2 (Ref # 3)

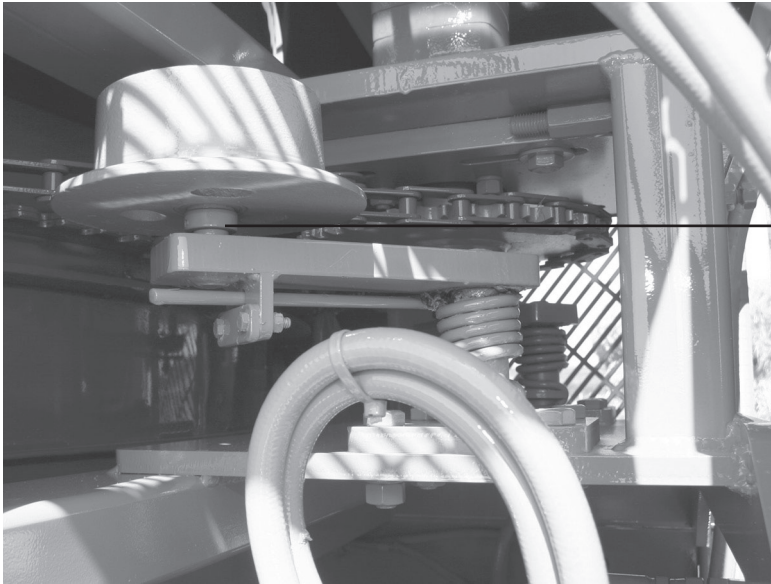Figure 3.3
tub chain idler pivot
lubrication point



tub chain idler pivot
lubrication point
(Ref #2)




Figure 3.4
tub pivot lubrication points




tub pivot lubrication points (Ref #4)

Figure 3.5
tub roller, tub pressure
roller and roller chain

pressure roller

roller chain
(Ref #12)

tub pressure roller
(Ref #11)

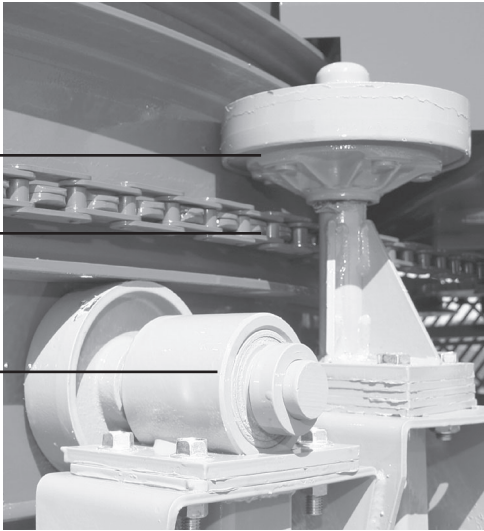

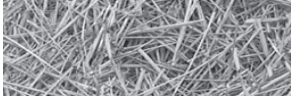


Figure 3.6
PTO lubrication points

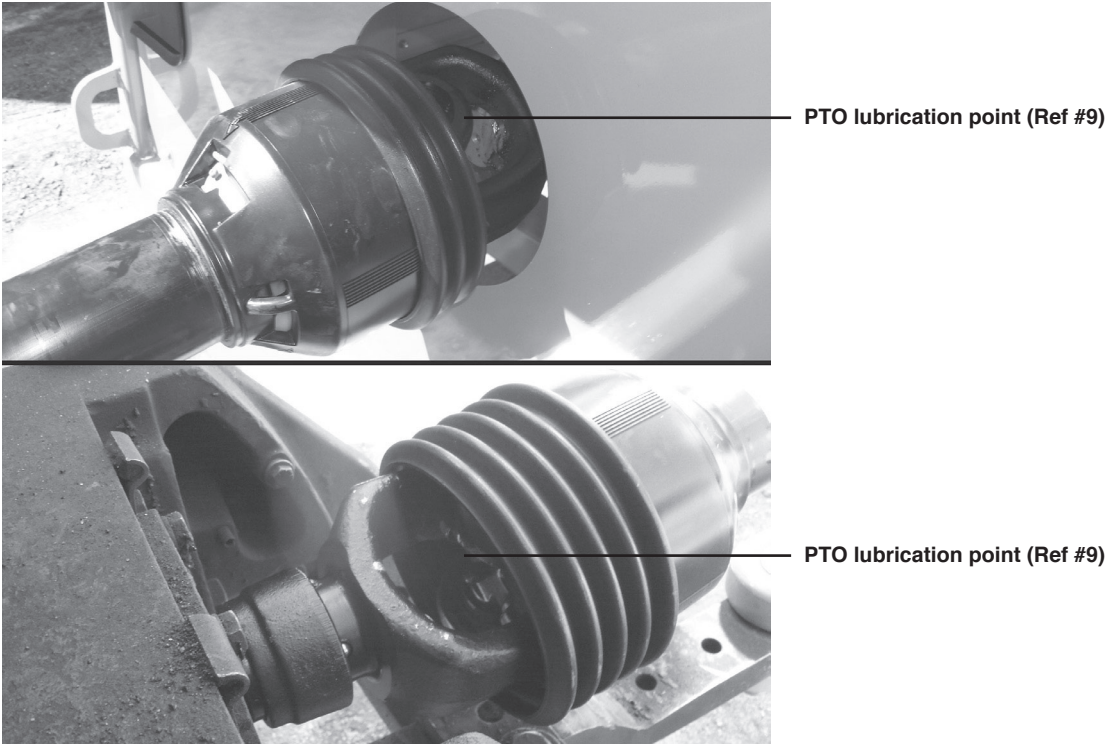


Figure 3.7
discharge conveyor
bearings (2 of 4)

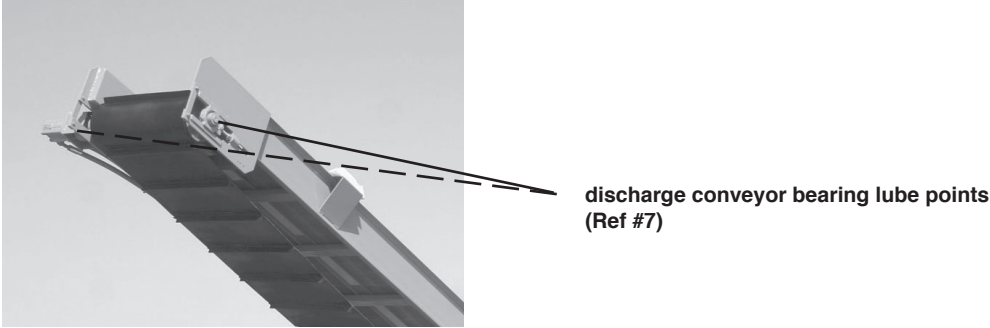


Figure 3.8
discharge conveyor
bearings lubrication points
(2 of 4)

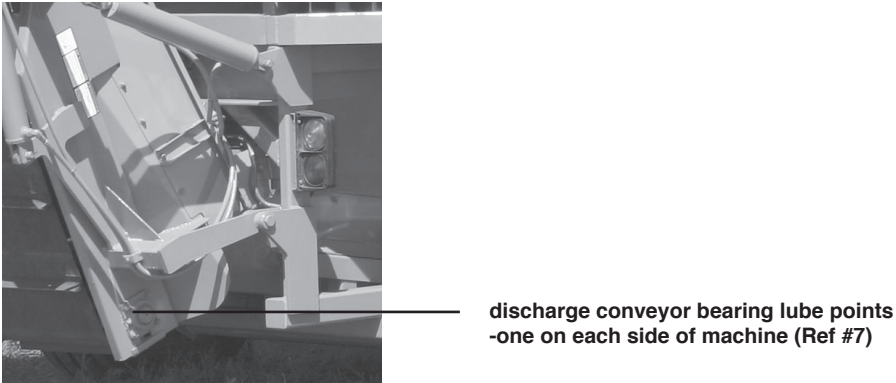
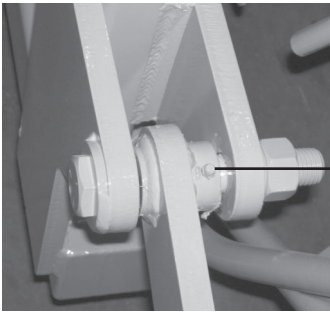


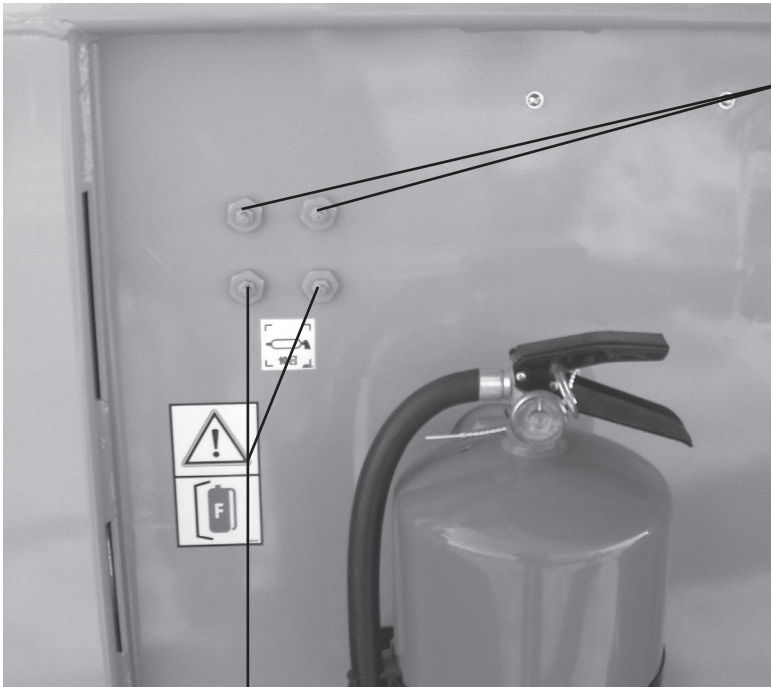


Figure 3.9
conveyor lift pivot
lubrication points




conveyor lift pivot lube points -one on
each side of machine (Ref #8)

Figure 3.10
jack shaft and bull wheel
bearings lubrication points



jack shaft bearings
lubrication points
(Ref #1)

bull wheel bearings
lubrication points
(Ref #6)



3.2 Hydraulic system



CAUTION: Lack of proper oil level in the reservoir tank will cause system to heat under continuous running. Check the hydraulic oil level daily and replace as necessary.

Hydraulic Oil Reservoir Capacity: 60 gallons

All machines have been pre-run at the factory to insure all functions are performing correctly. The hydraulic reservoir contain approximately 60 gallons of hydraulic oil.

The in tank hydraulic oil filters should be changed after the first 10 hours of operation. Change hydraulic oil and filters after the first 100 hours of operation. Thereafter, change hydraulic oil filters every 500 hours and change hydraulic oil and filters at least every 1000 hours of operation. Change the in tank oil filter if the oil filter pressure gauge indicates a plugged filter

Check the hydraulic oil regularly, and if the oil has a burnt smell or milky appearance, change it immediately.



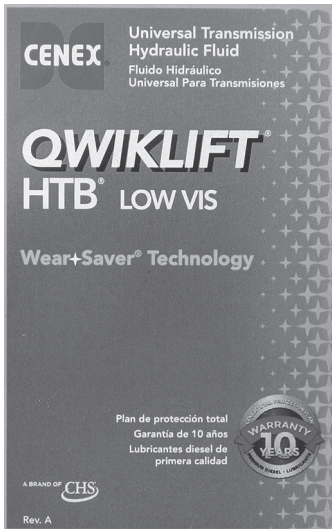
hydraulic oil level indicator

hydraulic oil temperature gauge


oil filter pressure gauge

hydraulic oil fill cap


hydraulic reservoir



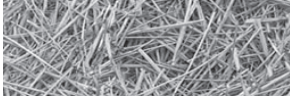DuraTech Industries recommends using Cenex Qwicklift HTB LOW VIS if your machine has a Qwicklift decal on the hydraulic tank. Other acceptable fluids include Mobil 423, Farmland Super HTB, Conoco Hydroclear Power Tran Fluid, or other similar fluids. If the hydraulic tank does not have a decal, then all the above fluids are acceptable.



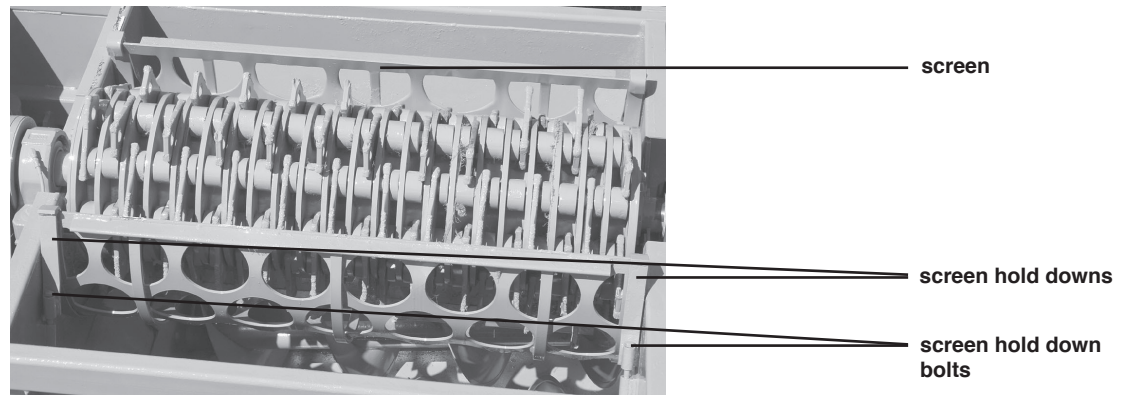3.3 Screens



CHANGING SCREENS



CAUTION: Keep all foreign objects out of the tub and away from the rotor. Foreign objects may cause personal injury or damage to the machine.

CAUTION: Follow normal shutdown procedure before entering tub to do any service work.

To change screens on the H-1030, perform the following steps:

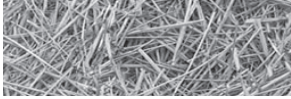
1. Raise the tub platform using the following steps



WARNING: To prevent serious injury or death, do not tilt platform on unlevel ground or with material in the tub.

WARNING: For your protection **ALWAYS** install the tub cylinder stop or tub prop when the tub is tilted. **NEVER** engage tractor PTO when the tub is raised.

- a. Park machine on level ground or surface.
 - b. Remove all material from tub.
 - c. Clear personnel from work area.
 - e. Raise platform.
 - f. Install tub cylinder stop.
2. Loosen and remove bolts on the screen hold down.
 3. With a large hook or bar, pull the screen from its chamber.
 4. Make sure material is clear from screen track.
 5. Install the new screen.
 6. Replace the screen hold down, and bolts.
 7. Tighten all bolts securely.



3.4 Hammermill maintenance

Visually examine the mill to see if any of the internal parts show excessive wear. These parts should include rotor discs and the holes in the discs that support the rods. Enlarged holes can cause rods to break or bend. Also check rods, rod locking or retaining devices, hammers, screens, screen tracks and hold downs, main shaft, platform locking devices, hinges or anything else that could wear and perhaps fail and causing damage to the hammermill and/or personnel safety if not properly maintained. The bearings should also be checked along with mounting bolts to insure a firm foundation and reduced vibration.



CAUTION: Keep all foreign objects out of the tub and away from the mill. Foreign objects may result in personal injury or damage to the machine.

The hammers have been designed and manufactured to provide the best compromise between hardness for good wearing qualities and strength for dependability and resistance to breakage.



WARNING: The hammers have been heat treated, and any alteration of the hammers by heating, grinding, resurfacing or any other process can change the mechanical properties of the hammer and make it unsuitable or dangerous to use.

Because of the high capacity of the machine, the hammers will wear and must be considered expendable. Each hammer has four cutting edges. For maximum life, it is suggested that hammers be rotated periodically to even out the wear over the entire rotor. If one end of a hammer is allowed to wear too long, one of the hammer's cutting edges will be lost. **(For S.N. Up to 1017007030)**

Screens also have two cutting edges. When cutting edges become rounded, the screen can be turned end for end exposing the new cutting edges. The results of badly worn hammers and screens is loss of capacity, and added horse power requirements.

Hammer rods are case hardened to maximize wearability and toughness, although hammer rods must be considered expendable.



NOTE: Hammer and hammer rod life can be extended by keeping rotor rotating at 2300 RPM. Over powering or over feeding the rotor will cause the swinging hammers to lay back resulting in excessive wear on both the hammers and the rods.



3.5 **Balanced Hammer maintenance and replacement** (For S.N. Up to 107007030)

IMPORTANT SAFETY INSTRUCTIONS

Please Read All Instructions

CAUTION!... Turn off and Lockout the power source to your hammermill, before servicing the equipment.

JACOBS hammers have been designed and manufactured to provide the best compromise between hardness for good wearing qualities and strength for dependability and resistance to breakage. Any alteration of the hammer by heating, grinding, resurfacing or any other process can change the mechanical properties of the hammer and make it unsuitable or dangerous to use. Alteration will void any consideration for possible warranty.

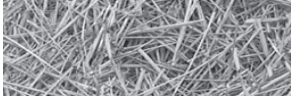
JACOBS hammers are designed to grind the normal ingredients used in the manufacture of feed and related products. Other products that may be reduced in size include such products as paper, wood residue, chips, sawdust, shavings or hogged material. **JACOBS hammers are not designed to grind or crush**, on a primary basis, hard materials such as coal or minerals. Metal, rocks or other similar materials can cause hammer failure and should never be allowed to enter a hammermill.

Visually examine mill to see if any internal parts show excessive wear. Repair or replace needed parts. These parts should include body, liner, rotor discs and holes in the discs that support the rods. Enlarged or elongated holes in the rotor discs can cause rods to break. Damage to the hammermill and/or personnel can result if rods, rod lock devices, hinges, or any wear part attached to the mill is not properly maintained. Bearings and motor alignment should also be checked along with mounting bolts to insure a firm foundation and reduced vibration.

Check and clean all magnets daily. If foreign material is found, the source of this material should be determined and eliminated. Another method of cleaning should be considered to insure complete removal. **Foreign material in a mill can cause sever damage** to hammers, screens, rods, and other parts. It may cause part and subsequent hammermill failure.

When installing or changing hammers, be sure to follow directions on the installation diagram. If the hammers being installed have been balanced by rod, carefully follow the color coding or other instructions. Misplacement could cause excessive vibration. After installing a new set of hammers or turning a corner, watch for unusual or **excessive vibration** upon start up of the hammermill. If any occurs, **immediately shut off the power**. Check to see what is wrong and correct it before starting the mill again. Do not mix hammers from two different sets. Hammers are usually balanced per rod and not per hammer. Do not turn two hole hammers, end for end, if the hammers have excessive wear. There may not be enough metal to support them and breakage could occur.

ALWAYS WEAR SAFETY GLASSES when hammers are being installed, changed from one corner to another, or removed. **Do not hit hammers** during any of the above processes. Striking a hammer may cause particles to fly-off and become a safety hazard.




(For S.N. Up to 107007030)

CAUTION: READ ALL INSTRUCTIONS

- Verify box or boxes of hammers to equal complete set.
- Check parts to verify size and quantity is correct prior to installation.
- These hammers have been *balanced & color coded* to reduce vibration. To maintain the balance, hammers must be installed following the sequence below.

To save you freight and handling, a single set of hammers may be shipped in several boxes. Boxes will be color coded in two locations.

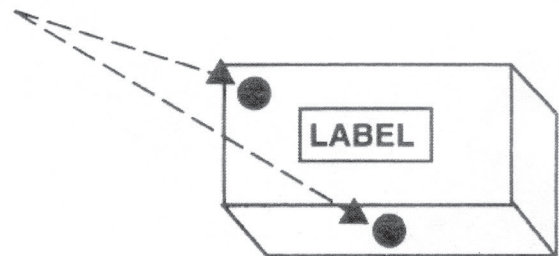A complete set of hammers will consist of boxes marked the same color code.






COLOR LEGEND:

Hammers are balanced =

RED
BLUE
GREEN
BLACK

opposite
"
"
"

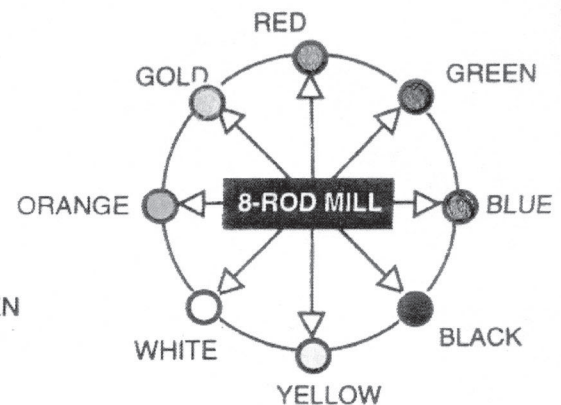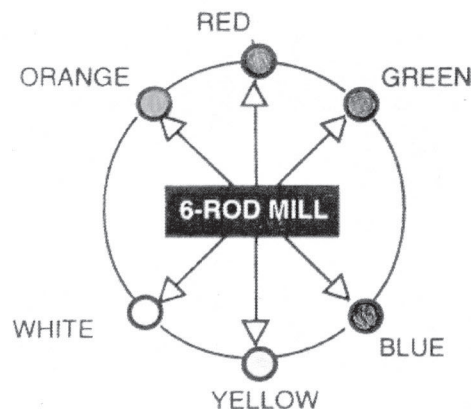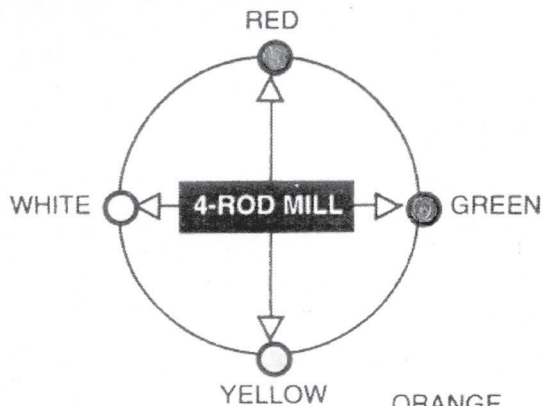YELLOW
ORANGE
WHITE
GOLD





(For S.N. Up to 107007030)



CAUTION: Before entering tub to do any service work, raise the tub platform following the instructions in **Section 2.7 Raising the Tub Platform**. After raising the tub platform follow procedures 5 through 8 of the **Normal Shutdown Procedure** in **Section 2.4.1**.

We recommend the following:

- A. Always replace hammers in pairs, 180 degrees apart. (illustrations A & B below).
- B. Tips placed 180 degrees apart should be the same weight.

To replace the hammers on this machine, perform the following steps:

1. Raise the tub platform following the instructions on page 34 under the heading “Raising the Tub Platform”.



WARNING: To prevent serious injury or death, do not tilt platform on unlevel ground or with material in the tub.

WARNING: For your protection **ALWAYS** install the tub cylinder stop on the tub tilt cylinder when the tub is tilted. **NEVER** engage tractor PTO when the tub is raised.

2. Loosen two bolts at rear of rotor that holds the movable plate in place.
3. Rotate movable plate counter clockwise to align holes allowing hammer rods to be removed through rear of rotor.
4. Remove one row of hammers and replace, taking note as to where spacers are located. (illustrations A & B below).
5. After all hammers have been replaced or turned, turn movable plate to lock rods in place and then tighten bolts.
6. When starting the rotor after installing a new set of hammers or turning corners, watch for unusual or excessive vibration. If any occurs, immediately shut off the rotor. Check to see what is wrong and correct it before starting the rotor again.

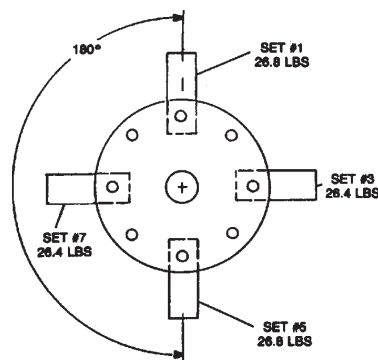


ILLUSTRATION A

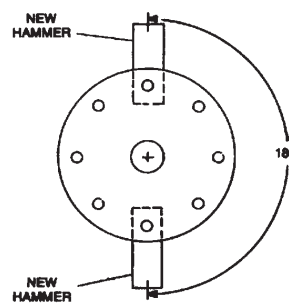


ILLUSTRATION B






Figure 3.11
hammer spacing chart
for the H-1030 - (For S.N.
Up to 107007030)

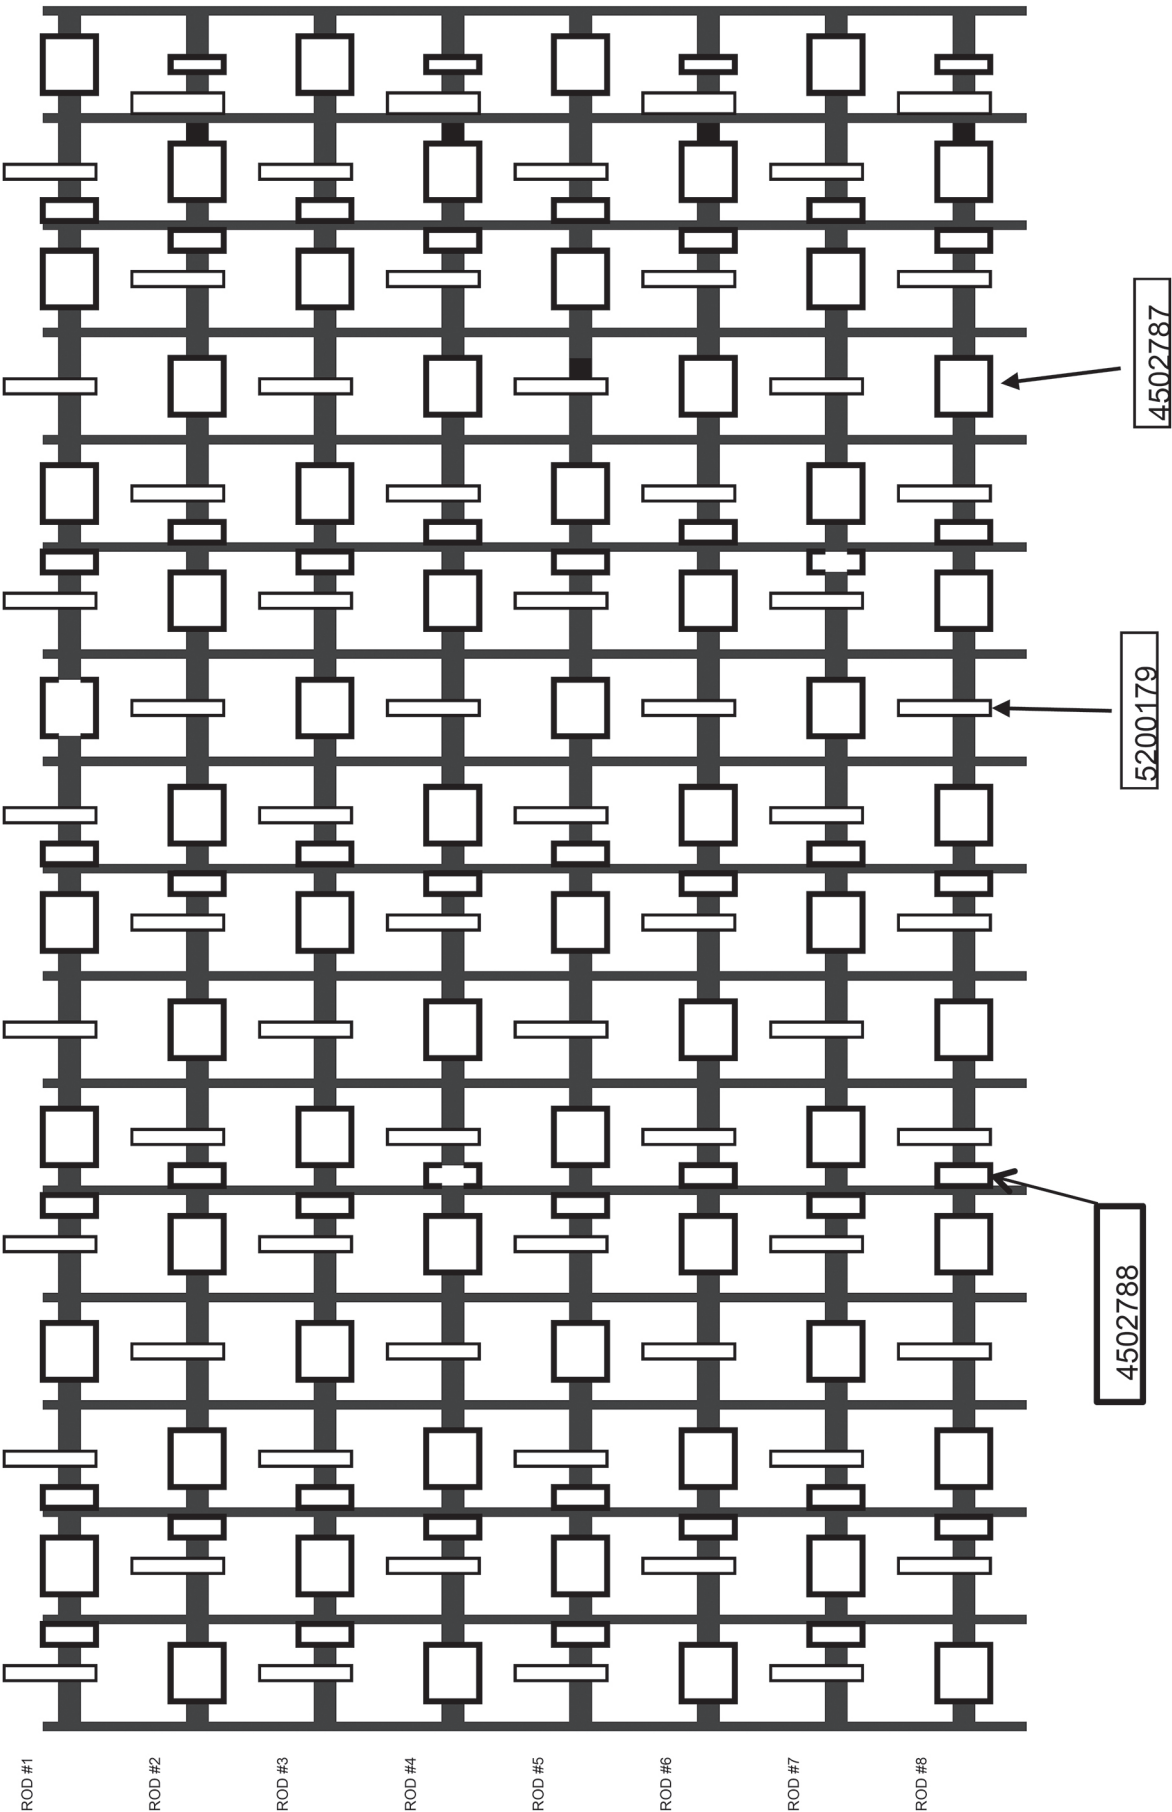



3.5A Balanced Hammer Maintenance and Replacements (For S.N. 1018007130 & UP)

Important Safety Instructions-Please Read



CAUTION: Before entering tub to do any service work, raise the tub platform following the instructions in **Section 2.7 Raising the Tub Platform**. After raising the tub platform follow procedures 5 through 8 of the **Normal Shutdown Procedure** in **Section 2.4.1**.

Any alteration of the hammer by heating, grinding, resurfacing or any other process that can change the mechanical properties of the hammer and make it unsuitable or dangerous.

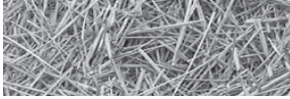
These hammers are not designed to grind or crush hard materials such as metal, rocks, coal, mineral or other similar materials that can cause hammer failure and should never be allowed to enter the hammermill.

When installing or changing hammers, be sure to follow the directions on the installation diagram. The hammers being installed have been balanced by the rod. Carefully follow instructions. Misplacement could cause excessive vibrations. After installing a new set of hammers watch for unusual or excessive vibration upon start up of the hammermill. If any occurs, immediately shut off the power. Check to see what is wrong and correct it before starting the mill again. Do not mix hammers from two different sets. Hammers are balanced per rod and not per hammer.

Always wear safety glasses when hammers are being installed, changed or removed. Do not hit hammers during any of the above processes. Striking a hammer may cause particles to fly-off and become a safety hazard.



CAUTION: Before entering tub to do any service work, raise the tub platform following the instructions in **Section 2.7 Raising the Tub Platform**. After raising the tub platform follow procedures 5 through 8 of the **Normal Shutdown Procedure** in **Section 2.4.1**.



We recommend the following for replacing hammers:

- Always replace hammers in pairs, 180 degrees apart. This process is necessary due to the weight difference of the hammers. (See figures 3.12 hammer layout and 3.13 hammer spacing chart)

Having received four boxes of forged hammers for a complete set of (64) H-1030 hammers, each box has two rows of (8) hammers for a total of (16) hammers. Each box is designated with the number of which rods each row of (8) hammers needs to be installed on.

EXAMPLE: First box should be tagged with 1-5; the first row should go on #1 rod (which you will designate) while the second row in the box should go 180 degrees to the #5 rod. The other three boxes repeat the process the same way on rods: 2-6, 3-7, 4-8 for a total of 8 rods.

To replace the hammers on this machine, perform the following steps:

1. Raise the tub platform following the instructions in section 2.7 “Raising the tub platform”.




WARNING: To prevent serious injury or death, do not tilt platform on unlevel ground or with material in the tub.

WARNING: For your protection **ALWAYS** install the tub cylinder stop on the tub tilt cylinder when the tub is tilted. **NEVER** engage tractor PTO when the tub is raised.

2. Loosen two bolts at the rear of rotor that holds the movable plate in place.
3. Rotate the movable plate to align holes allowing hammer rods to be removed through the rear of rotor.
4. Remove one row of hammers and replace with new hammers, by assembling the (8) new hammers on the rotor from right to left as positioned in the box.
5. Rotate rotor 180 degrees and replace the hammers with the second row of hammers in the box. (See figures 3.12 hammer layout and 3.13 hammer spacing chart)
6. Continue steps 4 and 5 until all the hammers have been replaced on all eight rods.
7. After all hammers have been replaced, turn movable plate to lock rods in place and then tighten bolts.
8. When starting the rotor after installing a new set of hammers, watch for unusual or excessive vibration. If any occurs, immediately shut off the rotor. Check to see what is wrong and correct it before starting the rotor again.

Figure 3.12
Hammer layout

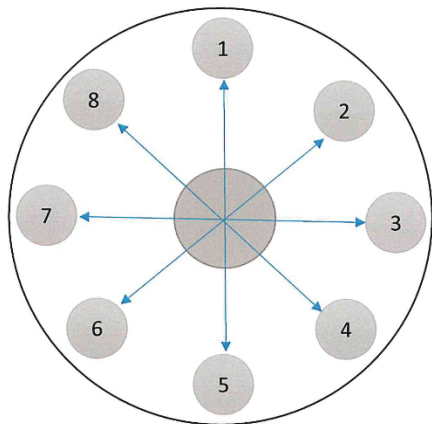






Figure 3.13 Hammer
spacing chart for H-1030
(S.N. 1018007130 & Up)

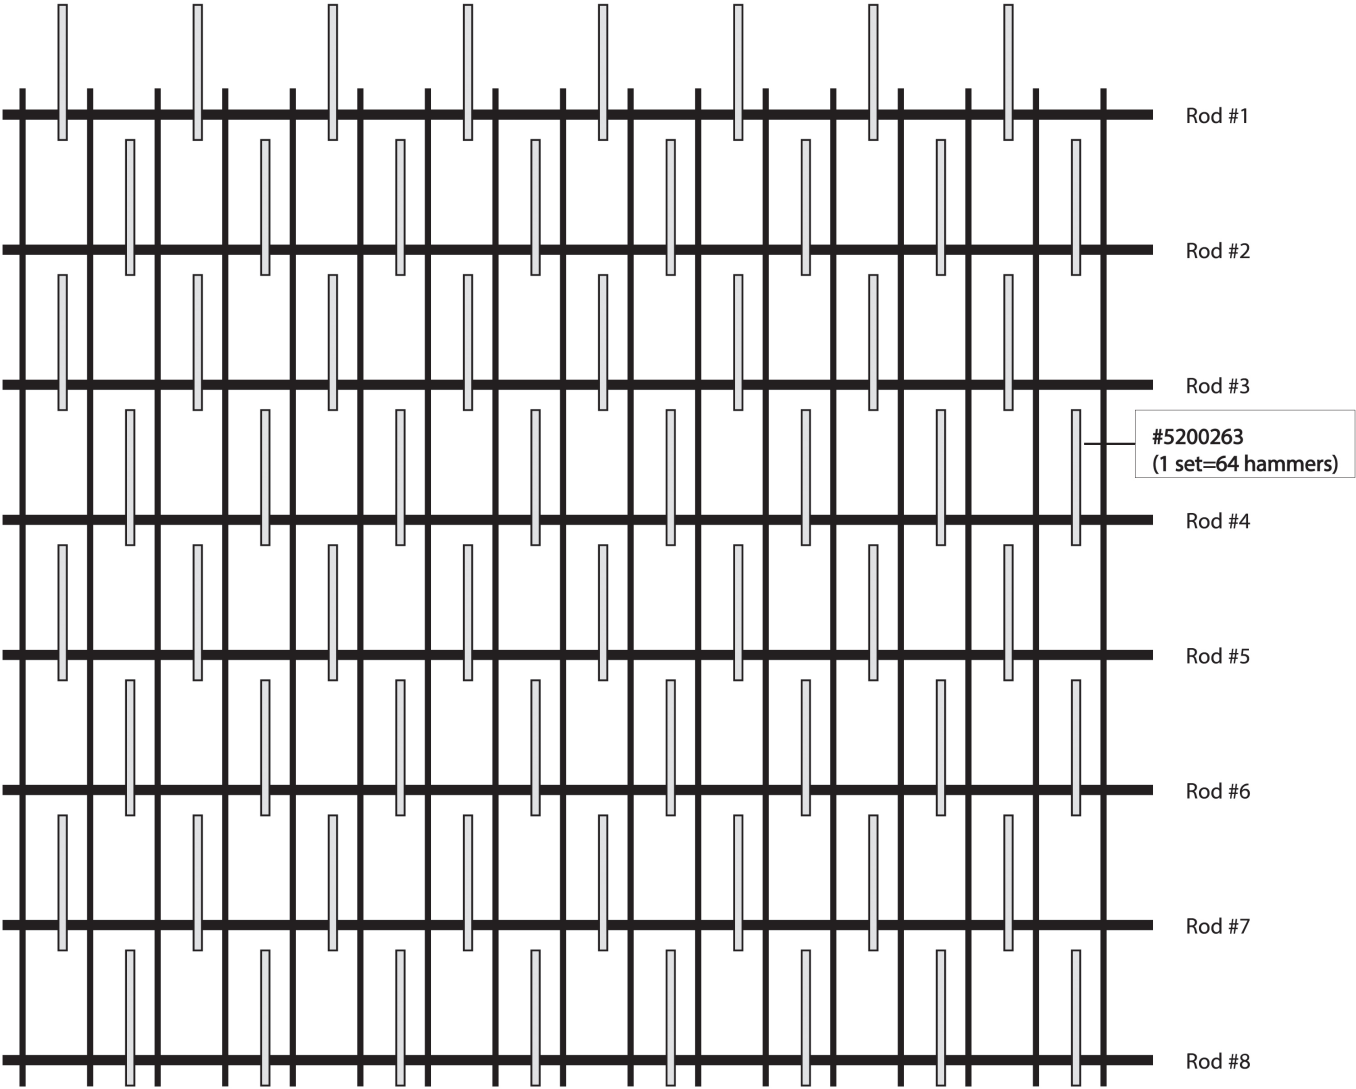

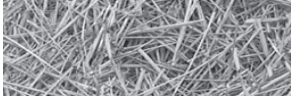

3.6 Dodge Rotor bearing installation



WARNING: To ensure the rotor is not unexpectedly started, turn off and lock out or tag the power sources before proceeding. Failure to observe these precautions could result in bodily injury.



NOTE: Bearing housing caps and bases are not interchangeable and must be matched with mating half. Install the non-expansion bearing first.

Instruction Manual For IMPERIAL Adapter Mounted DODGE ISAF

Pillow Blocks and IP Unitized Spherical Roller Bearing Pillow Blocks, Flanges, Piloted Flanges & Take Ups

GENERAL INFORMATION

DODGE ISAF and IP Spherical Roller Bearing mounted units incorporate a unique way of seating, mounting, and dismounting the unit to and from the shaft. The patented sealing system (Pat. #5,908,249) has proven effective in protecting the internal bearing components, due to its constant pressure, while suit allowing a full + or 1 degree of misalignment.. The patented IMPERIAL system (Pat. #5,489,156) pulls the bearing on the adapter based upon a predetermined clockwise rotation of the locknut. Dismounting is accomplished via counterclockwise rotation of the locknut. Keep in mind that the thread on the locknut as well as on the adapter is a left hand thread.



WARNING: To ensure that drive is not unexpectedly started, turn off and lock out or tog power source before proceeding. Failure to observe these precautions could result in bodily Injury.

INSPECTION

Inspect shaft. Ensure that the shaft is smooth, straight, clean, and within commercial tolerance. Inspect unit. Do not allow unit to be exposed to any dirt or moisture.



Keep weight off bearing during mounting via a sling or jacks



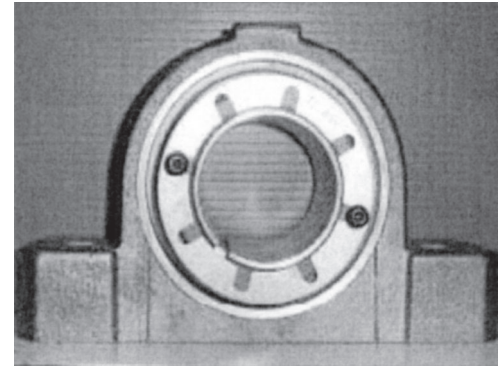
WARNING: Because of the possible danger to persons(s) or property from accidents which may result from the improper use of products, it is important that correct procedures be followed. Products must be used in accordance with the engineering information specified in the catalog. Proper installation, maintenance and operation procedures must be observed. The instructions in the instruction manuals must be followed. Inspections should be made as necessary to assure safe operation under prevailing conditions. Proper guards and other suitable safety devices or procedures as may be desirable or as may be specified in safety codes should be provided. and are neither provided by Baldor Electric nor are the responsibility of Baldor Electric. This Unit and its associated equipment must be installed, adjusted and maintained by qualified personnel who are familiar with the construction and operation of all equipment in the system and the potential hazards involved.



MOUNTING

Install the non expansion unit first.

1. Apply a coating of light oil or other rust inhibitor to the adapter area of the shaft.
2. Before mounting bearing to shaft, remove lockplate from bearing and turn locknut counterclockwise one to two turns to allow adapter to expand fully. The unit is now shaft ready. Slide the bearing to the desire position on the shaft.
3. Proper locking of this unit to the shaft is based on turning the locknut clockwise 1 to 1-1/4 turns. The turning of the locknut must start from a "ZERO reference point." This "ZERO reference point" is defined as the point when the clearance between adapter sleeve, shaft and bearing bore has been removed, and all surfaces are in metal to metal contact
- 3A. To reach the 'ZERO Reference Point,' rotate locknut clockwise, using both hands, as tight as possible. Continue to tighten locknut 1 to 1-1/4 turns.




Picture 1




NOTE: All Weight Must Be Removed From The Bearing When Obtaining The "ZERO Reference Point."

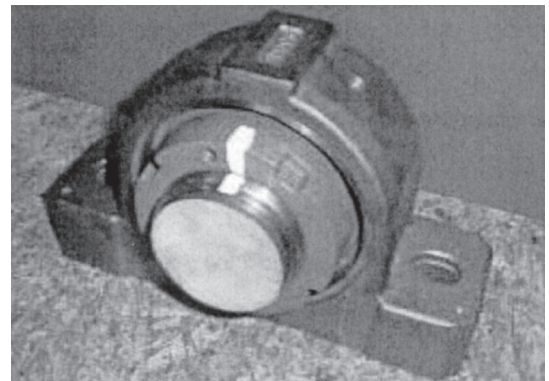4. Once "ZERO reference point" is reached, scribe a line through both locknut face and adapter face (Picture 2). Then continue to tighten the locknut (Picture 3) by turning it clockwise using hammer and drift or spanner by the appropriate rotation angle shown on Table 1. Proper mounting has been achieved when the scribed line on the locknut has rotated from the scribed line on the adapter face by the angle shown on Table 1. To reach the full rotation of the locknut, the use of hammer blows onto spanner or drift may be needed for proper mounting.




Picture 2

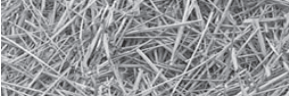

5. a) Slide lockplate over shaft and align tang of lockplate with slot in adapter sleeve.

b) Find a locknut hole that aligns with a lockplate hole. If the closest locknut hole is beyond a lockplate hole, then tighten, not loosen, the locknut to meet a lockplate hole

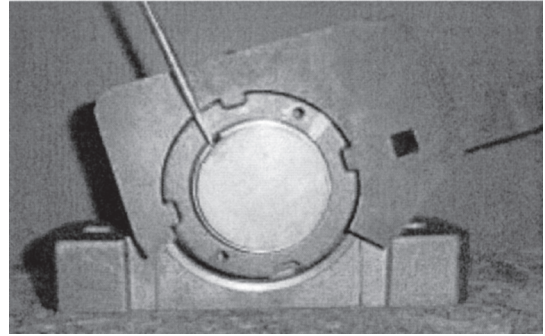c) Insert lockwasher and tighten button head screws to lock assembly. (Ref. Picture 4)
6. Bolt down pillow block or flange unit to the structure.
7. Repeat steps 1 through 6 for the expansion bearing except immediately after Step 2 do the following:



Picture 3

EXPANSION

Pillow Blocks (Locknut facing outboard)

Align pillow block housing mounting holes with substructure mounting holes. Position insert in center of travel on rear expanding bearing.




NOTE: This is necessary because in the process of mounting, bearing is being drawn toward locknut. **Also remember to keep weight off of bearing.**



NOTE: Use hardened washers and properly tightened bolts to obtain sufficient clamp force between the bearing block and the mounting structure.

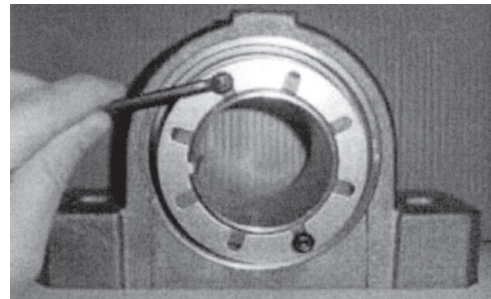Picture 4




3.7 Cleaning the display unit



NOTE: Do **NOT** use high pressure when cleaning the display screen unit.

Using high pressure washers will cause damage to the display screen and is not covered by warranty.





Section 4: Troubleshooting the H-1030

4.1 Control parameters for electronic governor

Control Parameter	Value	Value Range	Description
Tub Speed			
Tub Speed Min (mA)	300	0-2,000	Minimum output current to the Tub Speed solenoid coil. The units are in milliamps.
Tub Speed Max (mA)	1,225	0-2,000	Maximum output current to the Tub Speed solenoid coil. The units are in milliamps.
Tub Speed Ramp Up (ms)	2,000	0-10,000	The amount of time the Tub Speed output will ramp from minimum output to maximum output. The units are in milli-seconds.
Tub Speed Ramp Down (ms)	0	0-10,000	The amount of time the Tub Speed output will ramp from maximum output to minimum output. The units are in milli-seconds.
Service			
Speed Input – Pulses Per Rev	15	0-100	Number of gear teeth for the speed sensor target ring.
Rotor Speed Input – Sample Time (ms)	10	0-10,000	Time between each sample the controller takes of the speed input. There are 25 samples the controller averages the signal over.
Tilt Enable Time (sec)	1	0-100	The time delay before the Tilt Enable output turns on after the Rotor Speed equals zero.
Rotor Speed Min Limit	1400	0-3000	The lower RPM limit for the anti-stall feature. When the Engine Load setting is at 100% the anti-stall feature will meter the Tub Speed output down to this RPM.
Set Speed Limit Low RPM	1600	0-3000	The lower RPM limit for the Set Speed button.
Set Speed Limit High RPM	2600	0-3000	The high RPM limit for the Set Speed button.
Conveyor Speed Off Time (ms)	30	0-100	The amount of time the Conveyor will stay ON for after a Speed Sensor fault occurs.
Grind Hours *Only shown in EA1667-E1P REV XX OEM.icf	0	0-65535	Changing this number will change the overall number of Grind Hours the machine has recorded. Take the number of hours and multiply by 10. After changing this number in the value box do not click Flash Parameters, just cycle power to the controller.



4.1.1 Monitor parameters for electronic governor

(For S.N. Up to 1018012030)


Monitor Parameter	Description
Rotor RPM	The speed the Rotor is turning.
Tub Speed (mA)	The output current to the Tub Speed solenoid coil. The units are in milliamps.
Tub FWD (0=OFF, 1=ON)	The digital output state of the Tub FWD solenoid coil.
Tub REV (0=OFF, 1=ON)	The digital output state of the Tub REV solenoid coil.
Conveyor (0=OFF, 1=ON)	The digital output state of the Conveyor solenoid coil.
Bypass (0=OFF, 1=ON)	The digital output state of the Bypass solenoid coil.
Tub Tilt Enable (0=OFF, 1=ON)	The digital output state of the Tub Tilt Enable solenoid coil.
Grind Hours	The number of Grind Hours recorded.
Service Hours	The number of Service Hours recorded.
Job Hours	The number of Job Hours recorded.

Notes:

System voltage – 12vdc

(For S.N. 1020012130 and Up)

Monitor Parameter	Description
Rotor RPM	The speed the Rotor is turning.
Grate Height	The height of the grate in inches.
Tub Speed (mA)	The output current to the Tub Speed output. The units are in milliamps.
Tub FWD (0=OFF, 1=ON)	The digital output state of the Tub FWD output.
Tub REV (0=OFF, 1=ON)	The digital output state of the Tub REV output.
Conveyor FWD (0=OFF, 1=ON)	The digital output state of the Conveyor FWD output.
Bypass (0=OFF, 1=ON)	The digital output state of the Bypass output.
Conveyor Raise (0=OFF, 1=ON)	The digital output state of the Conveyor Raise output.
Conveyor Lower (0=OFF, 1=ON)	The digital output state of the Conveyor Lower output.
Conveyor Fold (0=OFF, 1=ON)	The digital output state of the Conveyor Fold output.
Conveyor Unfold (0=OFF, 1=ON)	The digital output state of the Conveyor Unfold output.
Tub Raise (0=OFF, 1=ON)	The digital output state of the Tub Raise output.
Tub Lower (0=OFF, 1=ON)	The digital output state of the Tub Lower output.
Grind Hours	The number of Grind Hours recorded.
Service Hours	The number of Service Hours recorded.
Job Hours	The number of Job Hours recorded.

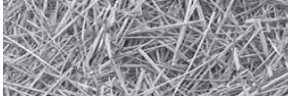


4.2 Fault Codes

ECU	SPN-FMI	Description
ECU1	701-5	Tub Forward Output: Open or Short to Ground
ECU1	701-6	Tub Forward Output: Short to Battery
ECU1	702-5	Tub Reverse Output: Open or Short to Ground
ECU1	702-6	Tub Reverse Output: Short to Battery
ECU1	703-5	Tub Speed Output: Open or Short to Ground
ECU1	703-6	Tub Speed Output: Short to Battery
ECU1	704-5	Bypass Output: Open or Short to Ground
ECU1	704-6	Bypass Output: Short to Battery
ECU1	705-1	Speed Sensor: Below Normal
ECU1	706-5	Conv Forward Output: Open or Short to Ground
ECU1	706-6	Conv Forward Output: Short to Battery
ECU1	706-5	Conv Raise Output: Open or Short to Ground
ECU1	706-6	Conv Raise Output: Short to Battery
ECU1	707-5	Conv Lower Output: Open or Short to Ground
ECU1	707-6	Conv Lower Output: Short to Battery
ECU1	708-5	Conv Fold Output: Open or Short to Ground
ECU1	708-6	Conv Fold Output: Short to Battery
ECU1	709-5	Conv Unfold Output: Open or Short to Ground
ECU1	709-6	Conv Unfold Output: Short to Battery
ECU1	710-5	Tub Raise Output: Open or Short to Ground
ECU1	710-6	Tub Raise Output: Short to Battery
ECU1	711-5	Tub Lower Output: Open or Short to Ground
ECU1	711-6	Tub Lower Output: Short to Battery



4.3 General Troubleshooting

1. No grinding capacity	<ol style="list-style-type: none"> 1. The screen is plugged. 2. The hammers or screens are badly worn. 3. Materials are too light or fluffy. 	<ol style="list-style-type: none"> 1. Clean out the holes in the screen. 2. Replace or turn worn parts. 3. Mix the lighter material with heavier material. 4. Use a larger screen. 5. Use the grapple loader to force feed the material.
2. The tub slows down or turns slowly.	<ol style="list-style-type: none"> 1. The electronic governor is not adjusted properly. 2. The electronic governor system malfunctions. 3. The hydraulic pressure is low. 	<ol style="list-style-type: none"> 1. See the sections on the electronic governor in the operations section of this manual. 2. See Troubleshooting the electronic governor in this manual. 3a. Check oil pressure. 3b. Look for internal leakage or wear in the orbit motor or pump.
3. The machine vibrates excessively.	<ol style="list-style-type: none"> 1. A hammer is broken. 2. The rotor bearing is defective. 3. The driveline is worn or misaligned. 4. Foreign material is wrapped in the rotor. 5. The hammer pattern is incorrect. 	<ol style="list-style-type: none"> 1. Replace the broken hammer. See page 54 for more information about replacing hammers. 2. Replace the rotor bearing. 3. Replace worn part or the complete driveline. 4. Remove the foreign material. 5. See page 54 for more information about replacing hammers.
4. The engine looses excessive RPM's before the tub stops.	<ol style="list-style-type: none"> 1. The electronic governor is not adjusted properly. 	<ol style="list-style-type: none"> 1. See the sections on the electronic governor in the operations section of this manual.
5. The tub stalls.	<ol style="list-style-type: none"> 1. The tub hydraulic system pressure is set too low. 2. The tub is overloaded due to wet or tough grinding materials. 3. Too much material in the tub. 4. The tub is binding. 5. The hydraulic oil is too hot causing electronic governor valve to bind. 	<ol style="list-style-type: none"> 1a. Check oil pressure. 1b. Readjust the pressure relief valve to 2,000 PSI max. 2. Reduce amount of material in tub or shift the hydraulic tub drive to low range. 3. Reduce the amount of material in tub. 4. Remove material buildup between the tub and the platform framework. 5. Reduce the load on the hydraulic system, or stop and allow the hydraulic oil to cool.
6. The hydraulic oil overheats.	<ol style="list-style-type: none"> 1. Pressure relief valve in control valve is faulty. 2. The tub is overloaded. 3. Worn pump, control valve, hyd. motors, etc. 4. Creating excessive heat with discharge conveyor flow control valve. 	<ol style="list-style-type: none"> 1. Check oil pressure. 2. Reduce the amount of material in the tub. 3. Rebuild or replace the hydraulic components as necessary. 4. Allow discharge conveyor to run at full speed.



Appendix A: Warranty

DuraTech Industries International Inc. warrants to the original purchaser for 12 months from purchase date that this product will be free from defects in material and workmanship when used as intended and under normal maintenance and operating conditions. This warranty is limited to the replacement of any defective part or parts returned to our factory in Jamestown, North Dakota, USA, within thirty (30) days of failure.

This warranty shall become void if in the judgment of DuraTech Industries International, Inc. the machine has been subject to misuse, negligence, alterations, damaged by accident or lack of required normal maintenance, or if the product has been used for a purpose for which it was not designed.

All claims for warranty must be made through the dealer which originally sold the product and all warranty adjustments must be made through same.


This warranty does not apply to tires or bearings or any other trade accessories not manufactured by DuraTech Industries International Inc. Buyer must rely solely on the existing warranty, if any, of these respective manufacturers.

DuraTech Industries International Inc., shall **not** be held liable for damages of any kind, direct, contingent, or consequential to property under this warranty. DuraTech Industries International Inc., cannot be held liable for any damages resulting from causes beyond its control. DuraTech Industries International Inc., shall **not** be held liable under this warranty for rental costs or any expense or loss for labor or supplies.

DuraTech Industries International Inc., reserves the right to make changes in material and/or designs of this product at any time without notice.

This warranty is void if DuraTech Industries International Inc. does not receive a valid warranty registration card at its office in Jamestown, North Dakota, USA, within 10 days from date of original purchase.

All other warranties made with respect to this product, either expressed or implied, are hereby disclaimed by DuraTech Industries International Inc.



Appendix B: H-1030 Specifications

Weight	13,300 lbs. (6,033 kg)
Width at Flare	10 ft 2 in. (3.1 m)
Loading Height	9 ft 2 in (279 cm)
Transport Height.....	10 ft 1 in (3.07 m)
Transport Length	19 ft 4 in (5.87 m)
Wheels	Drop center rims, Tapered roller bearings
Bearings	All standard size, grease sealed
Recommended Tire Size	16.5L X 16.1 High flotation implement (14 ply)
Recommended Cylinder Speed	2,170 rpm
Capacity	Hay - up to 40 tons/hr.
.....	Ear corn - up to 800 Bu/hr.
.....	Grain and shelled corn -Up to 3,400 Bu/hr.
Rotor - Std No. of Hammers	64
Hammer Size	HD 1/2" (12.7 mm) A.B. Hardened Swing
Rotor - Shaft diameter	3-1/2 in. (9 cm) stress proof steel
Rotor Size	43 in. (109.2 cm) long, 26 in. (66.04 cm)
.....	diameter with hammers extended
Screen Area	2,400 sq. in. (6,096 sq. cm.)
Screens Available (inches)	1/8, 3/16, 1/4, 3/8, 1/2, 5/8, 3/4, 1, 1-1/2, 2, 3, 4,5, 6, 7 Round holes.
Feed Delivery	21 ft. (6.4 m) folding rubber belt conveyor w/cleats
.....	24 in. (60.96 cm) Wide
Tub size @ base.....	99.5 in. (2.43 m)
Tub Depth	44.1 in. (1.12 m)
Tub Drive	Electro-Hydraulic

Options

AVAILABLE OPTIONS FOR DURATECH INDUSTRIES H-1030 TUB GRINDER:

- Ear Corn Kit
- Geyser Plate
- Grain Grinding Hopper
- Various Screens Sizes
- Material Guide



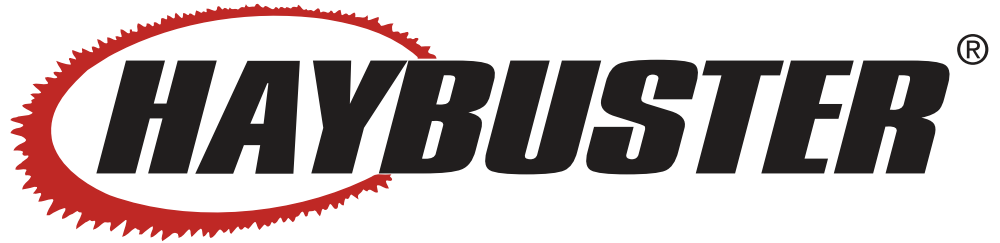
Appendix C: Required for operation

Tractor - 150 to 315 hp

1000 RPM PTO Shaft

Dual Hydraulics, double acting control valve, 8 GPM, 1500 psi (46 lpm x 10,345 Kpa)

See also Section 2.3.1, Tractor Set Up.



H-1030TM ***PTO Driven Tub Grinder***

Parts Reference



DuraTech Industries International Inc. (DuraTech Industries) has made every effort to assure that this manual completely and accurately describes the operation and maintenance of the H-1030 PTO Driven Tub GrinderTM as of the date of publication. DuraTech Industries reserves the right to make updates to the machine from time to time. Even in the event of such updates, you should still find this manual to be appropriate for the safe operation and maintenance of your unit.

This manual, as well as materials provided by component suppliers to DuraTech Industries are all considered to be part of the information package. Every operator is required to read and understand these manuals, and they should be located within easy access for periodic review.



& are registered trademarks of DuraTech Industries International, Inc. H-1030 and BIG BITE with logo are trademarks of DuraTech Industries International, Inc.







H-1030 PTO Driven Tub Grinder Parts Reference


H-1030 Mainframe Assembly (For SN up to 1017007030)	1
H-1030 Mainframe Assembly (for SN 1018007130 and Up)	7
H-1030 Belly Side Sheets	15
Bull Wheel Assembly	17
H-1030 Rotor Assembly (for SN up to 1017007030)	19
H-1030 Rotor Assembly (for SN 1018007130 & UP)	23
H-1030 Pump Driveline Assembly	27
H-1030 Platform Assembly (for SN up to 1015001030)	29
H-1030 Platform Assembly (for Sn 1016001130 and up)	35
H-1030 Tub Drive Assembly (for SN up to 1021021030)	41
H-1030 Tub Drive Assembly (for SN 1023021130 and Up)	43
H-1030 Tub Assembly	45
H-1030 Belly Auger Assembly	47
H-1030 Lower Discharge Assembly	49
H-1030 Upper Discharge Assembly (for SN Up to 1017007030)	51
H-1030 Upper Discharge Assembly (SN 1018007130 and Up)	53
Hydraulic Oil Tank Assembly	55
4200142 Tandem Hydraulic Pump	57
H-1030 4000541 Hydraulic Valve (for SN up to 1018012030)	59
H-1030 4000598-Hydraulic Valve (for SN 1020012130 and Up)	63
H-1030 Oil Tank Hydraulics (for Sn up to 1018012030)	67
H-1030 Oil Tank Hydraulics (for SN 1020012130 and Up)	69
H-1030 Tandem Pump Hydraulics	71
H-1030 Auxiliary Valve Hydraulics View A (for SN Up to 1018012030)	73
H-1030 Auxiliary Valve Hydraulics View A (for SN 1020012130 and Up)	75
H-1030 Auxiliary Valve Hydraulics View B (for SN Up to 1018012030)	77
H-1030 Auxiliary Valve Hydraulics View B (for SN 1020012130 and Up)	79
H-1030 Auxiliary Valve Hydraulics View C (for SN Up to 1018012030)	81
H-1030 Auxiliary Valve Hydraulics View C (for SN 1020012130 and Up)	83
H-1030 Tub Rotation Hydraulics (for SN Up to 1018012030)	85
H-1030 Tub Rotation Hydraulics (for SN 1020012130 and Up)	87
H-1030 Tub Tilt Hydraulics (for SN Up to 1018012030)	89
H-1030 Tub Tilt Hydraulics (for Sn 1020012130 and Up)	91
H-1030 Belly Auger Hydraulics	93
Conveyor Lift and Fold Hydraulic Assembly	97
Conveyor Flow Control Valve Hydraulic Assembly	99
Discharge Conveyor Orbit Motor Hydraulic Assembly	101
H-1030 Pressure Gauge Hydraulics (for SN Up to 1018012030)	103
H-1030 Pressure Gauge Hydraulics (for SN 1020012130 and Up)	105
H-1030 Lube Lines	107
Wheels and Hubs	111
3900010 Orbit Motor Assembly	113
3900014 Orbit Motor Assembly	115
4200121 Orbit Motor	117
3600833 Drive Line Assembly	119
3600831 PTO Assembly	121
3600832 PTO Assembly	123
Pressure Roller Assembly	125
Tub Roller Bearing Assembly	127
Hydraulic Cylinder and Seal Kits	129
4502535 Mill Grate-5 Bar-2-1/4 (for SN Up to 1018012030)	131
4502689 Mill Grate-5 Bar -2-1/4 (for SN 1020012130 to 1020016030)	133
H-1030 Mill Grate/Geyser Plate - 7-Bar-2-1/2 (for SN 1021016130 and Up)	135
H-1030 Electrical Parts (for SN Up to 1018012030)	137
H-1030 Electrical Parts (for SN 1020012130 and Up)	139
Optional Grain Hopper Assembly	141
Optional Ear Corn Kit	145
Optional Geyser Plate for 5-Bar 2-1/4	147

Optional Material Guide Assembly	149
6500498 H-1030 Decal Kit	151
6500561 Hydraulic Oil Tank Decal Kit	153
H-1030 Decal Locations	155
H-1030 Decal Locations	156
H-1030 Decal Locations	157
H-1030 Decal Locations	158
5701310-PTO Tub Taillight Harness (for SN 1024026130 & Up)	159
5701061 H-1030 Machine Harness Schematic (for SN Up to 1018012030)	160
5701174 H-1030 Machine Harness Schematic (for SN 1020012130 and Up)	161
5701170 PTO Tub Taillight Harness (for SN 1020012130 to 1021026030)	162
H-1030 Hydraulic Schematic (for SN Up to 1018012030)	163
H-1030 Hydraulic Schematic (for SN 1020012130 and Up)	164



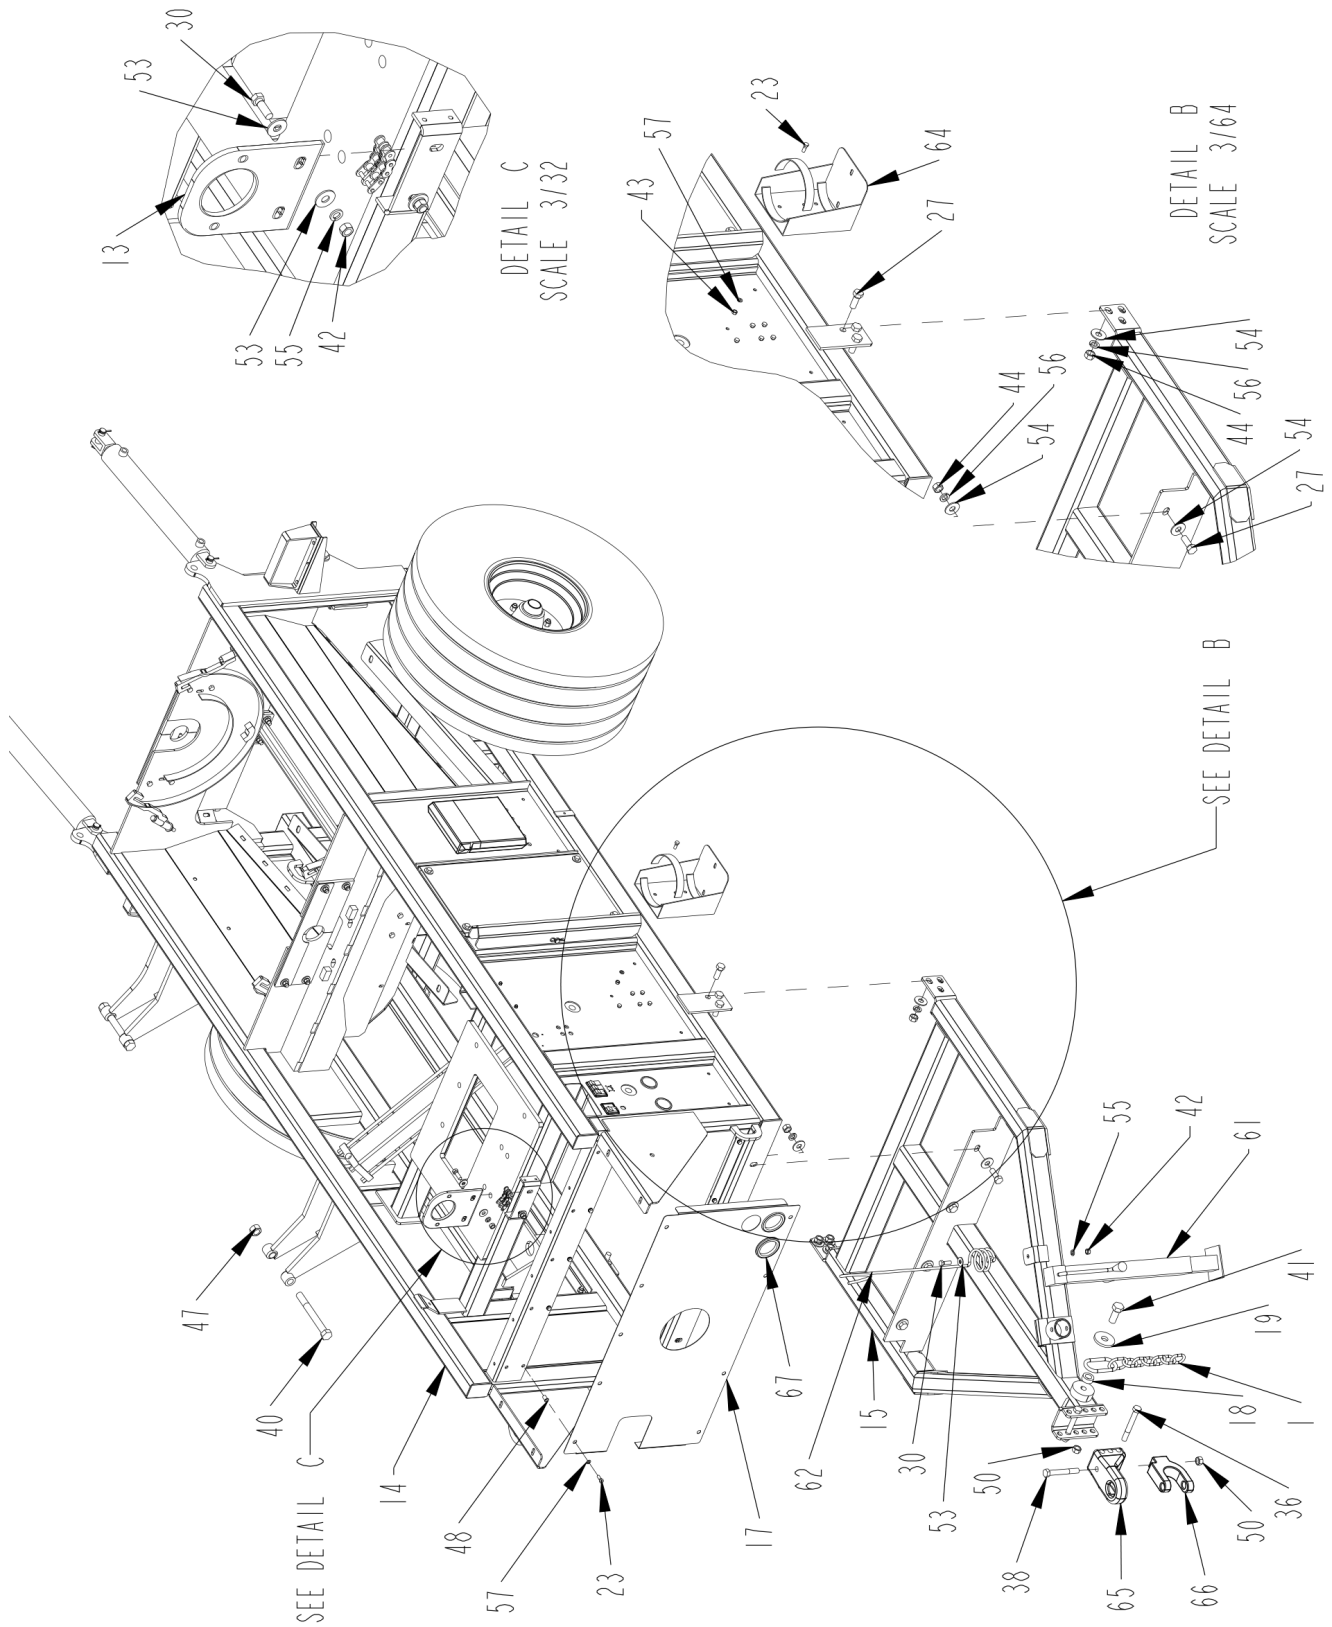

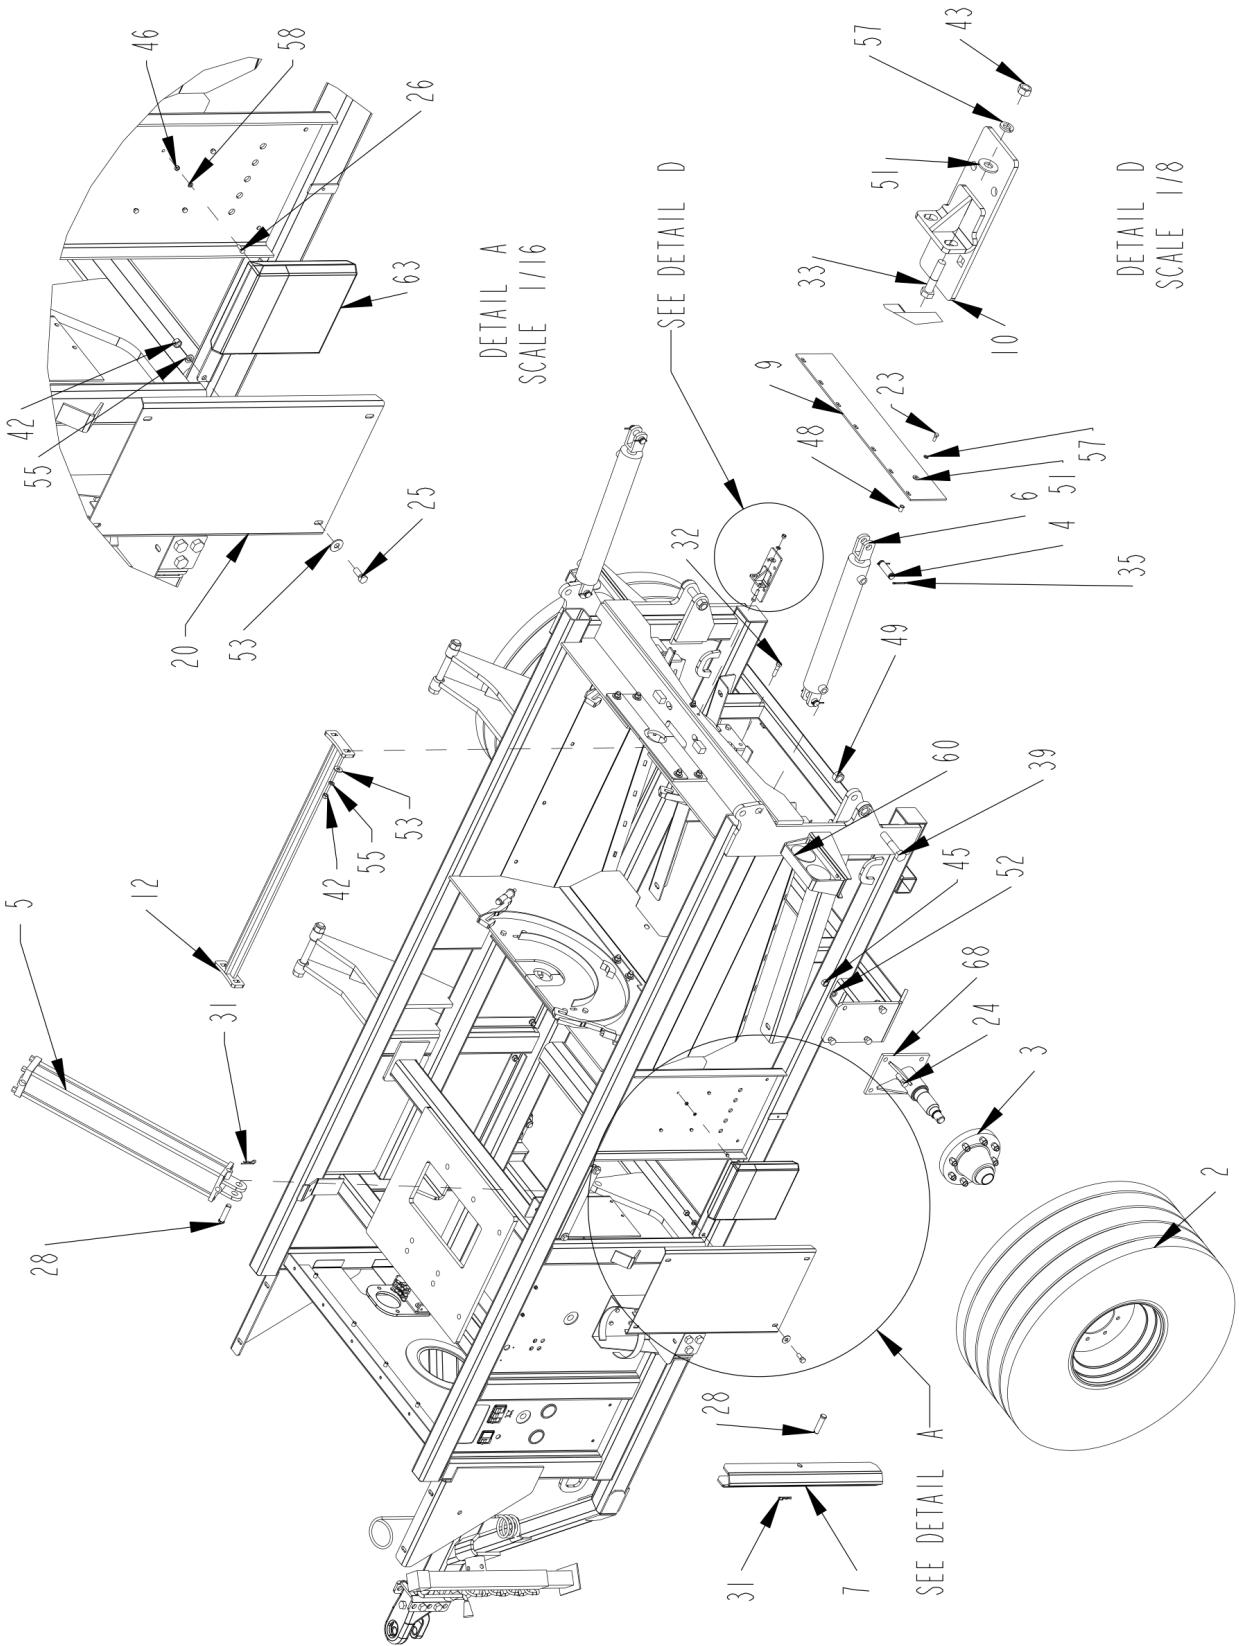

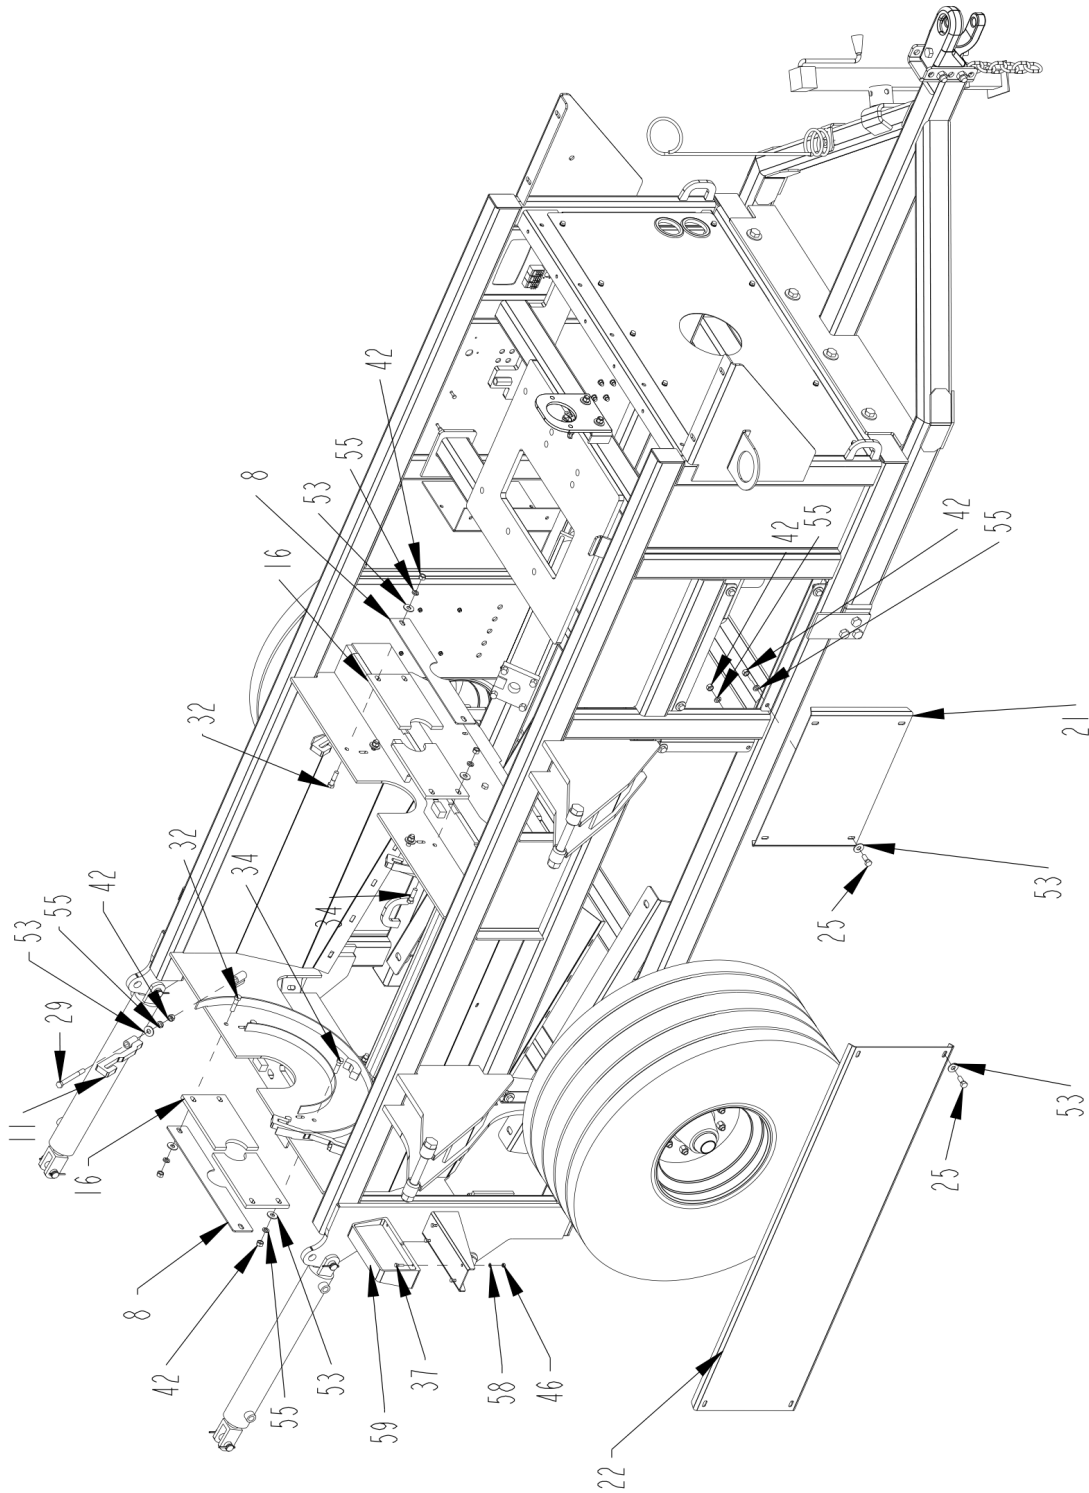


H-1030 Mainframe Assembly (For SN up to 1017007030)


Item	Part No.	Name	Remarks	Qty	Uom
1	1100285	CHAIN\3/8\SFTY\AG\21000LB		1	EA
2	2600861	WHL\ASSY\16.5SLX\16.1X14PLY8BOLT-WHL\16.1X14\3/8POS	See also Wheels and Hubs	2	EA.
3	2900140	HUB\ASSY\H817\8BOLT\8"B.C.\6"PILOT	See also Wheels and Hubs	2	EA.
4	4100030	PIN 1" X 3-1/2" HYD. CYL.		4	EA.
5	4100144	CYL\HYD\4X30\1-3/4 ROD\CLEVIS ENDS\O-RING PORTS		1	EA
6	4100328	CYL\HYD\3X20\1-1/2ROD\PAR		2	EA.
7	4500737	STOP\CYL\PLFRM		1	EA
8	4502392	CVR\SEAL\RTR		2	EA
9	4502430	BELT\SEAL\TRNSTN\CNVYR		1	EA
10	4502619	MNT\MNFLD\HOSE\HYD		1	EA
11	4502643	HOLDDOWN\SCRN\LASERED		4	EA
12	4502656	GUIDE\SCRN		1	EA
13	4502665	BRKT\PUMP		1	EA.
14	4502751	FRM\GRDR\H1030		1	EA
15	4502773	HITCH\PTO\H1100		1	EA
16	4502798	SEAL\RTR		4	EA
17	4502800	SHLD\PTO		1	EA
18	4704337	BUSHING\MNT\CHAIN\SAFETY		1	EA
19	4704338	WASHER\CHAIN\SAFETY		1	EA
20	4705480	DOOR\FRM\MN		1	EA
21	4705483	DOOR\FRM\MN		1	EA
22	4705484	DOOR\FRM\MN		1	EA
23	4800003	BOLT\HEX\3/8X1		22	EA.
24	4800010	BOLT\HEX\5/8X2		8	EA.
25	4800018	BOLT\HEX\1/2X1-1/4		12	EA.
26	4800024	BOLT\HEX\1/4X3/4		4	EA.
27	4800033	BOLT\HEX\3/4X2		10	EA.
28	4800046	PIN\CLEVIS\3/4X3		2	EA
29	4800077	BOLT\HEX\1/2X5-1/2		4	EA.
30	4800082	BOLT\HEX\1/2X1-1/2		3	EA.
31	4800107	PIN\HAIR\1/8(#9)		2	EA.
32	4800114	BOLT\HEX\1/2X2		8	EA.
33	4800142	BOLT\HEX\3/8X1-3/4		2	EA.
34	4800178	BOLT\HEX\1/2X1-3/4		4	EA.
35	4800203	PIN\COT\5/32X2		8	EA.
36	4800248	BOLT\HEX\3/4X6		2	EA.
37	4800277	BOLT\HEX\1/4X1		8	EA.


This page intentionally left blank

H-1030 Mainframe Assembly (For SN up to 1017007030)

Item	Part No.	Name	Remarks	Qty	Uom
38	4800492	BOLT\HEX\3/4X5-1/2\GR8\NC		1	EA
39	4800546	BOLT\HEX\1X5\NC		2	EA
40	4800601	BOLT\HEX\1X9\NC		2	EA.
41	4800980	BOLT\HEX\1X2-1/2\GR5\NC		1	EA
42	4900001	NUT\HEX\1/2\NC		31	EA.
43	4900002	NUT\HEX\3/8\NC		8	EA.
44	4900004	NUT\HEX\3/4\NC		10	EA.
45	4900005	NUT\HEX\5/8\NC		8	EA.
46	4900009	NUT\HEX\1/4\NC		14	EA.
47	4900015	NUT\NYLCK\1\NC		2	EA.
48	4900083	NUT\INSERT\3/8\LONG\0.15-0.312\(.418/CD)		16	EA
49	4900127	NUT\TPLCK\1\NC		2	EA.
50	4900139	NUT\TPLCK\3/4\GR8\NC		3	EA.
51	5000001	WASH\FLAT\3/8		9	EA.
52	5000003	WASH\LOCK\5/8		8	EA.
53	5000004	WASH\FLAT\1/2		33	EA.
54	5000005	WASH\FLAT\3/4		14	EA.
55	5000006	WASH\LOCK\1/2		31	EA.
56	5000012	WASH\LOCK\3/4		10	EA.
57	5000019	WASH\LOCK\3/8		24	EA.
58	5000024	WASH\LOCK\1/4		14	EA.
59	5701058	TAILLIGHT\RED;R\LED\ASSY\4PIN		1	EA.
60	5701059	TAILLIGHT\RED;L\LED\ASSY\4PIN	N/A (Order 5701285 and 5701283)	1	EA.
61	5800633	JACK\7000\SDWND\SQ\15"TRVL		1	EA.
62	7500170	HOSE MINDER		1	EA.
63	7500590	ENCL\OPS\8-1/2X11X1-5/8		1	EA.
64	7500853	BRKT\EXTINGUISHER\20LB		1	EA
65	7501047	HITCH\BASE\#3\PPI\1"PIN		1	EA.
66	7501048	HITCH\CLEVIS\PPI\1"PIN		1	EA.
67	7501068	GRMMT\RBBR\3-5/8X3IDX3/8T		2	EA
68	8101600	SPNDL\2800		2	EA.
NS	7500852	EXTINGUISHER\FIRE\20LB		1	EA

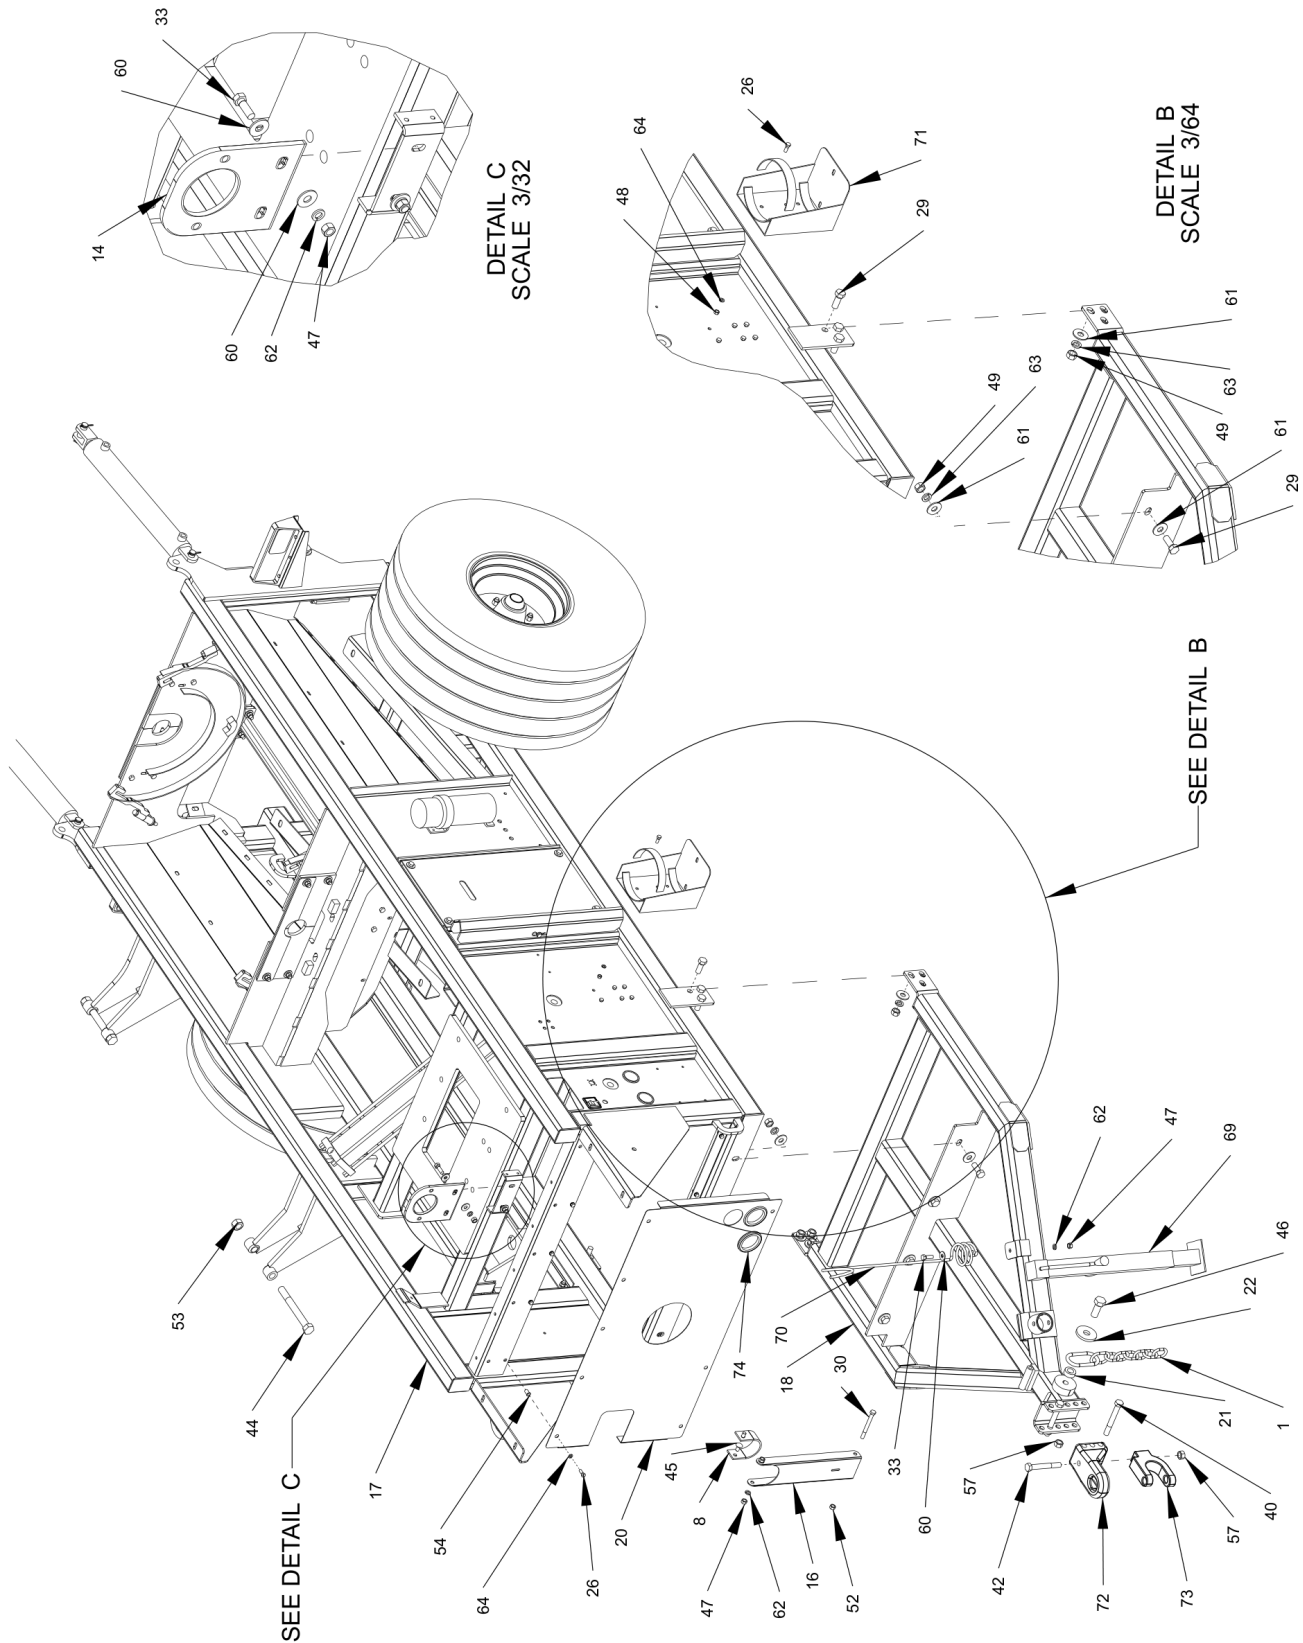

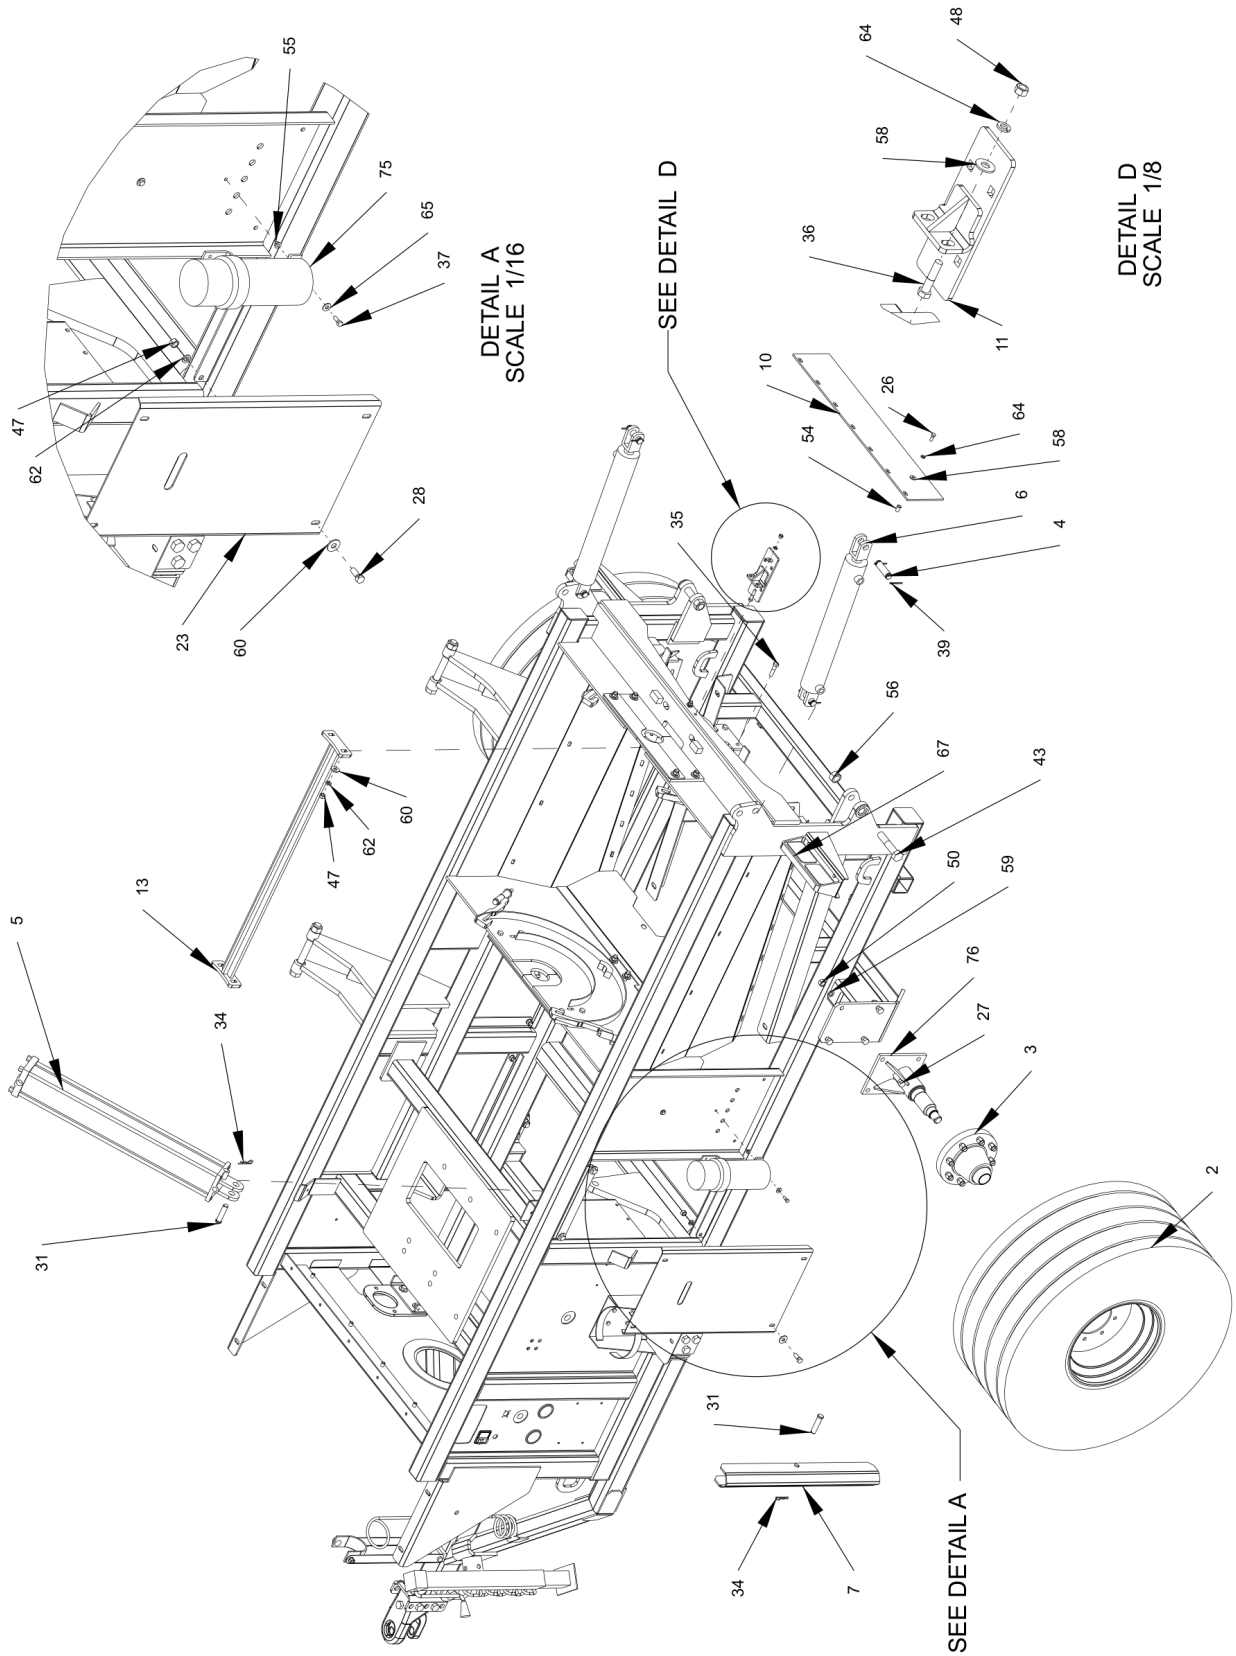

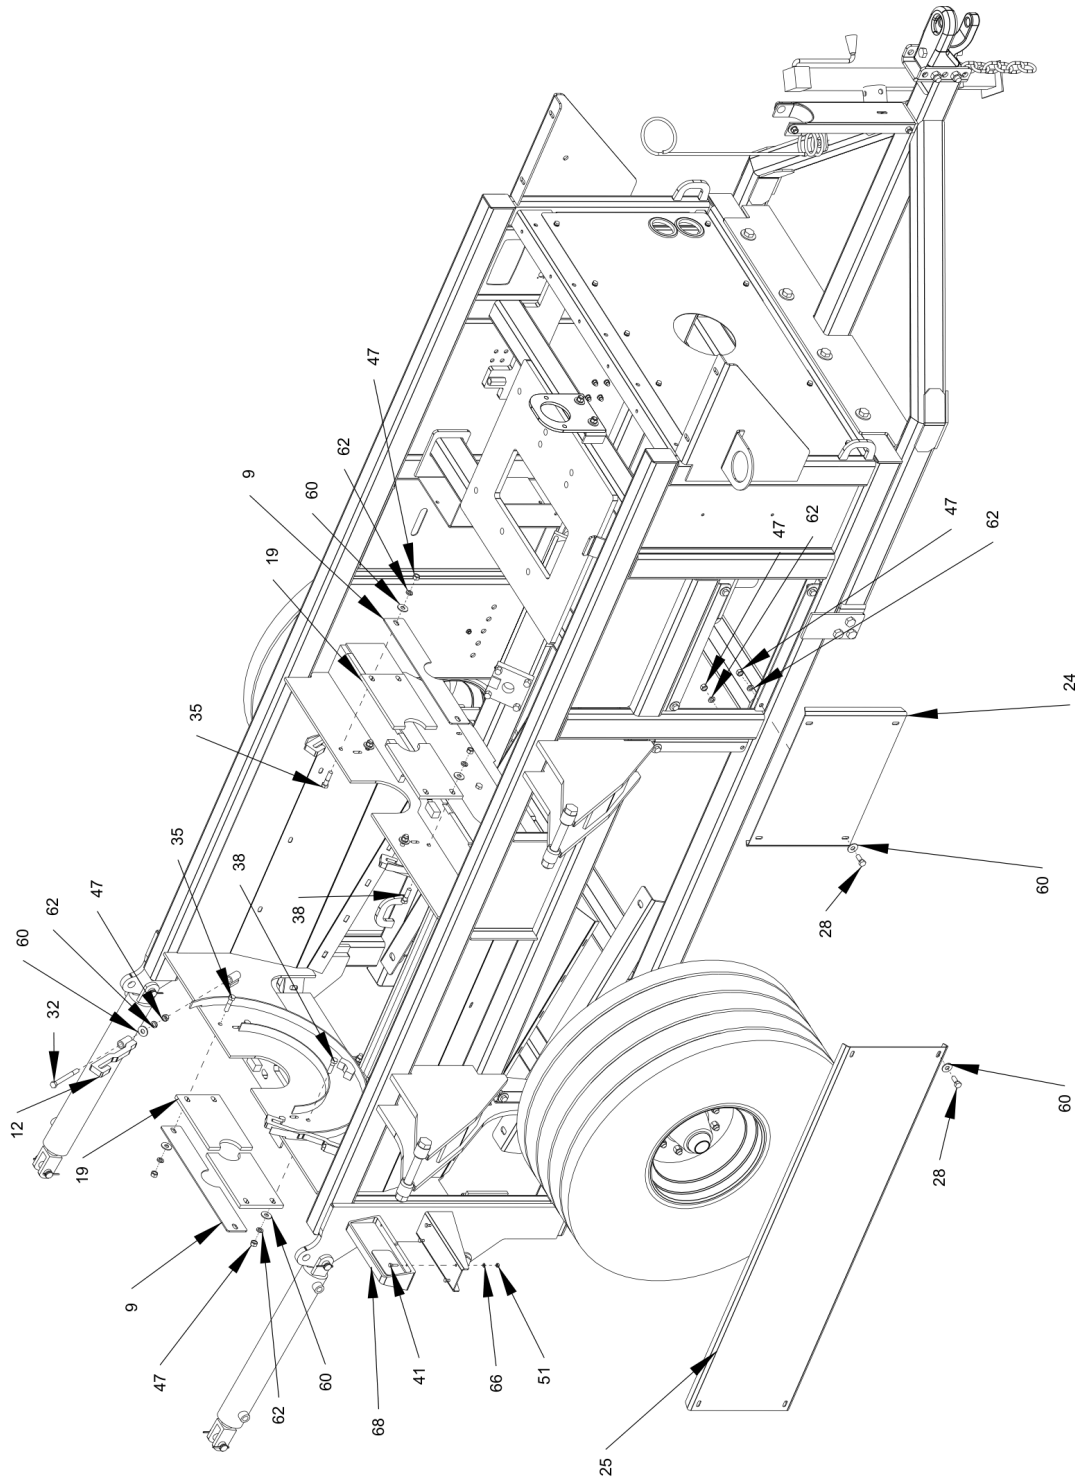

H-1030 Mainframe Assembly (for SN 1018007130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	1100285	CHAIN\3/8\SFTY\AG\21000LB		1	EA
2	2600861	WHL\ASSY\16.5SLX16.1X14PLY8BOLT-WHL\16.1X14\3/8POS	See also Wheels and Hubs	2	EA.
3	2900140	HUB\ASSY\H817\8BOLT\8"B.C.\6"PILOT	See also Wheels and Hubs	2	EA.
4	4100030	PIN 1" X 3-1/2" HYD. CYL.		4	EA.
5	4100144	CYL\HYD\4X30\1-3/4 ROD\CLEVIS ENDS\O-RING PORTS		1	EA
6	4100328	CYL\HYD\3X20\1-1/2ROD\PAR		2	EA.
7	4500737	STOP\CYL\PLFRM		1	EA
8	4500754	BELT\BRKT\PTO		1	EA.
9	4502392	CVR\SEAL\RTR		2	EA
10	4502430	BELT\SEAL\TRNSTN\CNVYR		1	EA
11	4502619	MNT\MNFLD\HOSE\HYD		1	EA
12	4502643	HOLDDOWN\SCRN\LASERED		4	EA
13	4502656	GUIDE\SCRN		1	EA
14	4502665	BRKT\PUMP		1	EA.
15	4502673	MNT\PTO		1	EA.
16	4502674	BRKT\STAND\PTO\1030		1	EA
17	4502751	FRM\GRDR\H1030		1	EA
18	4502773	HITCH\PTO\H1100		1	EA
19	4502798	SEAL\RTR		4	EA
20	4502800	SHLD\PTO		1	EA
21	4704337	BUSHING\MNT\CHAIN\SAFETY		1	EA
22	4704338	WASHER\CHAIN\SAFETY		1	EA
23	4705480	DOOR\FRM\MN		1	EA
24	4705483	DOOR\FRM\MN		1	EA
25	4705484	DOOR\FRM\MN		1	EA
26	4800003	BOLT\HEX\3/8X1		22	EA.
27	4800010	BOLT\HEX\5/8X2		8	EA.
28	4800018	BOLT\HEX\1/2X1-1/4		12	EA.
29	4800033	BOLT\HEX\3/4X2		10	EA.
30	4800041	BOLT\HEX\1/2X5		1	EA.
31	4800046	PIN\CLEVIS\3/4X3		2	EA
32	4800077	BOLT\HEX\1/2X5-1/2		4	EA.
33	4800082	BOLT\HEX\1/2X1-1/2		3	EA.
34	4800107	PIN\HAIR\1/8(#9)		2	EA.
35	4800114	BOLT\HEX\1/2X2		8	EA.
36	4800142	BOLT\HEX\3/8X1-3/4		2	EA.
37	4800147	BOLT\HEX\5/16X7/8		2	EA.

This page intentionally left blank


H-1030 Mainframe Assembly (for SN 1018007130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
38	4800178	BOLT\HEX\1\2X1-3/4		4	EA.
39	4800203	PIN\COT\5\32X2		8	EA.
40	4800248	BOLT\HEX\3\4X6		2	EA.
41	4800277	BOLT\HEX\1\4X1		8	EA.
42	4800492	BOLT\HEX\3\4X5-1/2\GR8\NC		1	EA
43	4800546	BOLT\HEX\1X5\NC		2	EA
44	4800601	BOLT\HEX\1X9\NC		2	EA.
45	4800908	BOLT\CRG\1\2X1		2	EA.
46	4800980	BOLT\HEX\1X2-1/2\GR5\NC		1	EA
47	4900001	NUT\HEX\1\2\NC		33	EA.
48	4900002	NUT\HEX\3\8\NC		8	EA.
49	4900004	NUT\HEX\3\4\NC		10	EA.
50	4900005	NUT\HEX\5\8\NC		8	EA.
51	4900009	NUT\HEX\1\4\NC		8	EA.
52	4900014	NUT\TPLCK\1\2\NC		1	EA.
53	4900015	NUT\NYLCK\1\NC		2	EA.
54	4900083	NUT\INSERT\3\8\LONG\0.15-0.312\(.418/CD)		16	EA
55	4900108	NUT\FLG\SERR\5\16\NC		2	EA.
56	4900127	NUT\TPLCK\1\NC		2	EA.
57	4900139	NUT\TPLCK\3\4\GR8\NC		3	EA.
58	5000001	WASH\FLAT\3\8		9	EA.
59	5000003	WASH\LOCK\5\8		8	EA.
60	5000004	WASH\FLAT\1\2		33	EA.
61	5000005	WASH\FLAT\3\4		14	EA.
62	5000006	WASH\LOCK\1\2		33	EA.
63	5000012	WASH\LOCK\3\4		10	EA.
64	5000019	WASH\LOCK\3\8		24	EA.
65	5000023	WASH\FLAT\5\16		2	EA.
66	5000024	WASH\LOCK\1\4		8	EA.
67	5701284	LGHT\TAIL\AMBER-LEFT\4PN-WP\LED		1	EA.
68	5701285	LGHT\TAIL\AMBER-RGHT\4PN-WP\LED		1	EA.
69	5800633	JACK\7000\SDWND\SQ\15"TRVL		1	EA.
70	7500170	HOSE MINDER		1	EA.
71	7500853	BRKT\EXTINGUISHER\20LB		1	EA
72	7501047	HITCH\BASE\#3\PPI\1"PIN		1	EA.
73	7501048	HITCH\CLEVIS\PPI\1"PIN		1	EA.
74	7501068	GRMMT\RBBR\3-5\8X3IDX3\8T		2	EA
75	7501629	CNSTRS\MANUAL\12.5X4.5		1	EA.

This page intentionally left blank


H-1030 Mainframe Assembly (for SN 1018007130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
76	8101600	SPNDL\2800		2	EA.
NS	7500852	EXTINGUISHER\FIRE\20LB		1	EA

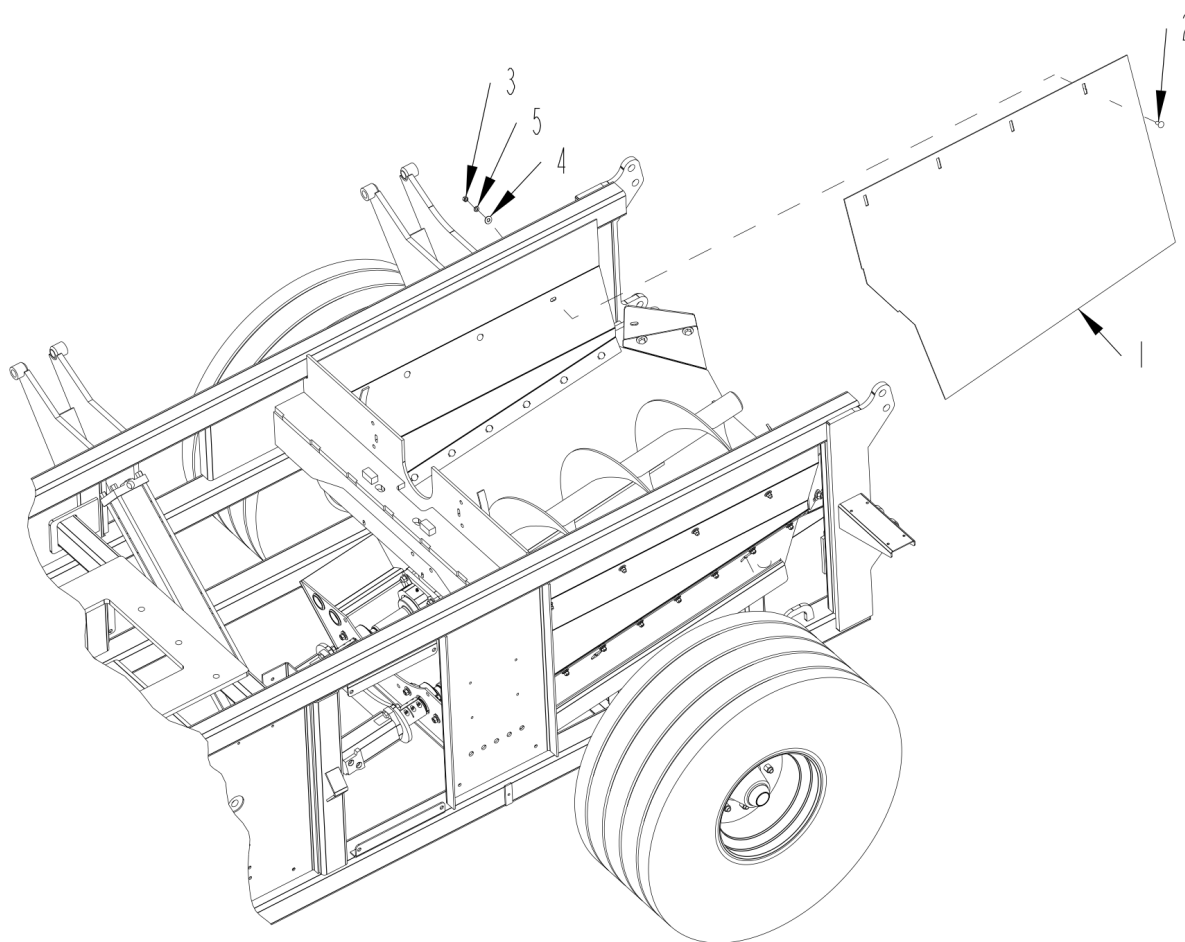


H-1030 Belly Side Sheets

Item	Part No.	Name	Remarks	Qty	Uom
1	4502974	SH\SIDE\BELLY		2	EA.
2	4800053	BOLT\CRG\3/8X1\NC		8	EA.
3	4900002	NUT\HEX\3/8\NC		8	EA.
4	5000001	WASH\FLAT\3/8		8	EA.
5	5000019	WASH\LOCK\3/8		8	EA.
CA	4502978	KIT\SH\SIDE\BOX\RTR\1030			EA.

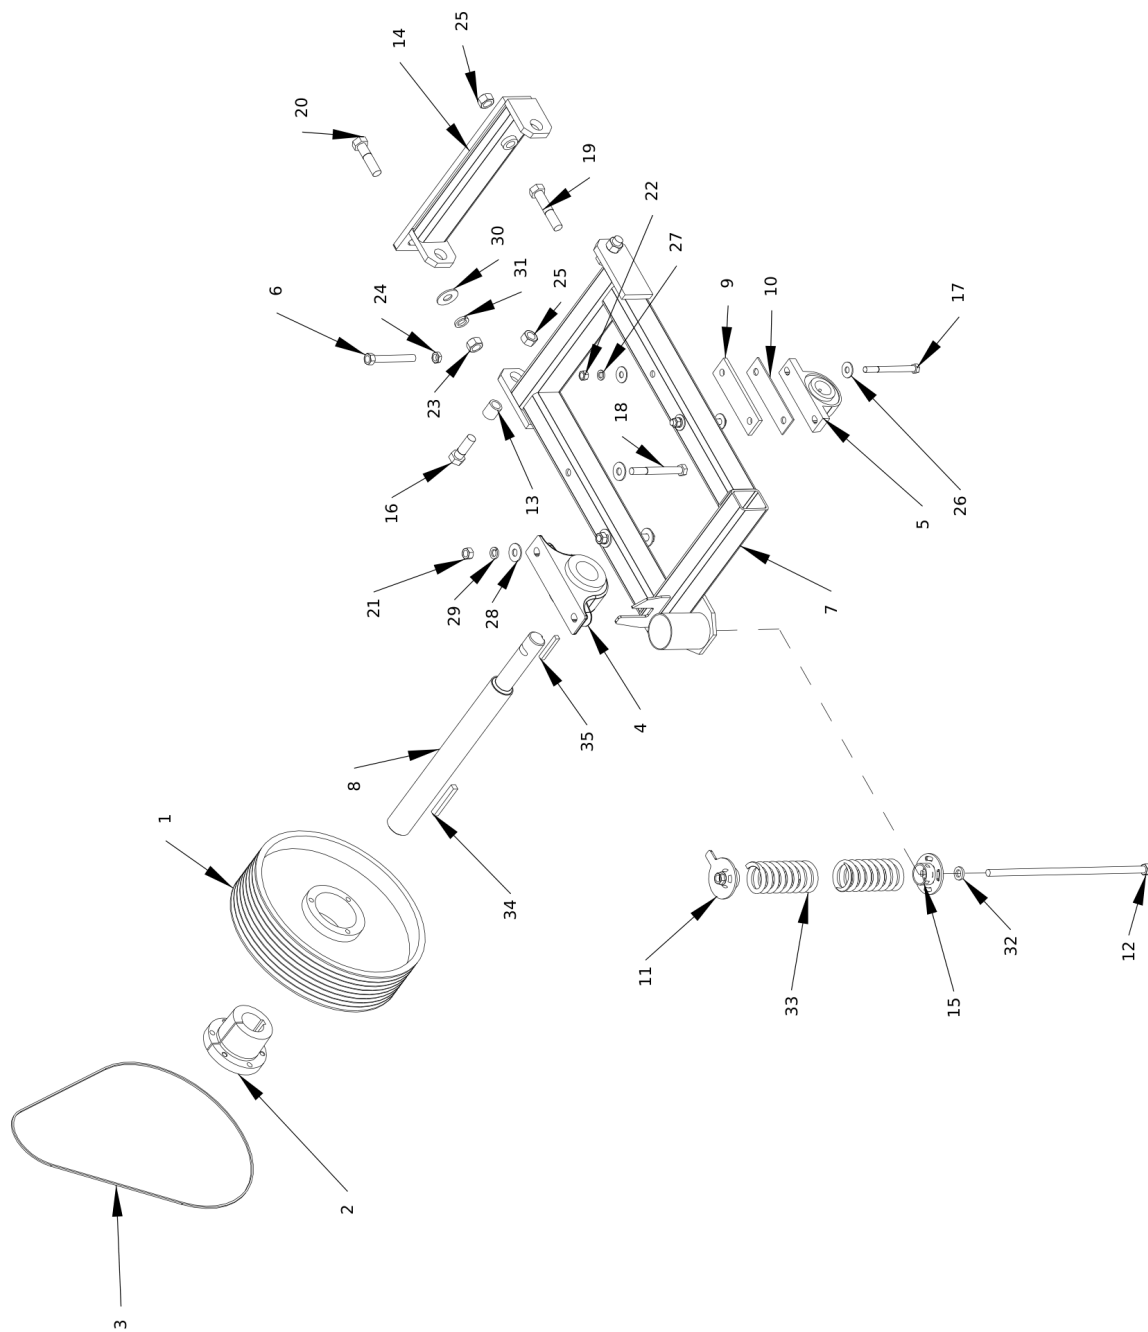

Bull Wheel Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	1400605	SHVE\5V-8\21.2\85V2120J		1	EA
2	1400642	BUSH\QD\1/2-3/4		1	EA
3	1600102	V-BELT\5VP850		8	EA
4	2000509	BRG\PB\2-3/4\E\DODGE		1	EA
5	2000510	BRG\PB\2\2BOLT		1	EA.
6	4501170	BOLT\FRM\TGHTNR\CHAIN\TUB		1	EA
7	4502330	WHL\BULL\FRM\OFFSET		1	EA
8	4502331	SHFT\WHL\BULL\OFFSET		1	EA
9	4502333	SHIM\BRG\WHL\BULL		1	EA
10	4502334	SHM\THN\BRG\WHL\BLL		1	EA
11	4502338	CAP\SPRNG\TNSNR		1	EA
12	4502340	ROD\TNSNR\WHL\BULL		1	EA
13	4502380	TUBE\WHL\BLL		2	EA
14	4502419	ADJ\WHL\BLL		1	EA
15	4502425	CAP\TNSNR\WHL\BLL		1	EA
16	4800140	BOLT\HEX\1X3\NC		2	EA
17	4800155	BOLT\HEX\5/8X7		2	EA.
18	4800295	BOLT\HEX\3/4X7		2	EA
19	4800546	BOLT\HEX\1X5\NC		1	EA
20	4800647	BOLT\HEX\1X4\NC		1	EA.
21	4900004	NUT\HEX\3/4\NC		4	EA.
22	4900005	NUT\HEX\5/8\NC		2	EA.
23	4900031	NUT\HEX\1\NC		1	EA
24	4900104	NUT\JAM\3/4\NC		1	EA.
25	4900127	NUT\TPLCK\1\NC		3	EA.
26	5000002	WASH\FLAT\5/8		4	EA.
27	5000003	WASH\LOCK\5/8		2	EA.
28	5000005	WASH\FLAT\3/4		4	EA.
29	5000012	WASH\LOCK\3/4		2	EA.
30	5000014	WASH\FLAT\1		1	EA.
31	5000053	WASH\LOCK\1		1	EA
32	5000115	WASH\FLAT\3/4\EXTRTHK\GR8		1	EA
33	6100091	SPG\COMP\8X3-1/2OD\1/2WD		2	EA
34	6200013	KEY\SQ\5/8X4-1/2		1	EA
35	6200062	KEY\SQ\1/2X3-1/2		1	EA
CA	4502328	WHL\BULL\OFFSET\H1030\H1130\H1135			EA
NS	3700961	HOSE\LUB\1/8X40\MPS-MPS			EA
NS	3700963	HOSE\LUB\1/8X34\MPS-MPS			EA

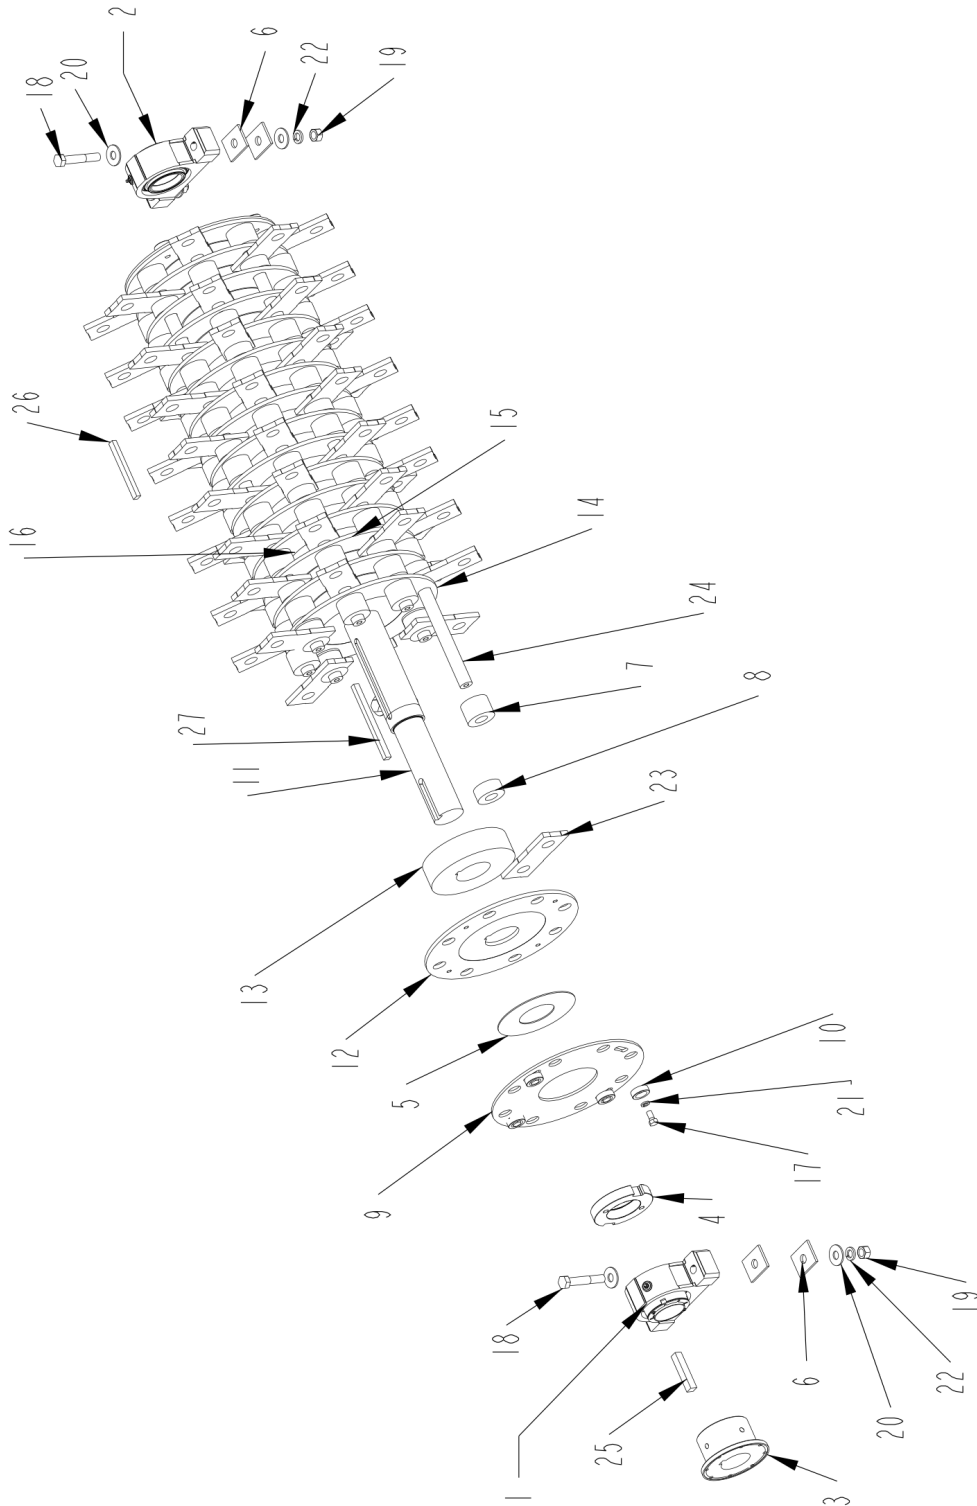


H-1030 Rotor Assembly (for SN up to 1017007030)

Item	Part No.	Name	Remarks	Qty	Uom
1	2001052	BRG\PB\3\IMPR\NON-EXP		1	EA
2	2001053	BRG\PB\3\IMPR\EXP		1	EA
3	3600834	FLG\3ID\1610\DRVLIN		1	EA
4	4500142	NUT\CYL\3-1/2	Liability Waiver Required	2	EA
5	4502322	WASH\THRUST\ROTOR\H1130		1	EA
6	4502669	SHIM\BRG		8	EA
7	4502787	SPCR\SHOCK\HMMR\RTR		64	EA
8	4502788	SPCR\HMMR\RTR		48	EA
9	4702292	PL\RTR\MVBL\6IDX15-3/4\1-1/4ROD	Liability Waiver Required	2	EA
10	4704292	WASHER\PL\MOVEABLE\RTR		8	EA
11	4705473	SHFT\RTR\3-1/2X61-7/8\3"BRG	Liability Waiver Required	1	EA
12	4705474	PL\RTR\3/8X3-1/2ID\1-1/4RDS\TPPD	Liability Waiver Required	2	EA
13	4705475	SPCR\CAST\8.645ODX3.503ID\2.311 THICK	Liability Waiver Required	6	EA
14	4705476	PL\RTR\3.5X3/8X15.75\1-1/4RDS\FCD	Liability Waiver Required	5	EA
15	4705477	PL\RTR\3/82X3-1/2ID\GRV\1-1/4RDS	Liability Waiver Required	10	EA
16	4705478	SPCR\RTR\1150\8X2.416	Liability Waiver Required	10	EA
17	4800085	BOLT\HEX\1/2X1		8	EA.
18	4800139	BOLT\HEX\3/4X4-1/2		4	EA
19	4900004	NUT\HEX\3/4\NC		4	EA.
20	5000005	WASH\FLAT\3/4		8	EA.
21	5000006	WASH\LOCK\1/2		8	EA.
22	5000012	WASH\LOCK\3/4		4	EA.
23	5200258	HMMR\SWING\1/2X3\2-HOLE\1-1/4RD\3'LONG\HF\SET	(1 SET=64 HAMMERS)		EA
24	5300104	43X1-1/4 HAMMER ROD		8	EA
25	6200024	KEY\SQ\3/4X4		1	EA
26	6200035	KEY\RECT\1/2X5/8X6-1/4		1	EA
27	6200070	KEY\RECT\1/2X5/8X8-1/4		2	EA
	4705479	RTR\NEW\43X1-1/4RD\1030	Hammers, rods and bearings not included.		EA
CA	4705481	RTR\ASSY\43X1-1/4RD\1030	Complete Assembly		EA
NS	5400094	SCRN\1/8HL\11GA			EA
NS	5400075	SCRN\3/16HL\1/4T			EA
NS	5400009	SCRN\1/4HL\1/4T			EA
NS	5400010	SCRN\3/8HL\1/4T			EA
NS	5400011	SCRN\1/2HL\1/4T			EA
NS	5400012	SCRN\5/8HL\1/4T			EA
NS	5400013	SCRN\3/4HL\1/4T			EA
NS	5400014	SCRN\1HL\1/4T			EA

This page intentionally left blank

H-1030 Rotor Assembly (for SN up to 1017007030)

Item	Part No.	Name	Remarks	Qty	Uom
NS	5400067	SCRN\1-1/2HL\1/4T			EA
NS	5400015	SCRN\2HL\1/4T			EA
NS	5400016	SCRN\3HL\1/4T			EA
NS	5400061	SCRN\4HL\1/4T			EA
NS	5400108	SCRN\5HL\1/4T			EA
NS	5400147	6" (152.4 mm) Round Hole Screen Half			EA
NS	5400148	7" (177.8 mm) Round Hole Screen Half			EA
NS	5400079	SCRN\DUMMY1/4T			EA
NS	5400151	4" (101.6 mm) X 6" (152.4) Rectangular Screen Half			EA
NS	5400152	5" (127 mm) X 7" (177.8 mm) Rectangular Screen Half			EA

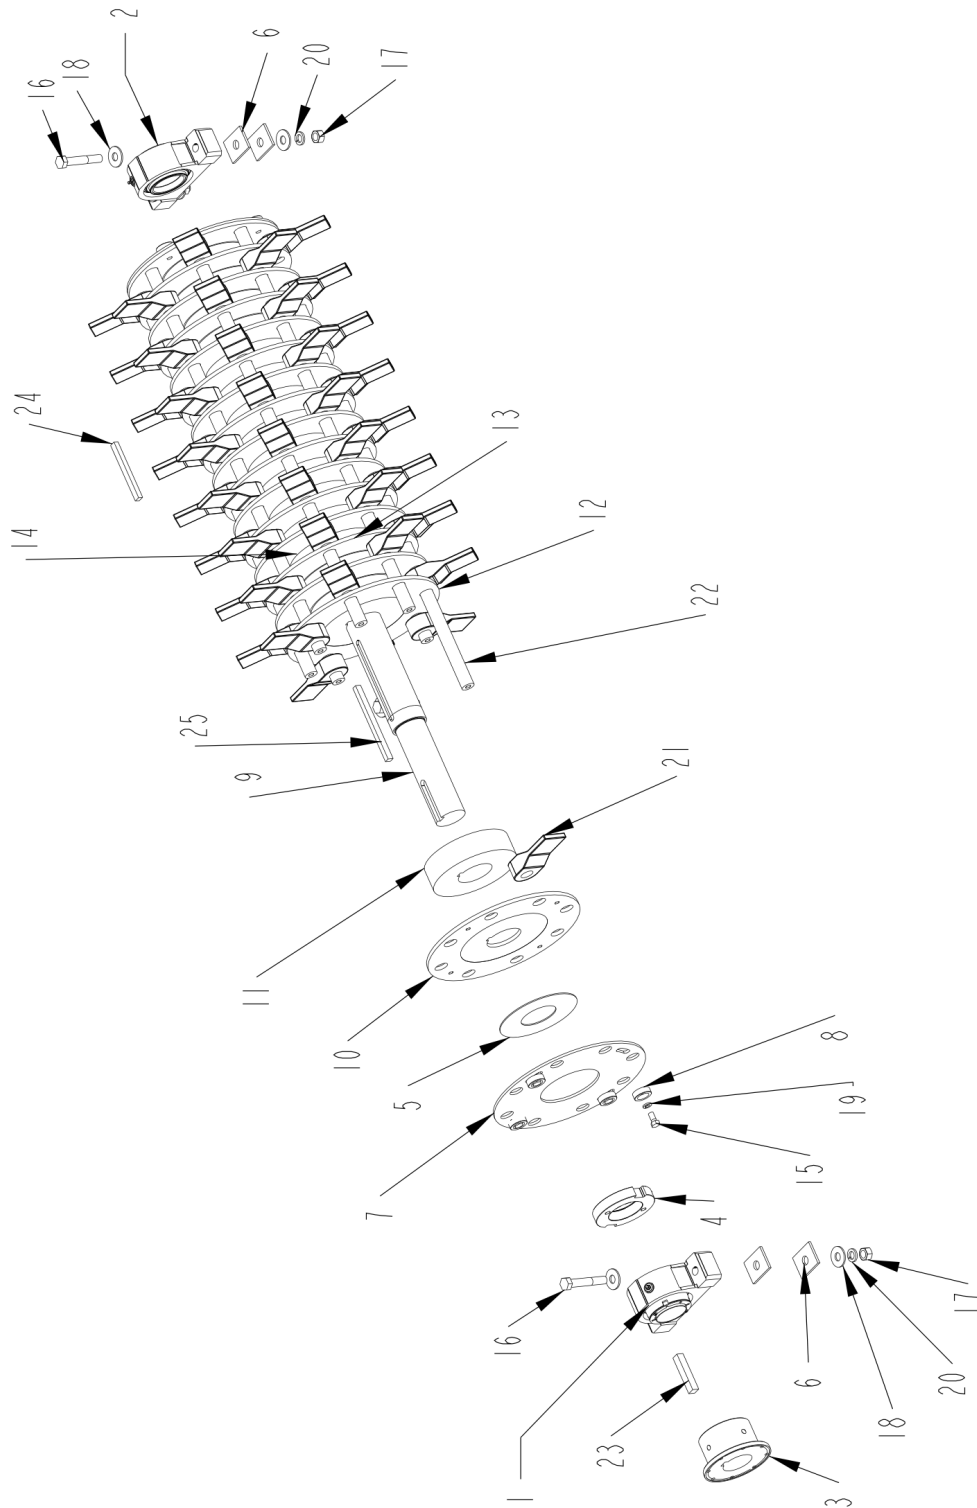

H-1030 Rotor Assembly (for SN 1018007130 & UP)

Item	Part No.	Name	Remarks	Qty	Uom
1	2001052	BRG\PB\3\IMPRL\NON-EXP		1	EA
2	2001053	BRG\PB\3\IMPRL\EXP		1	EA
3	3600834	FLG\3ID\1610\DRVLIN		1	EA
4	4500142	NUT\CYL\3-1/2	Liability Waiver Required	2	EA
5	4502322	WASH\THRUST\ROTOR\H1130		1	EA
6	4502669	SHIM\BRG		8	EA
7	4702292	PL\RTR\MVBL\6IDX15-3/4\1-1/4ROD	Liability Waiver Required	2	EA
8	4704292	WASHER\PL\MOVEABLE\RTR		8	EA
9	4705473	SHFT\RTR\3-1/2X61-7/8\3"BRG	Liability Waiver Required	1	EA
10	4705474	PL\RTR\3/8X3-1/2ID\1-1/4RDS\TPPD	Liability Waiver Required	2	EA
11	4705475	SPCR\CAST\8.645ODX3.503IDX2.311 THICK	Liability Waiver Required	6	EA
12	4705476	PL\RTR\3.5X3/8X15.75\1-1/4RDS\FCD	Liability Waiver Required	5	EA
13	4705477	PL\RTR\3/82X3-1/2ID\GRV\1-1/4RDS	Liability Waiver Required	10	EA
14	4705478	SPCR\RTR\1150\8X2.416	Liability Waiver Required	10	EA
15	4800085	BOLT\HEX\1/2X1		8	EA.
16	4800139	BOLT\HEX\3/4X4-1/2		4	EA
17	4900004	NUT\HEX\3/4\NC		4	EA.
18	5000005	WASH\FLAT\3/4		8	EA.
19	5000006	WASH\LOCK\1/2		8	EA.
20	5000012	WASH\LOCK\3/4		4	EA.
21	5200263	HMMR\FORGED\1-1/4	(1 SET=64 HAMMERS)		EA
22	5300104	43X1-1/4 HAMMER ROD		8	EA
23	6200024	KEY\SQ\3/4X4		1	EA
24	6200035	KEY\RECT\1/2X5/8X6-1/4		1	EA
25	6200070	KEY\RECT\1/2X5/8X8-1/4		2	EA
	4705479	RTR\NEW\43X1-1/4RD\1030	Hammers, rods and bearings not included.		EA
CA	4705481	RTR\ASSY\43X1-1/4RD\1030	Complete Assembly		EA
NS	5400094	SCRN\1/8HL\11GA			EA
NS	5400075	SCRN\3/16HL\1/4T			EA
NS	5400009	SCRN\1/4HL\1/4T			EA
NS	5400010	SCRN\3/8HL\1/4T			EA
NS	5400011	SCRN\1/2HL\1/4T			EA
NS	5400012	SCRN\5/8HL\1/4T			EA
NS	5400013	SCRN\3/4HL\1/4T			EA
NS	5400014	SCRN\1HL\1/4T			EA
NS	5400067	SCRN\1-1/2HL\1/4T			EA
NS	5400015	SCRN\2HL\1/4T			EA
NS	5400016	SCRN\3HL\1/4T			EA


This page intentionally left blank

H-1030 Rotor Assembly (for SN 1018007130 & UP)

Item	Part No.	Name	Remarks	Qty	Uom
NS	5400061	SCRN\4HL\1/4T			EA
NS	5400108	SCRN\5HL\1/4T			EA
NS	5400147	6" (152.4 mm) Round Hole Screen Half			EA
NS	5400148	7" (177.8 mm) Round Hole Screen Half			EA
NS	5400079	SCRN\DUMMY1/4T			EA
NS	5400151	4" (101.6 mm) X 6" (152.4) Rectangular Screen Half			EA
NS	5400152	5" (127 mm) X 7" (177.8 mm) Rectangular Screen Half			EA


H-1030 Pump Driveline Assembly

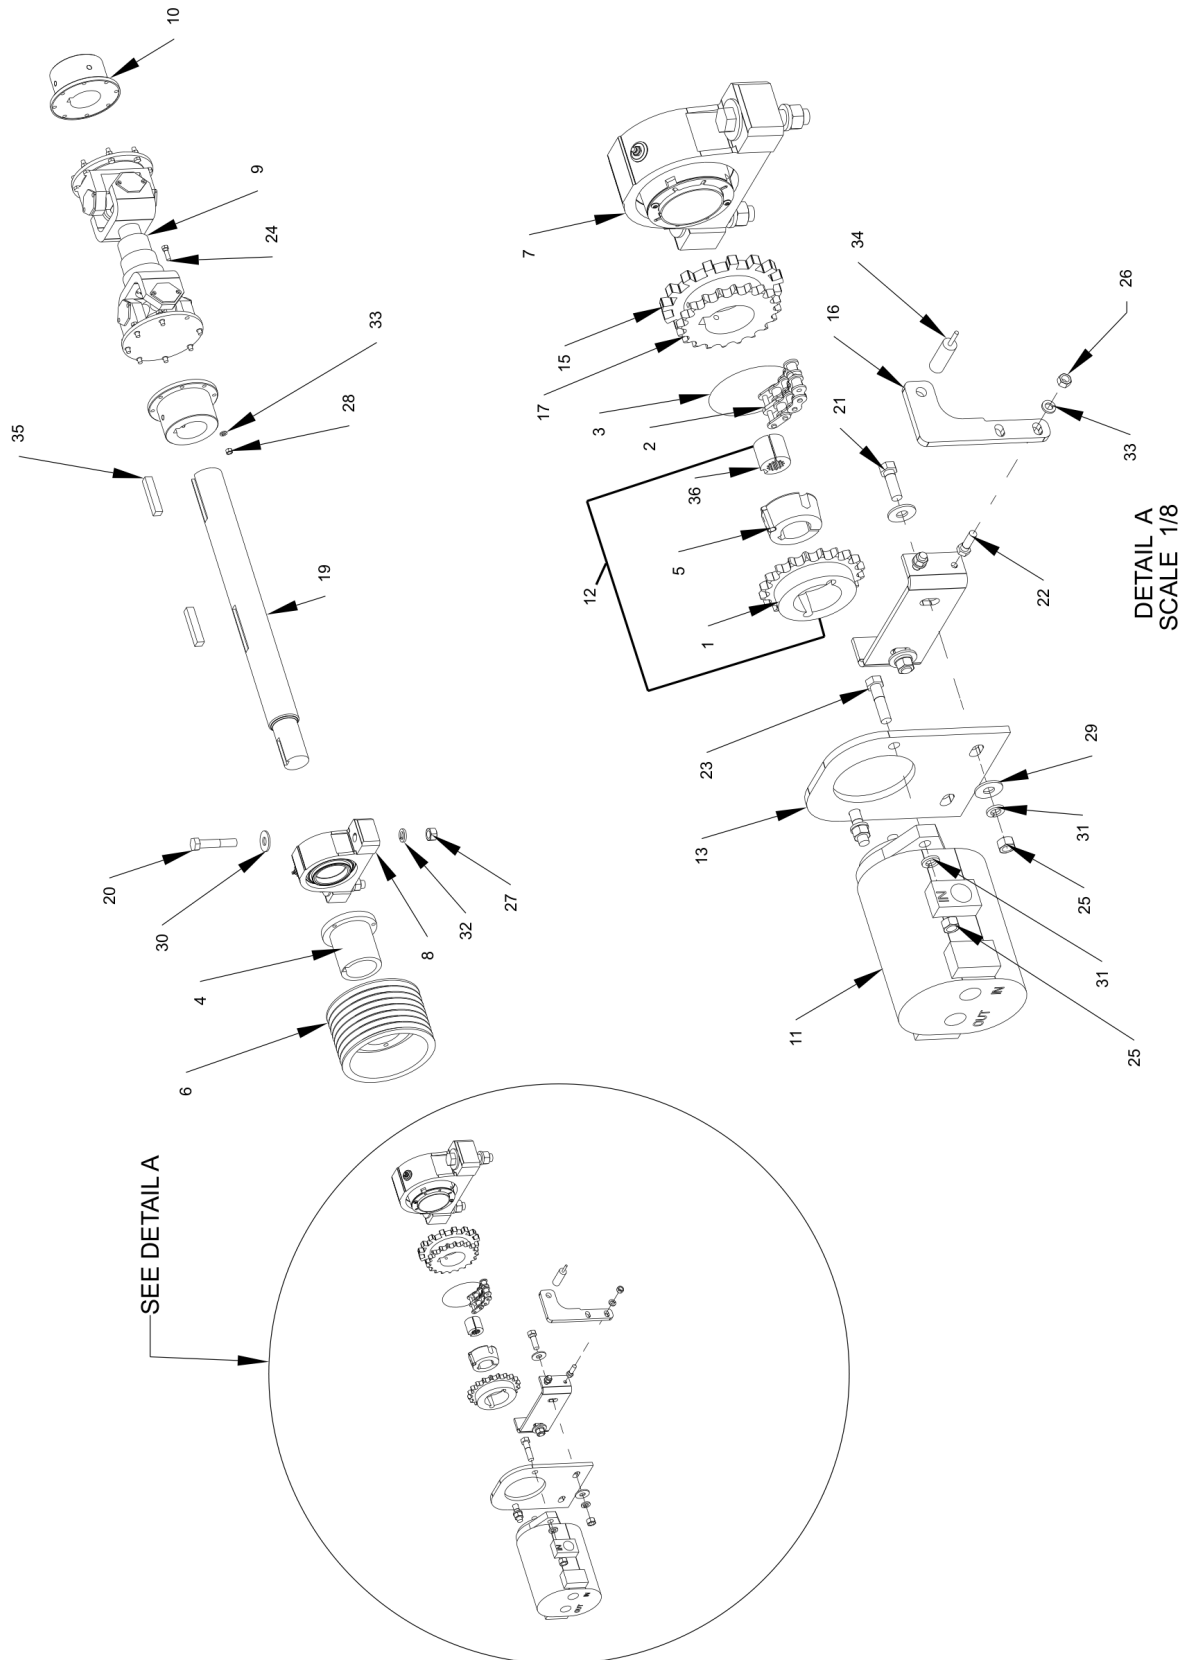
H-1030 PTO Driven Tub Grinder Parts Reference



H-1030 Pump Driveline Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	1000295	SPKT\60\TPR\20\2012\REV		1	EA
2	1100064	CHAIN\60DBL\CL		1	EA.
3	1100193	CHAIN\60DBL\19		1	EA
4	1400624	BUSH\R2\3		1	EA
5	1400658	BUSH\TAPER\1-1/2\2012\W\KEY		1	EA
6	1400667	SHVE\5V-8\9.75\F		1	EA
7	2001052	BRG\PB\3\IMPR\NON-EXP		1	EA
8	2001053	BRG\PB\3\IMPR\EXP		1	EA
9	3600833	DRLIN\COMP\17.5\1610		1	EA
10	3600834	FLG\3ID\1610\DRVLIN		2	EA
11	4200142	PUMP\HYD\TNDM\1.78CIDX1.3CID		1	EA
12	4502627	CPLR\DRV\PMPP\6020CHNX7/8SPLN	Includes #1, #5, #36	1	EA
13	4502665	BRKT\PUMP		1	EA.
14	4502752	FRM\PLFRM\1030		1	EA
15	4502784	SPKT\SNSR	Includes #17	1	EA
16	4502785	BRKT\SENSOR		1	EA
17	4502796	SPKT\60\B\20\2-7/16\5/8KW		1	EA
18	4705460	DRV\TUB\1030		1	EA
19	4705461	SHFT\JACK\PUMPDRIVE		1	EA
20	4800063	BOLT\HEX\3/4X4		4	EA.
21	4800082	BOLT\HEX\1/2X1-1/2		2	EA.
22	4800098	BOLT\HEX\3/8X1-1/4\NC		2	EA.
23	4800114	BOLT\HEX\1/2X2		2	EA.
24	4800487	BOLT\HEX\3/8X1-1/4\GR8\NF		16	EA
25	4900001	NUT\HEX\1/2\NC		4	EA.
26	4900002	NUT\HEX\3/8\NC		2	EA.
27	4900004	NUT\HEX\3/4\NC		4	EA.
28	4900125	NUT\HEX\3/8\GR8\NF		16	EA
29	5000004	WASH\FLAT\1/2		4	EA.
30	5000005	WASH\FLAT\3/4		4	EA.
31	5000006	WASH\LOCK\1/2		4	EA.
32	5000012	WASH\LOCK\3/4		4	EA.
33	5000019	WASH\LOCK\3/8		18	EA.
34	5701157	SENSOR\SPEED\HALL;EFFECT		1	EA
35	6200024	KEY\SQ\3/4X4		2	EA
36	7501443	INSERT\SPLINED\7/8;13TTHX1-1/2OD		1	EA

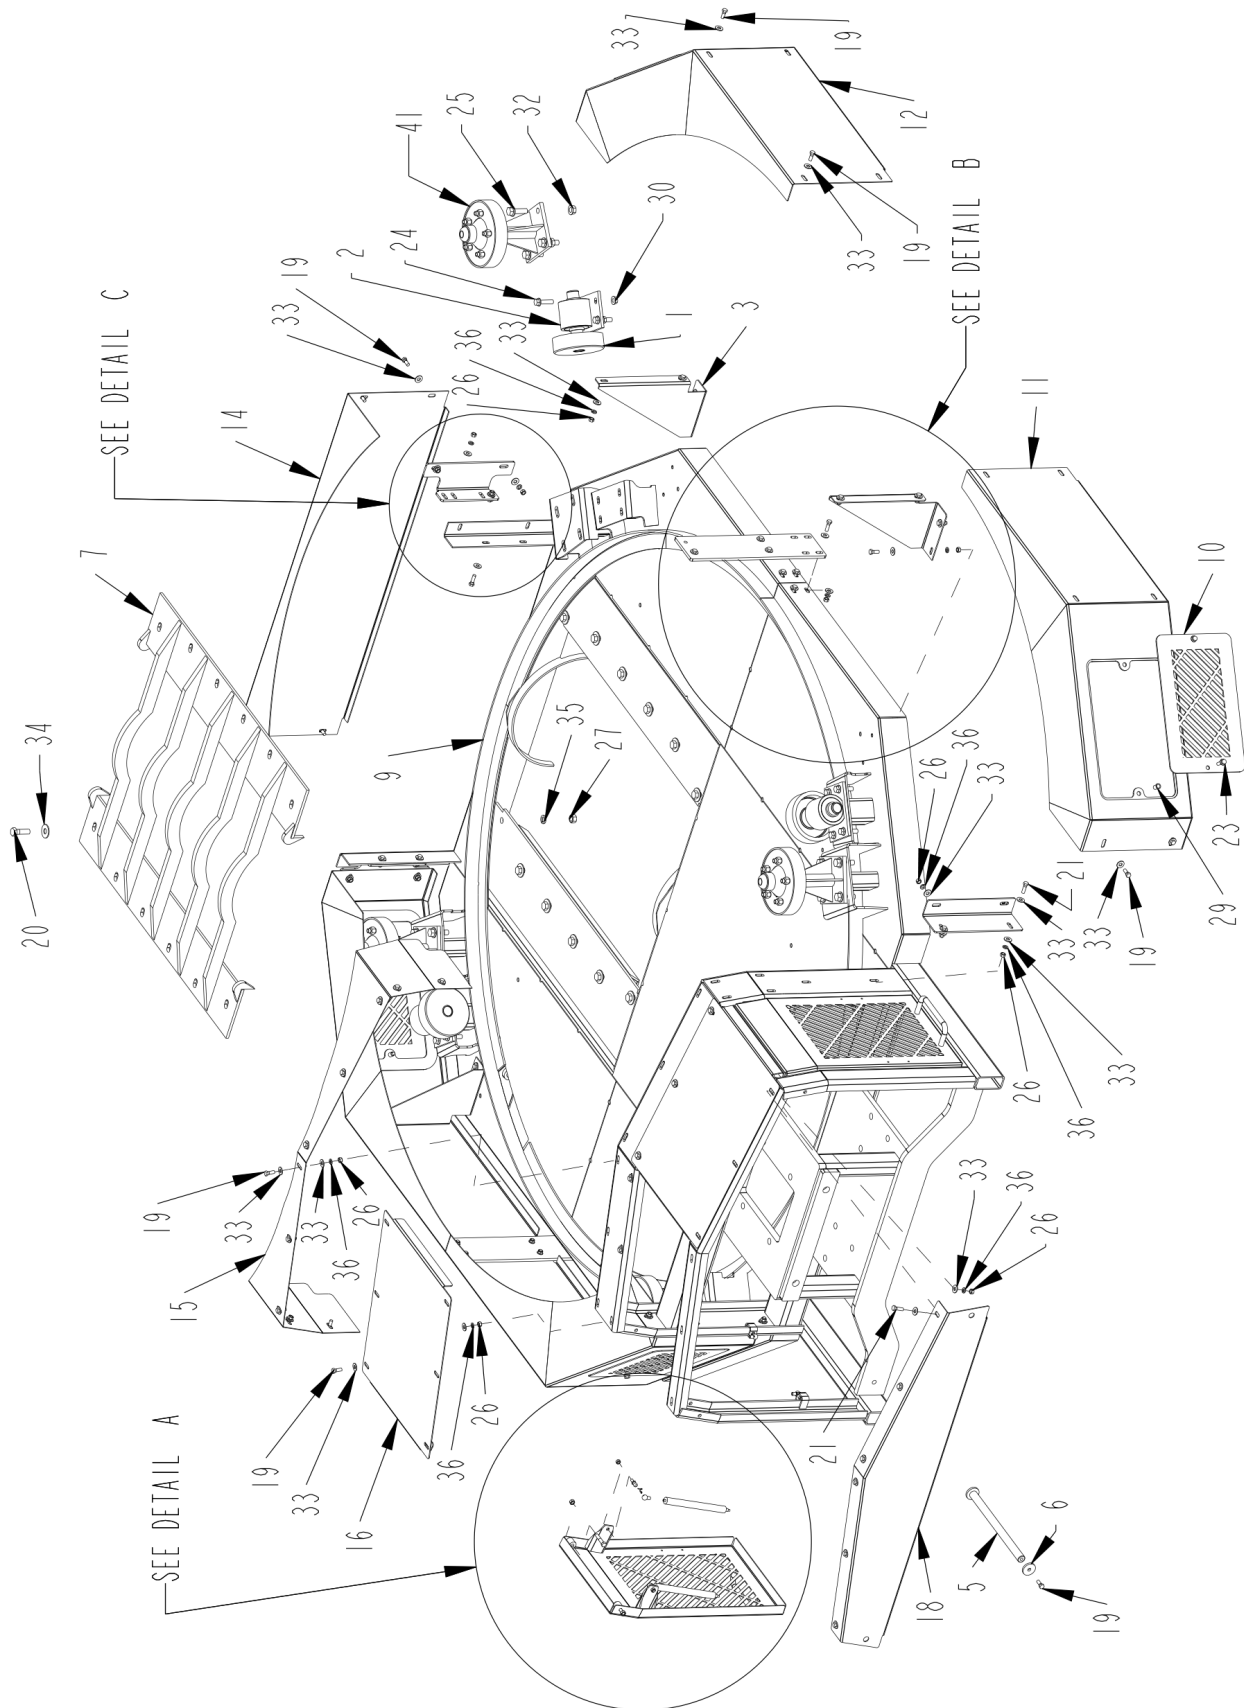

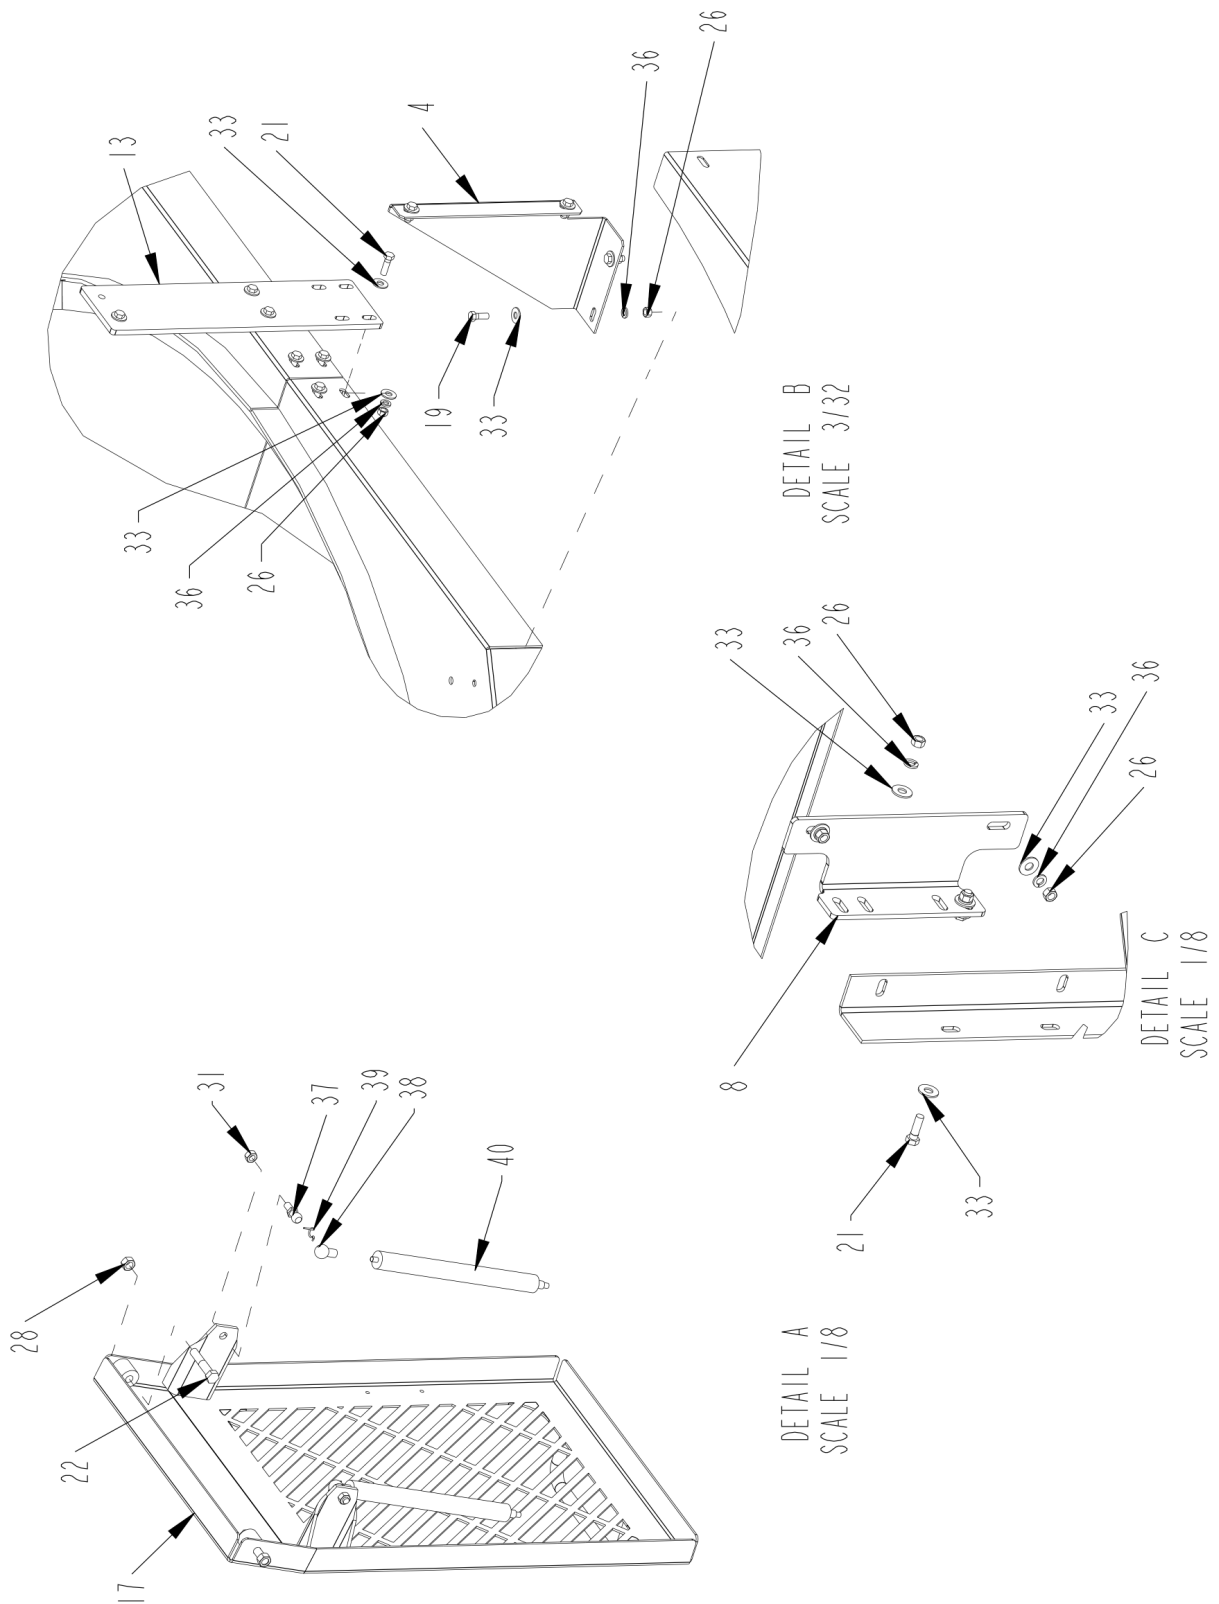

This page intentionally left blank


H-1030 Platform Assembly (for SN up to 1015001030)


Item	Part No.	Name	Remarks	Qty	Uom
1	1200013	RLLR\TUB\1-1/2\W/O FLANGE		4	EA
2	4702007	BRG\PB\RLLR\TUB\ASY		4	EA
3	4501915	BRKT\SHLD\CHAIN\DRIVE\TUB		2	EA
4	4501916	BRKT\SHLD\CHAIN\DRIVE\TUB		2	EA
5	4501931	PIN\PLFRM\TILTCYL		1	EA
6	4501932	WASH\1-3/4 O.D.		2	EA
7	4502120	GRATE\MILL\1-3/4\LOWERED\H1000		1	EA
8	4502641	MNT\SHLD\TUB\REAR		2	EA
9	4502752	FRM\PLFRM\1030		1	EA
10	4502774	DOOR\SHLD\TUB		4	EA
11	4705463	SHLD\TUBDRIVE		2	EA
12	4705464	SHLD\TUBDRIVE		2	EA
13	4705465	BRKT\SHLD\SIDE		2	EA
14	4705466	SHLD\DRV\CHAIN\TUB\REAR		1	EA
15	4705467	SHLD\DRIVE\TUB		1	EA
16	4705470	CVR\DRV\TUB		2	EA
17	4705471	DOOR\DRIVE\TUB		2	EA
18	4705472	CVR\FR\FRM\MN		1	EA
19	4800003	BOLT\HEX\3/8X1		50	EA.
20	4800010	BOLT\HEX\5/8X2		12	EA.
21	4800098	BOLT\HEX\3/8X1-1/4\NC		22	EA.
22	4800146	BOLT\HEX\3/8X2		4	EA.
23	4800914	BOLT\FLG\SERR\3/8X1-1/4\NC		8	EA
24	4800930	BOLT\FLG\SERR\1/2X2\NC		16	EA
25	4800949	BOLT\FLG\5/8X2\GR8\NC		16	EA
26	4900002	NUT\HEX\3/8\NC		62	EA.
27	4900005	NUT\HEX\5/8\NC		12	EA.
28	4900023	NUT\TPLCK\3/8\NC		4	EA.
29	4900083	NUT\INSERT\3/8\LONG\0.15-0.312\(.418/CD)		8	EA
30	4900100	NUT\FLG\TPLCK\1/2\NC		16	EA
31	4900142	NUT\TPLCK\5/16\NC		8	EA.
32	4900178	NUT\FLG\TPLCK\5/8\GR8\NC		16	EA
33	5000001	WASH\FLAT\3/8		124	EA.
34	5000002	WASH\FLAT\5/8		12	EA.
35	5000003	WASH\LOCK\5/8		12	EA.
36	5000019	WASH\LOCK\3/8		62	EA.
37	7500664	BALL STUD\SHOCK\FITTING\M6		8	EA
38	7500665	SHOCK\END\FITTING\M6		8	EA

This page intentionally left blank

H-1030 Platform Assembly (for SN up to 1015001030)

Item	Part No.	Name	Remarks	Qty	Uom
39	7500666	SHOCK\SAFTY\CLIP		8	EA
40	7500680	SPRNG\GAS\60LB\9416K174		4	EA
41	4501317	RLLR\PRESS\COMPL		4	EA
CA	4705468	PLFRM\ASSY\1030			EA
NS	4500737	STOP\CYL\PLFRM		1	EA
NS	4800046	PIN\CLEVIS\3/4X3		1	EA
NS	4800107	PIN\HAIR\1/8(#9)		1	EA.

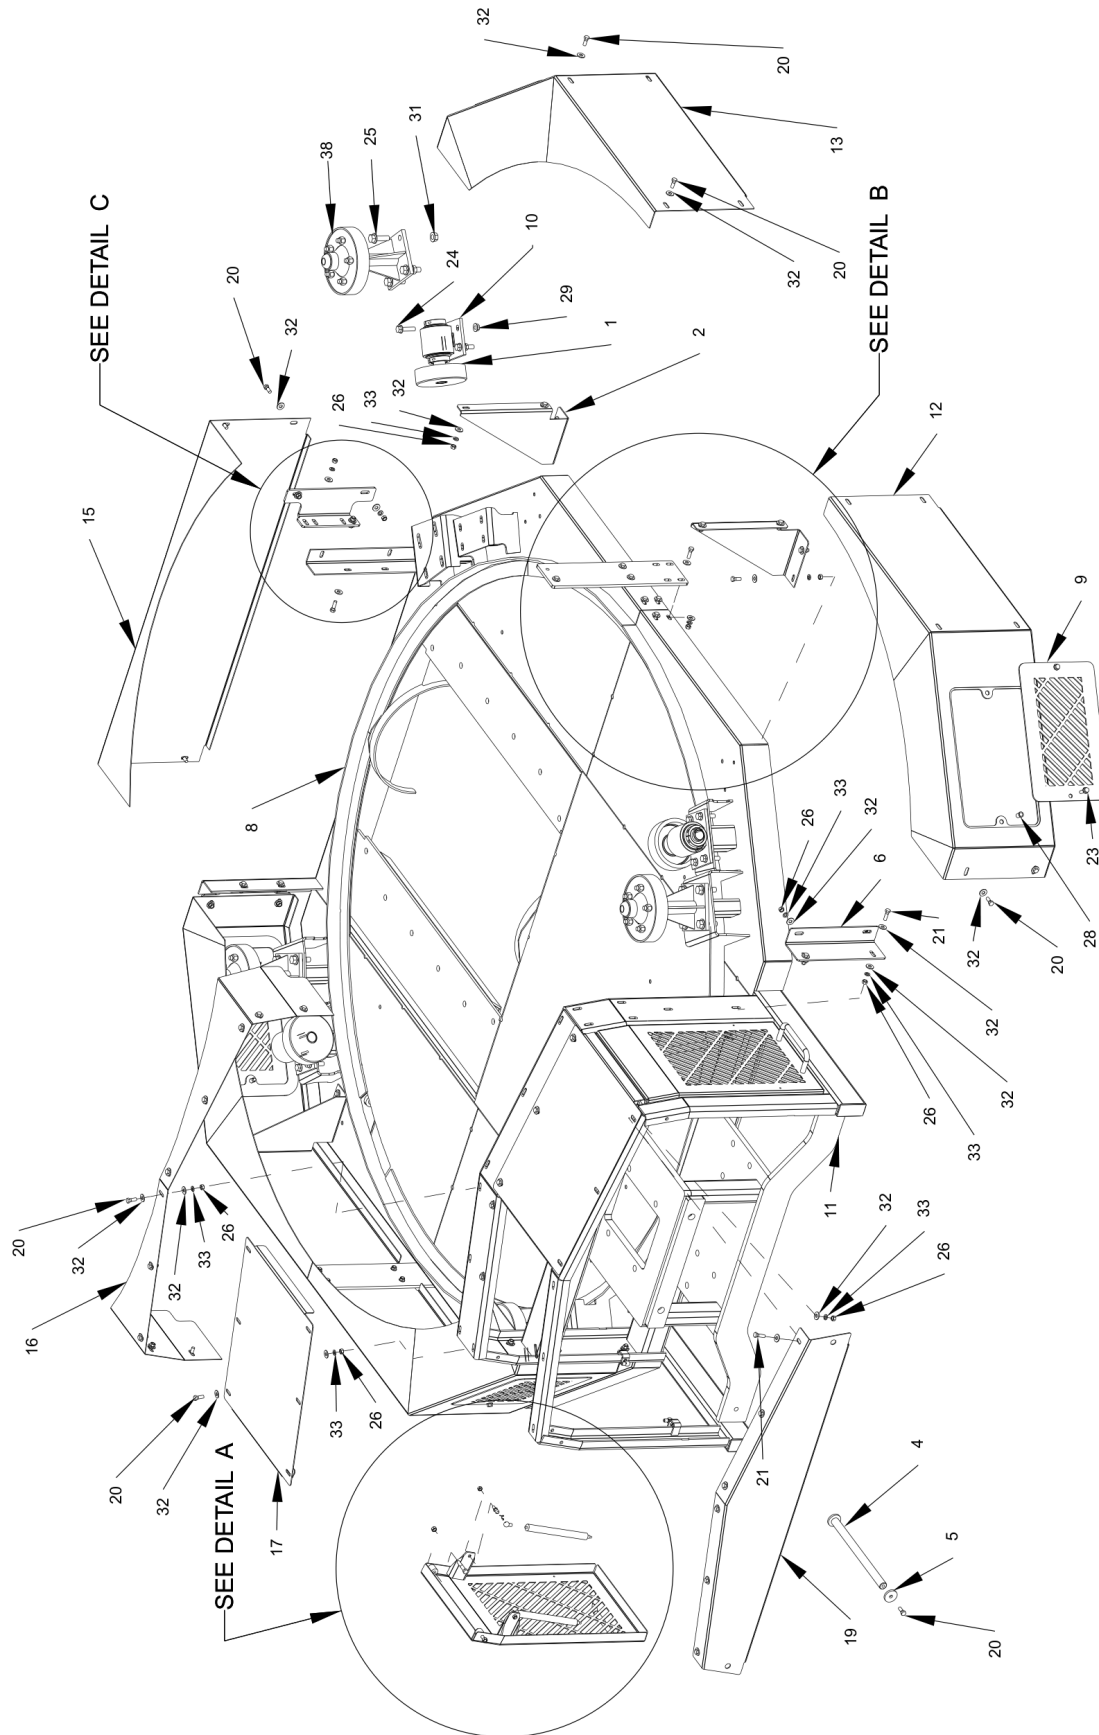

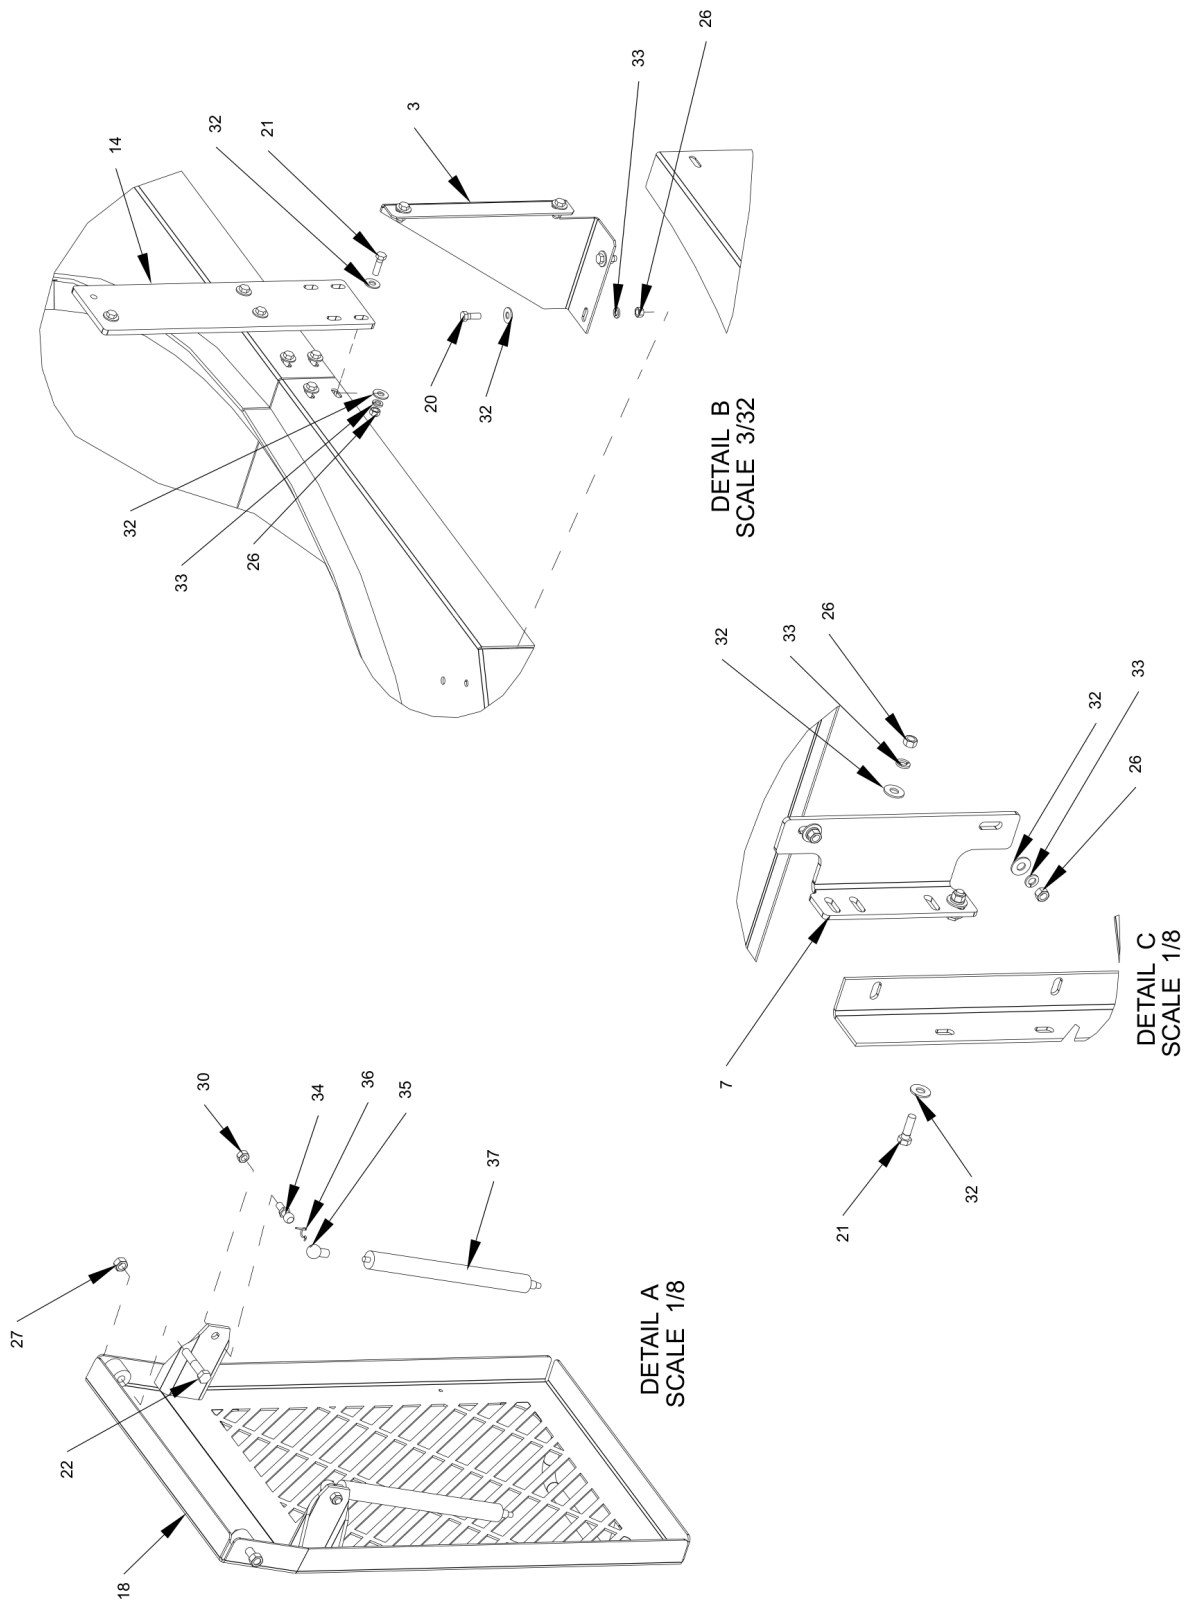

This page intentionally left blank


H-1030 Platform Assembly (for Sn 1016001130 and up)

Item	Part No.	Name	Remarks	Qty	Uom
1	1200013	RLLR\TUB\1-1/2\W/O FLANGE		4	EA
2	4501915	BRKT\SHLD\CHAIN\DRIVE\TUB		2	EA
3	4501916	BRKT\SHLD\CHAIN\DRIVE\TUB		2	EA
4	4501931	PIN\PLFRM\TILTCYL		1	EA
5	4501932	WASH\1-3/4 O.D.		2	EA
6	4502640	MNT\SHLD\TUB\FR		2	EA
7	4502641	MNT\SHLD\TUB\REAR		2	EA
8	4502752	FRM\PLFRM\1030		1	EA
9	4502774	DOOR\SHLD\TUB		4	EA
10	4702007	BRG\PB\RLLR\TUB\ASY	See also Tub Bearing Assembly	4	EA
11	4705460	DRV\TUB\1030		1	EA
12	4705463	SHLD\TUBDRIVE		2	EA
13	4705464	SHLD\TUBDRIVE		2	EA
14	4705465	BRKT\SHLD\SIDE		2	EA
15	4705466	SHLD\DRV\CHAIN\TUB\REAR		1	EA
16	4705467	SHLD\DRIVE\TUB		1	EA
17	4705470	CVR\DRV\TUB		2	EA
18	4705471	DOOR\DRIVE\TUB		2	EA
19	4705472	CVR\FR\FRMMN		1	EA
20	4800003	BOLT\HEX\3/8X1		50	EA.
21	4800098	BOLT\HEX\3/8X1-1/4\NC		22	EA.
22	4800146	BOLT\HEX\3/8X2		4	EA.
23	4800914	BOLT\FLG\SERR\3/8X1-1/4\NC		8	EA
24	4800930	BOLT\FLG\SERR\1/2X2\NC		16	EA
25	4800949	BOLT\FLG\5/8X2\GR8\NC		16	EA
26	4900002	NUT\HEX\3/8\NC		62	EA.
27	4900023	NUT\TPLCK\3/8\NC		4	EA.
28	4900083	NUT\INSERT\3/8\LONG\0.15-0.312\(.418/CD)		8	EA
29	4900100	NUT\FLG\TPLCK\1/2\NC		16	EA
30	4900142	NUT\TPLCK\5/16\NC		8	EA.
31	4900178	NUT\FLG\TPLCK\5/8\GR8\NC		16	EA
32	5000001	WASH\FLAT\3/8		124	EA.
33	5000019	WASH\LOCK\3/8		62	EA.
34	7500664	BALL STUD\SHOCK\FITTING\M6		8	EA
35	7500665	SHOCK\END\FITTING\M6		8	EA
36	7500666	SHOCK\SAFETY\CLIP		8	EA
37	7500680	SPRNG\GAS\60LB\9416K174		4	EA
38	4501317	RLLR\PRESS\COMPL	See also Pressure Roller Assembly	4	EA

This page intentionally left blank


H-1030 Platform Assembly (for Sn 1016001130 and up)

Item	Part No.	Name	Remarks	Qty	Uom
CA	4705468	PLFRM\ASSY\1030			EA
NS	4500737	STOP\CYL\PLFRM		1	EA
NS	4800046	PIN\CLEVIS\3/4X3		1	EA
NS	4800107	PIN\HAIR\1/8(#9)		1	EA.

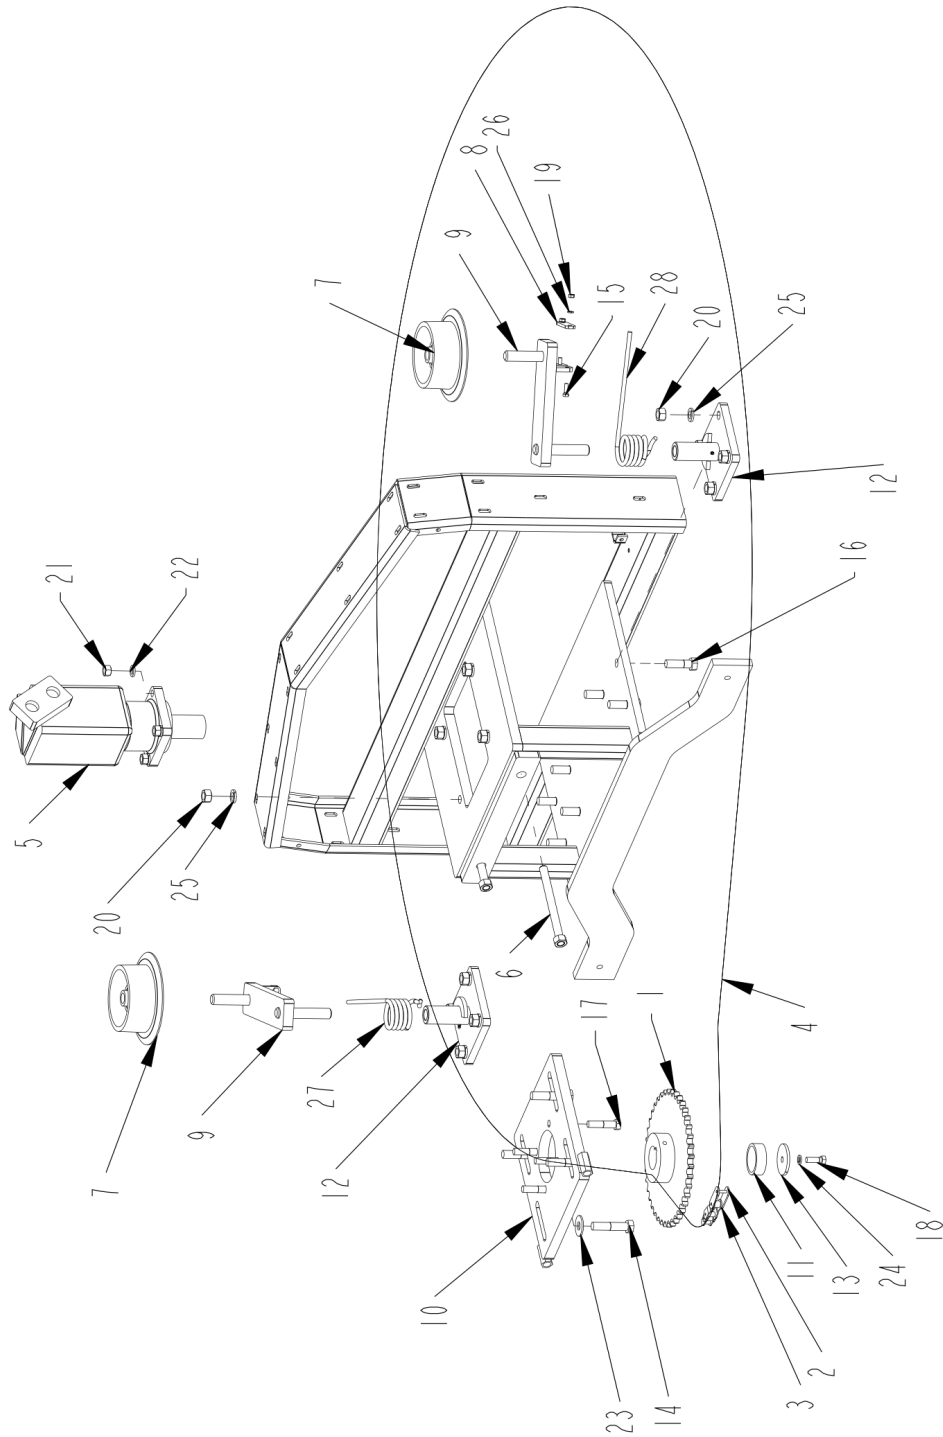


H-1030 Tub Drive Assembly (for SN up to 1021021030)

Item	Part No.	Name	Remarks	Qty	Uom
1	1000311	SPKT\B\80\50\2-1/4\1/2KEY		1	EA
2	1100070	CHAIN\2080\CL		1	EA
3	1100071	CHAIN\2080\OL		1	EA
4	1100310	CHAIN\2080\165		1	EA
5	4200121	MTR\HYD\40.6\1000\2-1/4\1-5/16FOR		1	EA
6	4501328	BOLT\HEX\3X4X8-1/2		2	EA
7	4501331	RLLR\DR\TUB		2	EA
8	4501383	BRKT\SPRING\		2	EA
9	4501705	BRKT\RLLR\TNSN		2	EA
10	4501707	BRKT\MTR\DRV\TUB		1	EA
11	4502797	SPCR\DRIVE		1	EA
12	4703168	BRKT\RLLR\TNSN		2	EA
13	4703713	WASH\MTR\ORBIT		1	EA
14	4800011	BOLT\HEX\3/4X3-1/2		4	EA.
15	4800013	BOLT\HEX\5/16X1		4	EA.
16	4800115	BOLT\HEX\3/4X2-1/2		8	EA.
17	4800196	BOLT\HEX\5/8X2-3/4		4	EA.
18	4800575	BOLT\HEX\1/2X1-1/2\NF		1	EA
19	4900003	NUT\HEX\5/16\NC		4	EA.
20	4900004	NUT\HEX\3/4\NC		14	EA.
21	4900005	NUT\HEX\5/8\NC		4	EA.
22	5000003	WASH\LOCK\5/8		4	EA.
23	5000005	WASH\FLAT\3/4		4	EA.
24	5000006	WASH\LOCK\1/2		1	EA.
25	5000012	WASH\LOCK\3/4		12	EA.
26	5000022	WASH\LOCK\5/16		4	EA.
27	6100078	SPG\DR\TUB		1	EA.
28	6100079	SPG\DR\TUB		1	EA.
NS	6200071	KEY\SQ\1/2X2-1/2		1	EA.

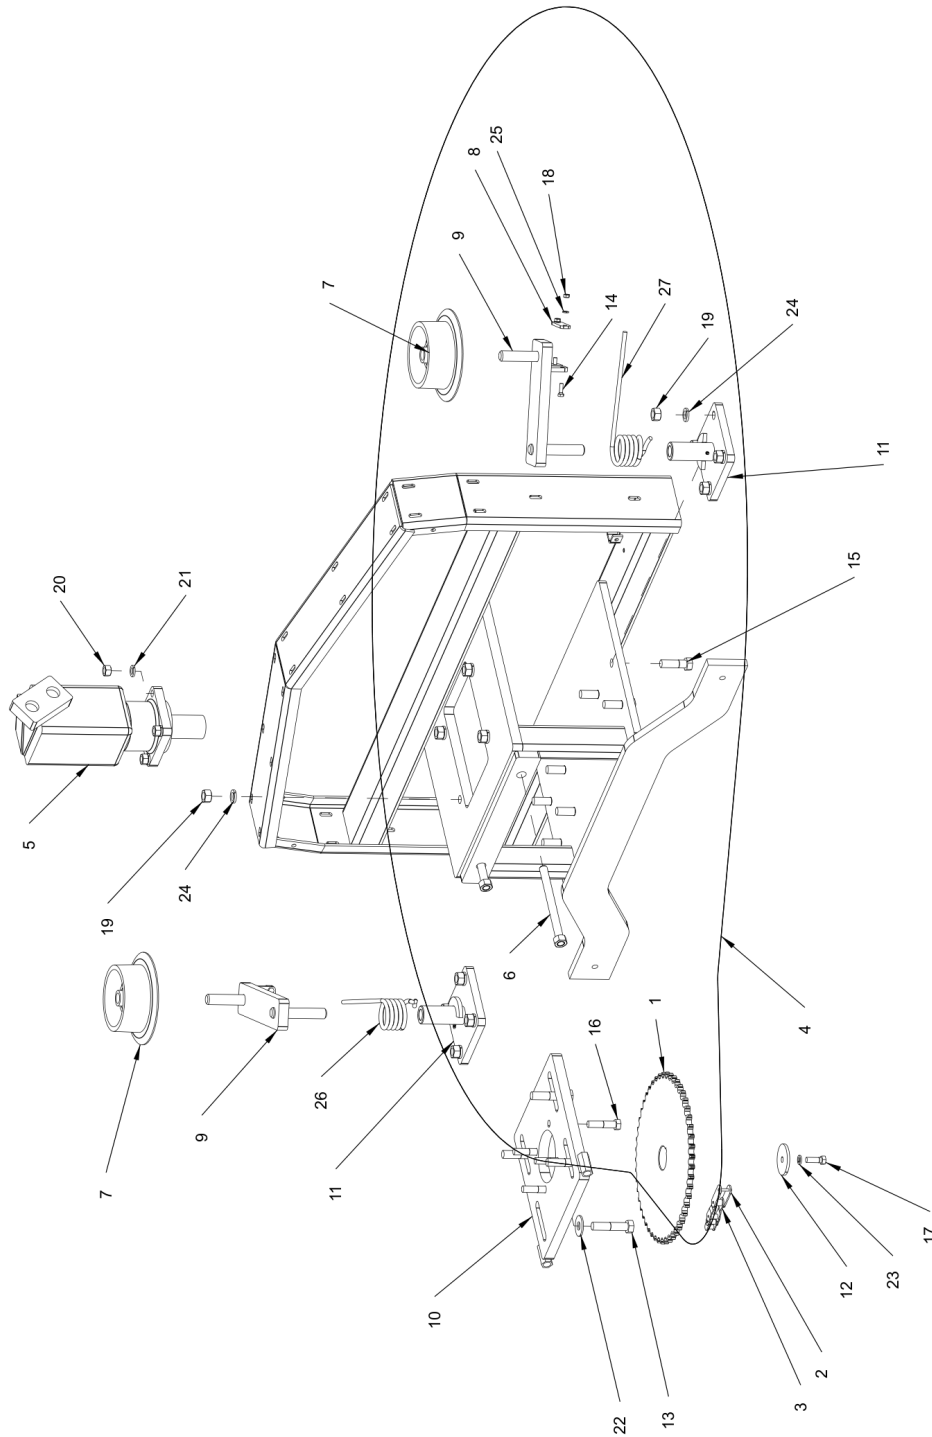


H-1030 Tub Drive Assembly (for SN 1023021130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	1000311	SPKT\B\80\50\2-1/4\1/2KEY		1	EA
2	1100070	CHAIN\2080\CL		1	EA
3	1100071	CHAIN\2080\OL		1	EA
4	1100310	CHAIN\2080\165		1	EA
5	4200121	MTR\HYD\40.6\1000\2-1/4\1-5/16FOR		1	EA
6	4501328	BOLT\HEX\3X4X8-1/2		2	EA
7	4501331	RLLR\DR\TUB		2	EA
8	4501383	BRKT\SPRING\		2	EA
9	4501705	BRKT\RLLR\TNSN		2	EA
10	4501707	BRKT\MTR\DRV\TUB		1	EA
11	4703168	BRKT\RLLR\TNSN		2	EA
12	4703713	WASH\MTR\ORBIT		1	EA
13	4800011	BOLT\HEX\3/4X3-1/2		4	EA.
14	4800013	BOLT\HEX\5/16X1		4	EA.
15	4800115	BOLT\HEX\3/4X2-1/2		8	EA.
16	4800196	BOLT\HEX\5/8X2-3/4		4	EA.
17	4800575	BOLT\HEX\1/2X1-1/2\NF		1	EA
18	4900003	NUT\HEX\5/16\NC		4	EA.
19	4900004	NUT\HEX\3/4\NC		14	EA.
20	4900005	NUT\HEX\5/8\NC		4	EA.
21	5000003	WASH\LOCK\5/8		4	EA.
22	5000005	WASH\FLAT\3/4		4	EA.
23	5000006	WASH\LOCK\1/2		1	EA.
24	5000012	WASH\LOCK\3/4		12	EA.
25	5000022	WASH\LOCK\5/16		4	EA.
26	6100078	SPG\DR\TUB		1	EA.
27	6100079	SPG\DR\TUB		1	EA.
NS	6200071	KEY\SQ\1/2X2-1/2		1	EA.

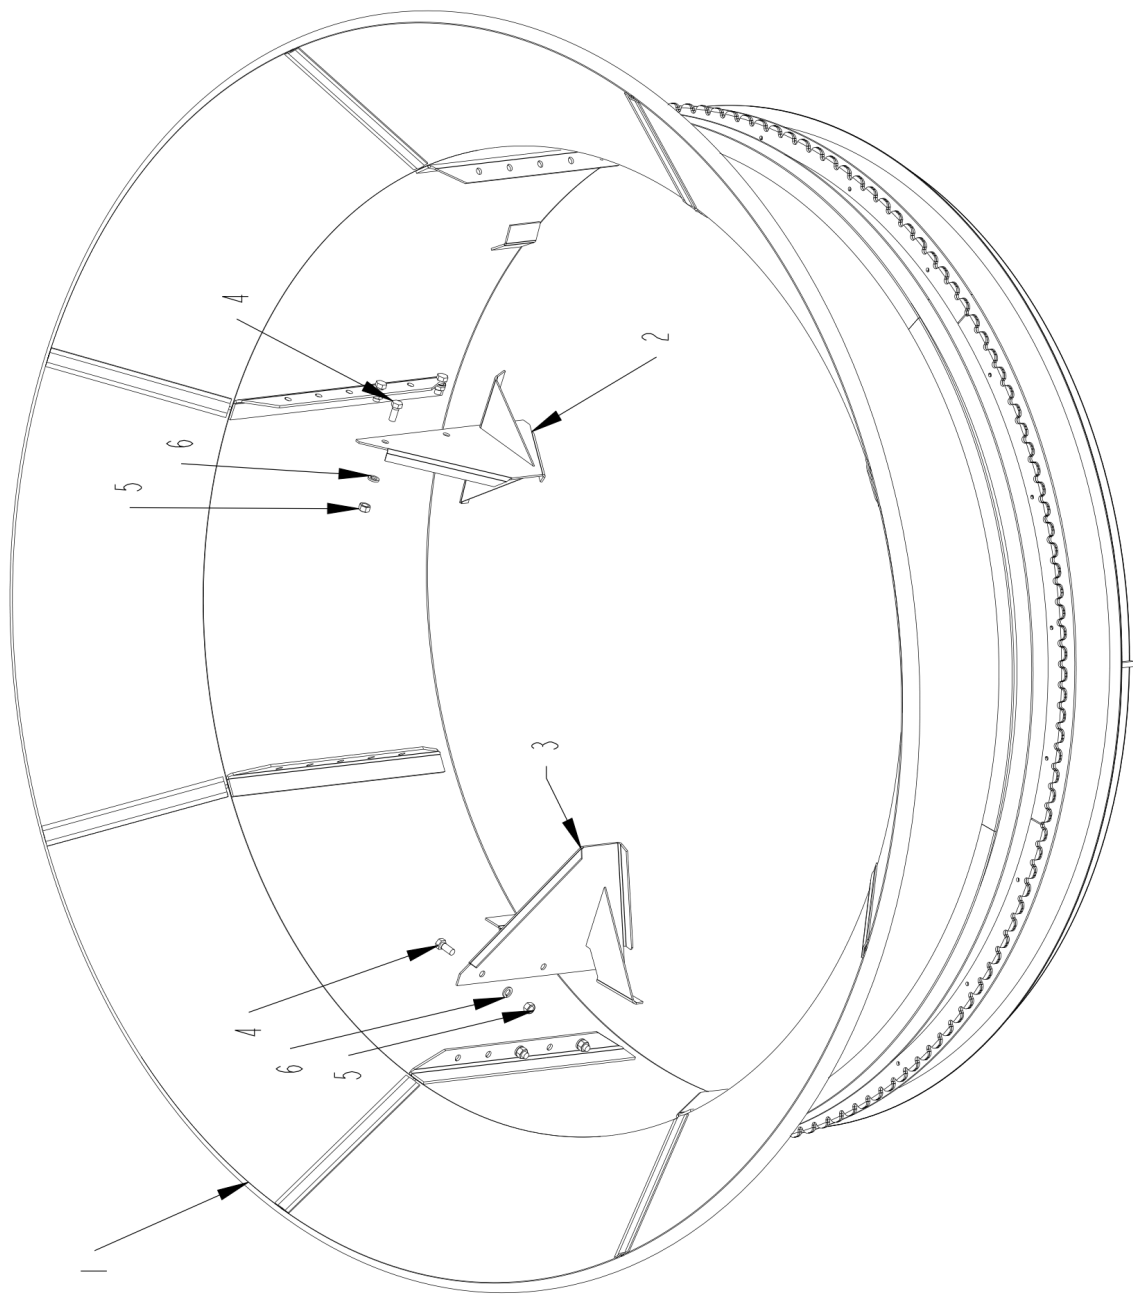

H-1030 Tub Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	4502397	TUB\1030		1	EA
2	4502409	AGTTR\TUB\FIN\10		1	EA
3	4502410	AGTTR\TUB\FIN\14		1	EA
4	4800106	BOLT\HEX\5/8X1-1/2		6	EA.
5	4900005	NUT\HEX\5/8\NC		6	EA.
6	5000003	WASH\LOCK\5/8		6	EA.
CA	4705469	TUB\ASSY\1030			EA.

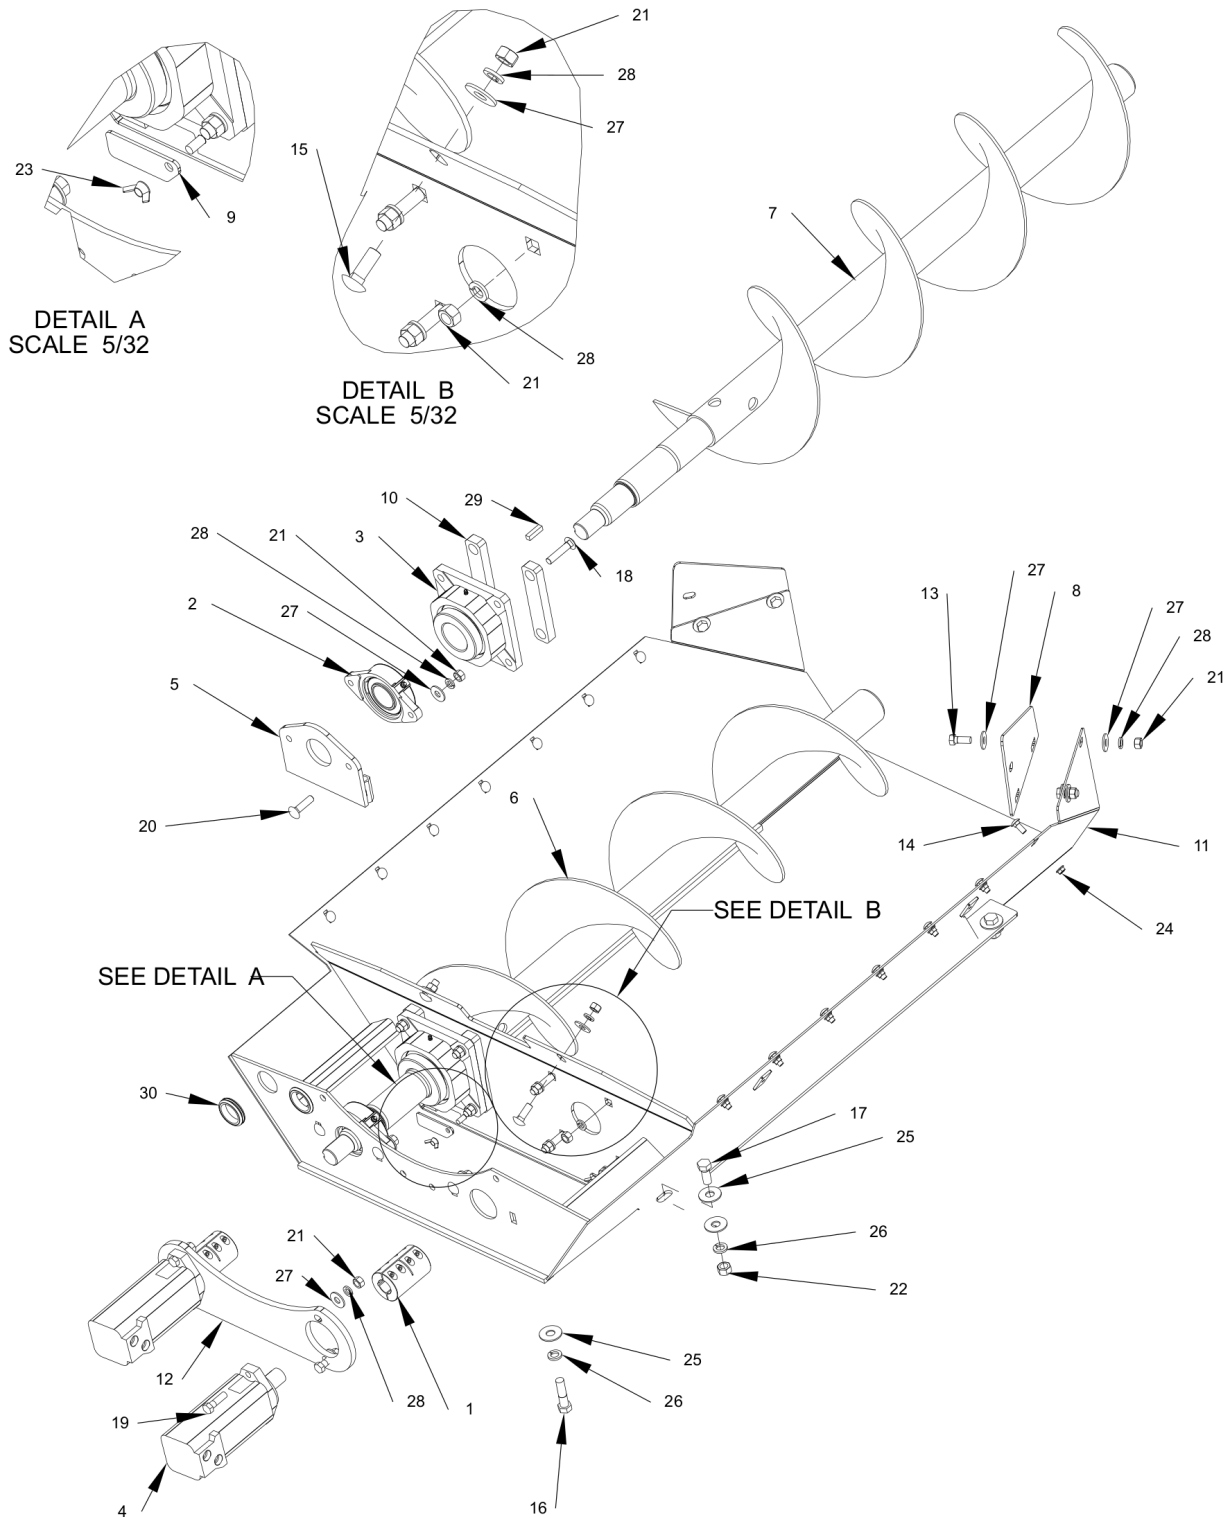


H-1030 Belly Auger Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	1400659	CPLR\RIGID\1.5X1.25		2	EA
2	2000587	BRG\FLG\2"-BLT\SSCRW		2	EA
3	2000588	BRG\FLG\2-1/2\4-BLT\D-LOCK		2	EA
4	3900010	MTR\HYD\24\2000\SAE;A		2	EA
5	4502312	ADJSTR\BRG\FR		2	EA
6	4502393	AUGER\RIGHT		1	EA
7	4502395	AUGER\LEFT\1030		1	EA
8	4502427	SH\SIDE\PAN\CNVYR		2	EA
9	4502603	CVR\HOLE\DRN		2	EA
10	4502666	SPCR\BRG\AGR\CNVYR		4	EA
11	4502754	PAN\CNVYR\BELLY\H1030		1	EA
12	4502755	BRKT\MTR\DRIVE		1	EA
13	4800018	BOLT\HEX\1/2X1-1/4		4	EA.
14	4800053	BOLT\CRG\3/8X1\NC		14	EA.
15	4800061	BOLT\CRG\1/2X1-1/2\NC		2	EA
16	4800079	BOLT\HEX\5/8X2-1/2		4	EA.
17	4800106	BOLT\HEX\5/8X1-1/2		4	EA.
18	4800129	BOLT\CRG\1/2X2-1/2\NC		8	EA
19	4800178	BOLT\HEX\1/2X1-3/4		4	EA.
20	4800334	BOLT\CRG\1/2X2\NC		4	EA
21	4900001	NUT\HEX\1/2\NC		22	EA.
22	4900005	NUT\HEX\5/8\NC		4	EA.
23	4900032	NUT\WING\3/8\NC		2	EA.
24	4900076	NUT\FLG\SERR\3/8\NC		14	EA.
25	5000002	WASH\FLAT\5/8		12	EA.
26	5000003	WASH\LOCK\5/8		8	EA.
27	5000004	WASH\FLAT\1/2		18	EA.
28	5000006	WASH\LOCK\1/2		22	EA.
29	6200007	KEY\SQ\3/8X1-1/2		2	EA
30	7500360	GRMT\RBBR\2X1.75IDX1/4T		2	EA.
CA	4502398	CNVYR\BELLY\AUGER\ASSY\1030			EA.


H-1030 Lower Discharge Assembly

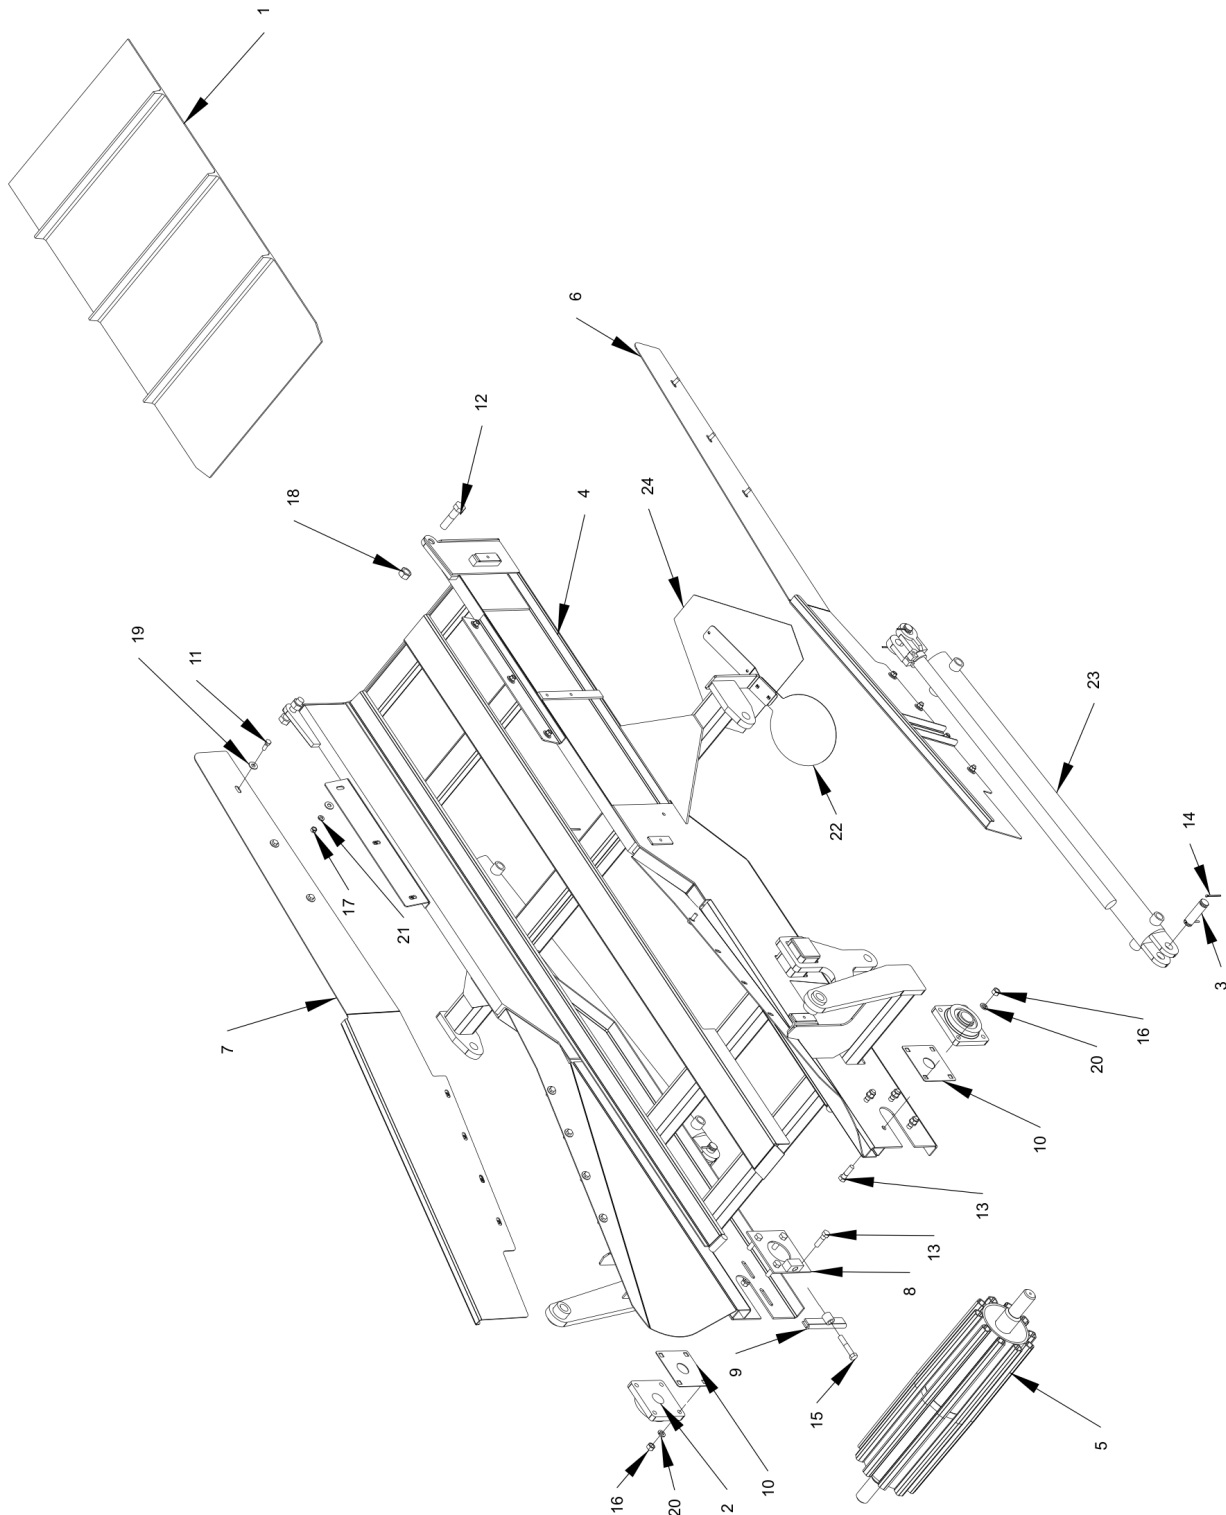H-1030 PTO Driven Tub Grinder Parts Reference




H-1030 Lower Discharge Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	1700255	BELT\CNVYR\24X513\CLEATED		1	EA
2	2000303	BRG\FLG\1-1/2\BOLT		2	EA
3	4100356	PIN\CYL\HYD\1X3-15/16 CTD		4	EA.
4	4502396	CONV\LOWER\H1030\FLDNG		1	EA
5	4502418	RLLR\IDLER\32-3/4X8\CNVYR\DISCH		1	EA
6	4502428	TRNSTN\CNVYR\LFT		1	EA
7	4502429	TRNSTN\CNVYR\RGHT		1	EA
8	4701528	BRKT\ADJ\TRACKING\CNVYR\DISCH		1	EA
9	4701529	HOOK\ROD\ADJ\BELT\CNVYR\DISCH		1	EA
10	4704067	PL\SEAL\BRG		2	EA
11	4800003	BOLT\HEX\3/8X1		14	EA.
12	4800017	BOLT\HEX\3/4X3		2	EA.
13	4800178	BOLT\HEX\1/2X1-3/4		8	EA.
14	4800203	PIN\COT\5/32X2		8	EA.
15	4800351	BOLT\HEX\1/2X2-3/4		1	EA.
16	4900001	NUT\HEX\1/2\NC		8	EA.
17	4900002	NUT\HEX\3/8\NC		14	EA.
18	4900139	NUT\TPLCK\3/4\GR8\NC		2	EA.
19	5000001	WASH\FLAT\3/8		28	EA.
20	5000006	WASH\LOCK\1/2		8	EA.
21	5000019	WASH\LOCK\3/8		14	EA.
22	7501701	DECAL\ASSY\ID\SPD\25MPH/40KM/H		1	EA.
23	4100175	CYL\HYD\3X36\PARALLEL		2	EA
24	7501353	SIGN\SMV\PLSTC-BCKNG		1	EA.

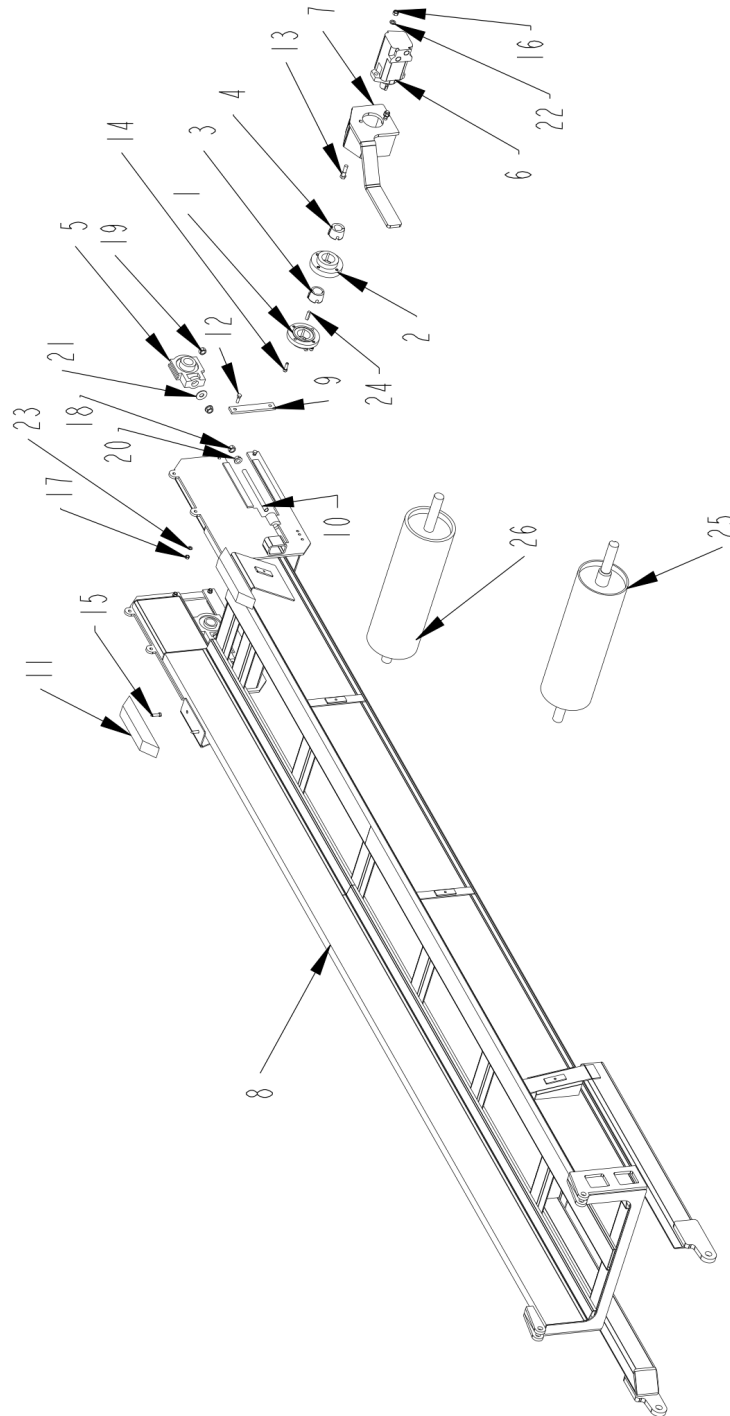


H-1030 Upper Discharge Assembly (for SN Up to 1017007030)

Item	Part No.	Name	Remarks	Qty	Uom
1	1400632	CPLR\RIGID\MALE\FLANGE\DODGE\003001		1	EA
2	1400633	CPLR\RIGID\FEMALE\FLANGE\DODGE\003002		1	EA
3	1400634	BUSH\TAPER\1-1/2SH\3/8KW\DODGE\119056		1	EA
4	1400635	BUSH\TAPER\1-1/4SH\5/16KW		1	EA
5	2000320	BRG\TUU\1-1/2\W-ECC\BSEAL		2	EA
6	3900014	MTR\HYD\9.6\2000\1-1/4SH		1	EA
7	4502227	BRKT\ARM\TORQUE\MTR		1	EA
8	4502394	CONV\UPPER\FLDNG		1	EA
9	4702204	STRAP\REINFRG\GUIDE\BRG\CNVYR		2	EA
10	4702205	BOLT\ADJ\RLLR\DRV\CNVYR		2	EA
11	4704099	BMPR\CNVYR\DISCH		2	EA
12	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
13	4800114	BOLT\HEX\1/2X2		2	EA.
14	4800167	SCR\CAP\ALN\3/8X1-1/4\NC		4	EA
15	4801198	SCR\LAG\3/8X1-1/2		4	EA
16	4900001	NUT\HEX\1/2\NC		2	EA.
17	4900002	NUT\HEX\3/8\NC		4	EA.
18	4900005	NUT\HEX\5/8\NC		2	EA.
19	4900012	NUT\TPLCK\5/8\NC		2	EA.
20	4900110	NUT\FLG\SERR\5/8\NC		4	EA.
21	5000002	WASH\FLAT\5/8		2	EA.
22	5000006	WASH\LOCK\1/2		2	EA.
23	5000019	WASH\LOCK\3/8		4	EA.
24	6200021	KEY\SQ\3/8X1-1/2\HARDEND		1	EA.
25	7500840	PUL\MAG\8X24\KEYED\SHAFT	Optional Part Only	1	EA
26	7501373	RLLR\DSCHG\24X8\RBBR		1	EA

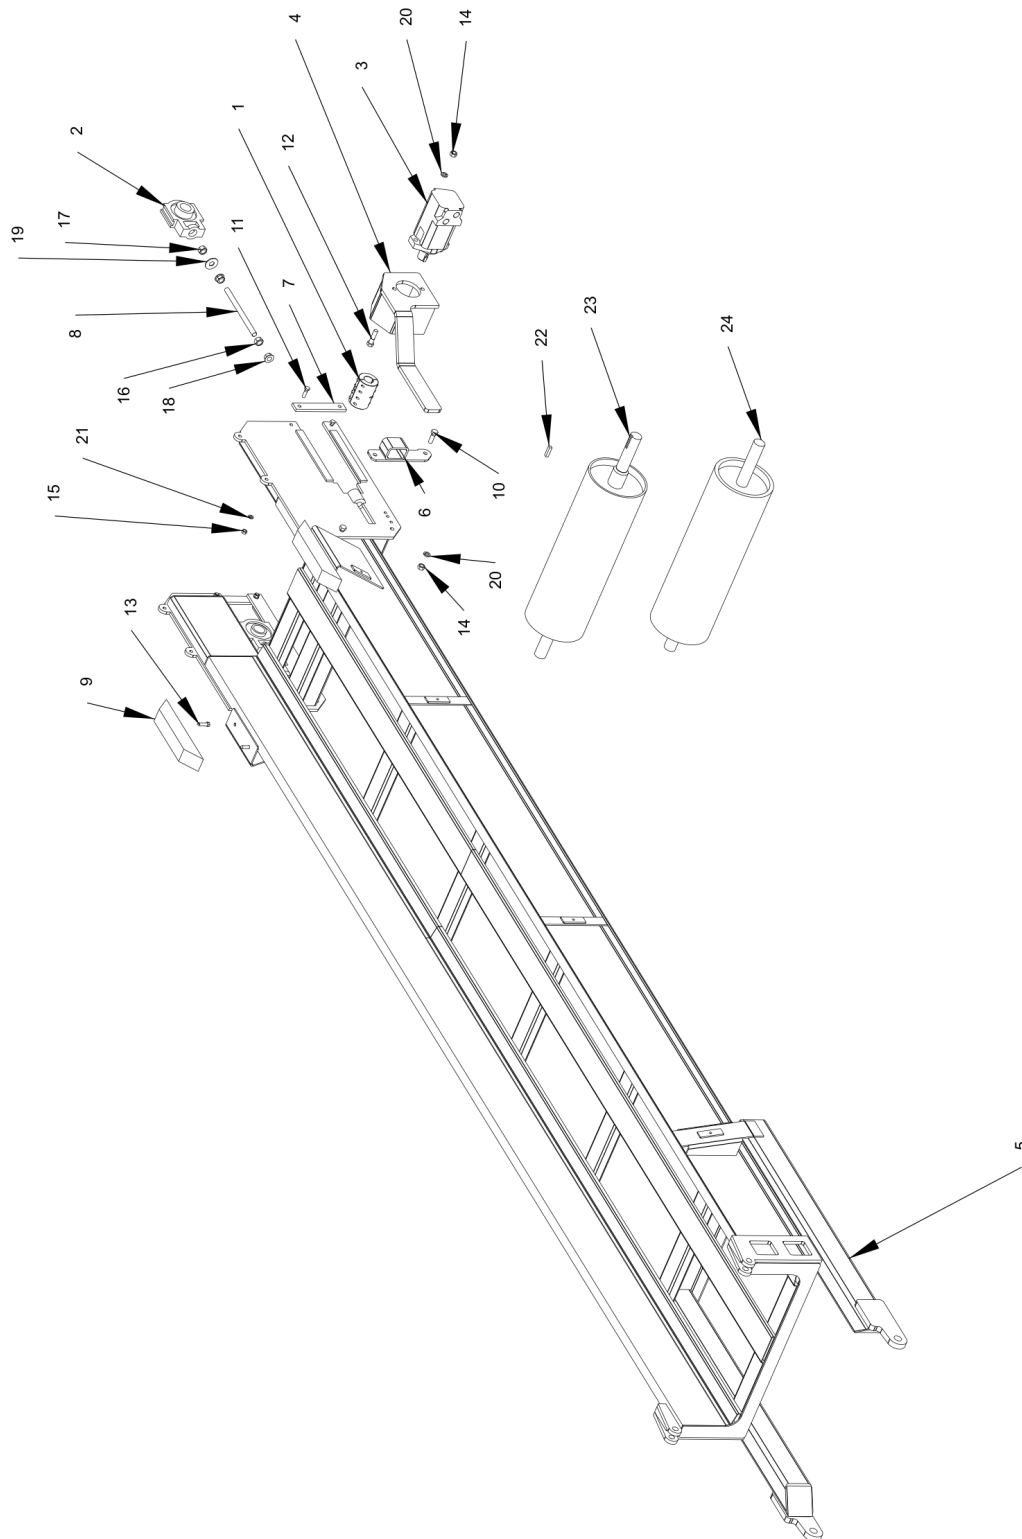


H-1030 Upper Discharge Assembly (SN 1018007130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	1400659	CPLR\RIGID\1.5X1.25		1	EA
2	2000320	BRG\TUU\1-1/2\W-ECC\BSEAL		2	EA
3	3900014	MTR\HYD\9.6\2000\1-1/4SH		1	EA
4	4502227	BRKT\ARM\TORQUE\MTR		1	EA
5	4502394	CONV\UPPER\FLDNG		1	EA
6	4502811	BRKT\ARM\TORQUE		1	EA
7	4702204	STRAP\REINFRG\GUIDE\BRG\CNVYR		2	EA
8	4702205	BOLT\ADJ\RLLR\DRV\CNVYR		2	EA
9	4704099	BMPR\CNVYR\DISCH		2	EA
10	4800082	BOLT\HEX\1/2X1-1/2		2	EA.
11	4800098	BOLT\HEX\3/8X1-1/4\NC		4	EA.
12	4800114	BOLT\HEX\1/2X2		2	EA.
13	4801198	SCR\LAG\3/8X1-1/2		4	EA
14	4900001	NUT\HEX\1/2\NC		4	EA.
15	4900002	NUT\HEX\3/8\NC		4	EA.
16	4900005	NUT\HEX\5/8\NC		2	EA.
17	4900012	NUT\PLCK\5/8\NC		2	EA.
18	4900110	NUT\FLG\SERR\5/8\NC		4	EA.
19	5000002	WASH\FLAT\5/8		2	EA.
20	5000006	WASH\LOCK\1/2		4	EA.
21	5000019	WASH\LOCK\3/8		4	EA.
22	6200007	KEY\SQ\3/8X1-1/2		1	EA
23	7500840	PUL\MAG\8X24\KEYED\SHAFT	Optional Part Only	1	EA
24	7501373	RLLR\DSCHG\24X8\RBBR		1	EA

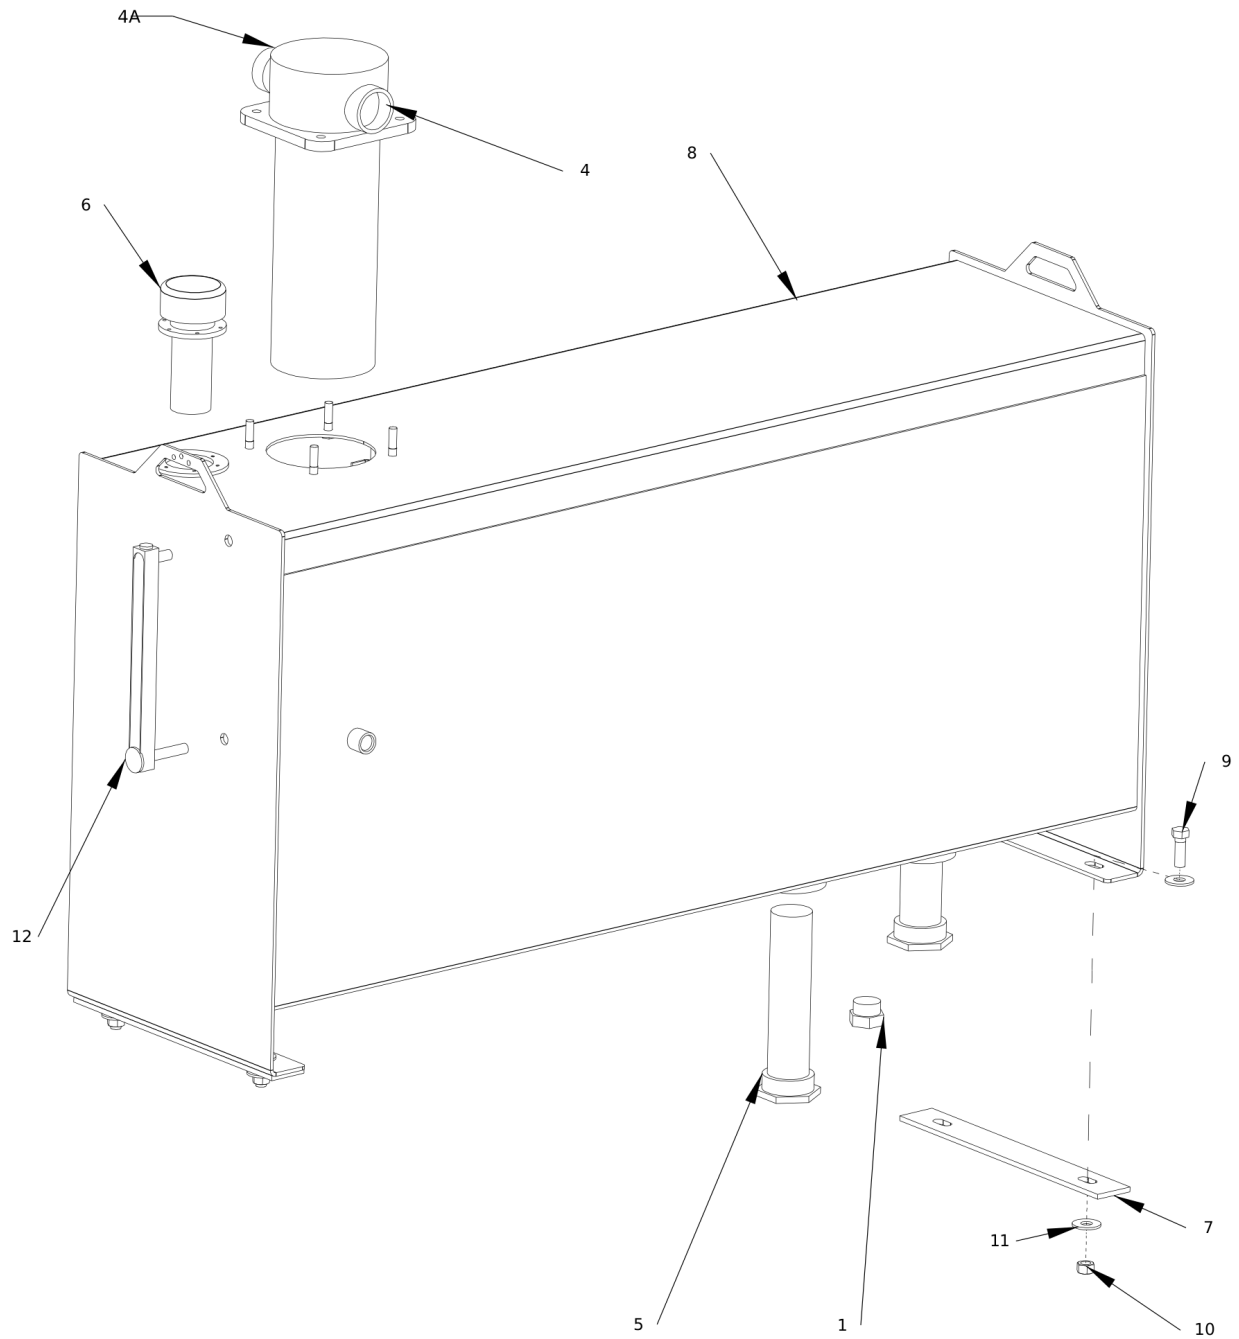


Hydraulic Oil Tank Assembly


Item	Part No.	Name	Remarks	Qty	Uom
1	3800301	FTG\1-5/16MOR\PLUG\HEX		1	EA
2	3800718	FTG\3/4FOR\WELD\FLG		1	EA
3	3801006	FTG\2-1/2FOR\WELD\FLG\HVY		2	EA
4	4400043	FILTER\HYDRAULIC\RETURN\IN-TANK ELEMENT 4400074		1	EA
NS	4400074	FLTR\ELMT\10MIC\INTANK	WEAR PARTS		EA
4A	4400066	GAUGE\FLTR\25PSI\1/8NPTF			EA
5	4400067	FLTR\SCRN\2-1/2MORX1-7/8FOR\30G PM\ST30-100-RV3		2	EA
NS	4400158	O-RING\2.337IDX.116\BUNA\AS568-932	WEAR PARTS		EA
6	4400071	VENTW\LOCK\CAP\HYD		1	EA
NS	4400159	GASKET\NECK\4400071	WEAR PARTS		EA
NS	4400160	GASKET\CAP\4400071	WEAR PARTS		EA
7	4502424	BELT\CUSH\TNK\OIL\60GAL		2	EA
8	4502799	TANK\OIL\60GAL		1	EA
9	4800082	BOLT\HEX\1/2X1-1/2		4	EA.
10	4900014	NUT\PLCK\1/2\NC		4	EA.
11	5000004	WASH\FLAT\1/2		8	EA.
12	7500615	GAUGE\LEVEL\10W\THERMOMETER		1	EA
NS	7501587	O-RING\5/8IDX3/32\BUNA90\AS568-114	WEAR PARTS		EA
CA	4502526	TANK\OIL\ASSY\H1030			EA.

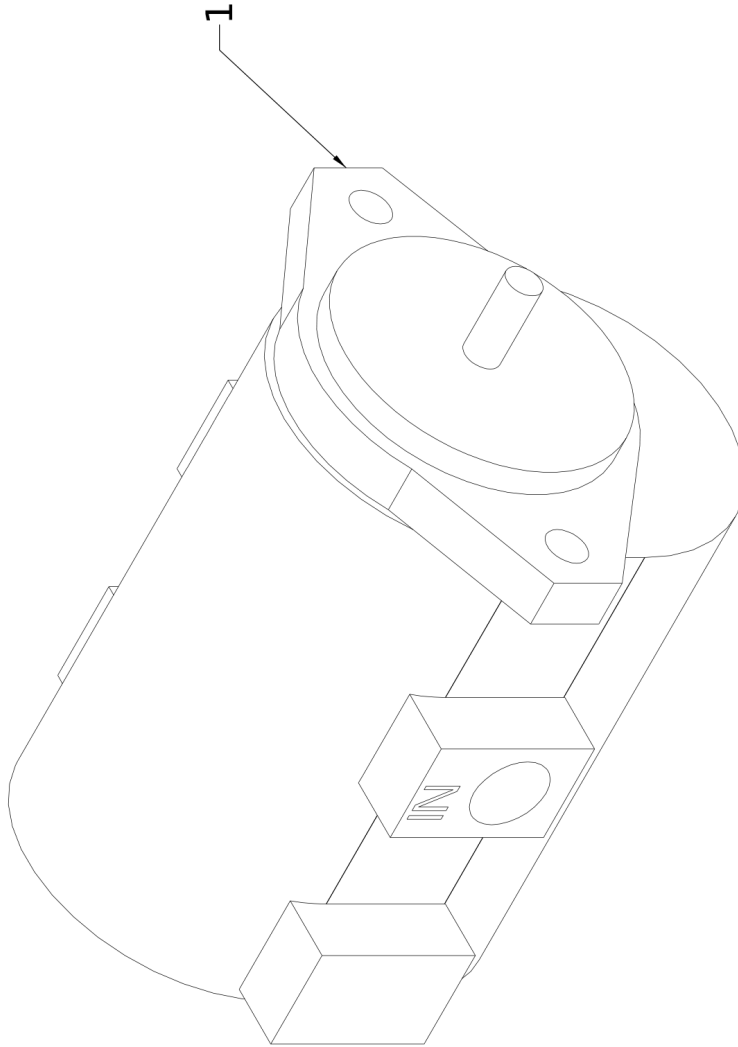

4200142 Tandem Hydraulic Pump

Item	Part No.	Name	Remarks	Qty	Uom
1	4200142	PUMP\HYD\TNDM\1.78CIDX1.3CID		1	EA
NS	4200161	PUMP\SEAL\KIT\4200142			EA

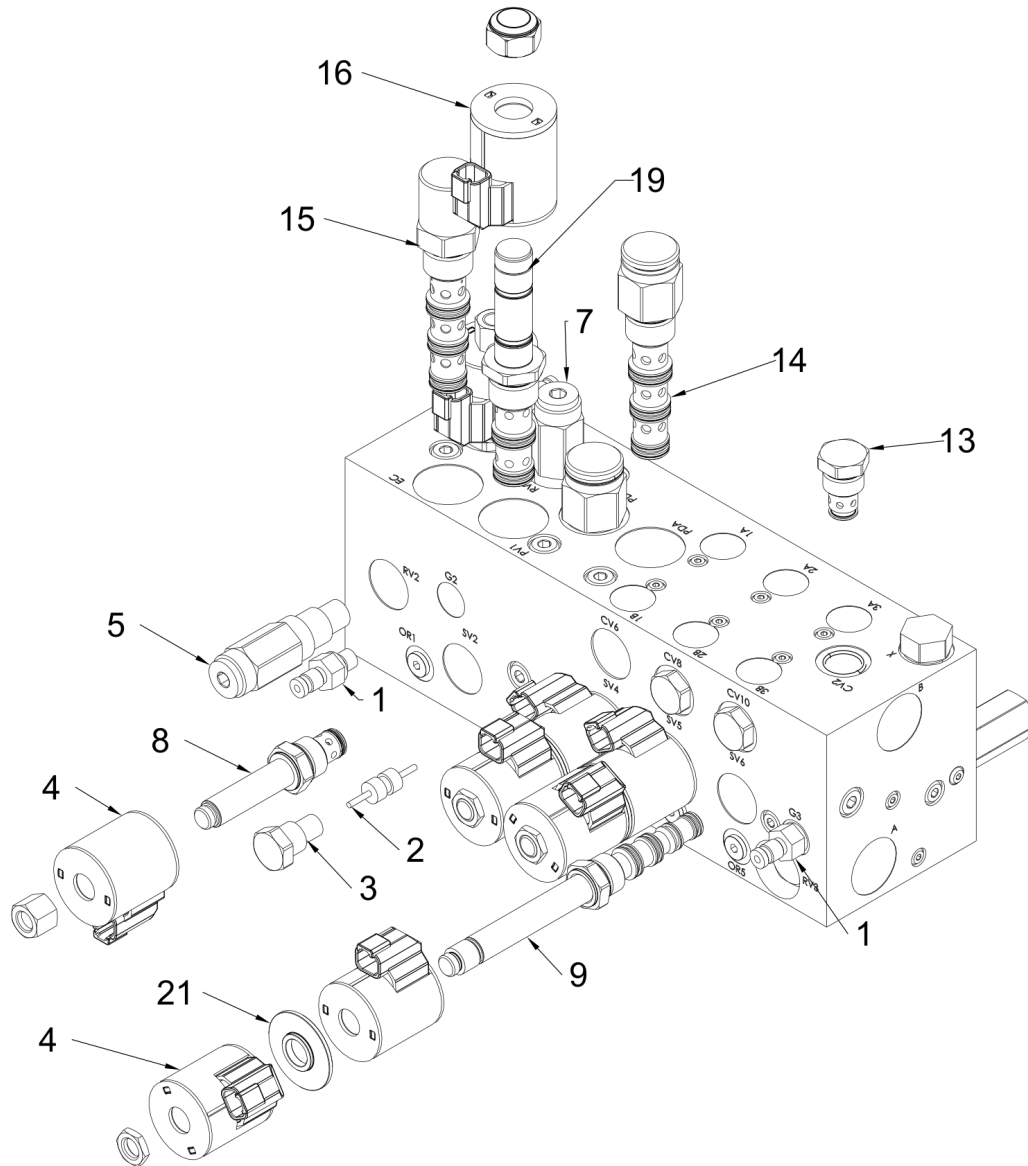

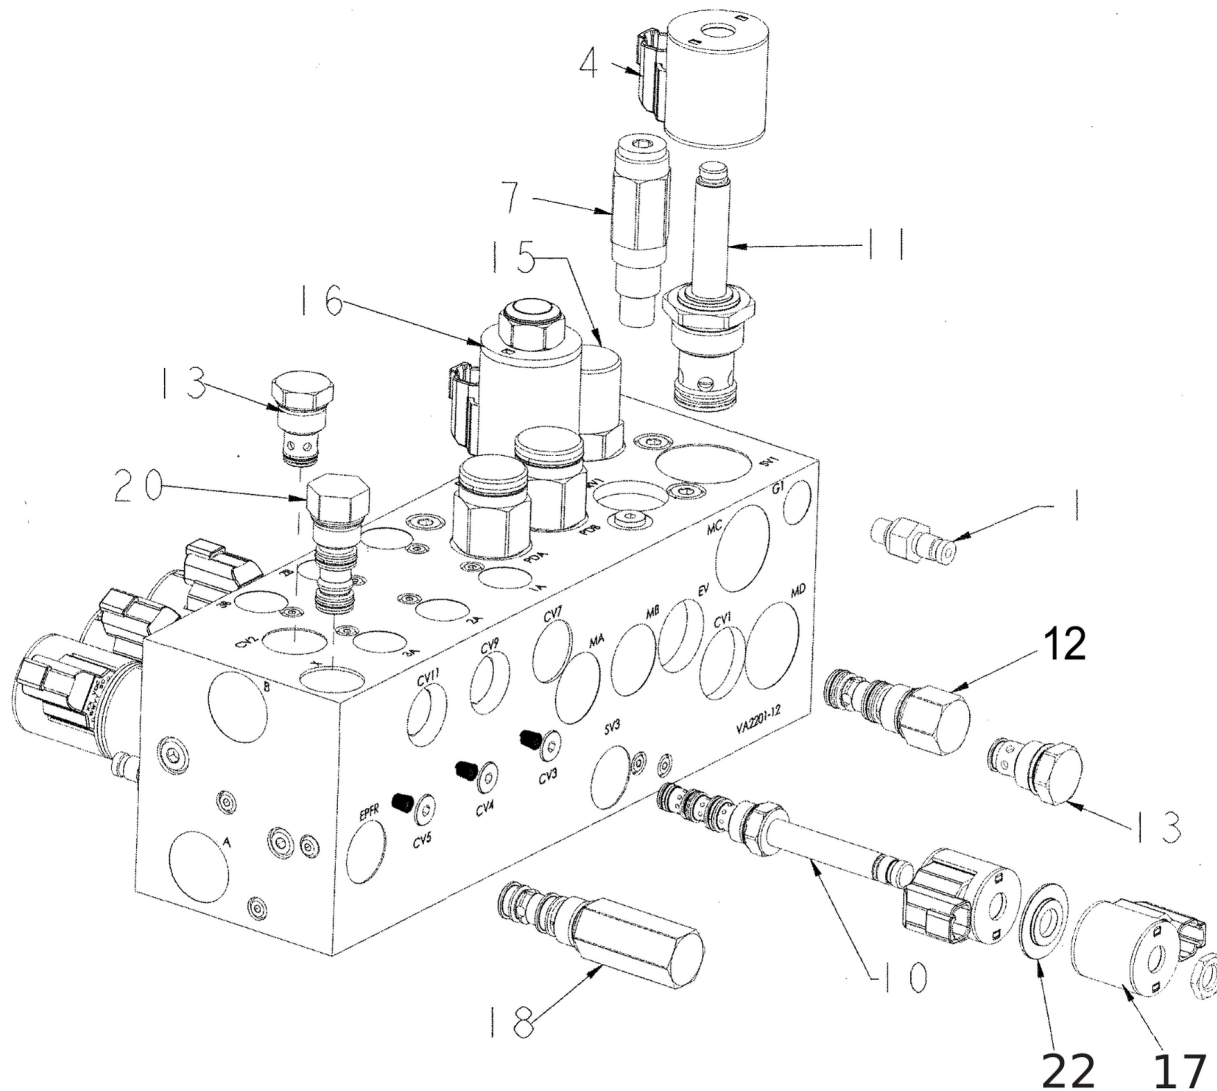

Note - Items 18 -4000559 and 20 - 4000561 change valve from open center to closed center

Open Center

4000559 goes in port 'EPFR' , 4000561 goes in 'X'

Closed Center

4000561 goes in port 'EPFR' , 4000559 goes in 'X'

This page intentionally left blank

H-1030 4000541 Hydraulic Valve (for SN up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800971	FTG\7\16MOR\DIAG\MALE;QUICK;CPLR		3	EA
2	4000230	VALVE\HYD\PILOT\PISTON		3	EA
3	4000231	VALVE\HYD\CART\CHECK\CV0820\100P		6	EA
4	4000347	VALVE\HYD\SOL\12V\E10\DTZW/DIODE		8	EA
5	4000510	VL\HYD\RELIEF\CART\3000		1	EA.
6	4000541	VL\HYD\AUX\BLK\MFLD\12V		1	EA
7	4000548	VL\HYD\RELIEF\CART\2500		1	EA.
8	4000549	VALVE\HYD\CART\N:OPEN\2WAY;2POS		1	EA.
9	4000550	VALVE\HYD\CART\5WAY;3POS		3	EA
10	4000551	VALVE\HYD\CART\3POS,4WAY\OPEN;CENTER		1	EA.
11	4000552	VALVE\HYD\CART\N.O.;POPPET		1	EA.
12	4000553	VALVE\CART\VENTED PRESS BLOCK\EV10		1	EA.
13	4000554	VALVE\CHECK\5PSI\#10		2	EA.
14	4000555	VALVE\HYD\CART\4POS3WAY\PILOTED		2	EA.
15	4000556	VALVE\HYD\CART\COMP\80PSI		1	EA.
16	4000557	VALVE\HYD\SOL\12V\E70\DTZW/DIODE		1	EA
17	4000558	VALVE\HYD\SOL\12V\E08\DTZW/DIODE		2	EA
18	4000559	VALVE\HYD\CART\PRESS;COMP\160PSI		1	EA.
19	4000560	VALVE\HYD\CART\PROPOR\NC\2WAY		1	EA.
20	4000561	VALVE\HYD\CART\PLUG\3 WAY		1	EA.
21	4000562	VALVE\HYD\SOL\SPACER\E10		3	EA.
22	4000563	VALVE\HYD\SOL\SPACER\E8		1	EA.

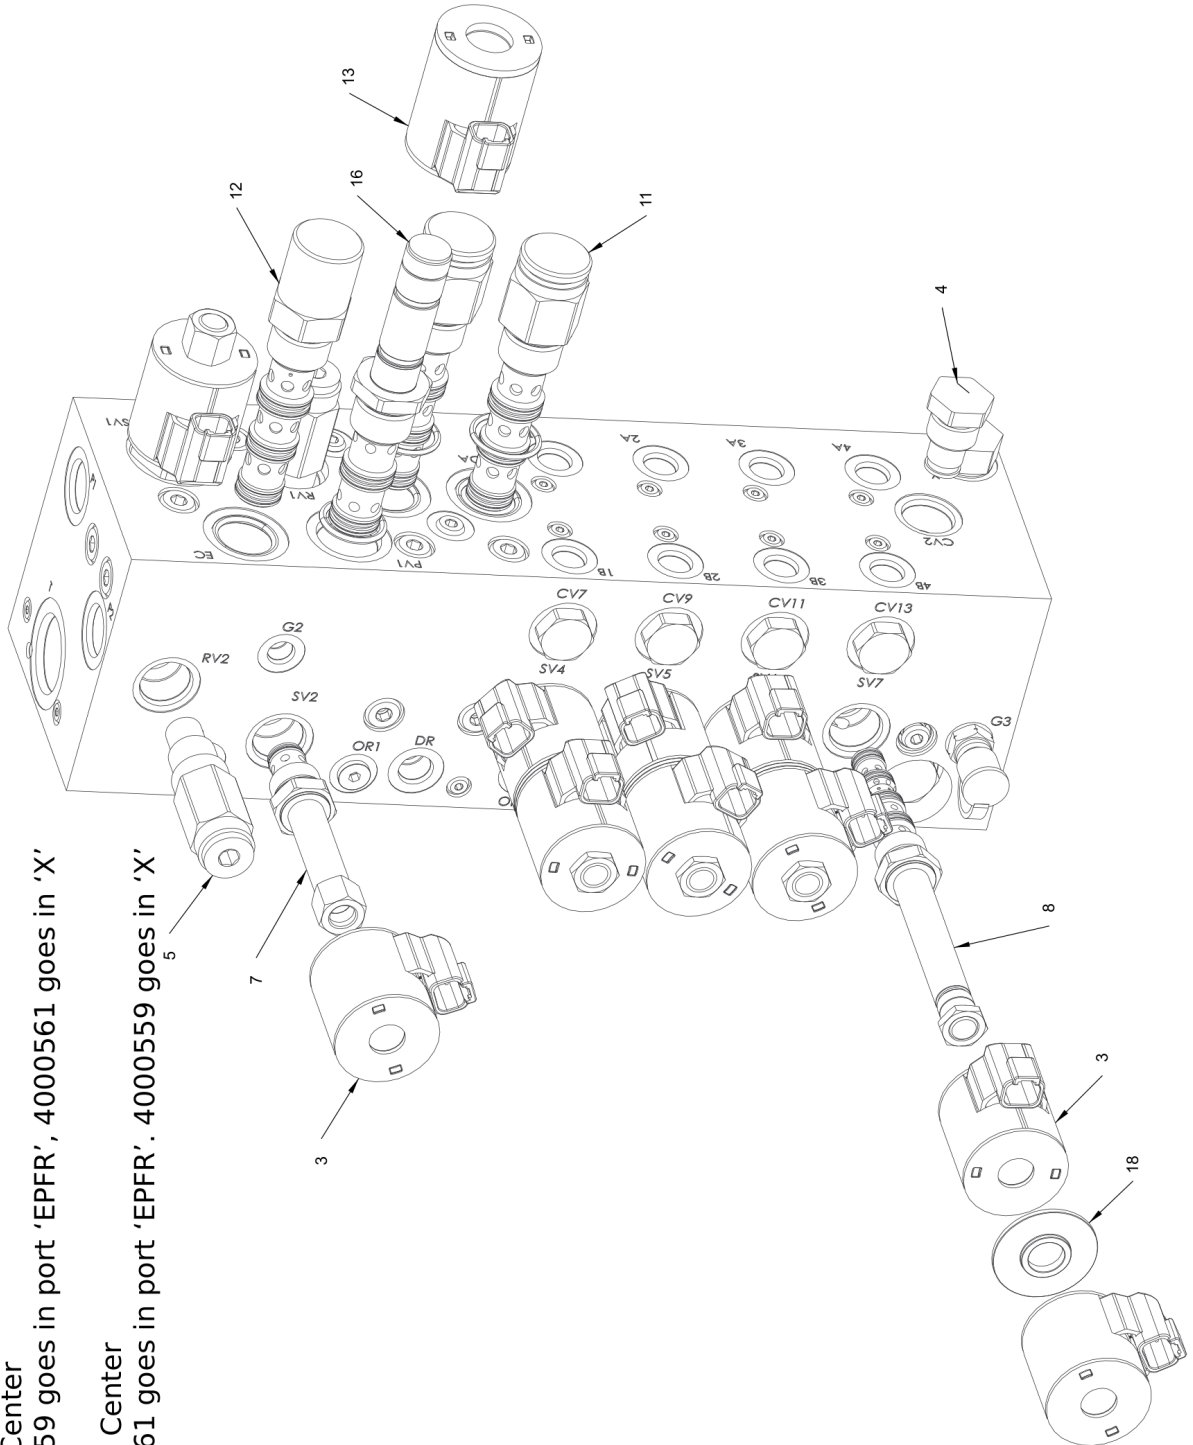
Note - Items 15-4000559 and 17-4000561 change value from open center to closed center.

Open Center

4000559 goes in port 'EPFR', 4000561 goes in 'X'

Closed Center

4000559 goes in port 'EPFR'. 4000561 goes in 'X'




Note - Items 15-4000559 and 17-4000561 change value from open center to closed center.

Open Center

4000559 goes in port 'EPFR', 4000561 goes in 'X'

Closed Center

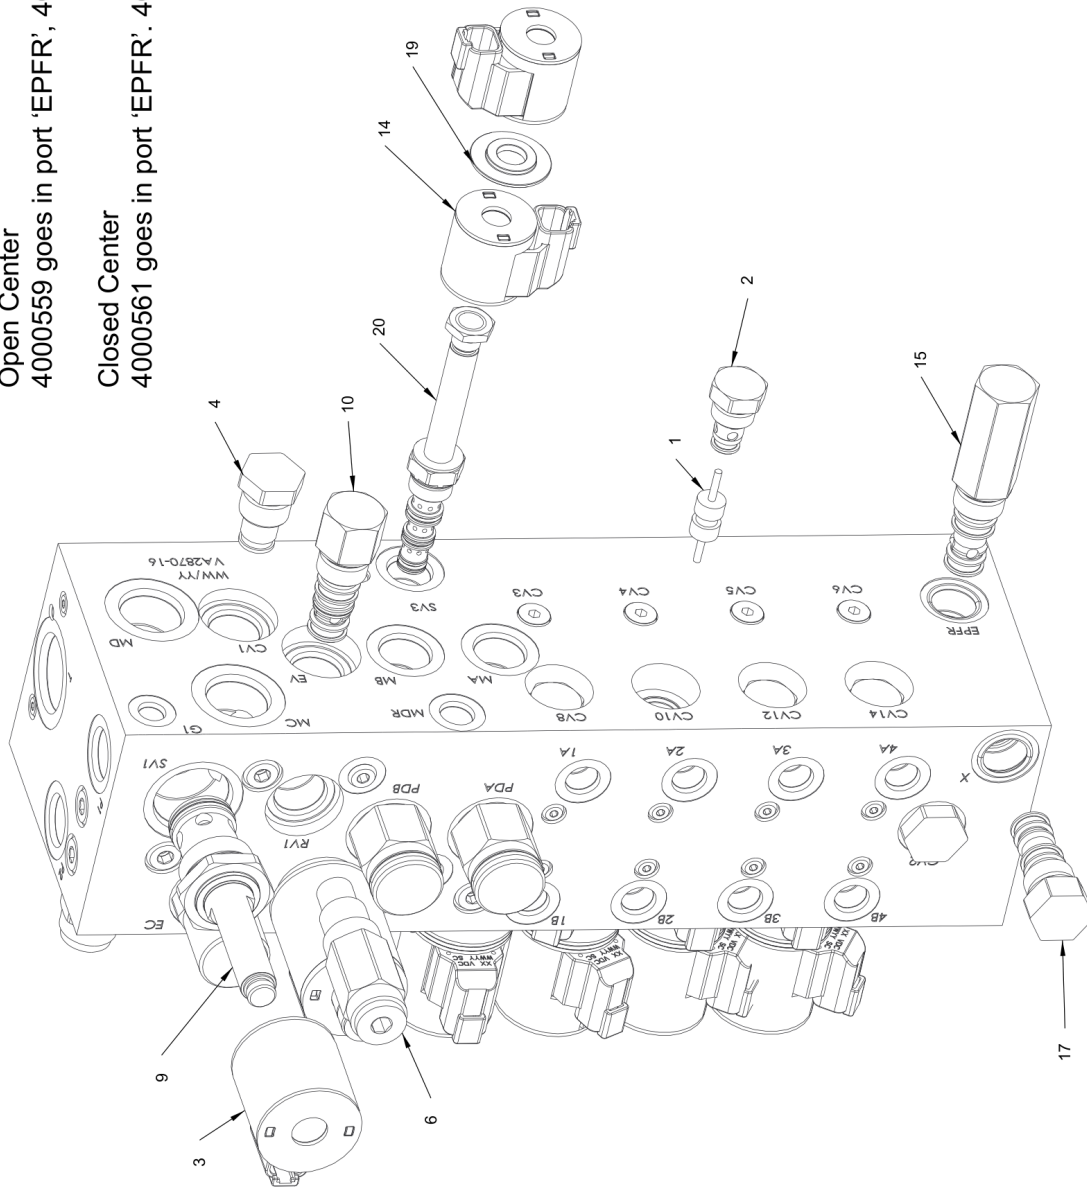
4000561 goes in port 'EPFR'. 4000559 goes in 'X'



This page intentionally left blank


H-1030 4000598-Hydraulic Valve (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	4000230	VALVE\HYD\PILOT\PISTON		4	EA
2	4000231	VALVE\HYD\CART\CHECK\CV0820\100P		8	EA
3	4000324	POPPET\2-WAY\NORMAL\OPEN		1	EA
4	4000347	VALVE\HYD\SOL\12V\E10\DTZW/DIODE		10	EA
5	4000446	VALVE\CHECK\CART\CV1020		2	EA
6	4000510	VL\HYD\RELIEF\CART\3000		1	EA.
7	4000548	VL\HYD\RELIEF\CART\2500		1	EA.
8	4000549	VALVE\HYD\CART\N:OPEN\2WAY;2POS		1	EA.
9	4000550	VALVE\HYD\CART\5WAY;3POS		4	EA
10	4000553	VALVE\CART\VENTED PRESS BLOCK\EV10		1	EA.
11	4000555	VALVE\HYD\CART\4POS3WAY\PILOTED		2	EA.
12	4000556	VALVE\HYD\CART\COMP\80PSI		1	EA.
13	4000557	VALVE\HYD\SOL\12V\E70\DTZW/DIODE		1	EA
14	4000558	VALVE\HYD\SOL\12V\E08\DTZW/DIODE		2	EA
15	4000559	VALVE\HYD\CART\PRESS;COMP\160PSI		1	EA.
16	4000560	VALVE\HYD\CART\PROPOR\NC\2WAY		1	EA.
17	4000561	VALVE\HYD\CART\PLUG\3 WAY		1	EA.
18	4000562	VALVE\HYD\SOL\SPACER\E10		4	EA.
19	4000563	VALVE\HYD\SOL\SPACER\E8		1	EA.
20	4000595	VALVE\HYD\CART\3POS,4WAY\OPEN:CENTER		1	EA.

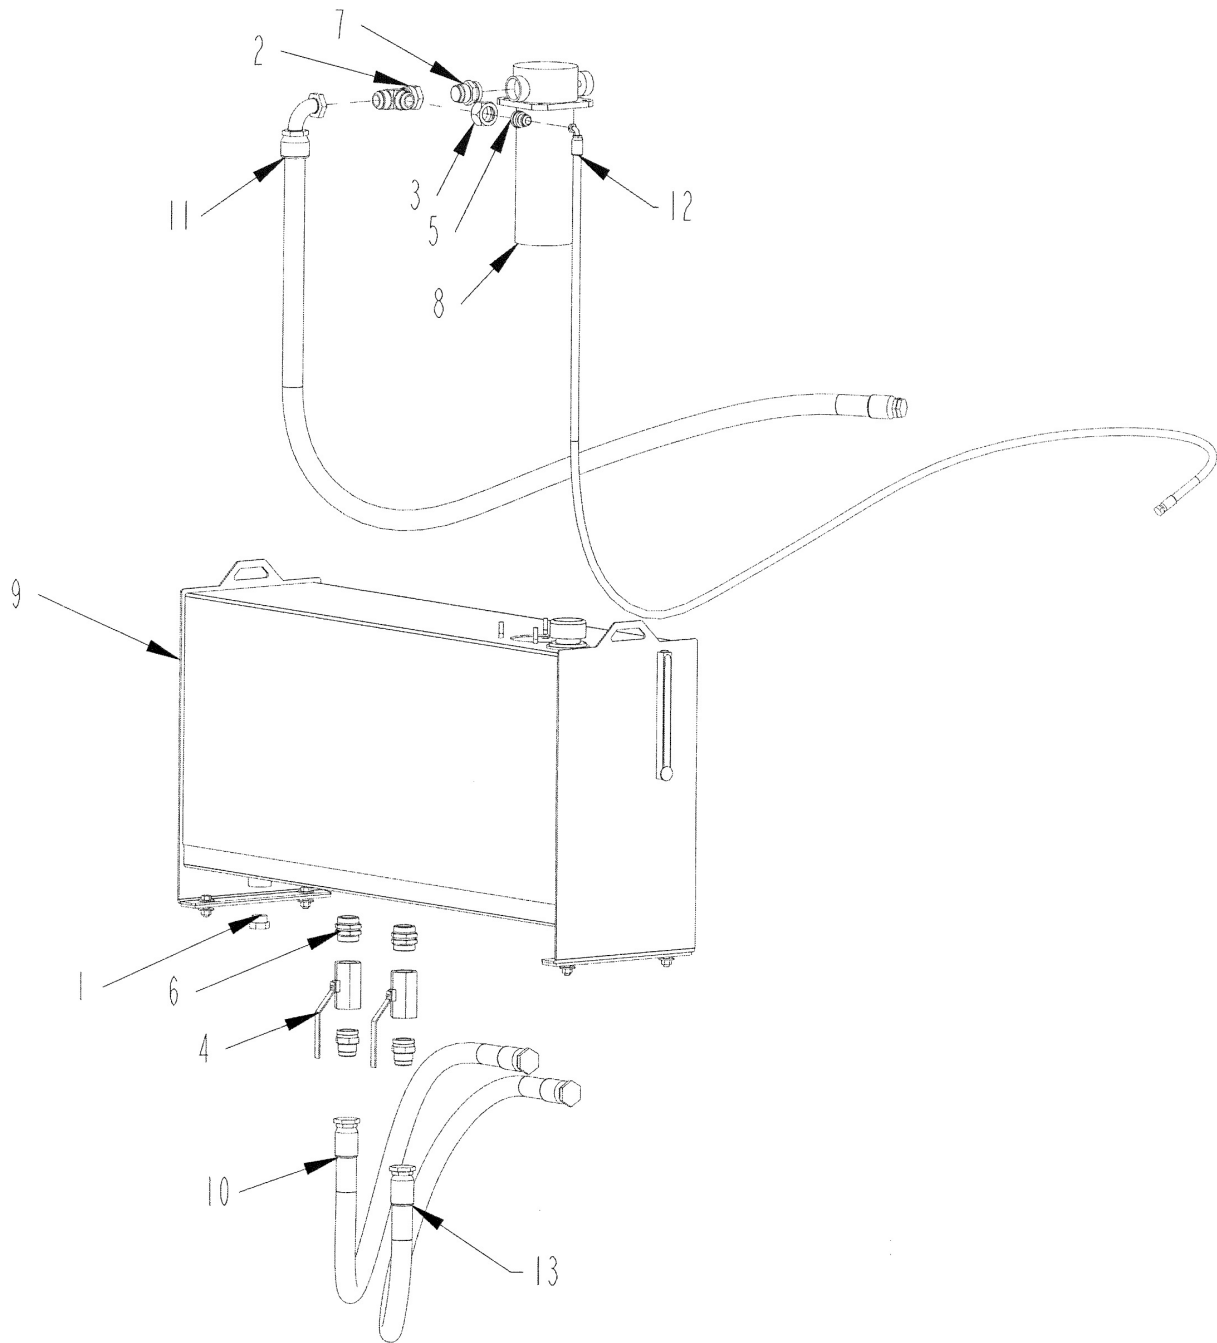


H-1030 Oil Tank Hydraulics (for Sn up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800301	FTG\1-5/16MOR\PLUG\HEX		1	EA
2	3800486	FTG\1-5/8FJICX1-5/8MJICX1-5/8MJIC\RUN;TEE		1	EA
3	3800488	FTG\1-5/8NUTFJICS		1	EA
4	3800740	VALVE\BALL\1-1/2\1-7/8FOR\1/4 TURNW/LOCK		2	EA
5	3800743	FTG\1-5/8FJICX1-1/16MJIC\ADPT		1	EA
6	3800745	FTG\1-7/8MORX1-7/8MOR\ADPT		2	EA
7	3800808	FTG\1-7/8MORX1-5/8MJIC\ST		3	EA
8	4400043	FILTER\HYDRAULIC\RETURN\IN-TANK ELEMENT 4400074		1	EA
9	4502799	TANK\OIL\60GAL		1	EA
10	3701595	HOSE\HYD\1-1/4X49\1-5/8FJICX1-5/8FJIC	SUPPLY PORT FRONT PUMP TO RIGHT TANK PORT SCREEN	1	EA.
11	3701567	HOSE\HYD\1-1/4X74\1-5/16FJCX1- 5/8FJC90DEG	T PORT AUX. VALVE TO TANK	1	EA.
12	3701706	HOSE\HYD\3/8X97\3/4FJC90X9/16FJC	DR PORT AUX. VALVE TO TANK	1	EA.
13	3701595	HOSE\HYD\1-1/4X49\1-5/8FJICX1-5/8FJIC	SUPPLY PORT REAR PUMP TO LEFT TANK SCREEN	1	EA.

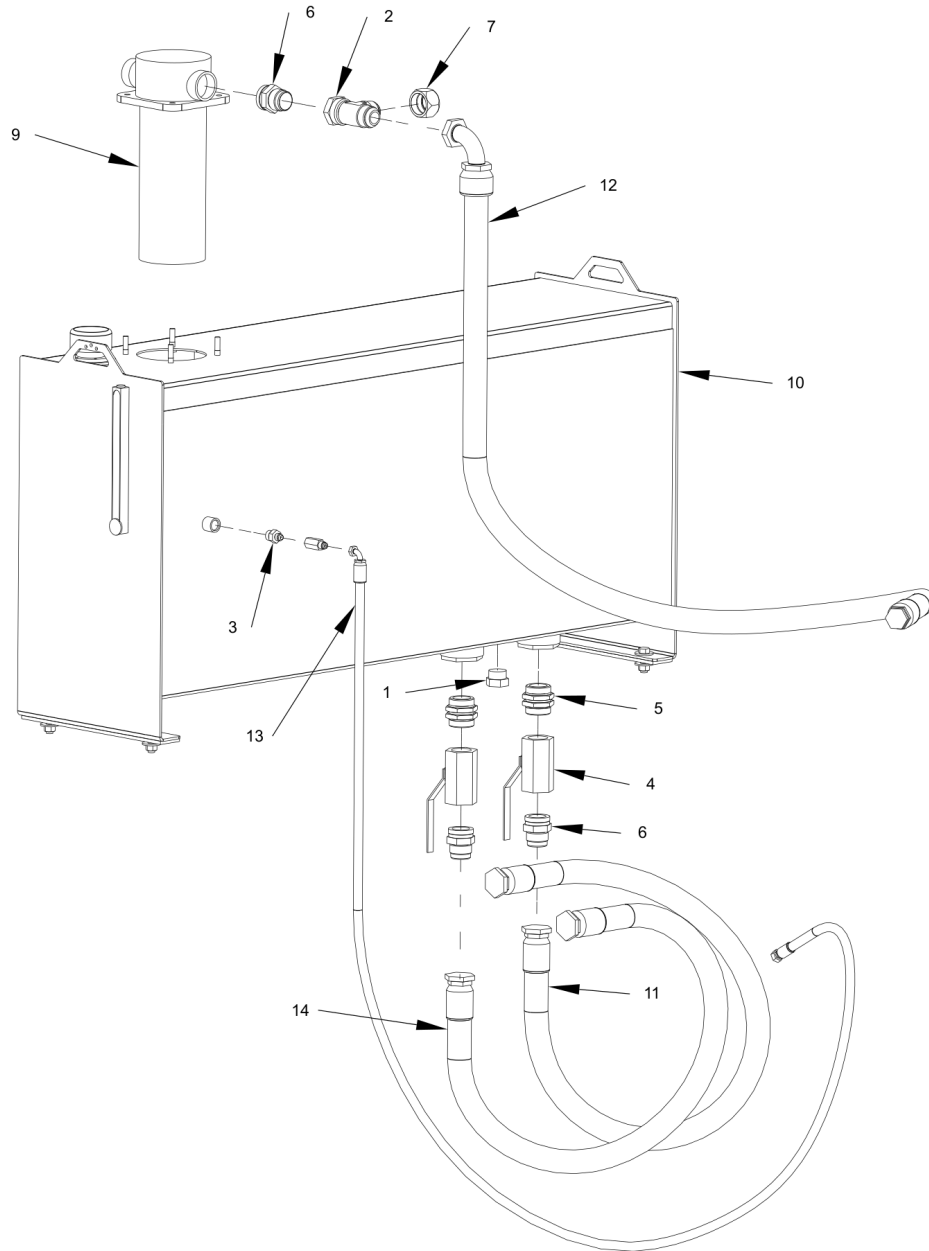


H-1030 Oil Tank Hydraulics (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800301	FTG\1-5/16MOR\PLUG\HEX		1	EA
2	3800486	FTG\1-5/8FJICX1-5/8MJICX1-5/8MJIC\RUN;TEE		1	EA
3	3800530	FTG\3/4MORX9/16MJIC\ST		1	EA.
4	3800740	VALVE\BALL\1-1/2\1-7/8FOR\1/4 TURNW/LOCK		2	EA
5	3800745	FTG\1-7/8MORX1-7/8MOR\ADPT		2	EA
6	3800808	FTG\1-7/8MORX1-5/8MJIC\ST		3	EA
7	3801030	FTG\1-5/8FJIC\CAP		1	EA.
8	4000601	VLV\CHECK\POPPET\9/16MJIC		1	EA.
9	4400043	FILTER\HYDRAULIC\RETURN\IN-TANK ELEMENT 4400074		1	EA
10	4502799	TANK\OIL\60GAL		1	EA
11	3701595	HOSE\HYD\1-1/4X49\1-5/8FJICX1-5/8FJIC	SUPPLY PORT FRONT PUMP TO RIGHT TANK PORT SCREEN	1	EA.
12	3701567	HOSE\HYD\1-1/4X74\1-5/16FJICX1- 5/8FJIC90DEG	T PORT AUX. VALVE TO TANK	1	EA.
13	3701728	HOSE\HYD\3/8X80\3/4FJIC90X9/16FJIC	DR PORT AUX. VALVE TO TANK	1	EA.
14	3701595	HOSE\HYD\1-1/4X49\1-5/8FJICX1-5/8FJIC	SUPPLY PORT REAR PUMP TO LEFT TANK SCREEN	1	EA.

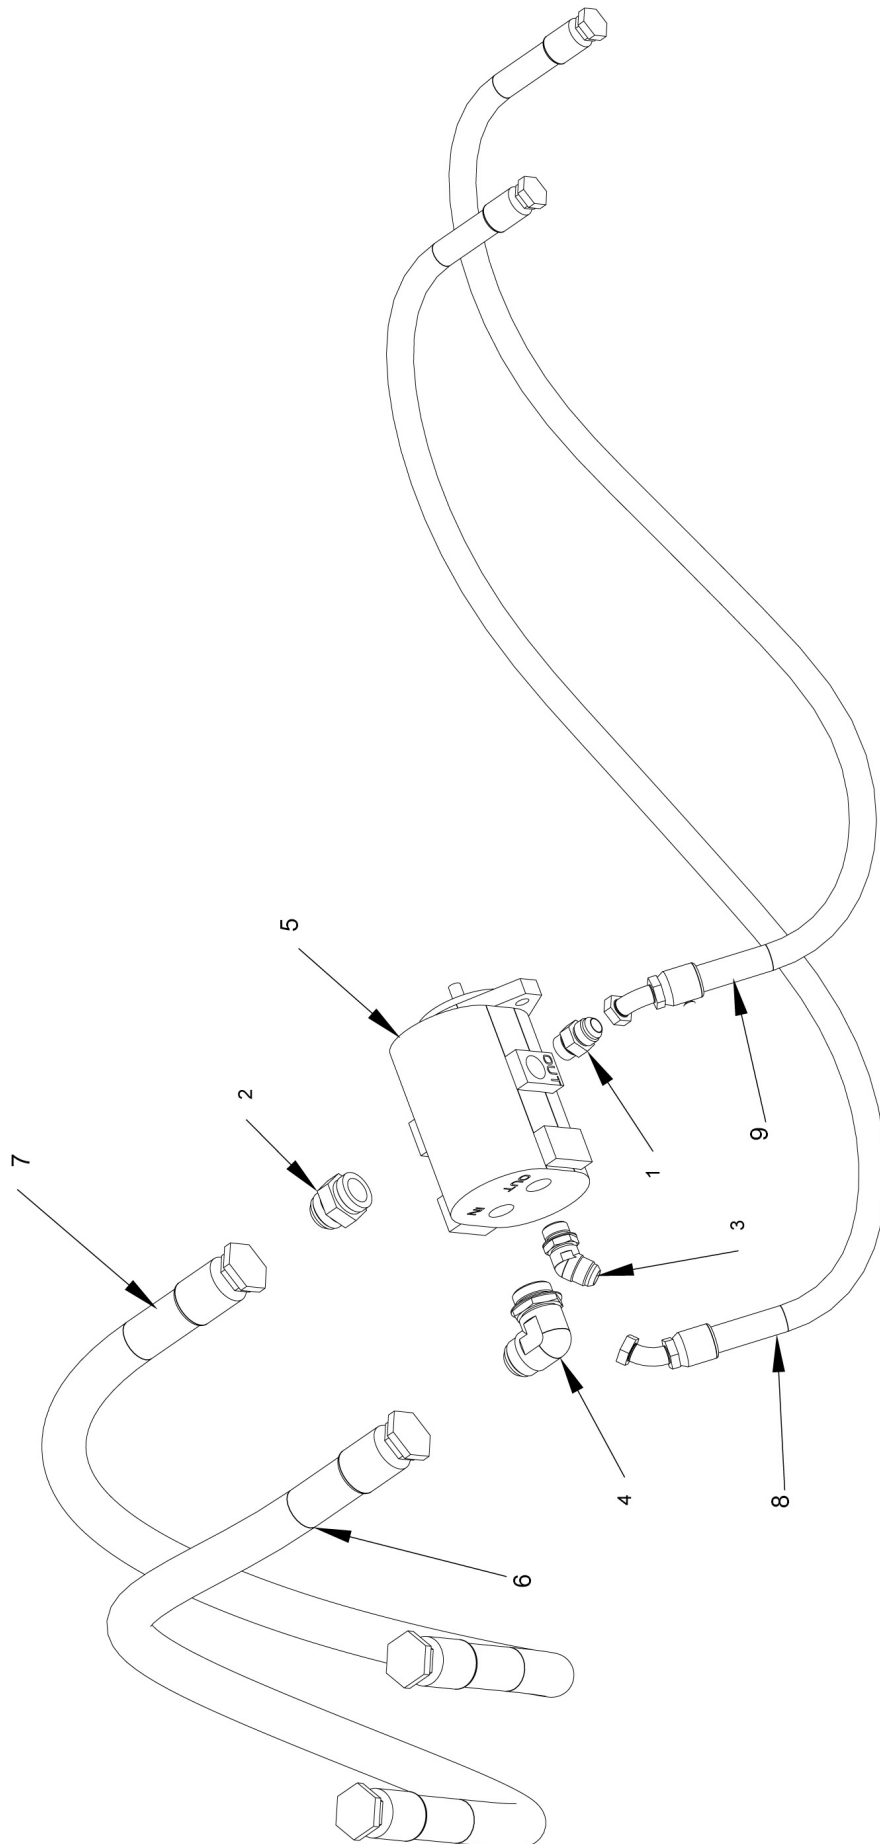


H-1030 Tandem Pump Hydraulics

Item	Part No.	Name	Remarks	Qty	Uom
1	3800277	FTG\1-1/16MORX1-1/16MJIC\ST		1	EA
2	3800470	FTG\1-5/8MORX1-5/8MJIC\ST		1	EA
3	3800532	FTG\1-1/16MORX1-1/16MJIC\45		1	EA
4	3800741	FTG\1-5/8MORX1-5/8MJIC\90		1	EA
5	4200142	PUMP\HYD\TNDM\1.78CIDX1.3CID		1	EA
6	3701595	HOSE\HYD\1-1/4X49\1-5/8FJICX1-5/8FJIC	SUPPLY PORT FRONT PUMP TO RIGHT TANK PORT SCREEN	1	EA.
7	3701595	HOSE\HYD\1-1/4X49\1-5/8FJICX1-5/8FJIC	SUPPLY PORT REAR PUMP TO LEFT TANK SCREEN	1	EA.
8	3701592	HOSE\HYD\3/4X43\1-1/16FJX1-1/16FJC45DEG	PUMP TO P1 PORT AUX. VALVE	1	EA.
9	3701593	HOSE\HYD\3/4X55\1-1/16FJX1-1/16FJC45DEG	PUMP TO P2 PORT AUX. VALVE	1	EA.

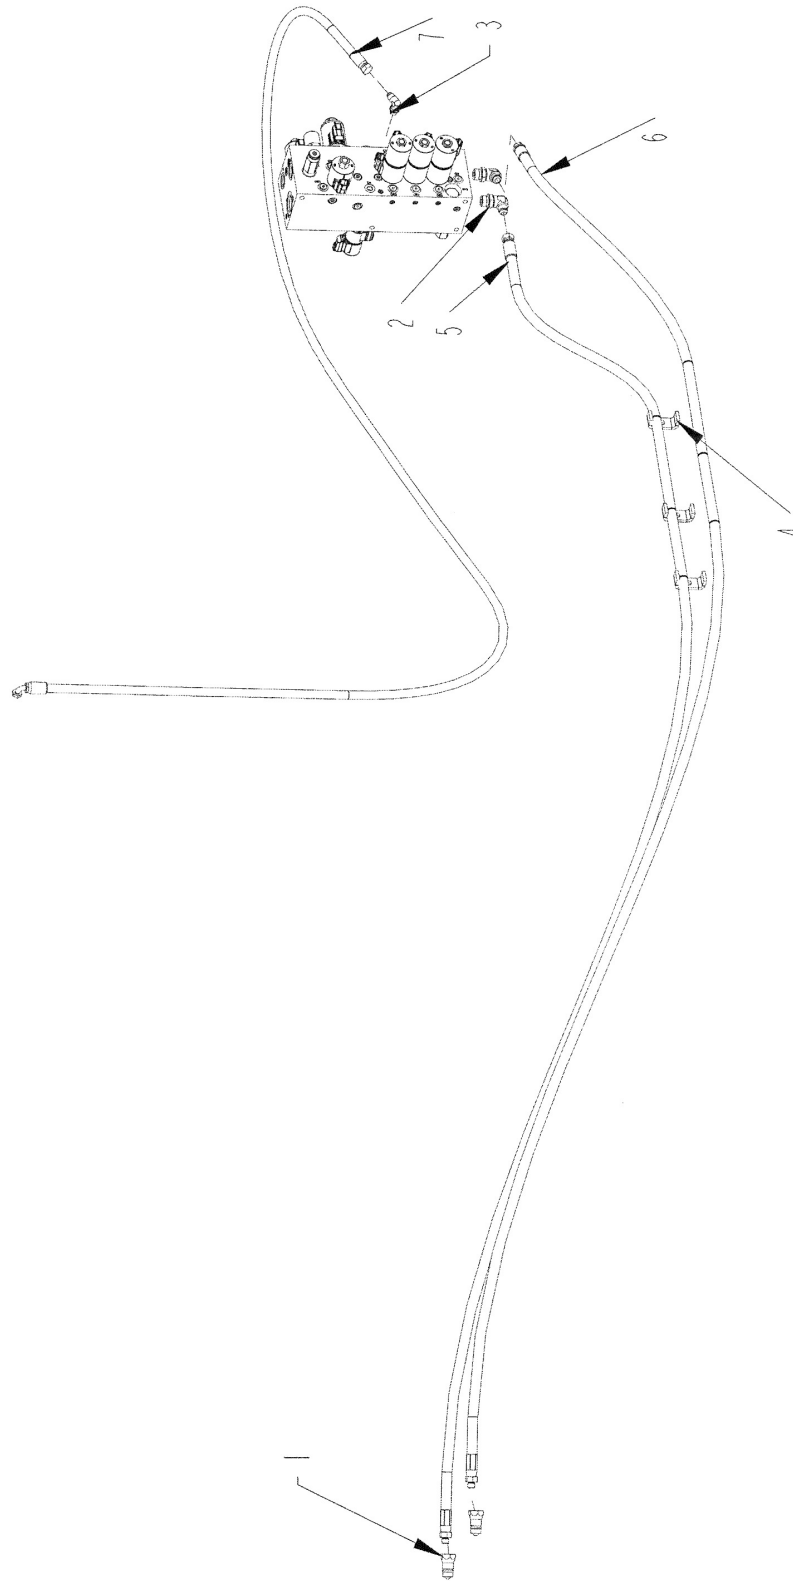


H-1030 Auxiliary Valve Hydraulics View A (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800694	FTG\3/4FOR\QUICK\CPLR\FEMALE		2	EA.
2	3800696	FTG\7/8MORX3/4MJIC\90		2	EA.
3	3800757	FTG\9/16MORX9/16MJIC\90		1	EA.
4	4700777	CLMP\HOSE\1/2		3	EA.
5	3700985	HOSE\HYD\1/2X144\3/4MORX3/8FJICS	TRACTOR TO IN PORT AUX. VALVE	1	EA
6	3700985	HOSE\HYD\1/2X144\3/4MORX3/8FJICS	TRACTOR TO OUT PORT AUX. VALVE	1	EA
7	3701706	HOSE\HYD\3/8X97\3/4FJC90X9/16FJC	TANK TO DR PORT AUX VALVE	1	EA.

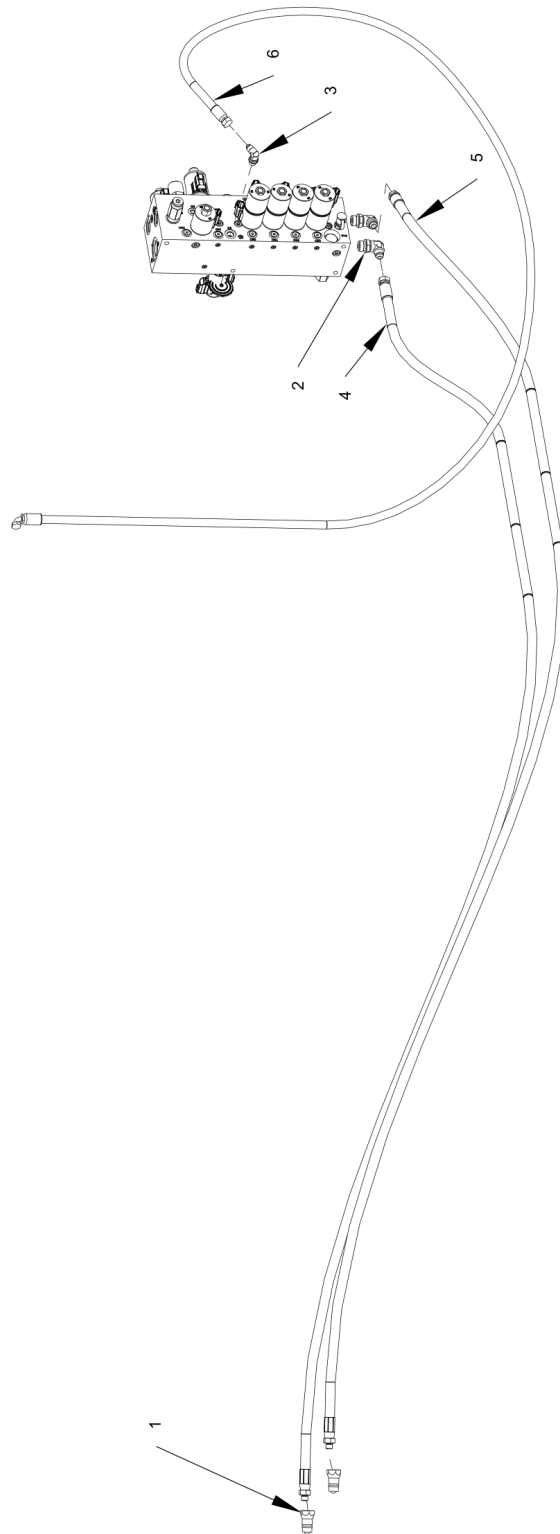


H-1030 Auxiliary Valve Hydraulics View A (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800694	FTG\3/4FOR\QUICK\CPLR\FEMALE		2	EA.
2	3800696	FTG\7/8MORX3/4MJIC\90		2	EA.
3	3800757	FTG\9/16MORX9/16MJIC\90		1	EA.
4	3700985	HOSE\HYD\1/2X144\3/4MORX3/8FJICS	TRACTOR TO IN PORT AUX. VALVE	1	EA
5	3700985	HOSE\HYD\1/2X144\3/4MORX3/8FJICS	TRACTOR TO OUT PORT AUX. VALVE	1	EA
6	3701728	HOSE\HYD\3/8X80\3/4FJC90X9/16FJC	DR PORT AUX. VALVE TO TANK	1	EA.

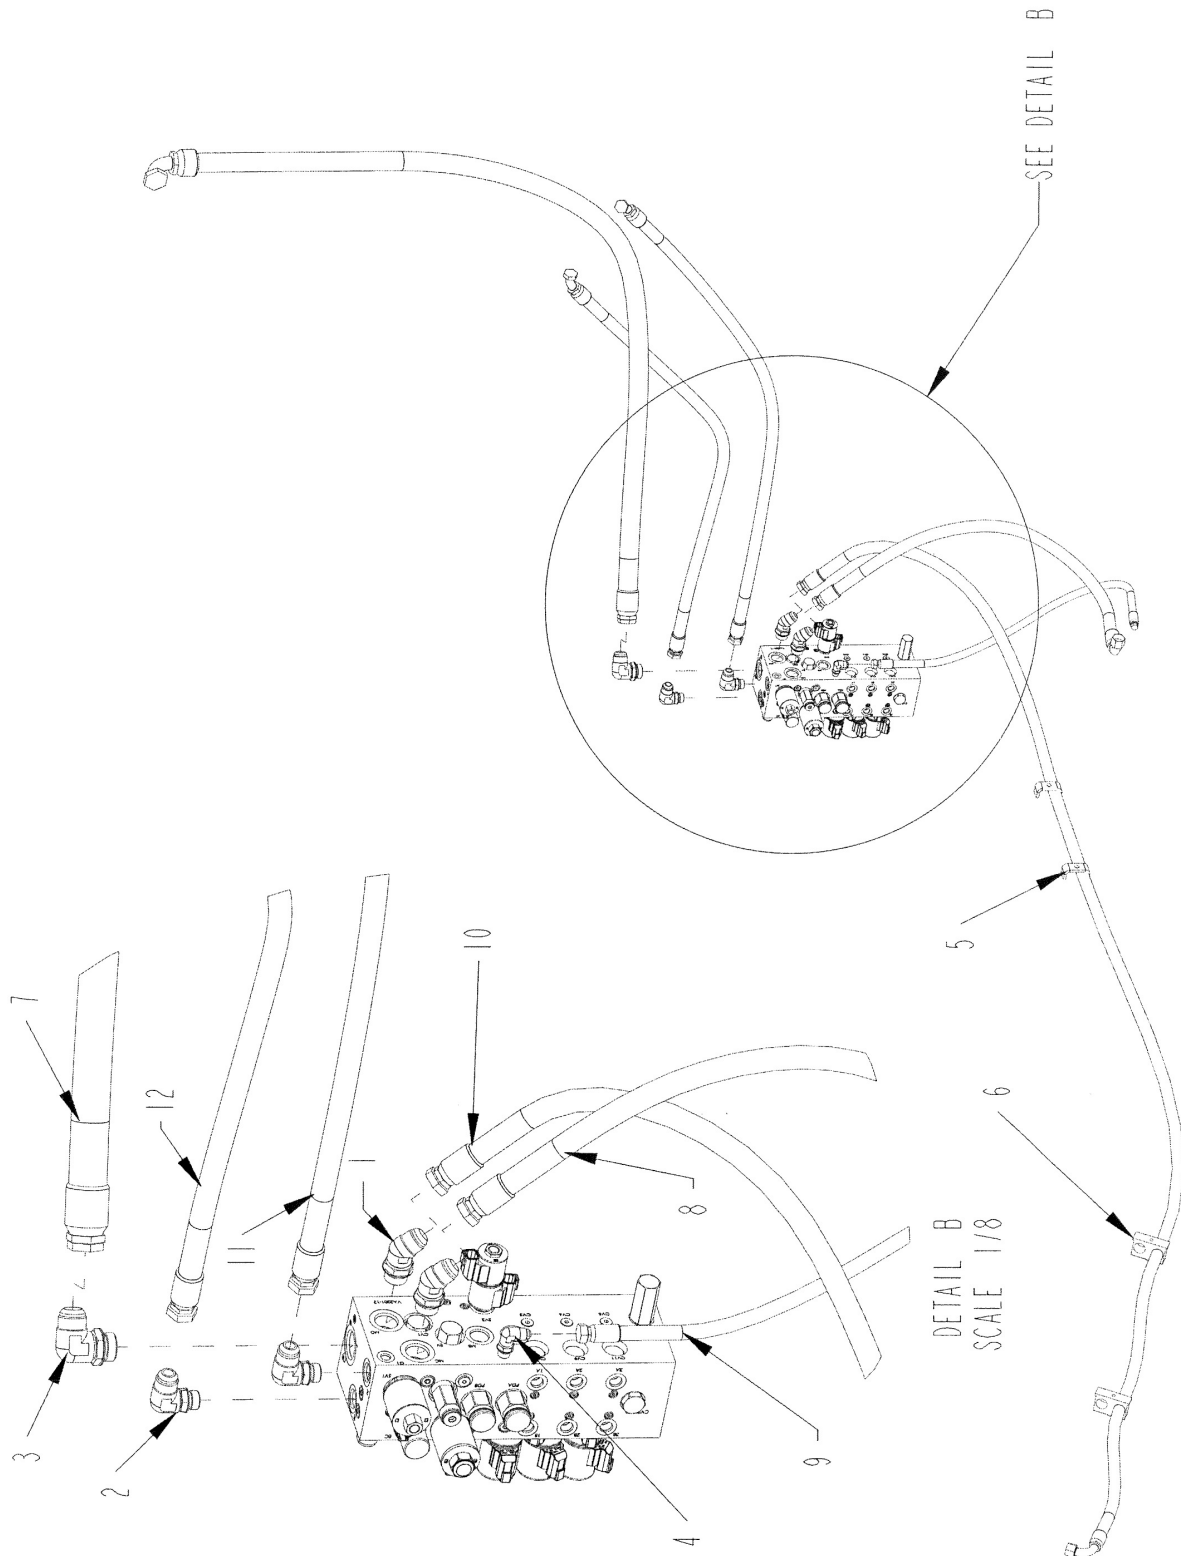


H-1030 Auxiliary Valve Hydraulics View B (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800532	FTG\1-1/16MORX1-1/16MJIC\45		2	EA
2	3800535	FTG\7/8MORX1-1/16MJIC\90		2	EA
3	3800728	FTG\1-5/16MORX1-5/16MJIC\90		1	EA.
4	3800757	FTG\9/16MORX9/16MJIC\90		1	EA.
5	4700777	CLMP\HOSE\1/2		2	EA.
6	7501337	CLMP\HOSE\CUSH\3/4		2	EA
7	3701567	HOSE\HYD\1-1/4X74\1-5/16FJCX1-5/8FJC90DEG	T PORT AUX VALVE TO TANK FILTER	1	EA.
8	3701150	HOSE\HYD\3/4X32\1-1/16FJC90X1-1/16FJC	MC PORT AUX VALVE TO MOTOR PORT B BELLY AUGER	1	EA
9	3701571	HOSE\HYD\3/8X32\9/16FJCX7/16FJC	MDR PORT TO BELLY ORBIT	1	EA.
10	3701575	HOSE\HYD\3/4X184\1-1/16FJC90X1-1/16FJC	MD PORT AUX VALVE TO EX PORT CONV. FLOW CONTROL VALVE	1	EA.
11	3701592	HOSE\HYD\3/4X43\1-1/16FJX1-1/16FJC45DEG	PUMP TO P1 AUX. VALVE PORT	1	EA.
12	3701593	HOSE\HYD\3/4X55\1-1/16FJX1-1/16FJC45DEG	PUMP TO P2 AUX. VALVE PORT	1	EA.

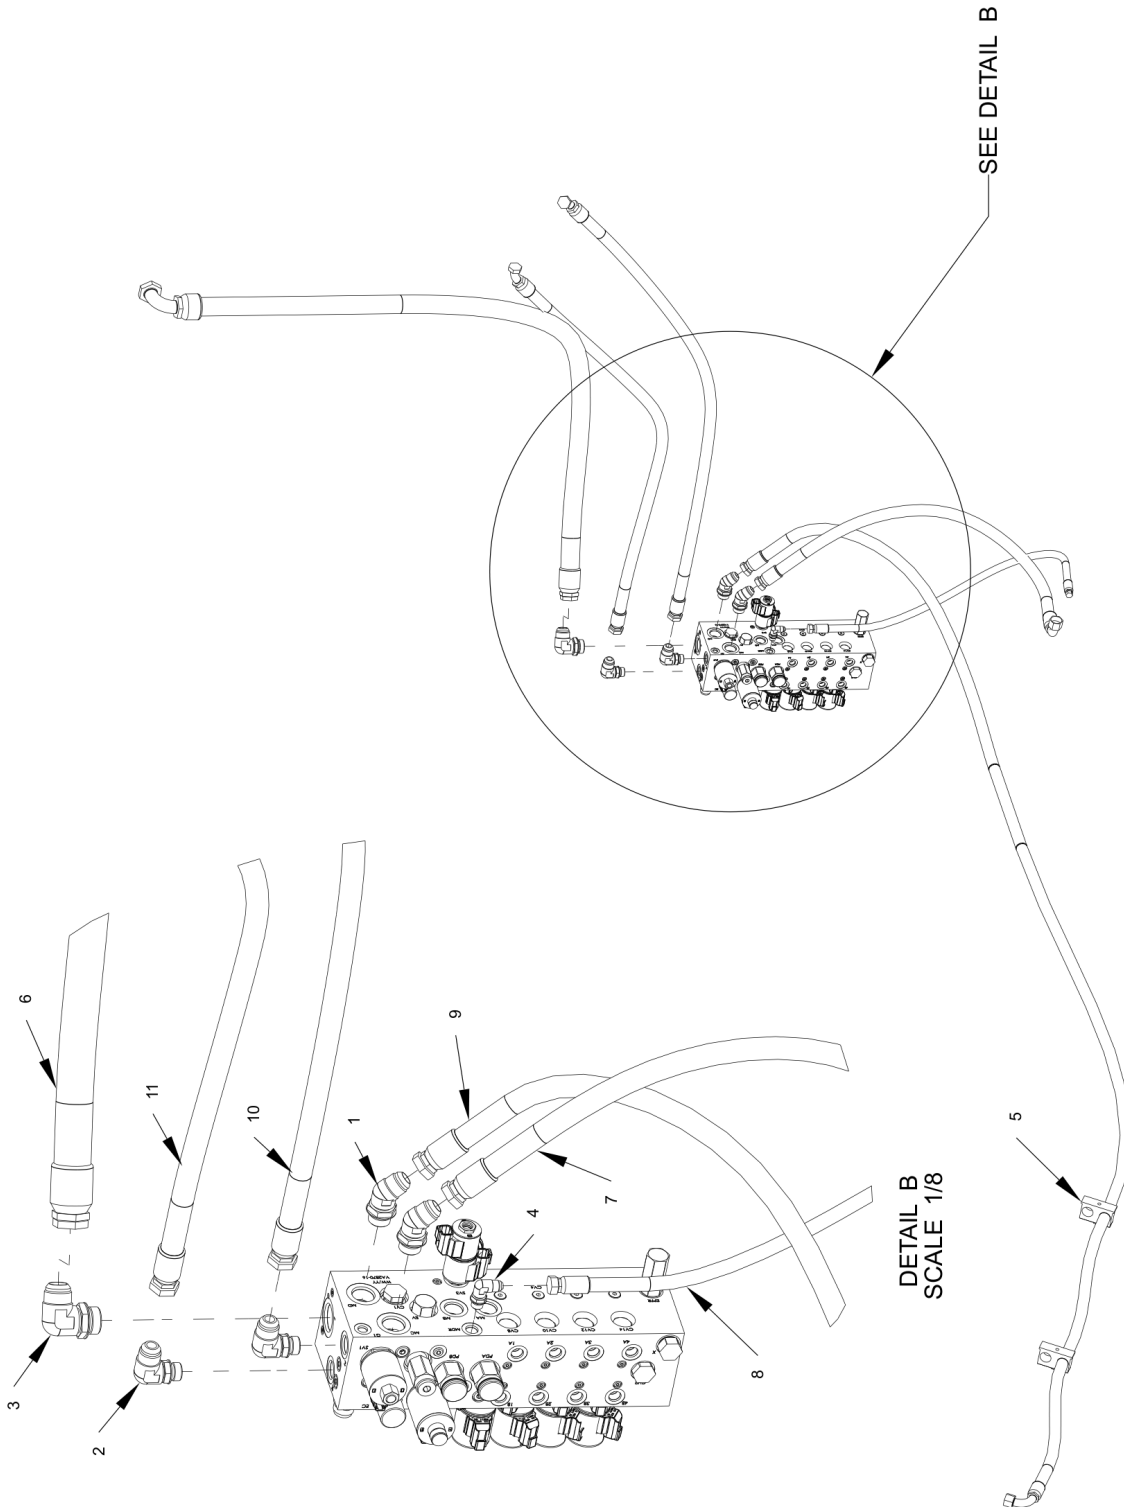


H-1030 Auxiliary Valve Hydraulics View B (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800532	FTG\1-1/16MORX1-1/16MJIC\45		2	EA
2	3800535	FTG\7/8MORX1-1/16MJIC\90		2	EA
3	3800728	FTG\1-5/16MORX1-5/16MJIC\90		1	EA.
4	3800757	FTG\9/16MORX9/16MJIC\90		1	EA.
5	7501337	CLMP\HOSE\CUSH\3/4		2	EA
6	3701567	HOSE\HYD\1-1/4X74\1-5/16FJCX1-5/8FJC90DEG	T PORT AUX VALVE TO TANK FILTER	1	EA.
7	3701150	HOSE\HYD\3/4X32\1-1/16FJC90X1-1/16FJC	MC PORT AUX VALVE TO MOTOR PORT B BELLY AUGER	1	EA
8	3701571	HOSE\HYD\3/8X32\9/16FJCX7/16FJC	MDR PORT TO BELLY ORBIT	1	EA.
9	3701575	HOSE\HYD\3/4X184\1-1/16FJC90X1-1/16FJC	MD PORT AUX VALVE TO EX PORT CONV. FLOW CONTROL VALVE	1	EA.
10	3701592	HOSE\HYD\3/4X43\1-1/16FJX1-1/16FJC45DEG	PUMP TO P1 AUX. VALVE PORT	1	EA.
11	3701593	HOSE\HYD\3/4X55\1-1/16FJX1-1/16FJC45DEG	PUMP TO P2 AUX. VALVE PORT	1	EA.

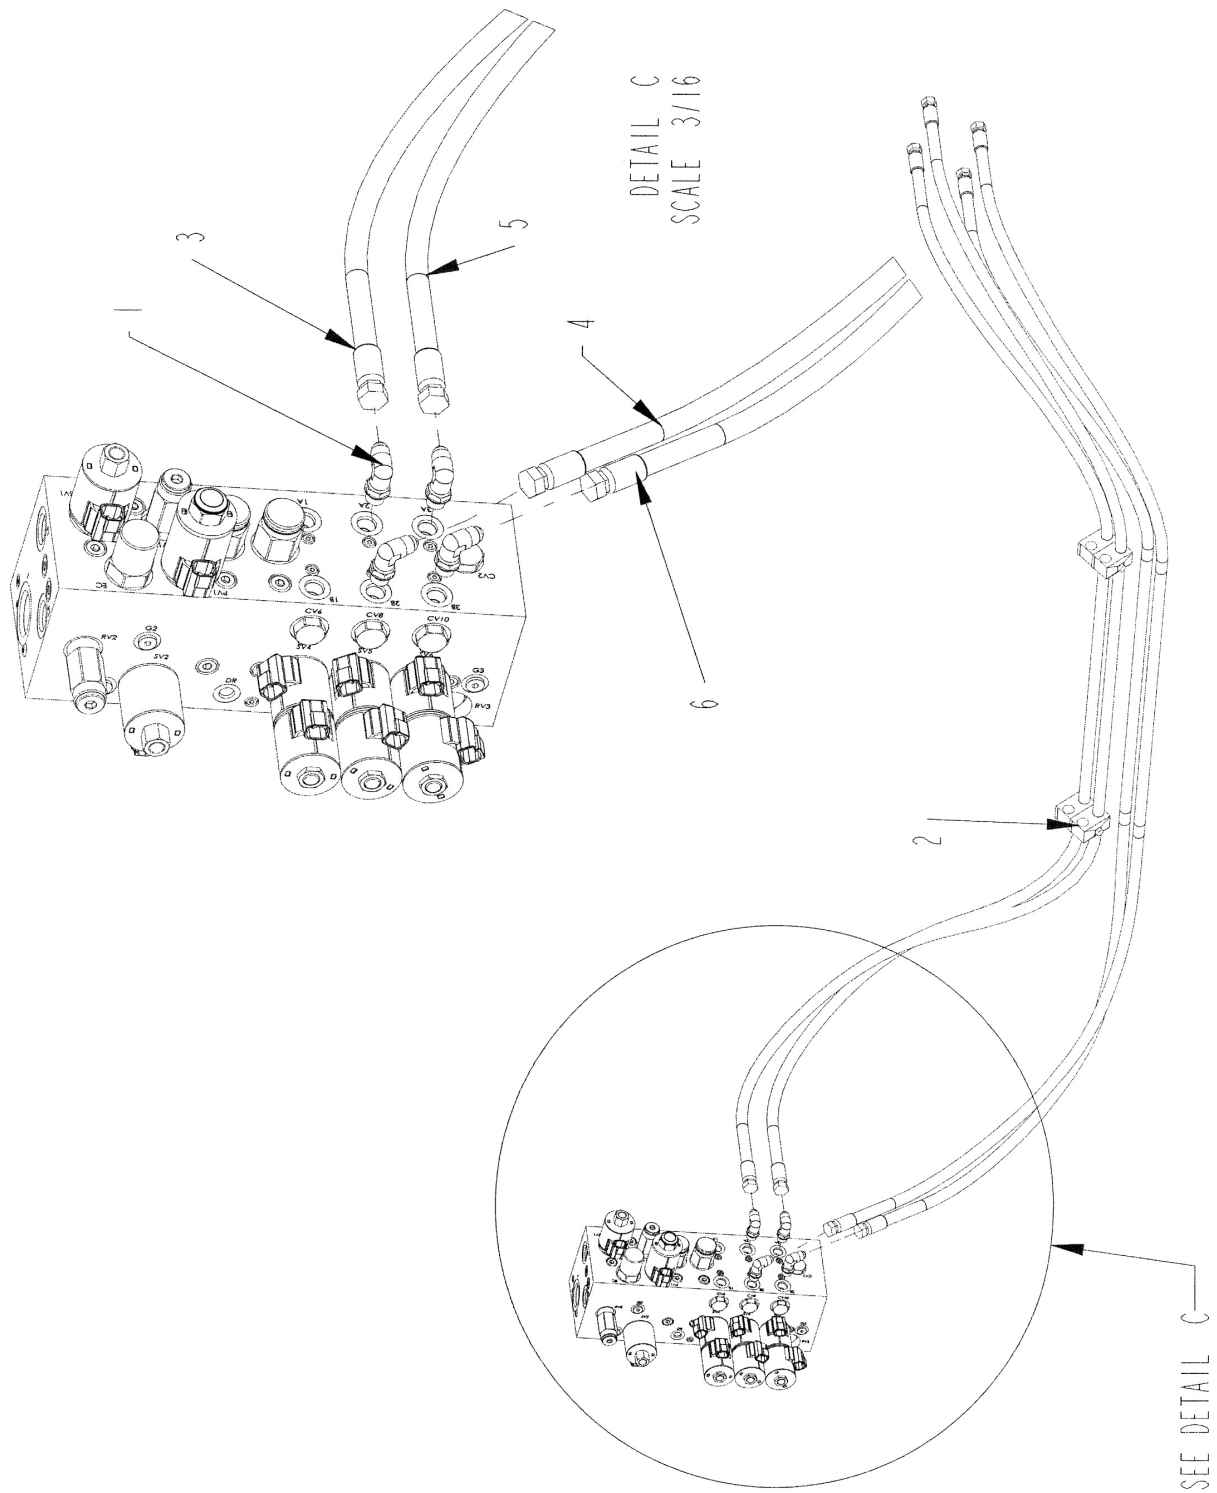


H-1030 Auxiliary Valve Hydraulics View C (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800757	FTG\9/16MORX9/16MJIC\90		4	EA.
2	7501387	CLMP\HOSE\CUSH\3/8\TWIN		2	EA
3	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 2A CONVEYOR LIFT TO FRONT BOTTOM FORWARD DIVIDER BLOCK	1	EA
4	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 2B CONVEYOR LIFT TO REAR BOTTOM FORWARD DIVIDER BLOCK	1	EA
5	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 3A CONVEYOR FOLD TO FRONT BOTTOM REAR DIVIDER BLOCK	1	EA
6	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 3B CONVEYOR FOLD TO REAR BOTTOM REAR DIVIDER BLOCK	1	EA

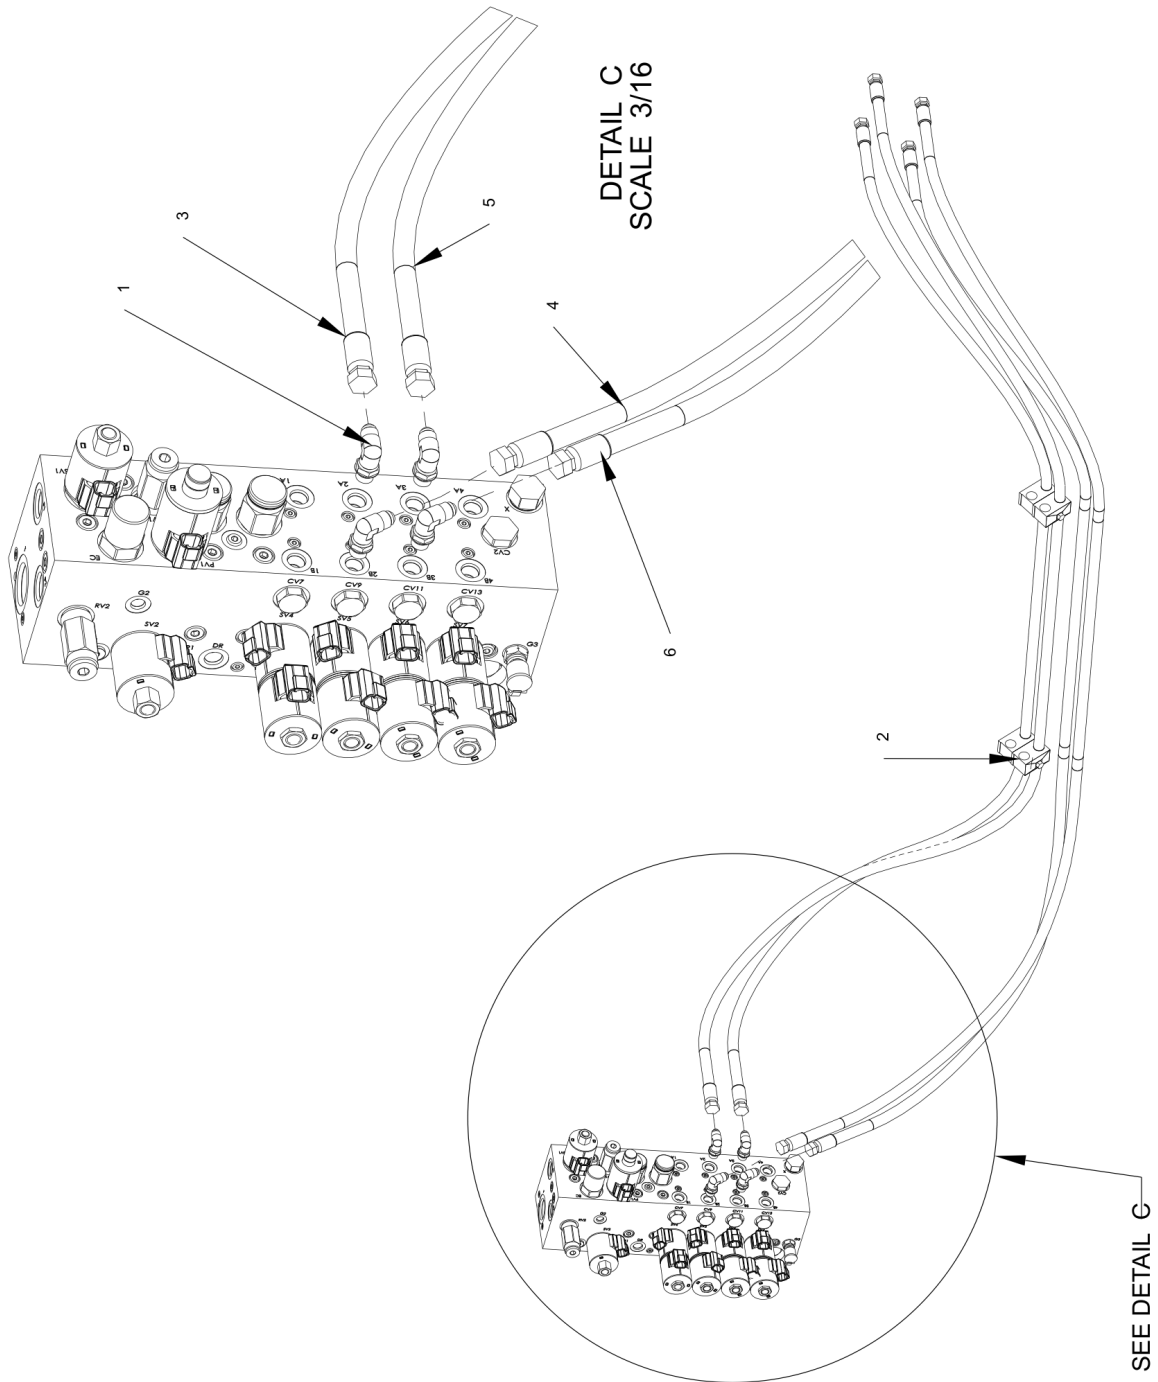


H-1030 Auxiliary Valve Hydraulics View C (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800757	FTG\9/16MORX9/16MJIC\90		4	EA.
2	7501387	CLMP\HOSE\CUSH\3/8\TWIN		2	EA
3	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 2A CONVEYOR LIFT TO FRONT BOTTOM FORWARD DIVIDER BLOCK	1	EA
4	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 2B CONVEYOR LIFT TO REAR BOTTOM FORWARD DIVIDER BLOCK	1	EA
5	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 3A CONVEYOR FOLD TO FRONT BOTTOM REAR DIVIDER BLOCK	1	EA
6	3701015	HOSE\HYD\3/8X115\9/16FJIC	PORT 3B CONVEYOR FOLD TO REAR BOTTOM REAR DIVIDER BLOCK	1	EA

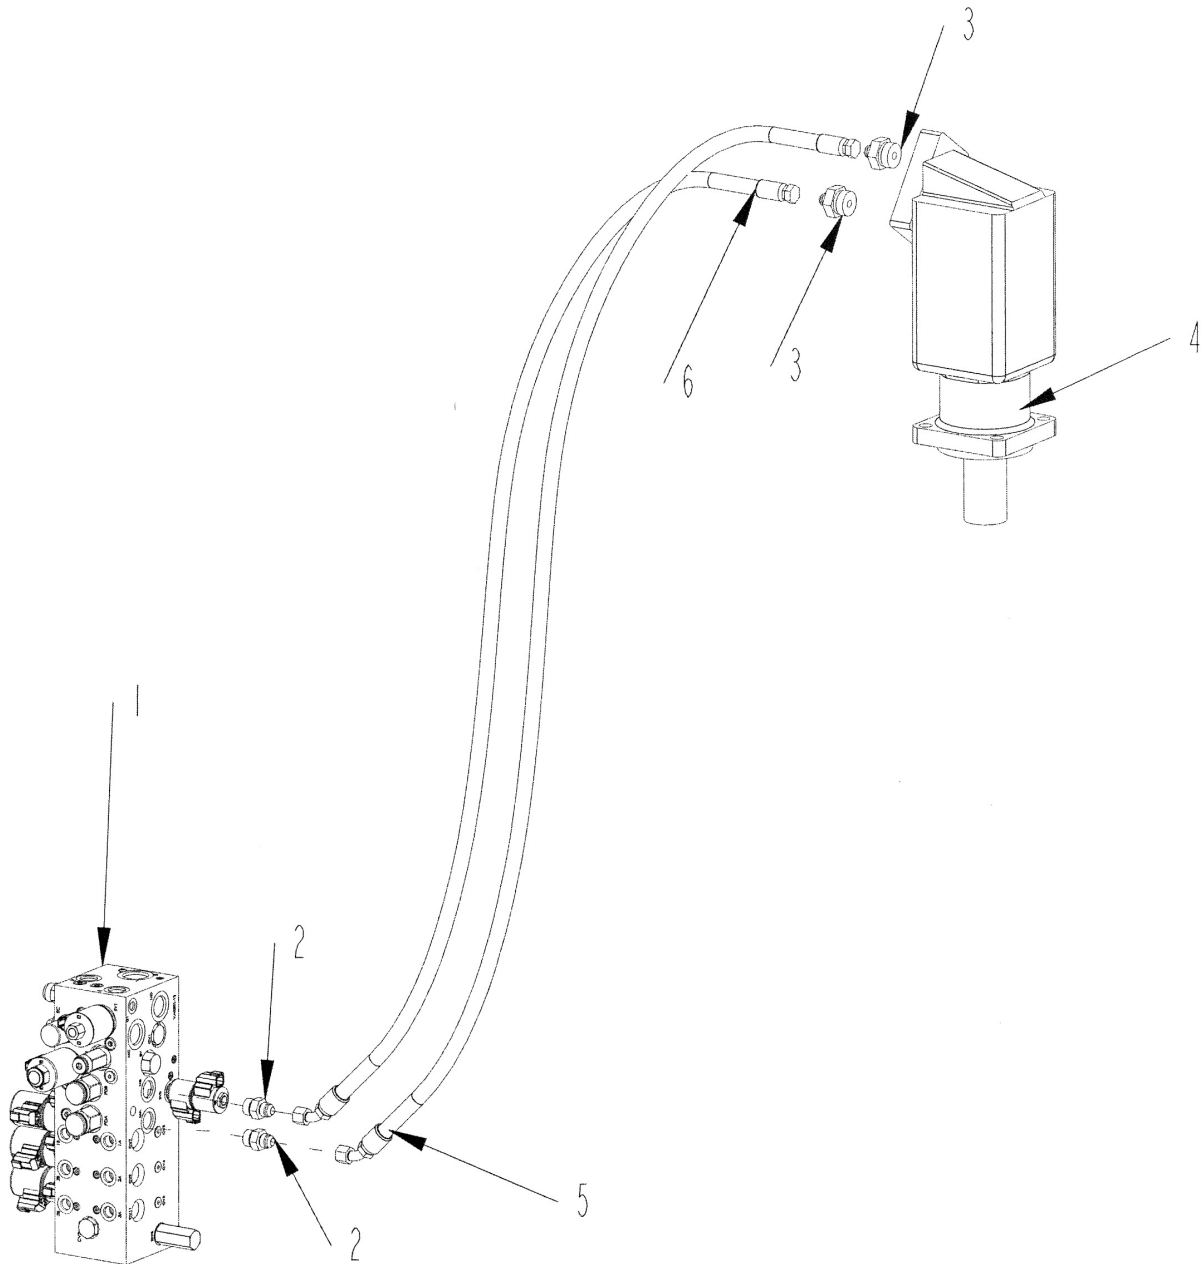


H-1030 Tub Rotation Hydraulics (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	4000541	VLV\HYD\AUX\BLK\MFLD\12V		1	EA
2	3800328	FTG\7/8MORX3/4MJIC\ADPT		2	EA.
3	3800938	FTG\1-5/16MORX3/4MJIC\ADPT		2	EA
4	4200121	MTR\HYD\40.6\1000\2-1/4\1-5/16FOR		1	EA
5	3701566	HOSE\HYD\1/2X175\3/4FJICSX3/4FJIC45	PORT MA AUX. VALVE TO UPPER PORT ORBIT MOTOR	1	EA.
6	3701566	HOSE\HYD\1/2X175\3/4FJICSX3/4FJIC45	PORT MB AUX. VALVE TO UPPER PORT ORBIT MOTOR	1	EA.

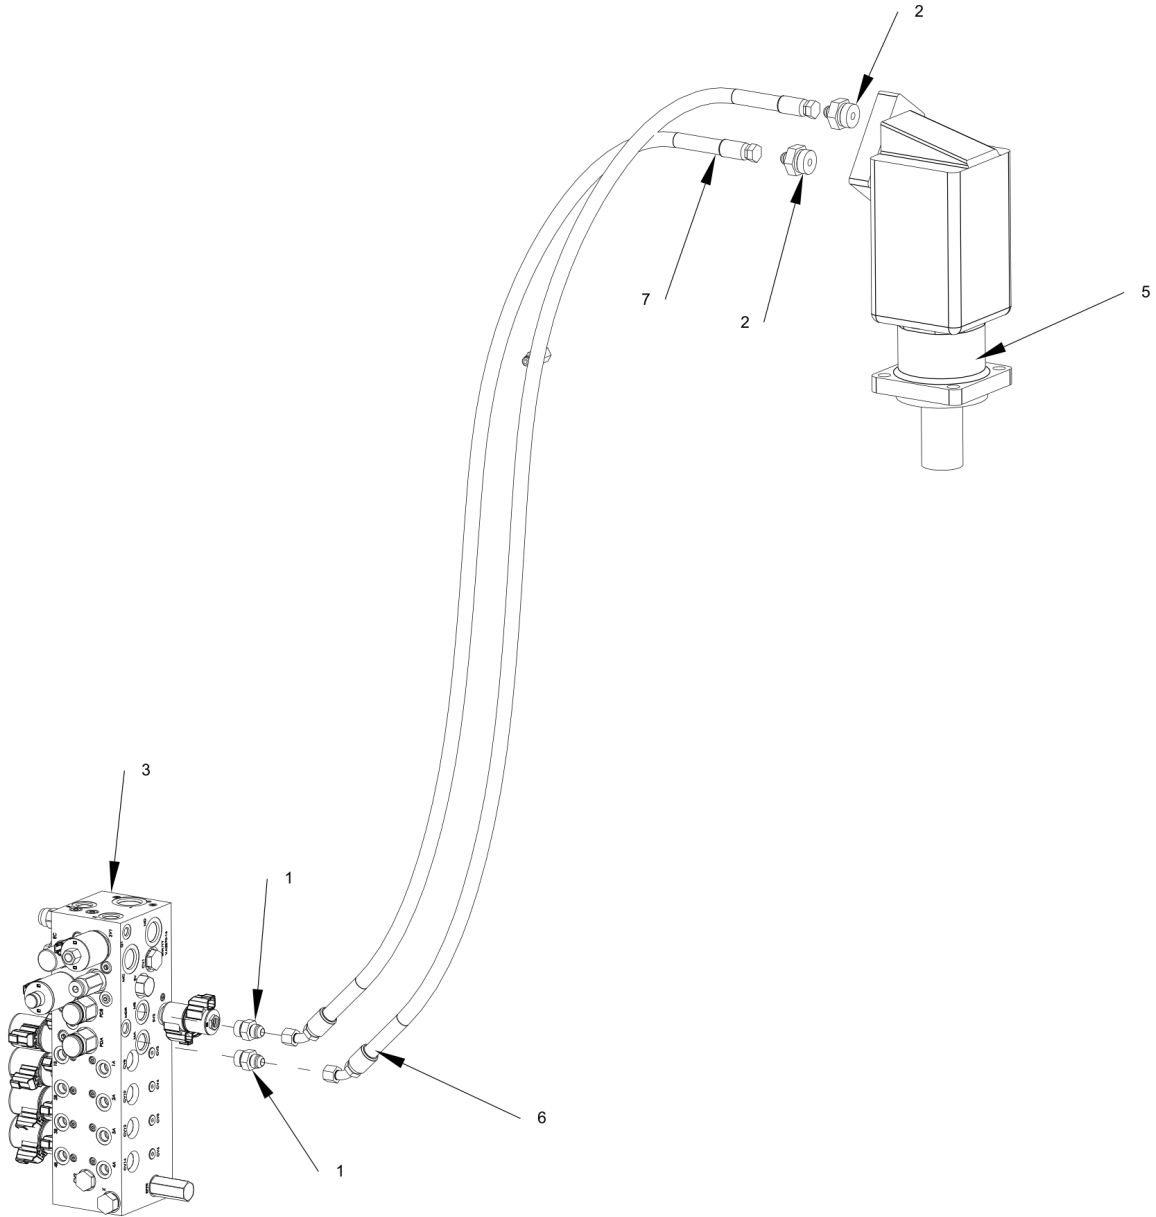


H-1030 Tub Rotation Hydraulics (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800328	FTG\7/8MORX3/4MJIC\ADPT		2	EA.
2	3800938	FTG\1-5/16MORX3/4MJIC\ADPT		2	EA
3	4000598	VLV\HYD\AUX\BLK\MFLD\12V		1	EA.
4	4200121	MTR\HYD\40.6\1000\2-1/4\1-5/16FOR		1	EA
5	3701566	HOSE\HYD\1/2X175\3/4FJICSX3/4FJIC45	PORT MA AUX. VALVE TO UPPER PORT ORBIT MOTOR	1	EA.
6	3701566	HOSE\HYD\1/2X175\3/4FJICSX3/4FJIC45	PORT MB AUX. VALVE TO LOWER PORT ORBIT MOTOR	1	EA.

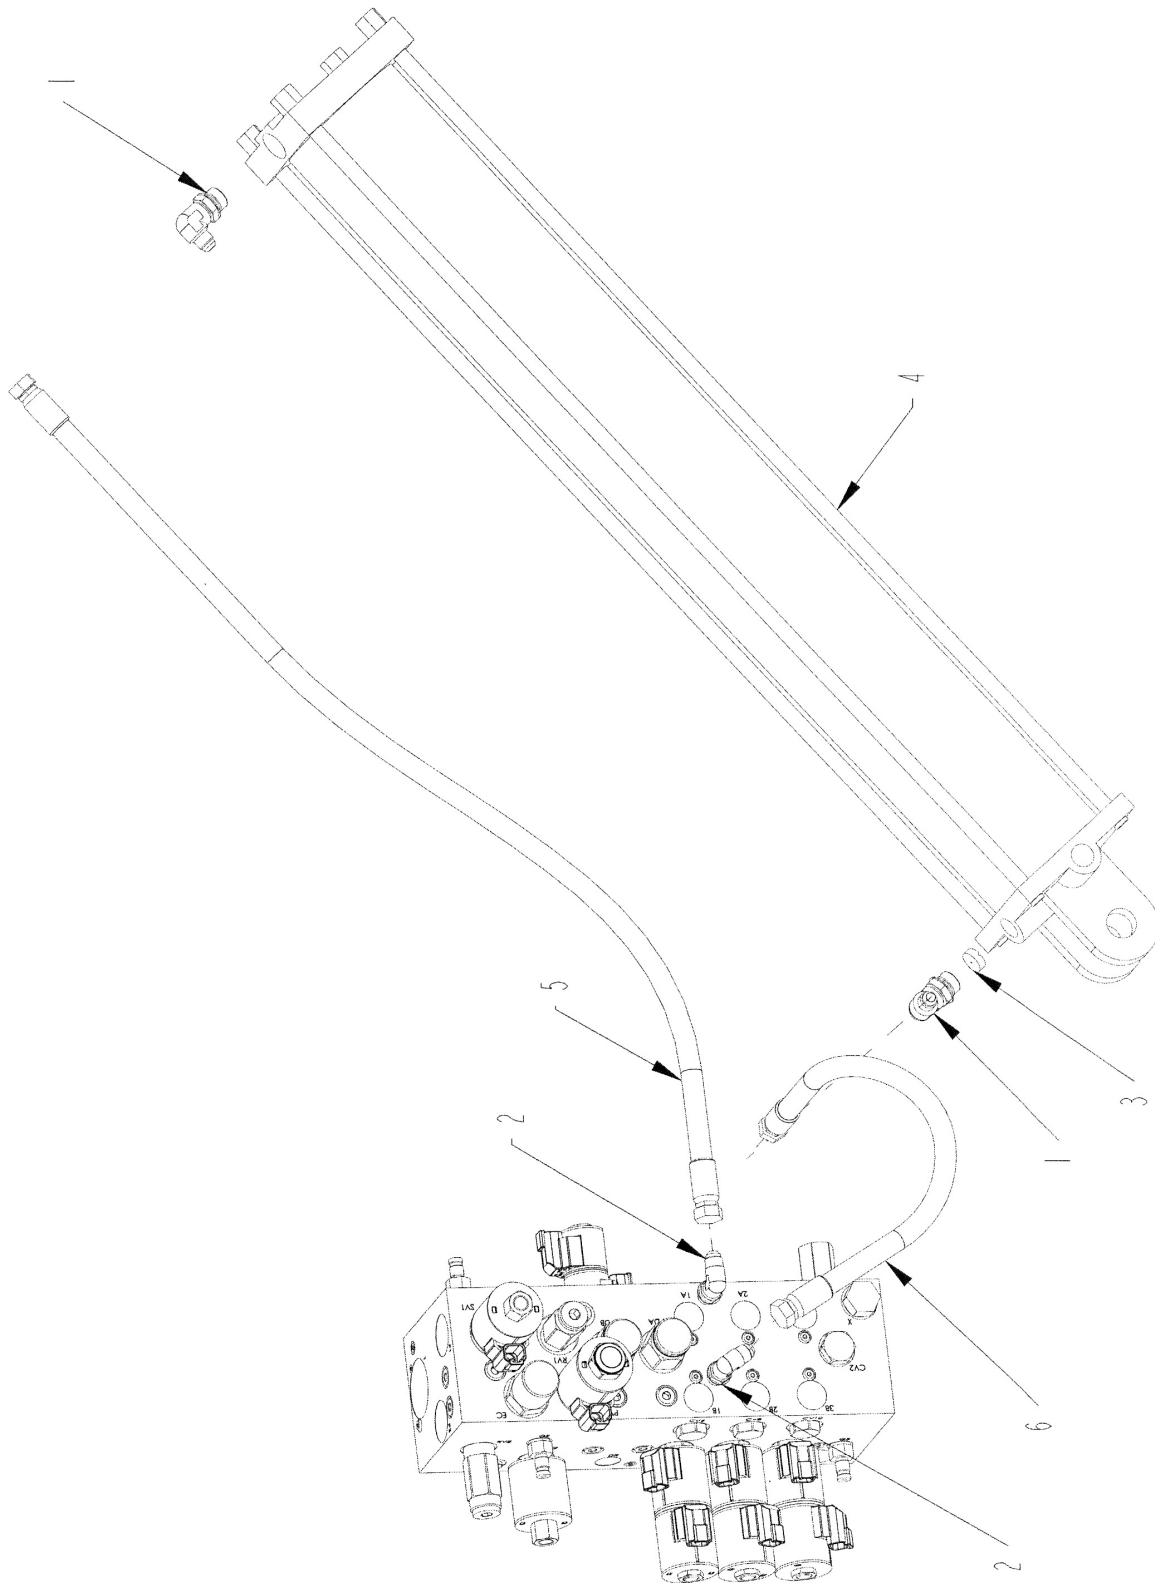


H-1030 Tub Tilt Hydraulics (for SN Up to 1018012030)


Item	Part No.	Name	Remarks	Qty	Uom
1	3800453	FTG\3/4MORX9/16MJIC\90		2	EA.
2	3800757	FTG\9/16MORX9/16MJIC\90		2	EA.
3	3800844	FTG\3/4MOR\ORIFICE\0.062"		1	EA
4	4100144	CYL\HYD\4X30\1-3/4 ROD\CLEVIS ENDS\O-RING PORTS		1	EA
5	3701569	HOSE\HYD\3/8X47.5\9/16FJICS	1A PORT AUX VALVE TO ROD END TUB TILT CYL.	1	EA.
6	3701060	HOSE\HYD\3/8X20\9/16FJICS	1B PORT AUX VALVE TO BASE END TUB TILT CYL.	1	EA.

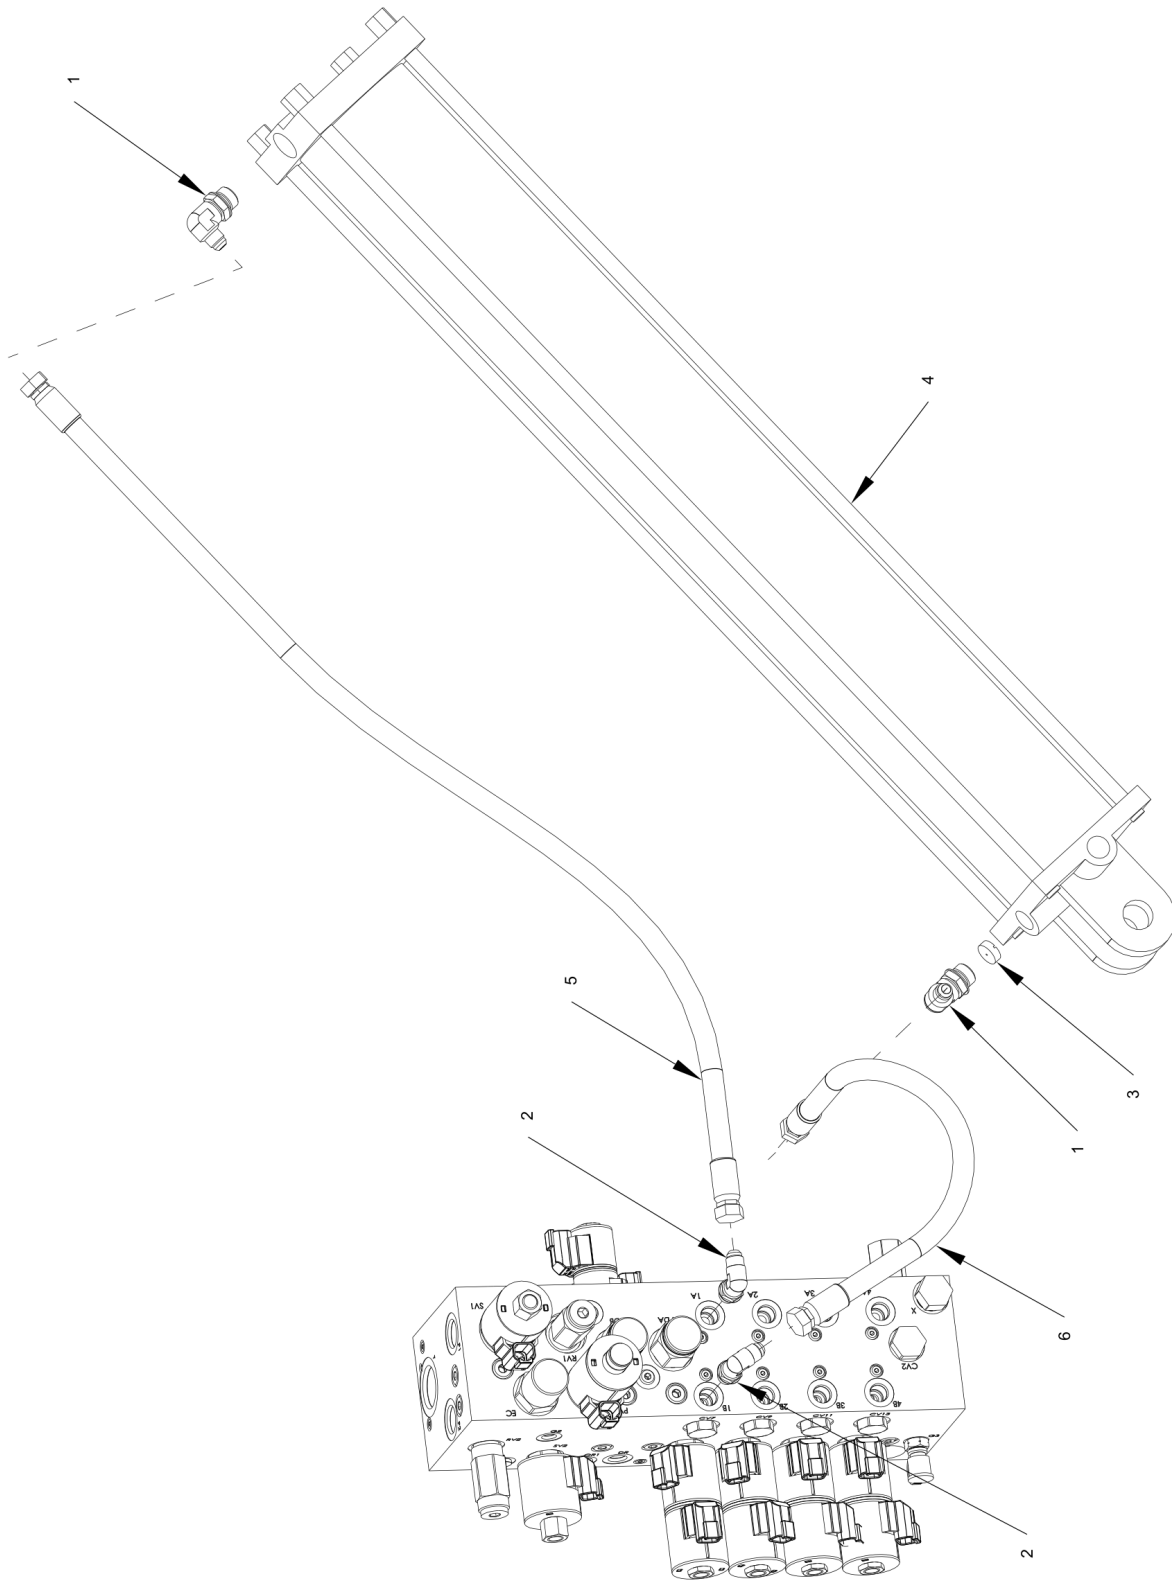

H-1030 Tub Tilt Hydraulics (for Sn 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800453	FTG\3/4MORX9/16MJIC\90		2	EA.
2	3800757	FTG\9/16MORX9/16MJIC\90		2	EA.
3	3800844	FTG\3/4MOR\ORIFICE\0.062"		1	EA
4	4100144	CYL\HYD\4X30\1-3/4 ROD\CLEVIS ENDS\O-RING PORTS		1	EA
5	3701569	HOSE\HYD\3/8X47.5\9/16FJICS	1A PORT AUX VALVE TO ROD END TUB TILT CYL.	1	EA.
6	3701060	HOSE\HYD\3/8X20\9/16FJICS	1B PORT AUX VALVE TO BASE END TUB TILT CYL.	1	EA.

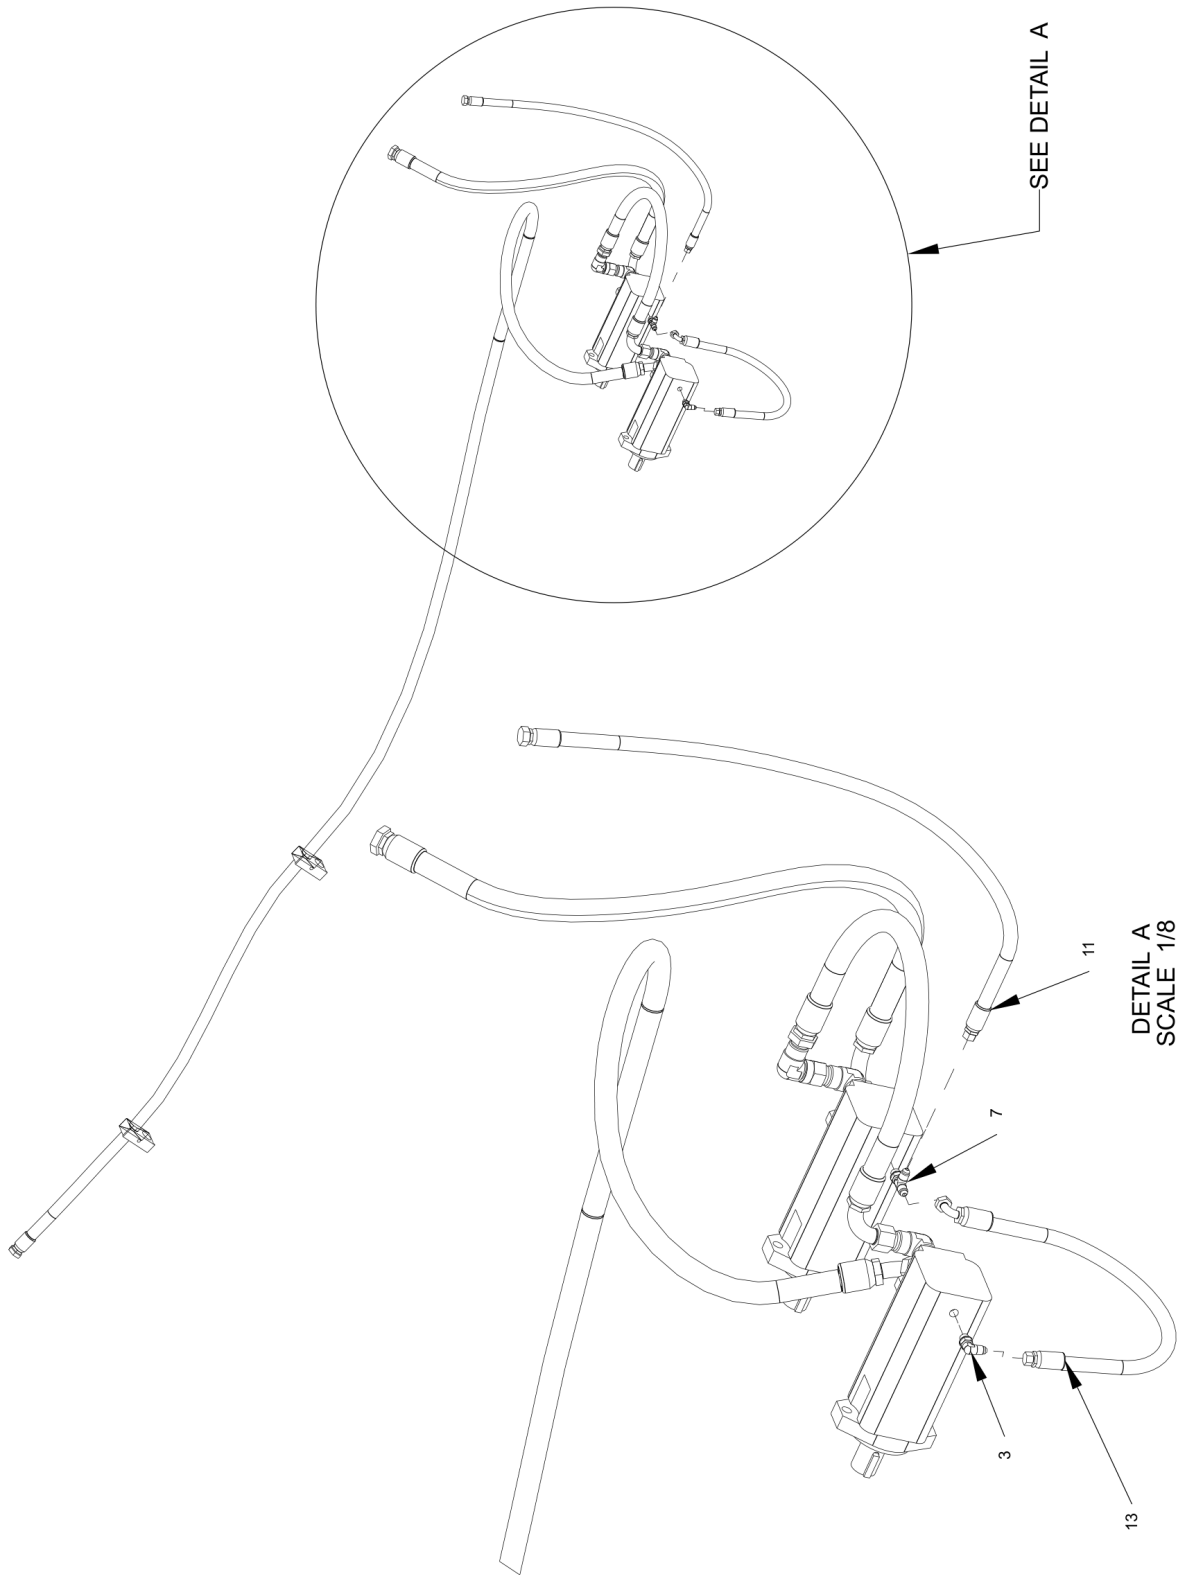


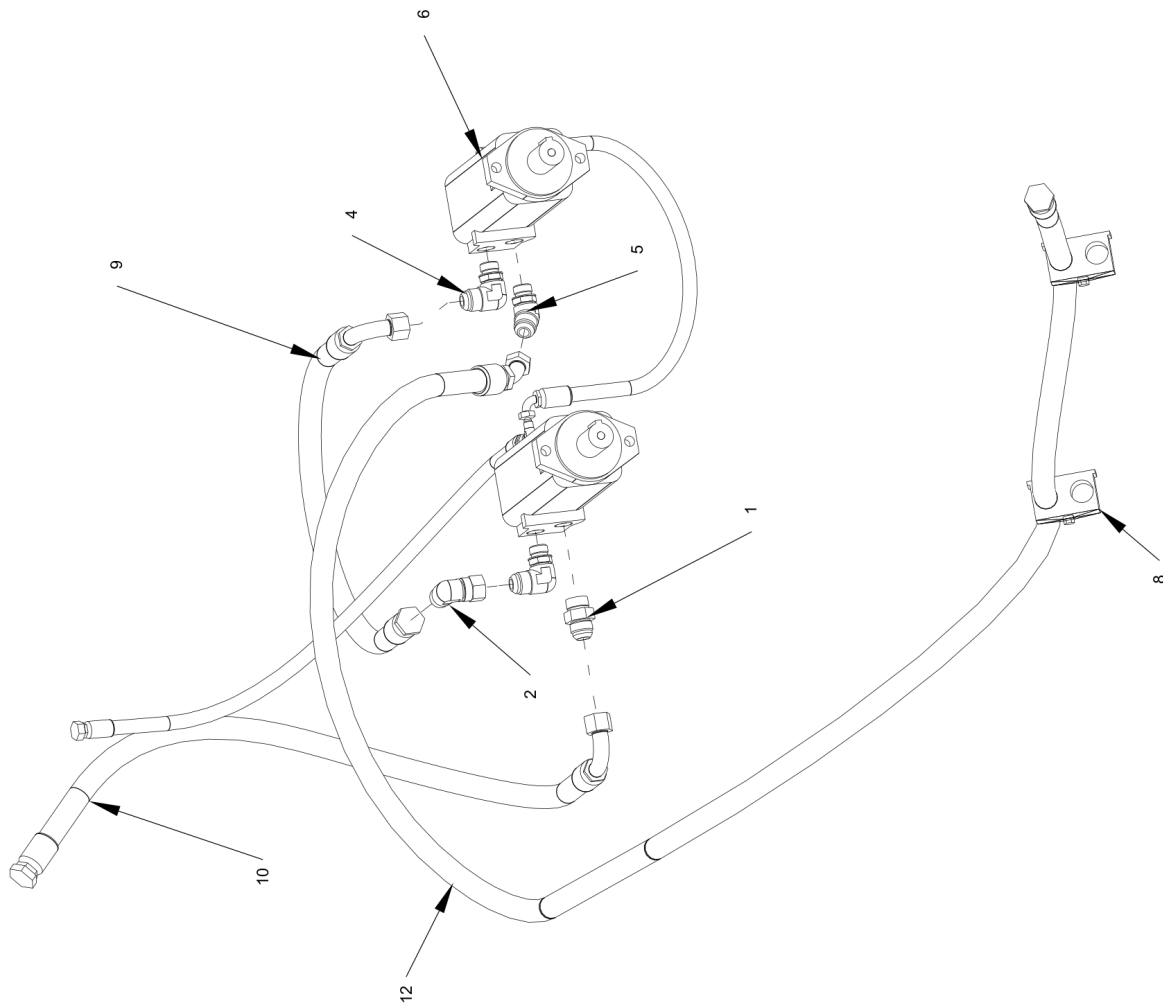

This page intentionally left blank


H-1030 Belly Auger Hydraulics

Item	Part No.	Name	Remarks	Qty	Uom
1	3800277	FTG\1-1/16MORX1-1/16MJIC\ST		1	EA
2	3800280	FTG\1-1/16MJICX1-1/16FJIC\90\SW		1	EA
3	3800472	FTG\7/16MORX7/16MJIC\90		1	EA
4	3800535	FTG\7/8MORX1-1/16MJIC\90		2	EA
5	3800669	FTG\MORXMJIC\45		1	EA
6	3900010	MTR\HYD\24\2000\SAE;A		2	EA
7	4700777	CLMP\HOSE\1/2		2	EA.
8	3800988	FTG\7/16MJICX7/16MJICX7/16MOR\TEE		1	EA
9	7501337	CLMP\HOSE\CUSH\3/4		2	EA
10	3701483	HOSE\HYD\3/4X13.5\1-1/16FJC90X1-1/16FJC	PORT B OF LEFT ORBIT MOTOR TO PORT B OF RIGHT ORBIT MOTOR	1	EA
11	3701150	HOSE\HYD\3/4X32\1-1/16FJC90X1-1/16FJC	MC PORT AUX. VALVE TO MOTOR B BELLY COVNEYOR	1	EA
12	3701571	HOSE\HYD\3/8X32\9/16FJCX7/16FJC	MDR PORT AUX. VALVE TO BELLY ORBIT	1	EA.
13	3701594	HOSE\HYD\3/4X162\1-1/16FJX1-1/16FJC45DEG	BELLY ORBIT TO IN PORT CONVEYOR FLOW CONTROL VALVE	1	EA.
14	3701484	HOSE\HYD\3/8X21.25\7/16FJICX7/16FJIC\90	CASE DRAIN TEE RIGHT ORBIT TO CASE DRAIN LEFT ORBIT MOTOR	1	EA

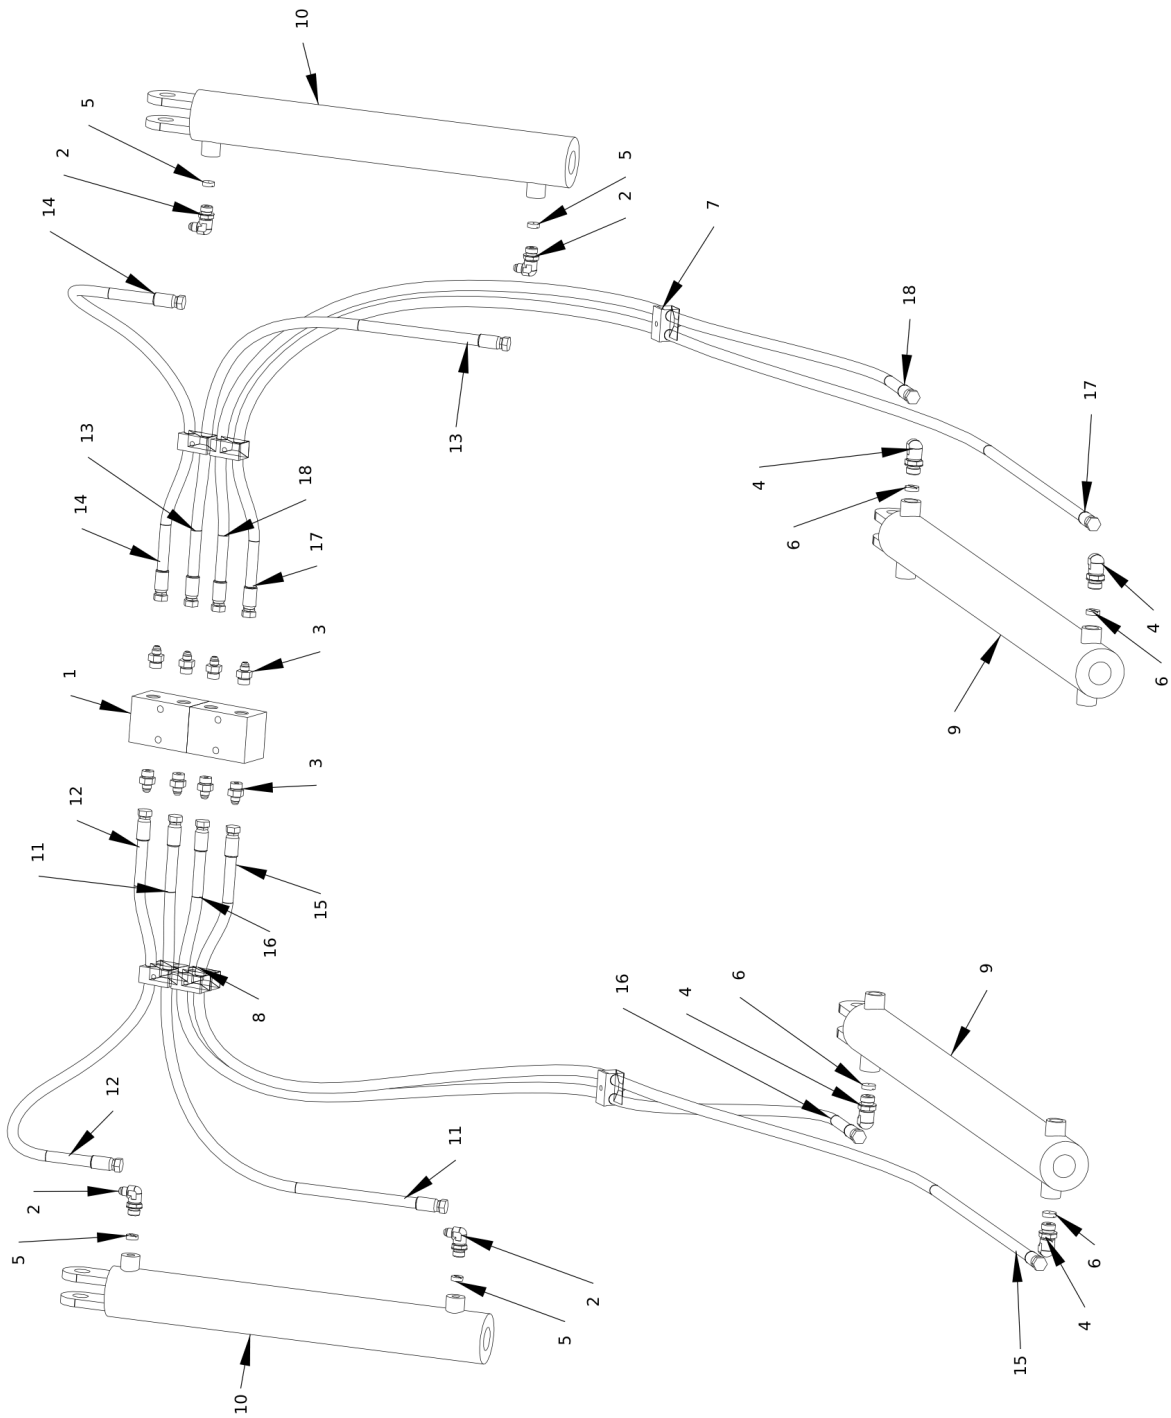


Conveyor Lift and Fold Hydraulic Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	3800428	MNFLD\DBL;TEE\BLK\3/4FOR		2	EA.
2	3800453	FTG\3/4MORX9/16MJIC\90		4	EA.
3	3800530	FTG\3/4MORX9/16MJIC\ST		8	EA.
4	3800538	FTG\7/8MORX9/16MJIC\90		4	EA.
5	3800844	FTG\3/4MOR\ORIFICE\0.062"		4	EA
6	3801016	FTG\7/8MOR\ORIFICE\0.052		4	EA.
7	7501336	CLMP\HOSE\CUSH\3/8		4	EA
8	7501387	CLMP\HOSE\CUSH\3/8\TWIN		2	EA
9	4100352	CYL\HYD\3X36\PARALLEL\CLEV\7/8FOR		2	EA.
	4100355	KIT\SEAL\CYL\HYD\3\PARALLEL\CTD	(seal kit for 4100352)		EA.
10	4100261	CYL\HYD\3X20\1-1/2ROD\PAR#8 O-RING PORT\CTD		2	EA.
10A	4100328	CYL\HYD\3X20\1-1/2ROD\PAR			EA.
11	3700989	HOSE\HYD\3/8X53/9/16FJICS	ROD END LEFT LIFT CYLINDER TO REAR PORT FRONT DIVIDER BLOCK	1	EA
12	3700913	HOSE\HYD\3/8X34/9/16FJICS	CAP END LEFT LIFT CYLINDER TO FRONT PORT FRONT DIVIDER BLOCK	1	EA
13	3700989	HOSE\HYD\3/8X53/9/16FJICS	ROD END RIGHT LIFT CYLINDER TO REAR PORT FRONT DIVIDER BLOCK	1	EA
14	3700913	HOSE\HYD\3/8X34/9/16FJICS	CAP END RIGHT LIFT CYLINDER TO FRONT PORT FRONT DIVIDER BLOCK	1	EA
15	3700990	HOSE\HYD\3/8X111/9/16FJICS	ROD END LEFT FOLD CYLINDER TO REAR PORT REAR DIVIDER BLOCK	1	EA
16	3700735	HOSE\HYD\3/8X73/9/16FJIC	CAP END LEFT FOLD CYLINDER TO FRONT PORT REAR DIVIDER BLOCK	1	EA
17	3700990	HOSE\HYD\3/8X111/9/16FJICS	ROD END RIGHT FOLD CYLINDER TO REAR PORT REAR DIVIDER BLOCK	1	EA
18	3700735	HOSE\HYD\3/8X73/9/16FJIC	CAP END RIGHT FOLD CYLINDER TO FRONT PORT REAR DIVIDER BLOCK	1	EA

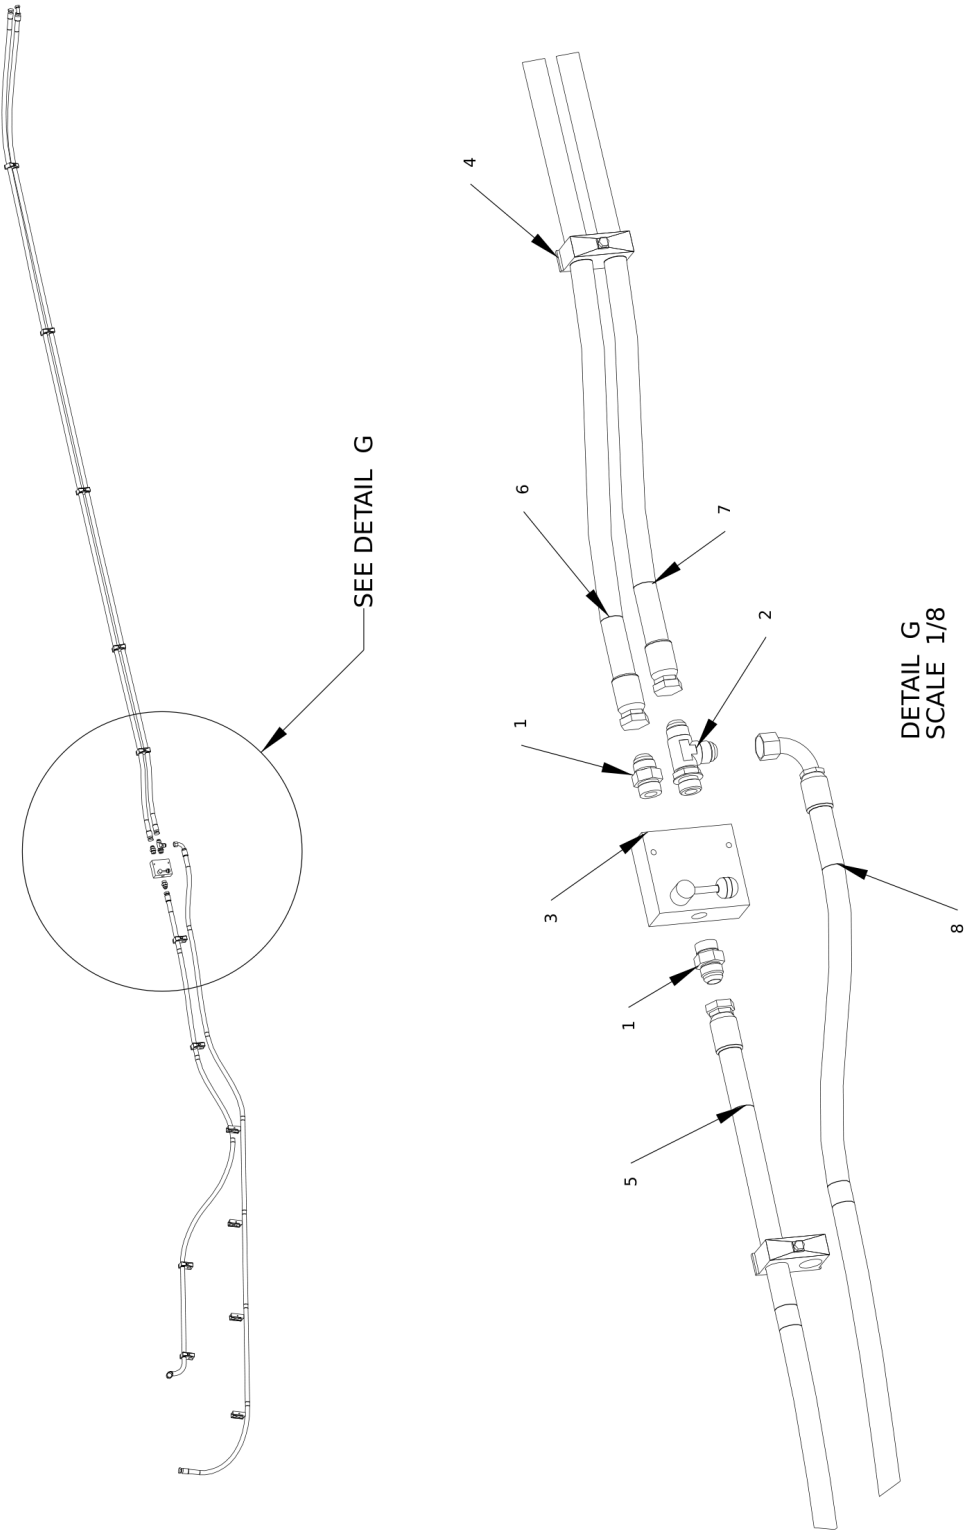

Conveyor Flow Control Valve Hydraulic Assembly


Item	Part No.	Name	Remarks	Qty	Uom
1	3800277	FTG\1-1/16MORX1-1/16MJIC\ST		2	EA
2	3800463	FTG\1-1/16MORX1-1/16MJICX1-1/16MJIC\RUN;TEE		1	EA
3	4000482	VALVE\HYD\FLO;CNTRL\0-30\MAN		1	EA
4	7501337	CLMP\HOSE\CUSH\3/4		13	EA
5	3701575	HOSE\HYD\3/4X184\1-1/16FJC90X1-1/16FJC	PORT A AUGER ORBIT TO IN PORT CONVEYOR FLOW CONTROL VALVE	1	EA.
6	3700968	HOSE\HYD\3/4X238\1-1/16FJCX1-1/16FJC	CF PORT CONVEYOR FLOW CONTROL TO PORT B CONVEYOR ORBIT	1	EA
7	3700992	HOSE\HYD\3/4X236\1-1/16FJX1-1/16FJC45DEG	PORT A CONVEYOR ORBIT TO EX PORT ON DISCHARGE CONVEYOR FLOW CONTROL VALVE	1	EA
8	3701763	HOSE\HYD\3/4X203\1-1/16FJC90X1-1/16FJC	EX PORT DISCHARGE CONVEYOR FLOW CONTROL TO MD PORT AUX. VALVE	1	EA.

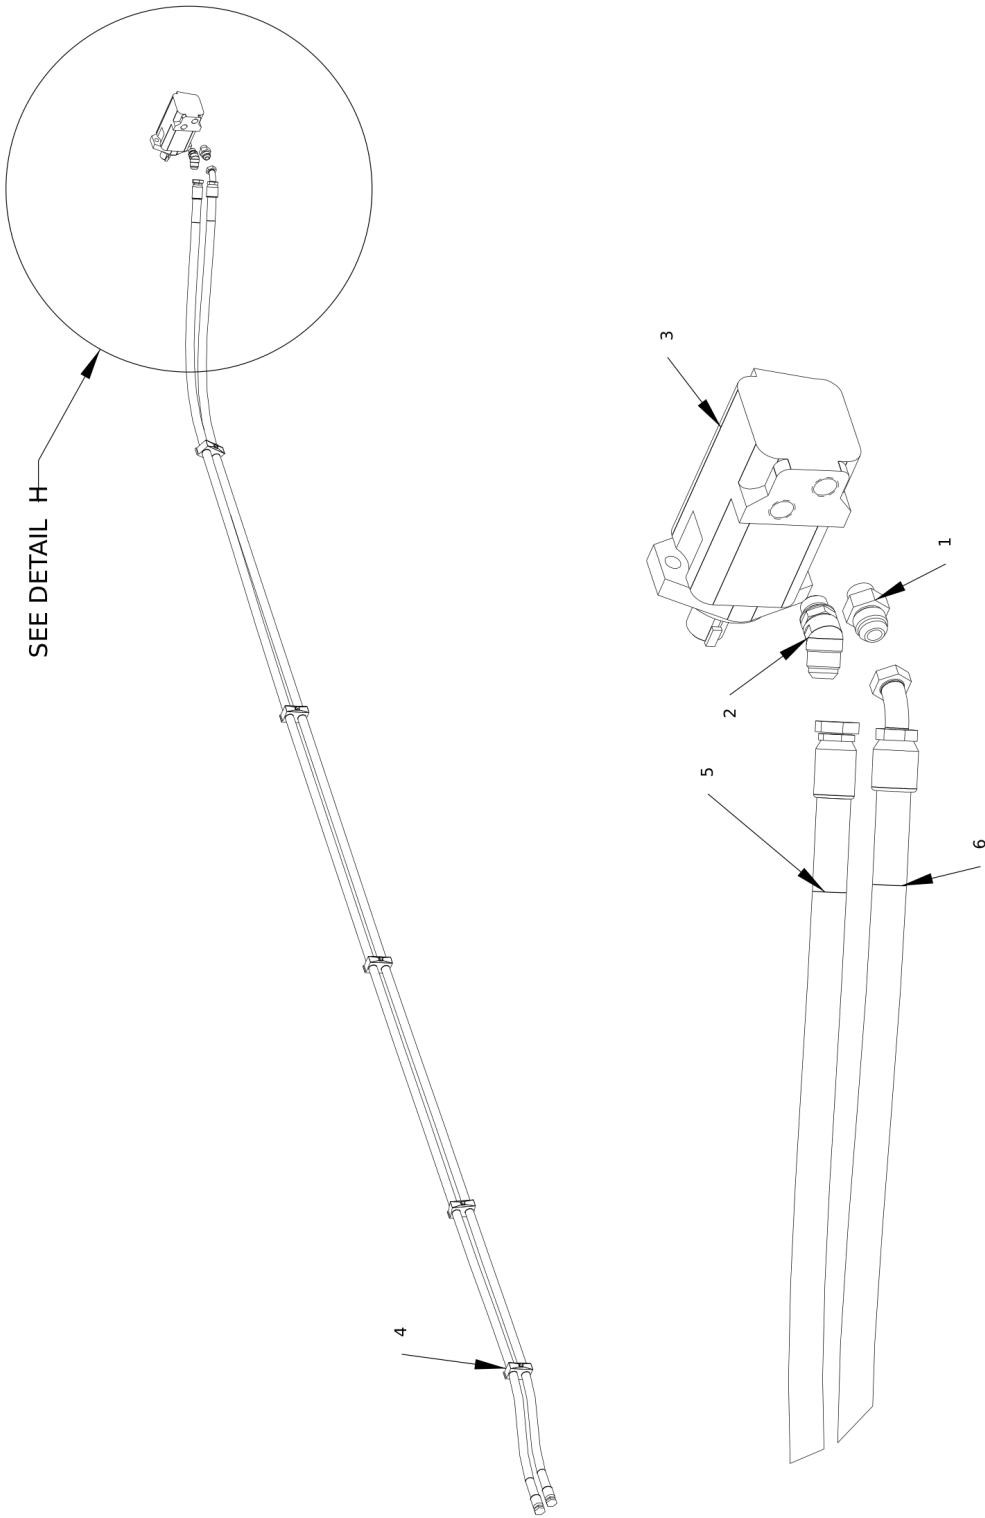

DETAIL H
SCALE 3/16


Discharge Conveyor Orbit Motor Hydraulic Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	3800527	FTG\7/8MORX1-1/16MJIC\ST		1	EA
2	3800669	FTG\MORXMJIC\45		1	EA
3	3900014	MTR\HYD\9.6\2000\1-1/4SH		1	EA
4	7501337	CLMP\HOSE\CUSH\3/4		5	EA
5	3700968	HOSE\HYD\3/4X238\1-1/16FJCX1-1/16FJC	CF PORT CONVEYOR FLOW CONTROL TO PORT B CONVEYOR ORBIT	1	EA
6	3700992	HOSE\HYD\3/4X236\1-1/16FJX1-1/16FJC45DEG	PORT A CONVEYOR ORBIT TO EX PORT ON DISCHARGE CONVEYOR FLOW CAONTROL VALVE	1	EA

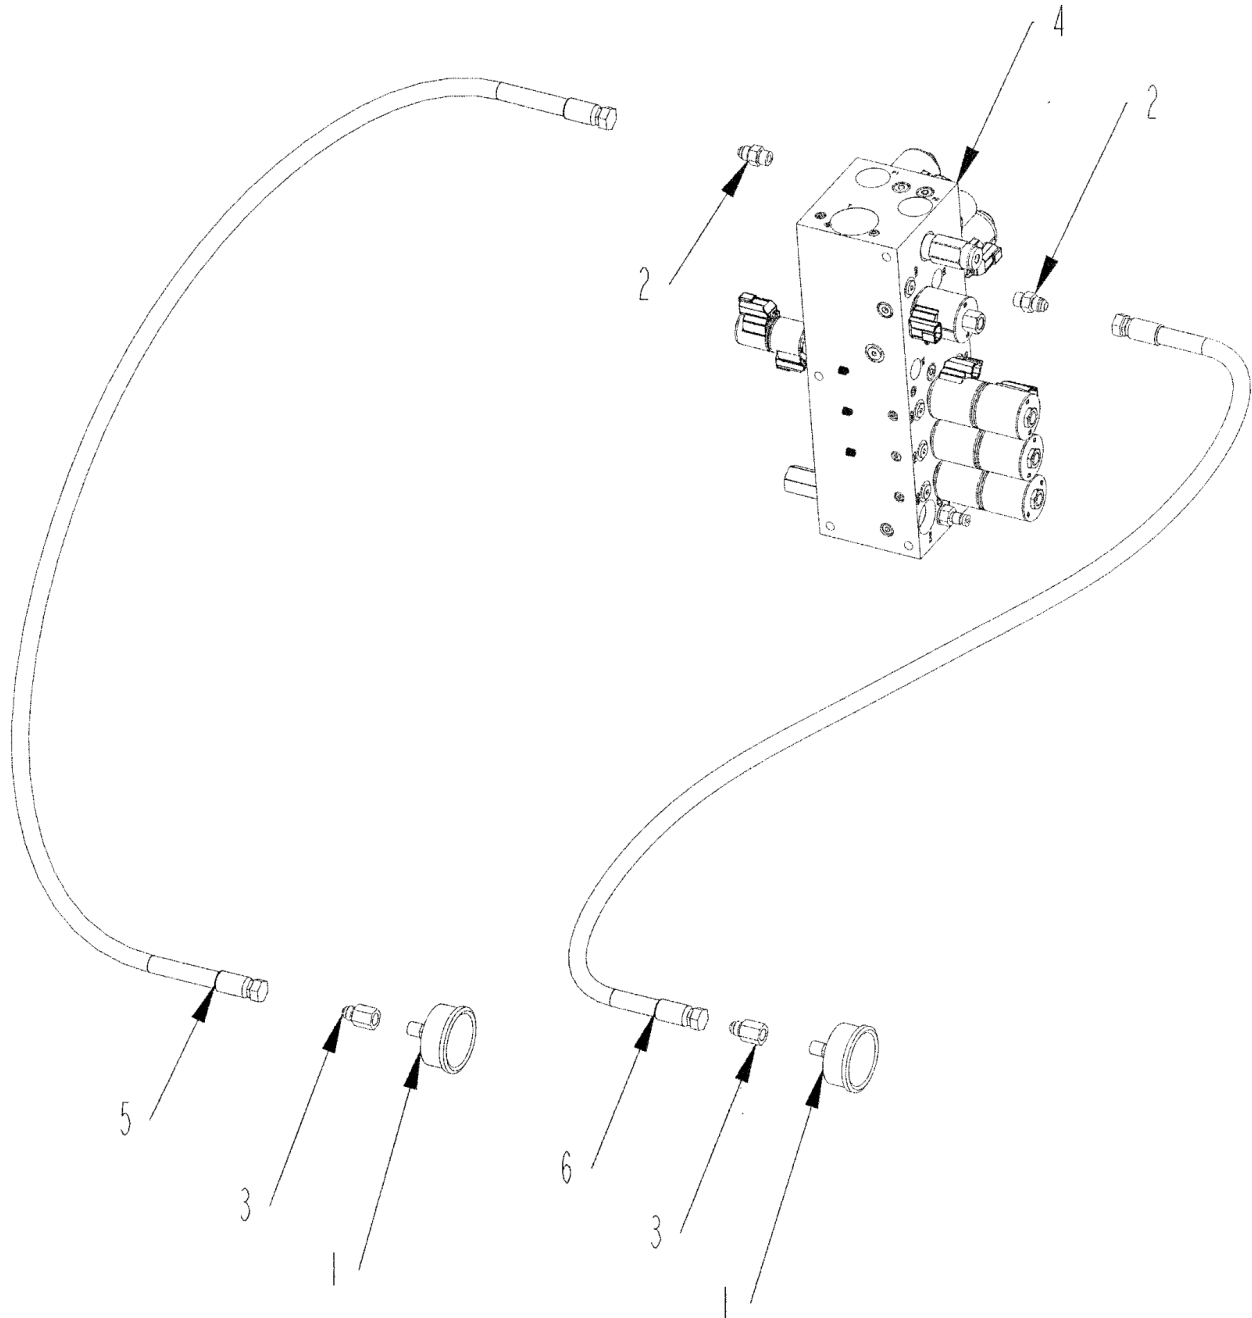


H-1030 Pressure Gauge Hydraulics (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800381	GAUGE\3000PS\REAR STEM		2	EA
2	3800763	FTG\7/16MORX9/16MJIC\ST		2	EA
3	3800758	FTG\9/16MJICX1/4FP\ADPT		2	EA
4	4000541	VLV\HYD\AUX\BLK\MFLD\12V		1	EA
5	3700971	HOSE\HYD\3/8X63\9/16FJICS		1	EA
6	3700971	HOSE\HYD\3/8X63\9/16FJICS		1	EA

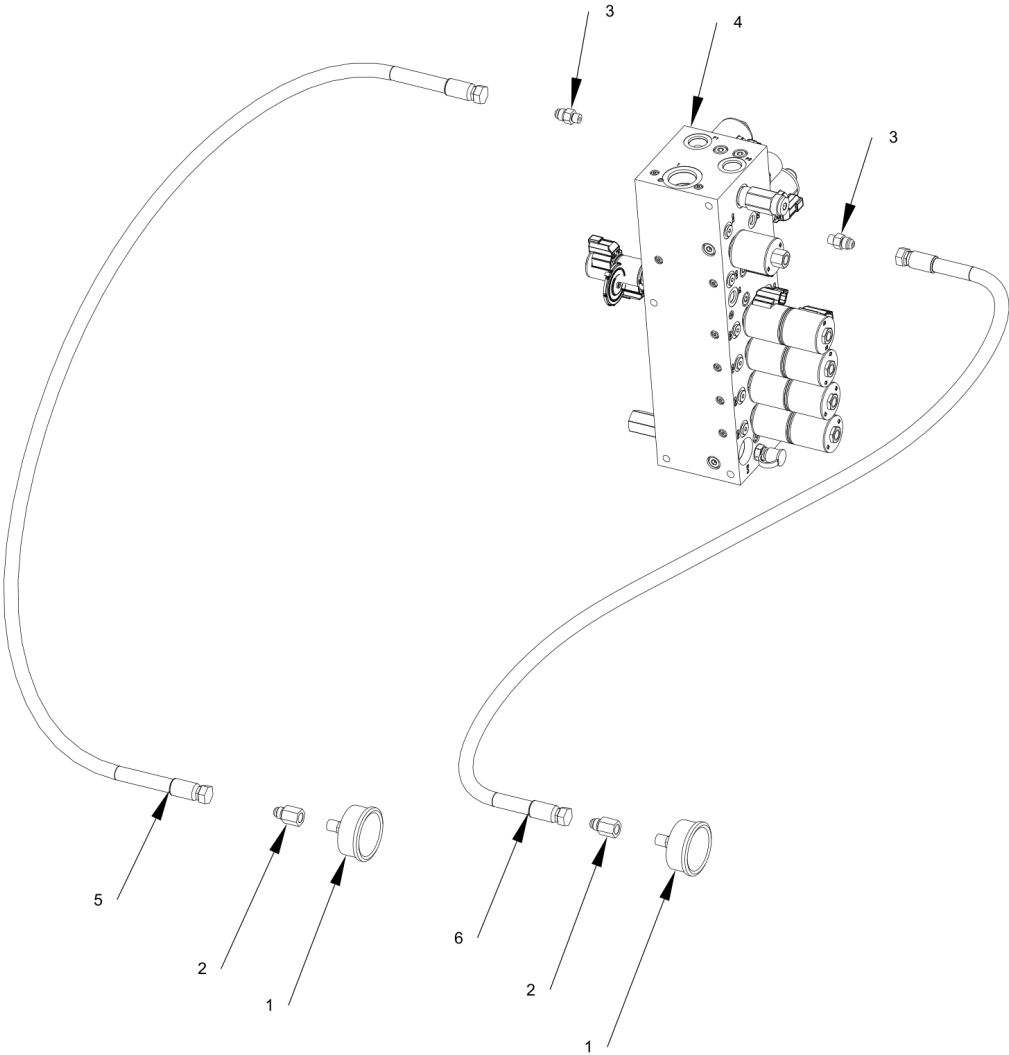


H-1030 Pressure Gauge Hydraulics (for SN 1020012130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	3800381	GAUGE\3000PS\REAR STEM		2	EA
2	3800758	FTG\9\16MJICX1\4FP\ADPT		2	EA
3	3800763	FTG\7\16MORX9\16MJIC\ST		2	EA
4	4000598	VLV\HYD\AUX\BLK\MFLD\12V		1	EA.
5	3700971	HOSE\HYD\3\8X63\9\16FJICS	PRESSURE GAUGE TO G1 AUX VALVE	1	EA
6	3701427	HOSE\HYD\3\8X69\9\16FJICS	PRESSURE GAUGE TO G2 AUX VALVE	1	EA.

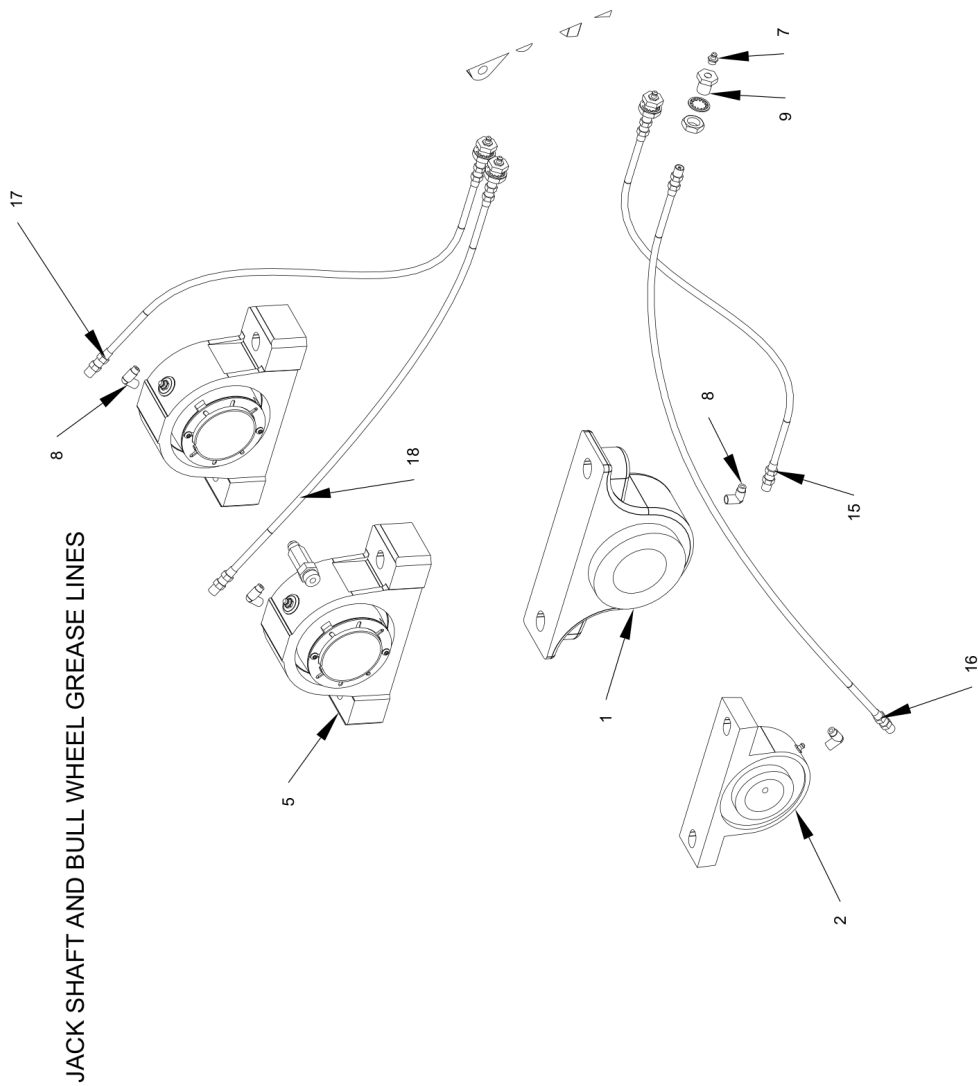


ROTOR AND BELLY CONVEYOR GREASE LINES

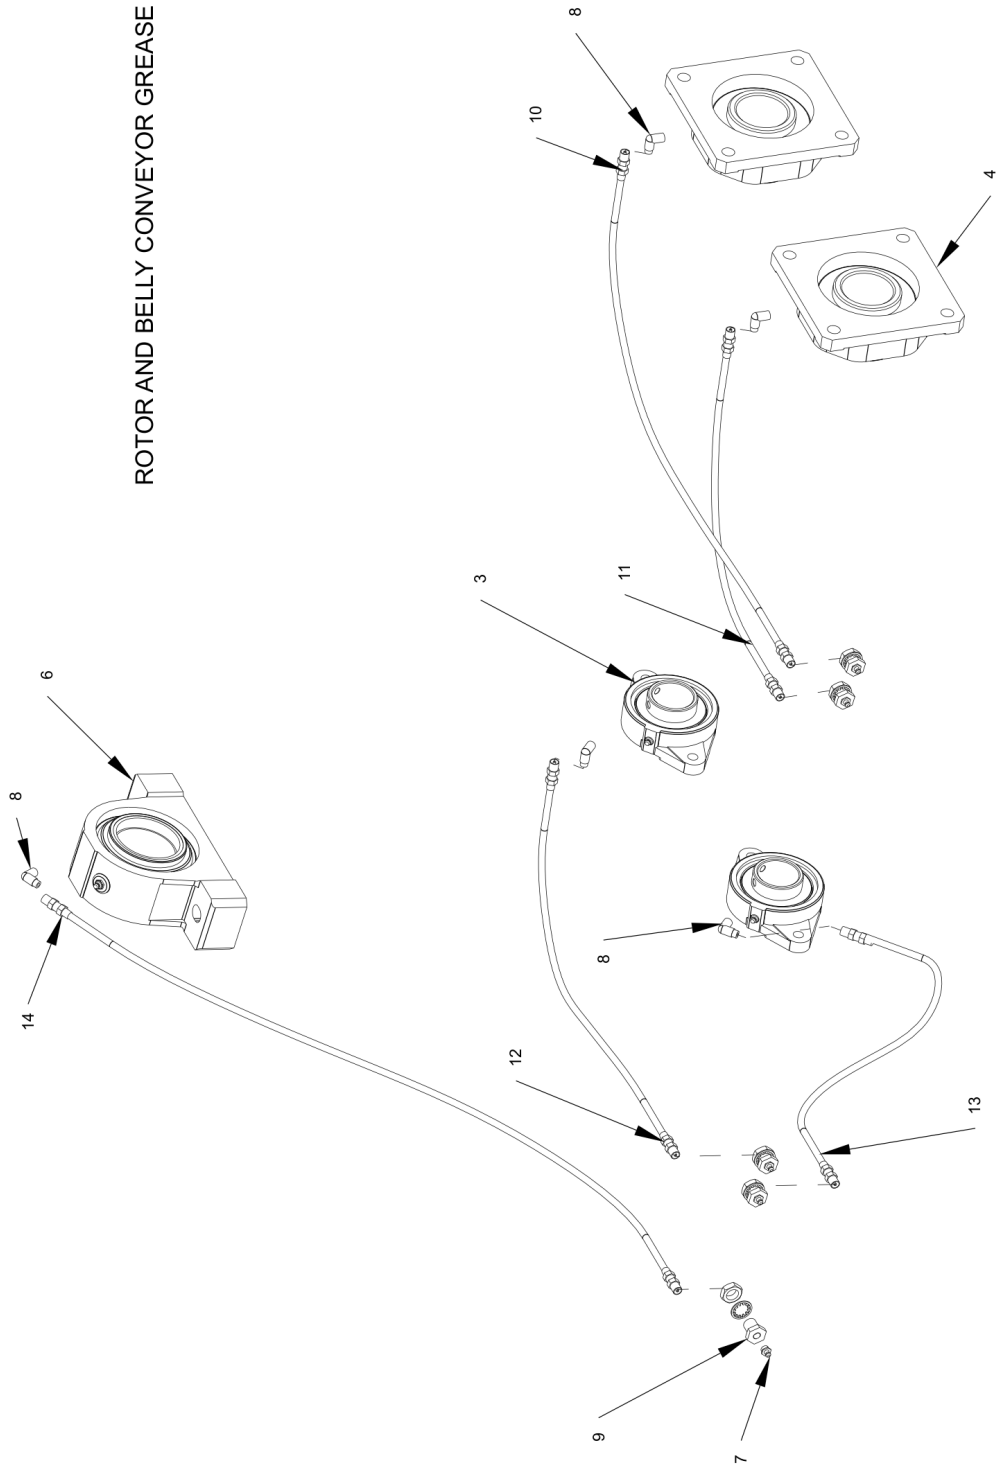

This page intentionally left blank


H-1030 Lube Lines

Item	Part No.	Name	Remarks	Qty	Uom
1	2000509	BRG\PB\2-3/4\E\DODGE		1	EA
2	2000510	BRG\PB\2\2BOLT		1	EA.
3	2000587	BRG\FLG\2"-BLT\SSCRW		2	EA
4	2000588	BRG\FLG\2-1/2\4-BLT\D-LOCK		2	EA
5	2001052	BRG\PB\3\IMPRL\NON-EXP		1	EA
6	2001053	BRG\PB\3\IMPRL\EXP		2	EA
7	3800043	FTG\LUB\1/8MPXZRK\SHORT		11	EA.
8	3800111	FTG\1/8MPX\1/8FP\90D\ST;EL		9	EA.
9	3800895	FTG\1/8FP\CPLG\ANCHOR\5/8NF		9	EA.
10	3701597	HOSE\LUB\1/8X37\MPS-MPS		1	EA
11	3701598	HOSE\LUB\1/8X23\MPS-MPS		1	EA
12	3701599	HOSE\LUB\1/8X31\MPS-MPS		1	EA
13	3701600	HOSE\LUB\1/8X16\MPS-MPS		1	EA
14	3701601	HOSE\LUB\1/8X39\MPS-MPS		1	EA.
15	3701599	HOSE\LUB\1/8X31\MPS-MPS		1	EA
16	3701602	HOSE\LUB\1/8X35\MPS-MPS		1	EA
17	3701603	HOSE\LUB\1/8X30\MPS-MPS		1	EA
18	3701603	HOSE\LUB\1/8X30\MPS-MPS		1	EA
CA	3701604	HOSE\KIT\LUB\1030			EA.

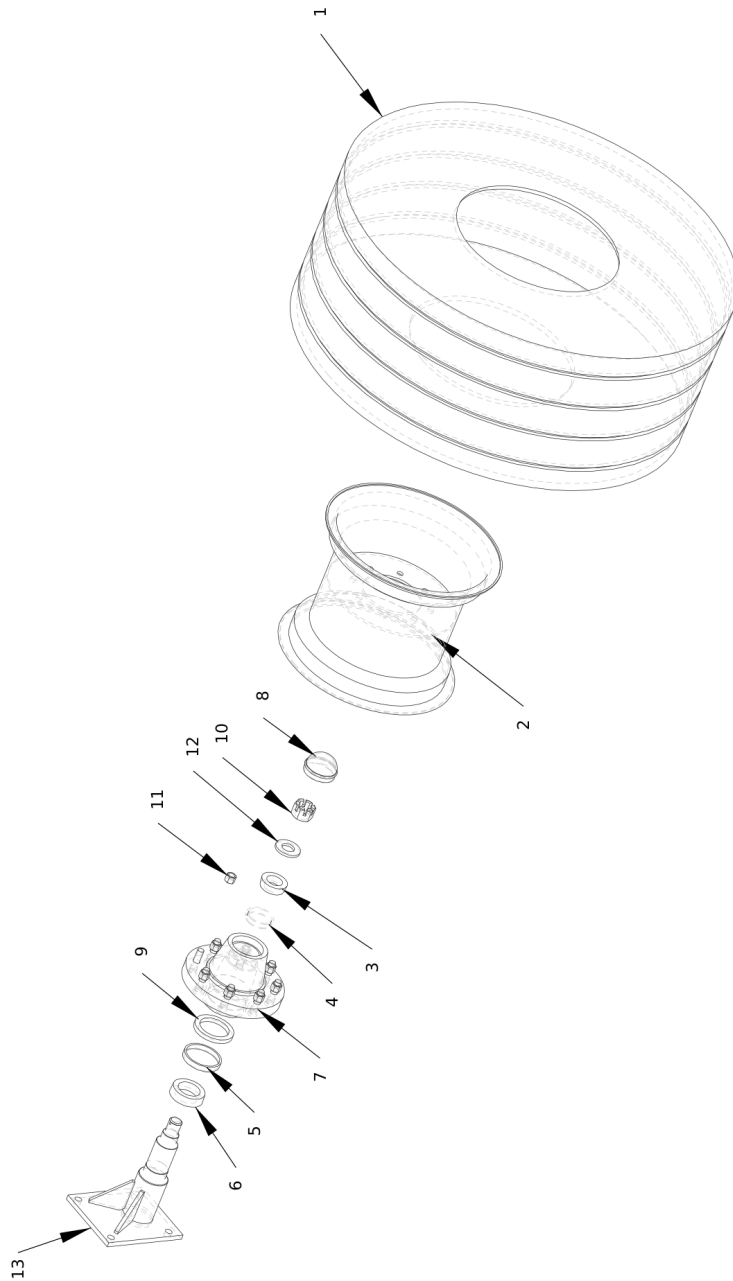


Wheels and Hubs

Item	Part No.	Name	Remarks	Qty	Uom
1	2600053	TIRE\16.5LX16.1SL\14PLY		1	EA.
2	2600649	WHL\8-BOLT\16.1X14C\8K		1	EA.
3	2900125	HUB\H817\CONE\OUTER (LM501349)		1	EA.
4	2900126	HUB\H817\CUP\OUTER (LM501310)		1	EA.
5	2900127	HUB\H817\CUP\INNER (382A)		1	EA.
6	2900128	HUB\H817\CONE\INNER (387A)		1	EA.
7	2900129	HUB\8-BOLT\W/RACES\W/NUTS		1	EA.
8	2900130	CAP\DUST\H817 (DC26)		1	EA.
9	2900131	SEAL\GREASE\H817 (SE42)		1	EA.
10	4900053	NUT\CASTLE\1-1/4\NF		1	EA.
11	4900114	NUT\TAPER\WHEEL\5/8\NF		8	EA.
12	5000133	WASH\SPNDL\1-5/16ID\2-1/2OD\1/4T		1	EA.
13	8101600	SPNDL\2800		1	EA.
CA	2600861	WHL\ASSY\16.5SLX16.1X14PLY8BOLT-WHL\16.1X14\3/8POS	(Includes #1 & #2)		EA.
CA	2900140	HUB\ASSY\H817\8BOLT\8"B.C.\6"PILOT	(Includes #3 thru #9 and #11)		EA.

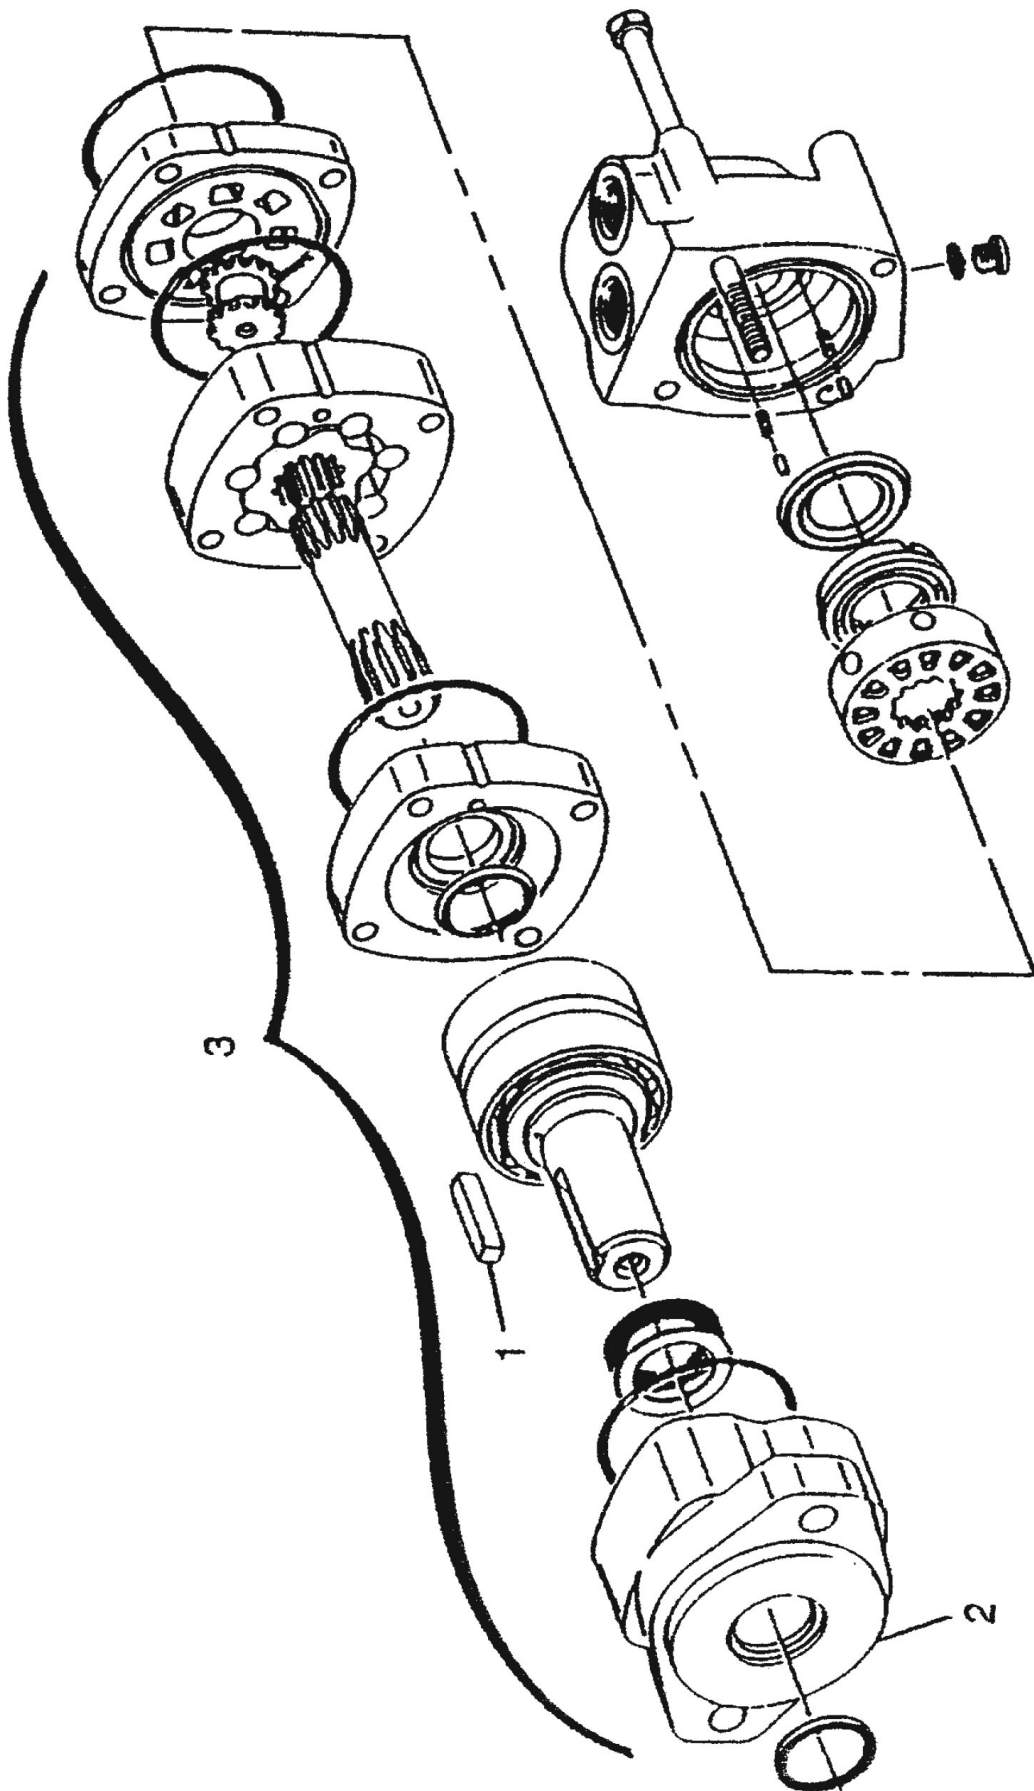


3900010 Orbit Motor Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	6200022	KEY\SQ\5/16X1-1/2\HARDEND		1	EA
2	3900011	MTG FLG(2000 SER)		1	EA
3	3900010	MTR\HYD\24\2000\SAE;A	Complete Assembly		EA
NS	7501005	KIT\SEAL\2000ORBIT		1	EA

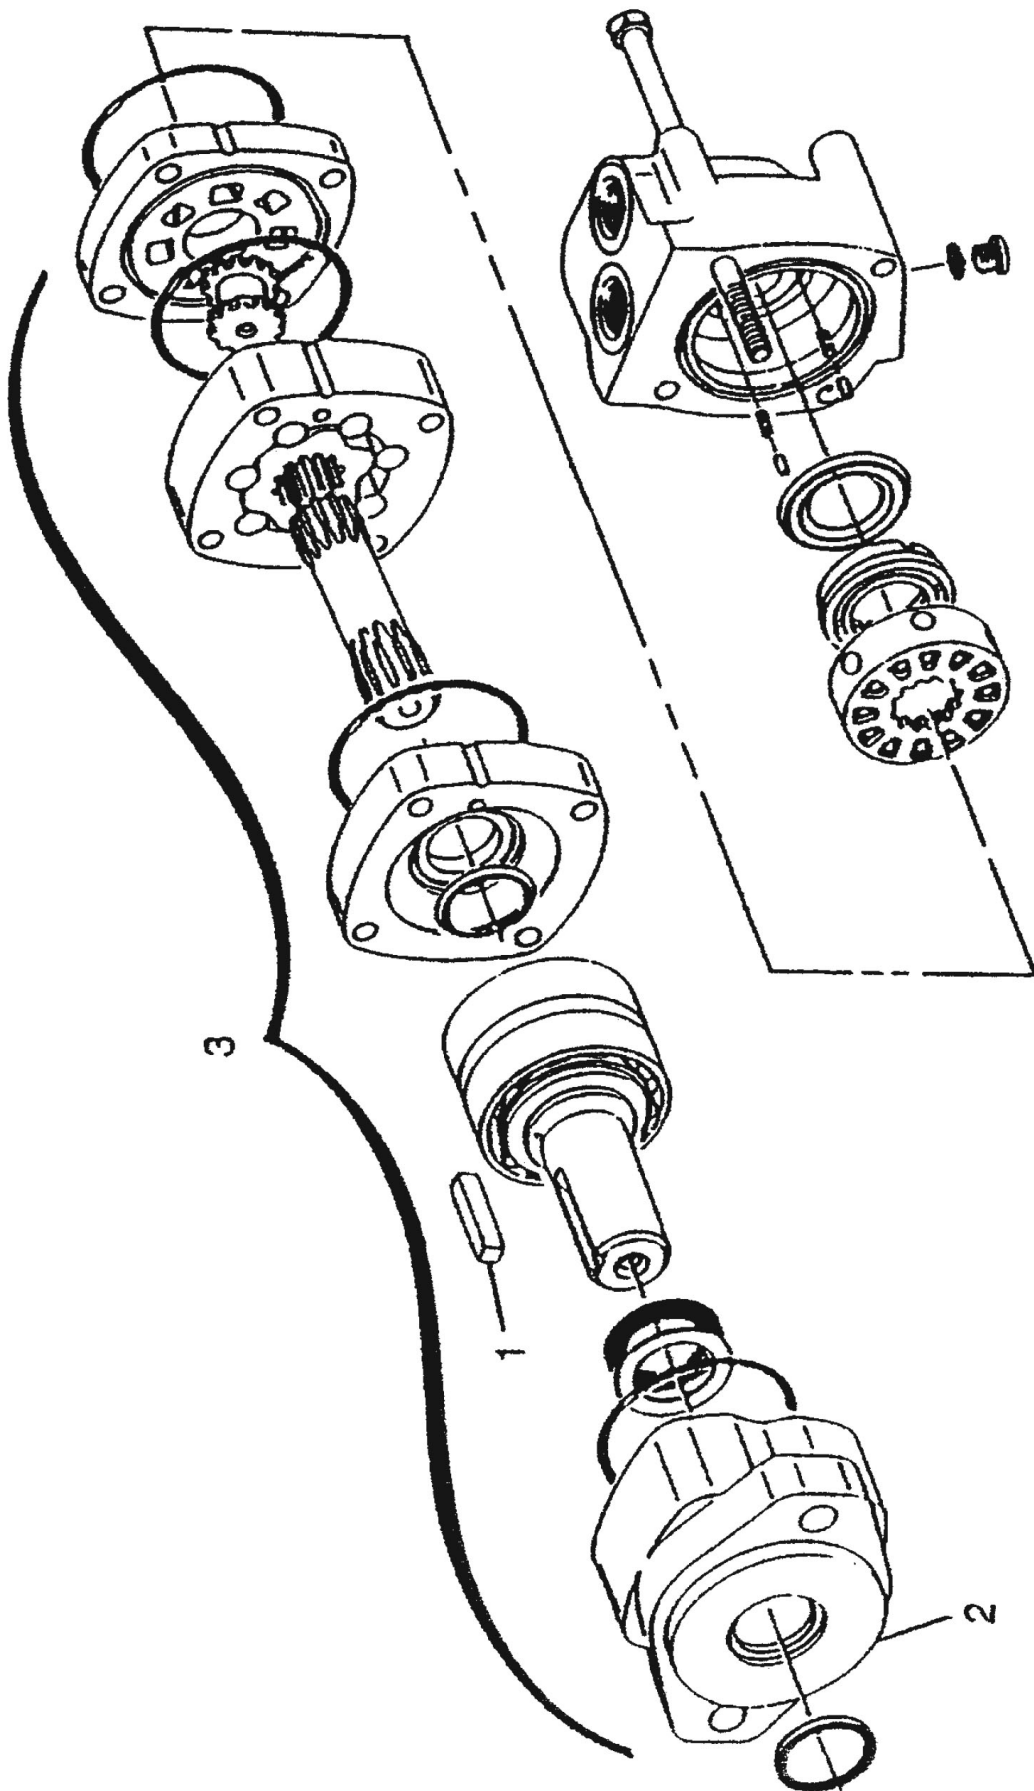


3900014 Orbit Motor Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	6200004	KEY\SQ\5/16X1-1/2		1	EA
2	3900011	MTG FLG(2000 SER)		1	EA
3	3900014	MTR\HYD\9.6\2000\1-1/4SH			EA
NS	7501005	KIT\SEAL\2000ORBIT		1	EA

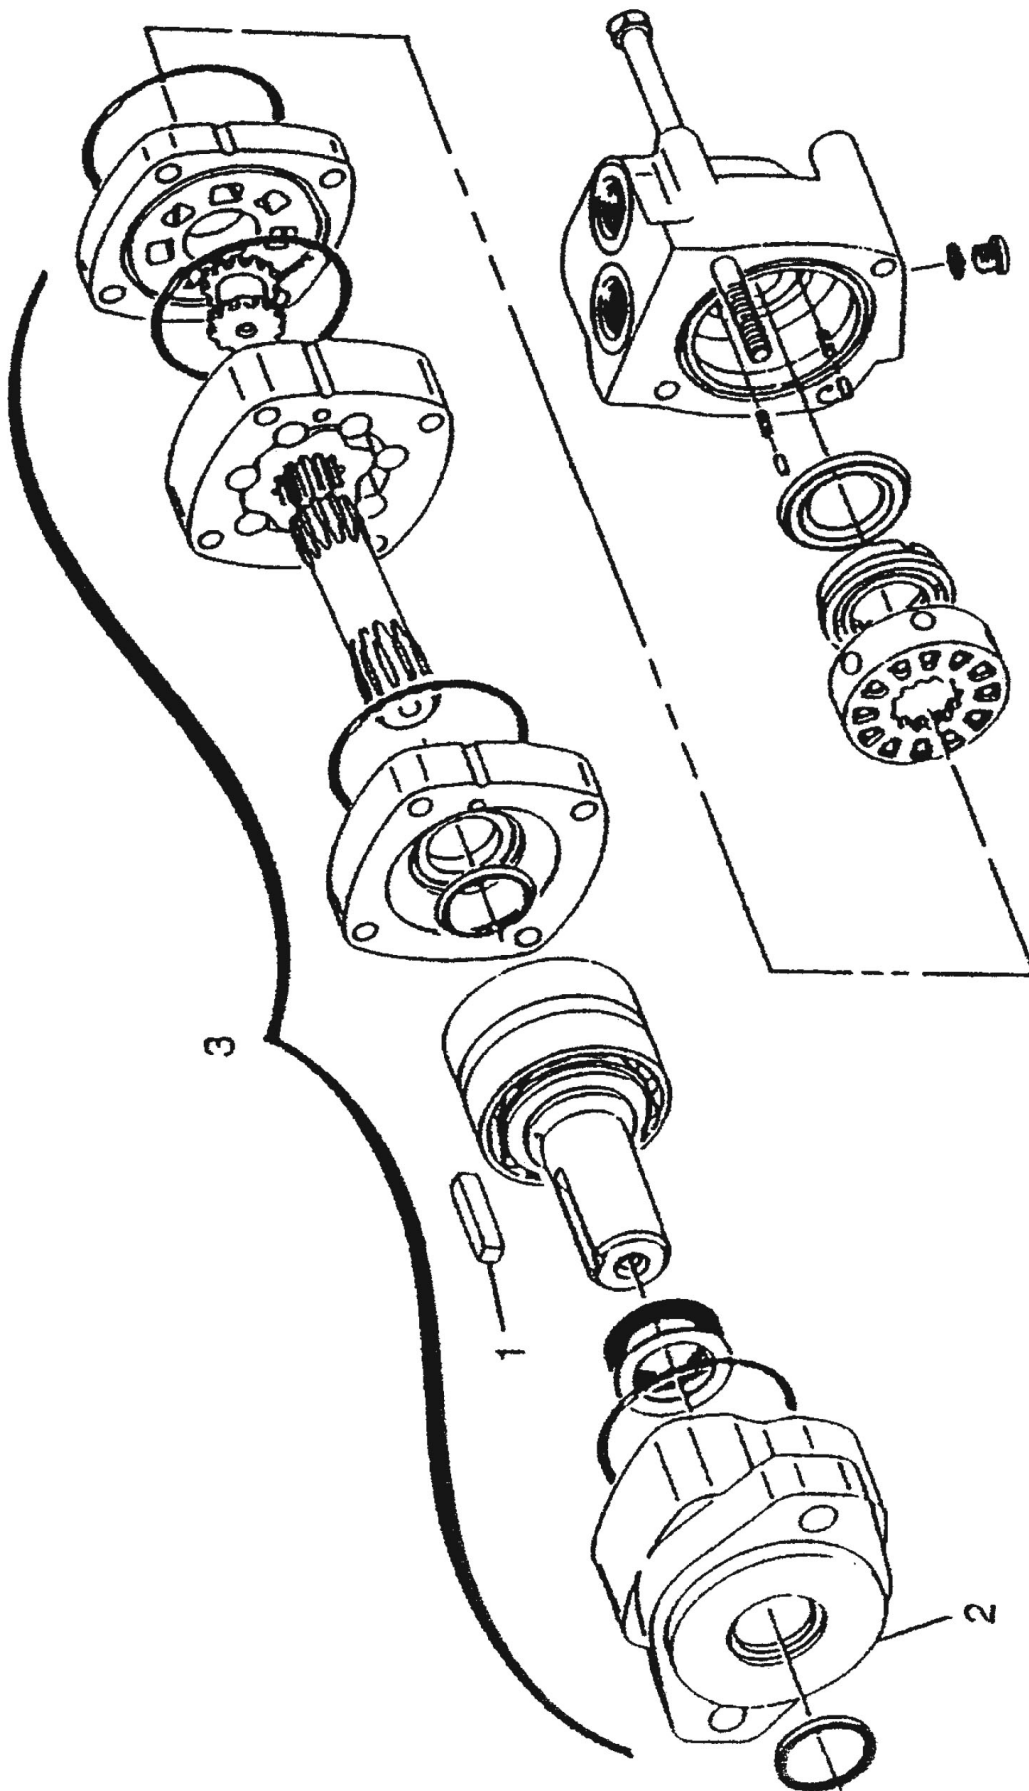


4200121 Orbit Motor

Item	Part No.	Name	Remarks	Qty	Uom
3	4200121	MTR\HYD\40.6\1000\2-1/4\1-5/16FOR			EA
NS	4200123	SEAL\KIT\MTR\119-1030		1	EA.

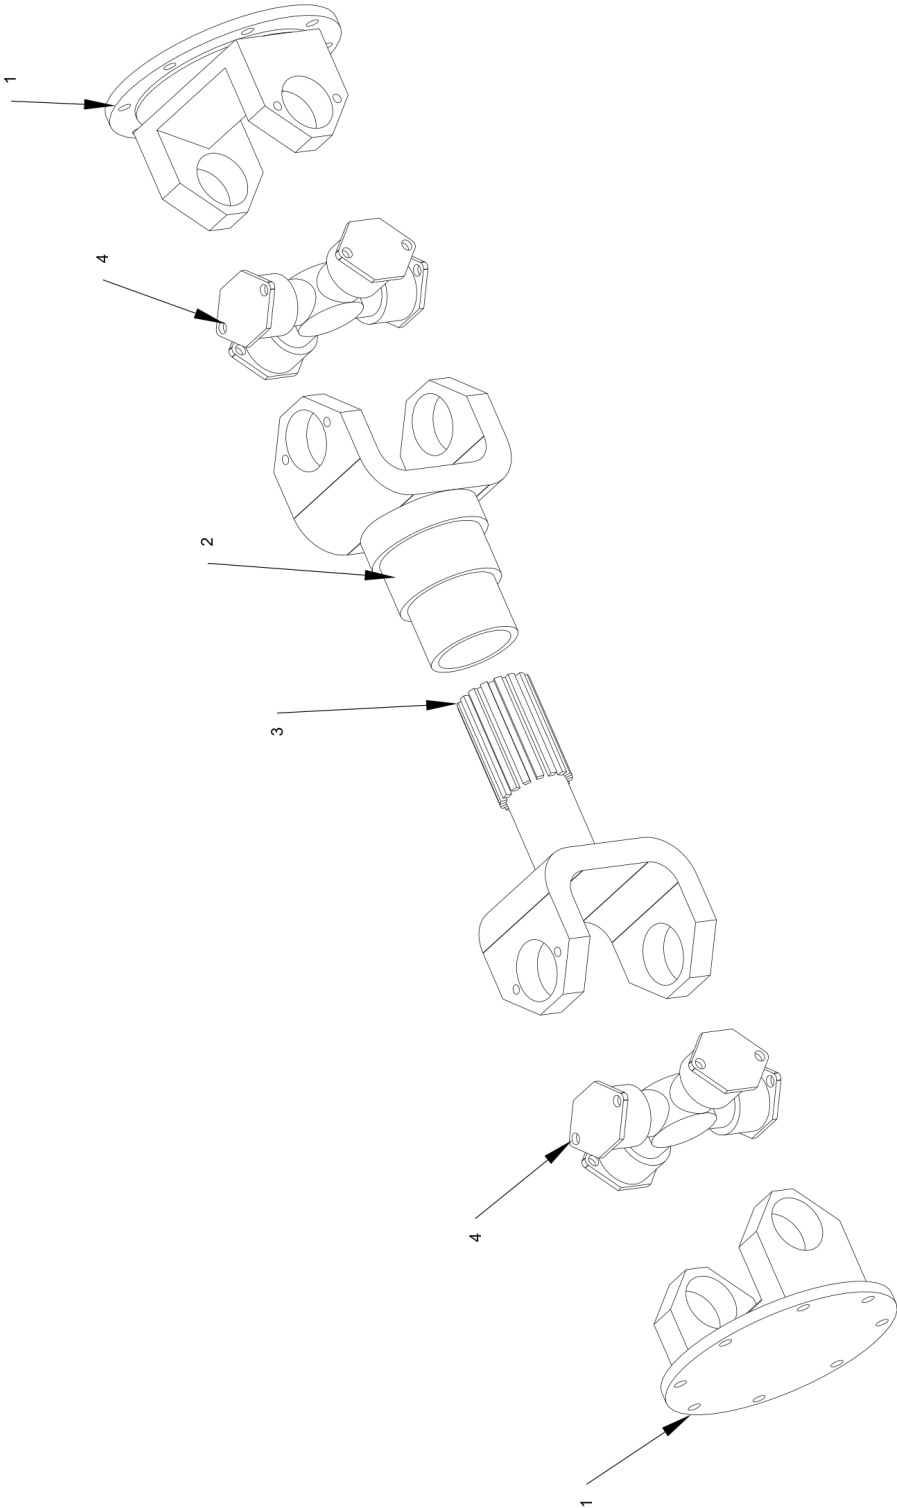


3600833 Drive Line Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	3600857	FLANGE YOKE 1610		2	EA.
2	3600858	SLIP YOKE 1610		1	EA.
3	3600859	YOKE SHAFT 1610		1	EA.
4	3600860	BRG\JRN\KIT\1610		2	EA
CA	3600833	DRLIN\COMP\17.5\1610			EA

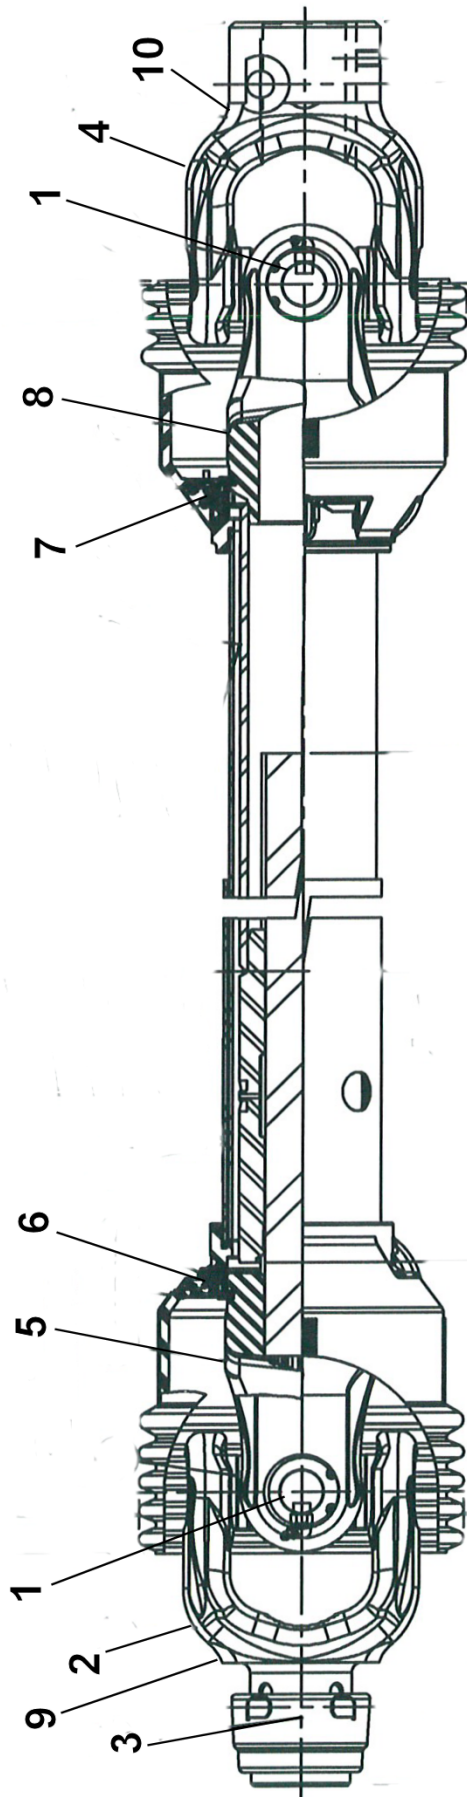


3600831 PTO Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	3600738	CROSS&BRG\77E\WSLR		2	EA
2	3600741	YOKE\77E\1-3/4\LOCK\AUTO		1	EA
3	3600775	LOCK\SAFTY;SLD\KIT\1-3/4\77E		1	EA
4	3600852	JOINT&TUBE\77E\3600831		1	EA.
5	3600853	YOKE&SHAFT\77E\3600831		1	EA.
6	3600854	GUARD\PTO\1-3/4\77E\20SPLN\OUTER		1	EA
7	3600855	GUARD\PTO\1-3/4\77E\20SPLN\INNER		1	EA.
8	3600856	YOKE&TUBE&SLEEVE\77E\3600831		1	EA.
9	3600871	PTO\HALF\TRACTOR\3600831		1	EA
10	3600873	PTO\HALF\MACHINE\3600831 & 3600832		1	EA
CA	3600831	PTO\COMP\77E\20SP\1-3/4			EA

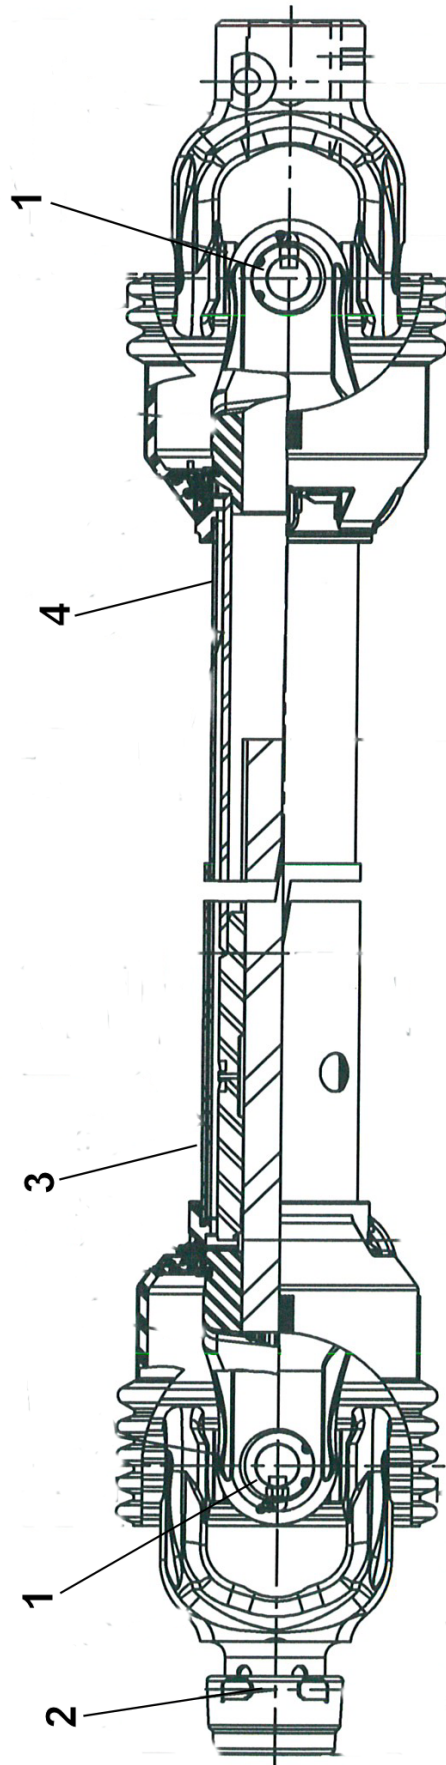


3600832 PTO Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	3600738	CROSS&BRG\77E\WSLR		2	EA
2	3600777	LOCK\SAFTY;SLD\KIT\1-3/8\77E		1	EA
3	3600872	ORDER 3600832		1	EA
4	3600873	PTO\HALF\MACHINE\3600831 & 3600832		1	EA
CA	3600832	PTO\COMP\77E\21SP\1-3/8			EA

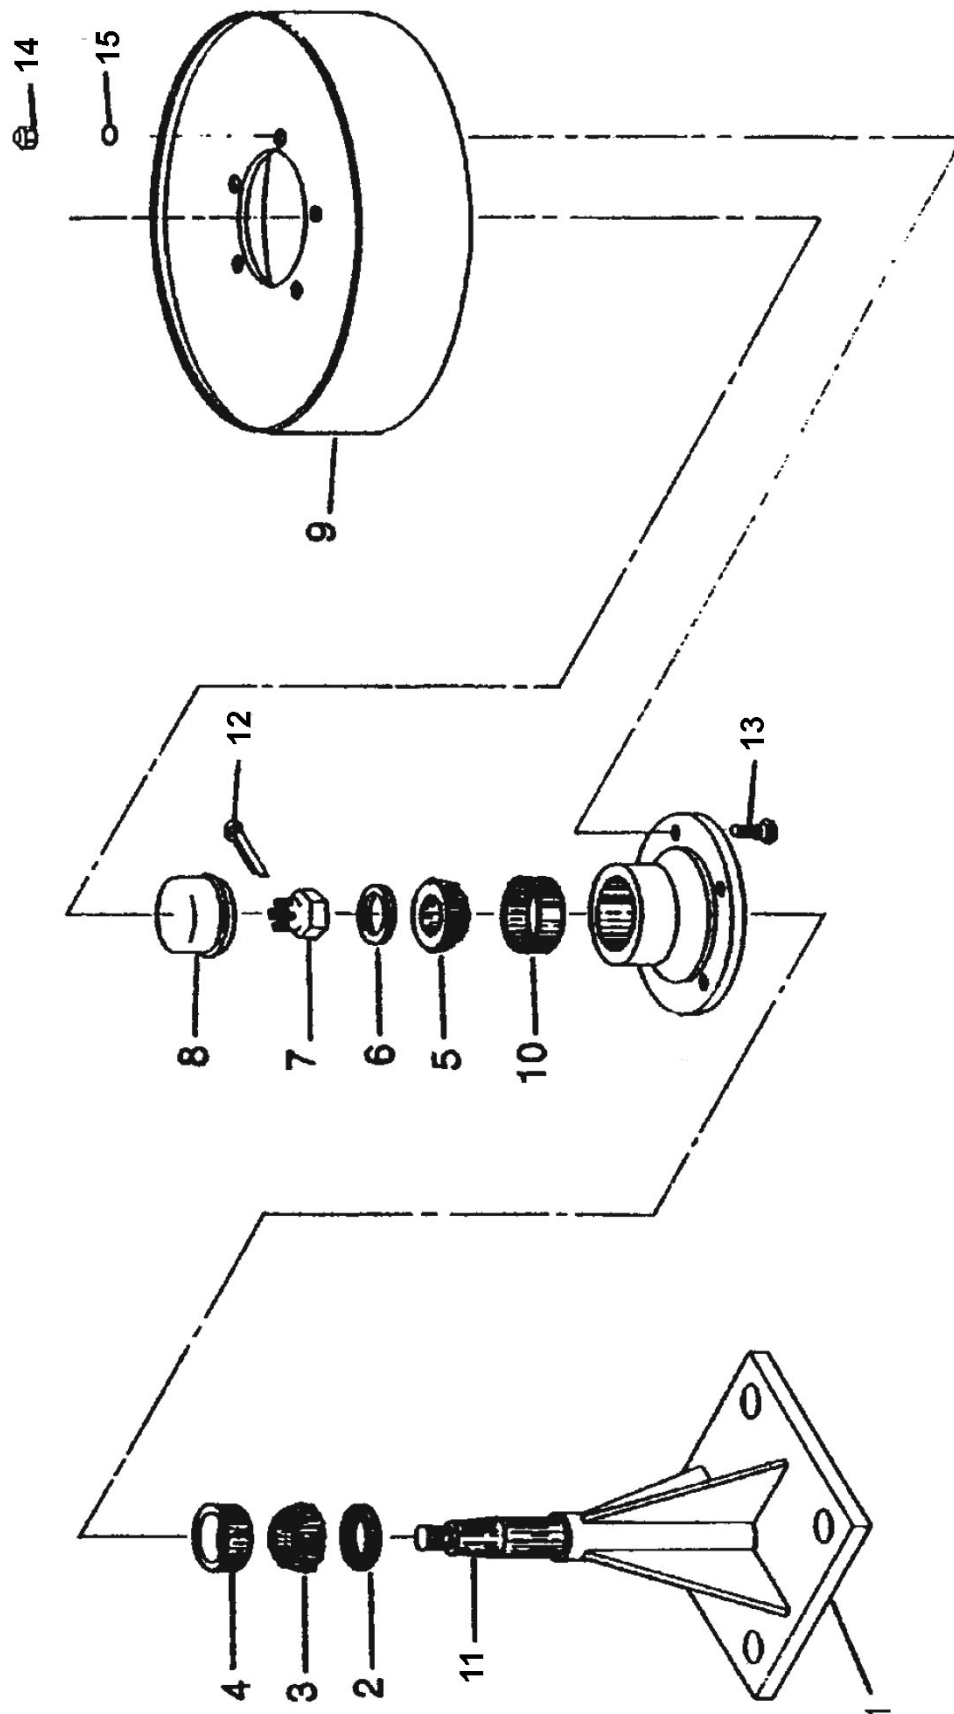


Pressure Roller Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	4501090	BRKT\RLLR\PRESS\10"		1	EA
2	2900055	SEAL\WHEEL HUB(16069)		1	EA
3	2900018	CONE\OUTER\WHL;HUB(67048		1	EA
4	2900004	CUP\INNER\WHEEL HUB		1	EA
5	2900061	OUTER\CONE\WHL;HUB(11949		1	EA
6	5000094	WASH\SPNDL\5/8		1	EA
7	4900112	NUT\SLOT\5/8\NF		1	EA
8	2900064	CAP\WHL;HUB(985)		1	EA
9	4700115	DRUM\RLLR\PRESS		1	EA
10	2900056	OUTER\CUP\WHL;HUB(11910)		1	EA
11	3000025	SPNDL\PRESS\RLLR\10"		1	EA
12	4800172	PIN\COT\1/8X2		1	EA.
13	2900010	BOLT\WHL\WHL;HUB\100 SR		5	EA
14	4900094	NUT\TPR\WHEL\1/2\13/16OD\NF		5	EA
15	5000004	WASH\FLAT\1/2		5	EA.
CA	2900057	HUB\5-BOLT(985)\COMPLETE			EA
NS	4800949	BOLT\FLG\5/8X2\GR8\NC			EA
NS	4900178	NUT\FLG\TPLCK\5/8\GR8\NC			EA

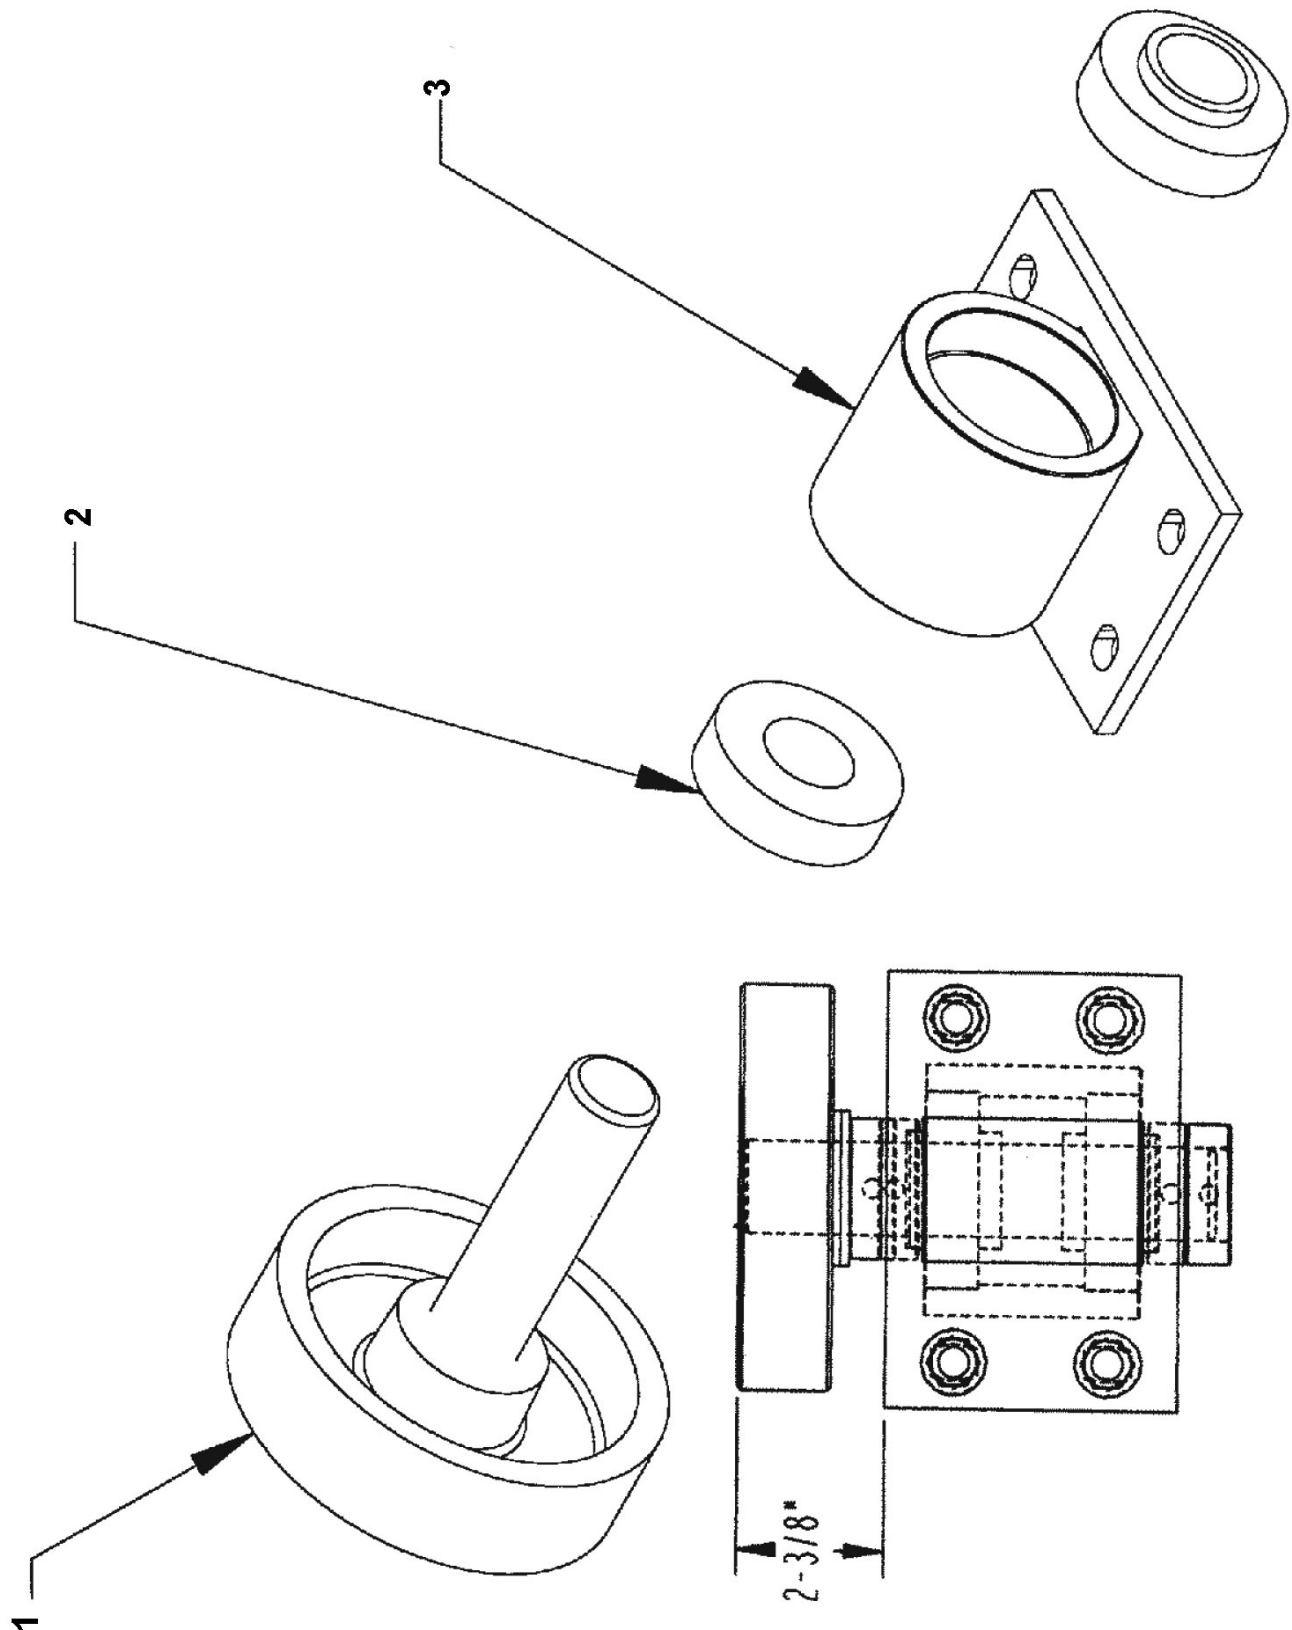


Tub Roller Bearing Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	1200013	RLLR\TUB\1-1/2\W/O FLANGE		1	EA
2	2000584	BRG\CYL\1-1/2\DLOK		2	EA
3	4702007	BRG\PB\RLLR\TUB\ASY		1	EA
CA	4704069	RLLR\TUB\ASSY\STEEL	(Includes #1, #2, #3)		EA
NS	4800930	BOLT\FLG\SERR\1/2X2\NC			EA
NS	4900100	NUT\FLG\TPLCK\1/2\NC			EA
NS	4701863	SHIM\RLLR\TUB\10GA			EA

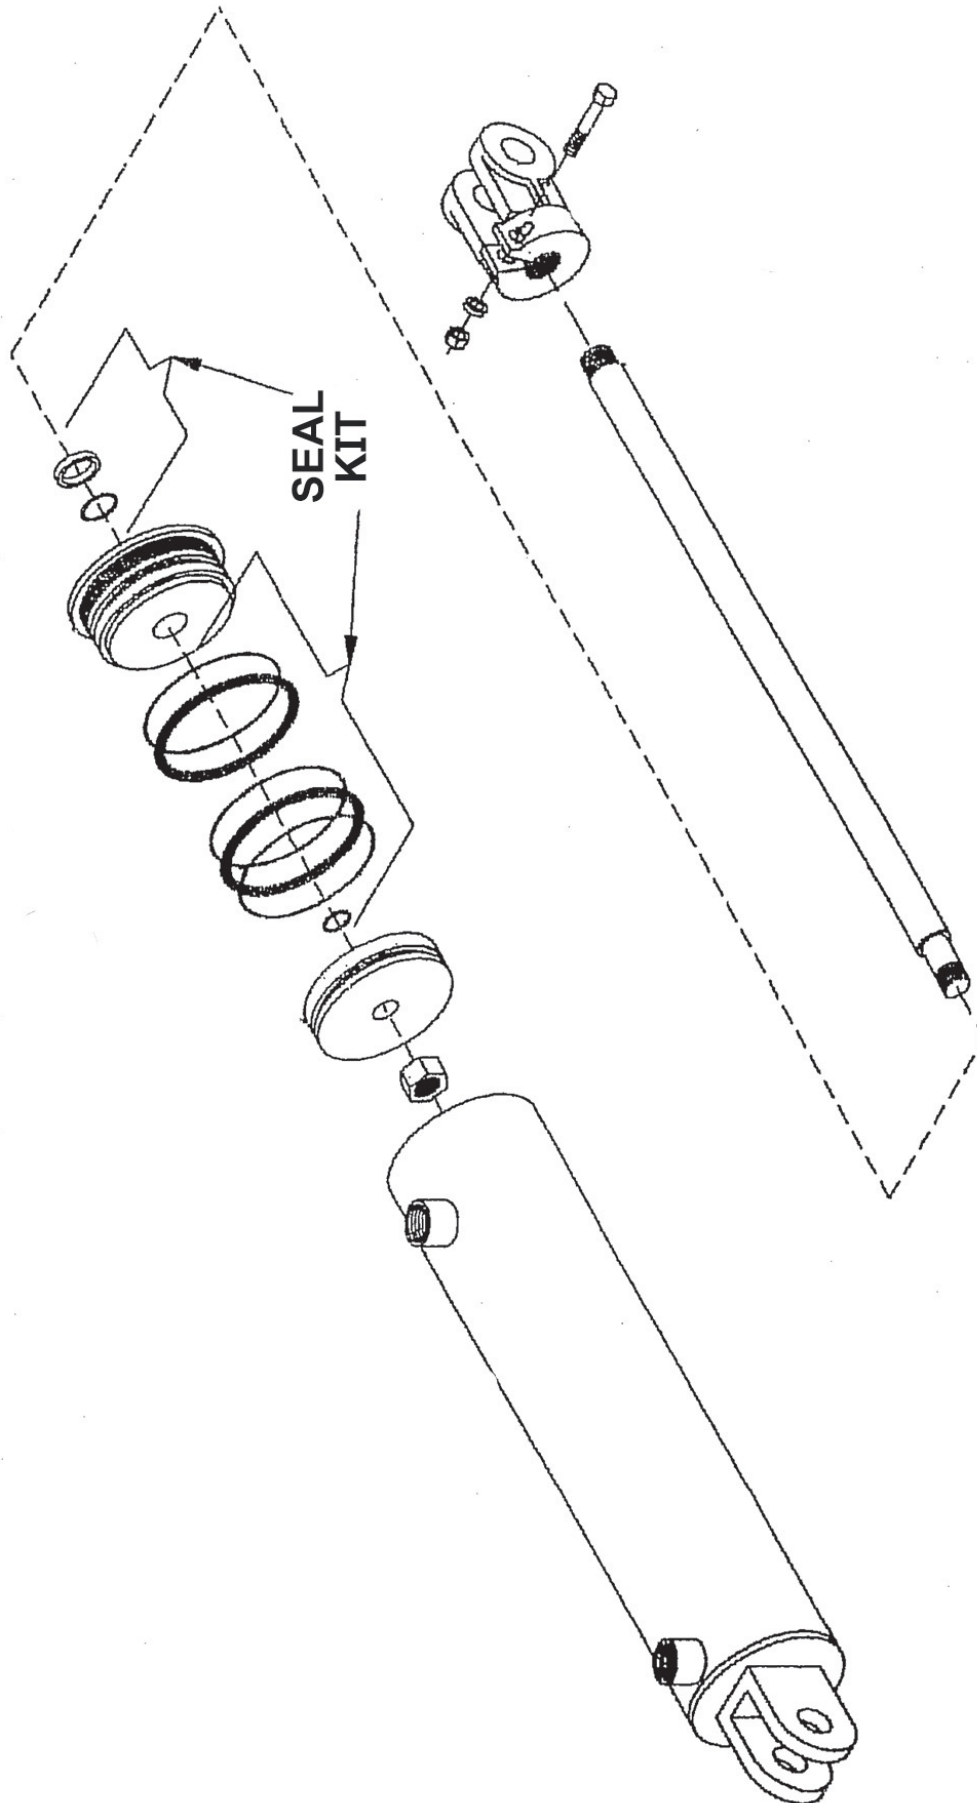


Hydraulic Cylinder and Seal Kits

Item	Part No.	Name	Remarks	Qty	Uom
	4100144	CYL\HYD\4X30\1-3/4 ROD\CLEVIS ENDS\O-RING PORTS			EA
	4100180	KIT\SEAL\CYL\HYD\4X30\1-3/4"ROD		1	EA
	4100352	CYL\HYD\3X36\PARALLEL\CLEV\7/8FOR			EA.
	4100143	CYL\HYD\SEAL;KIT\3X1-1/2		1	EA.
	4100261	CYL\HYD\3X20\1-1/2ROD\PAR#8 O-RING PORT\CTD			EA.
	4100289	KIT\SEAL\CYL\HYD\3X20		1	EA.
	4100328	CYL\HYD\3X20\1-1/2ROD\PAR			EA.
	4100143	CYL\HYD\SEAL;KIT\3X1-1/2		1	EA.

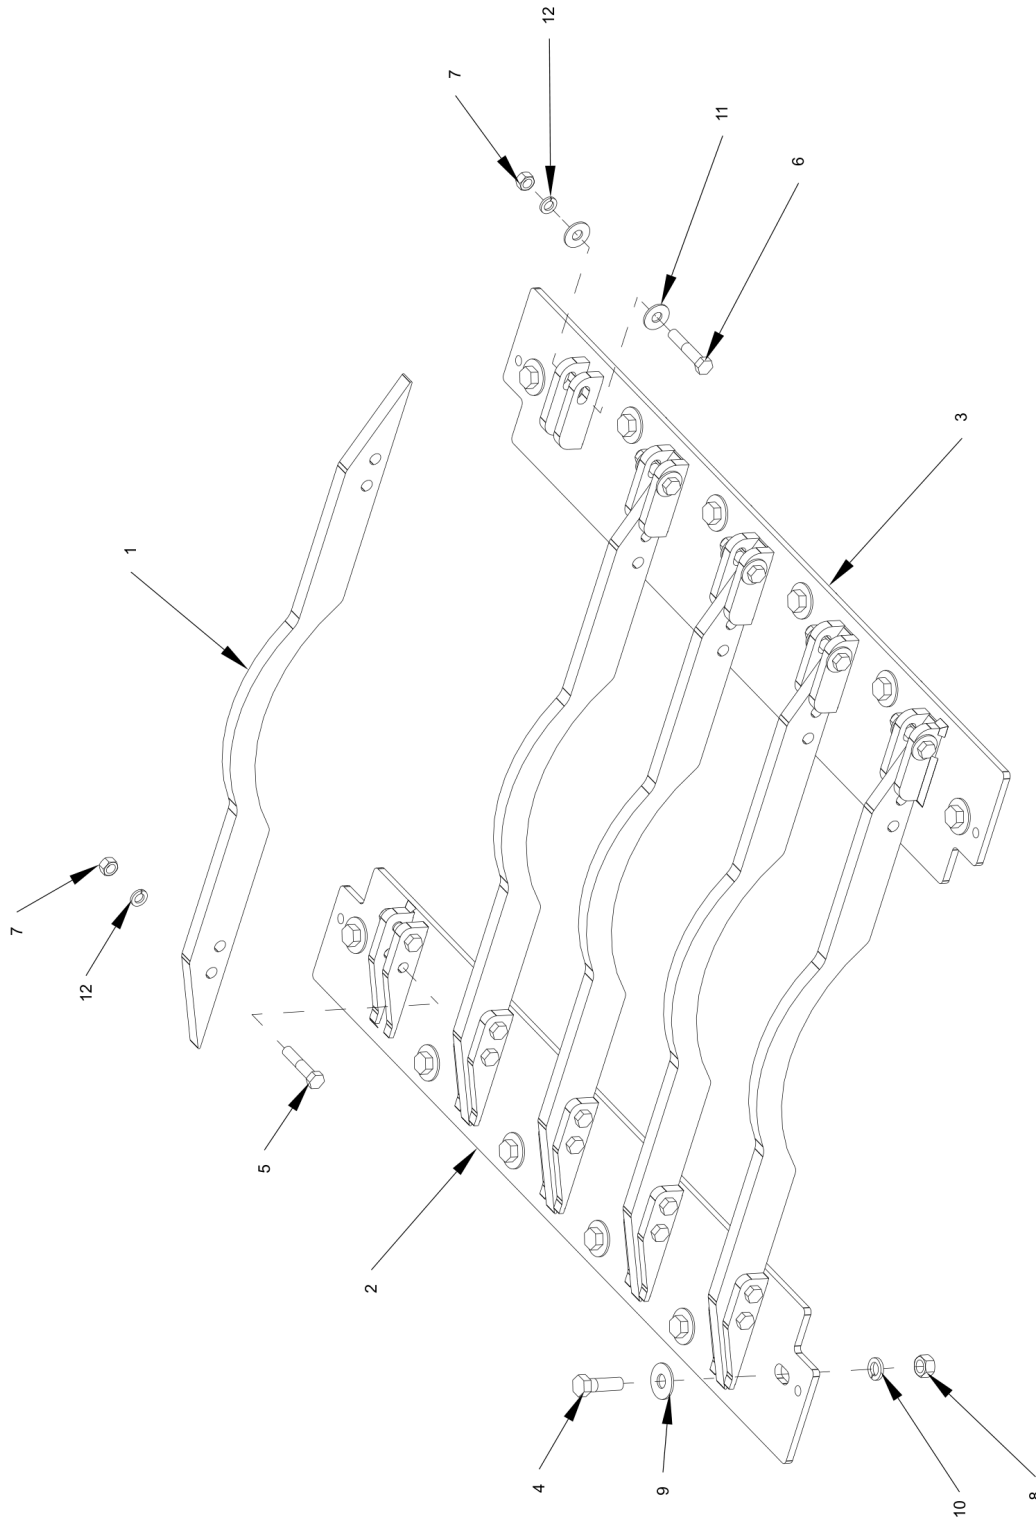


4502535 Mill Grate-5 Bar-2-1/4 (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	4502680	BAR\GRATE\MILL		5	EA
2	4502821	PL\SIDE\GRATE\MILL		1	EA
3	4502822	PL\SIDE\GRATE\MILL		1	EA
4	4800010	BOLT\HEX\5/8X2		12	EA.
5	4800070	BOLT\HEX\1/2X2-1/2		10	EA.
6	4800351	BOLT\HEX\1/2X2-3/4		5	EA.
7	4900001	NUT\HEX\1/2\NC		15	EA.
8	4900005	NUT\HEX\5/8\NC		12	EA.
9	5000002	WASH\FLAT\5/8		12	EA.
10	5000003	WASH\LOCK\5/8		12	EA.
11	5000004	WASH\FLAT\1/2		10	EA.
12	5000006	WASH\LOCK\1/2		15	EA.
CA	4502535	GRATE\MILL\BOLTED\ASSY\H1030			EA

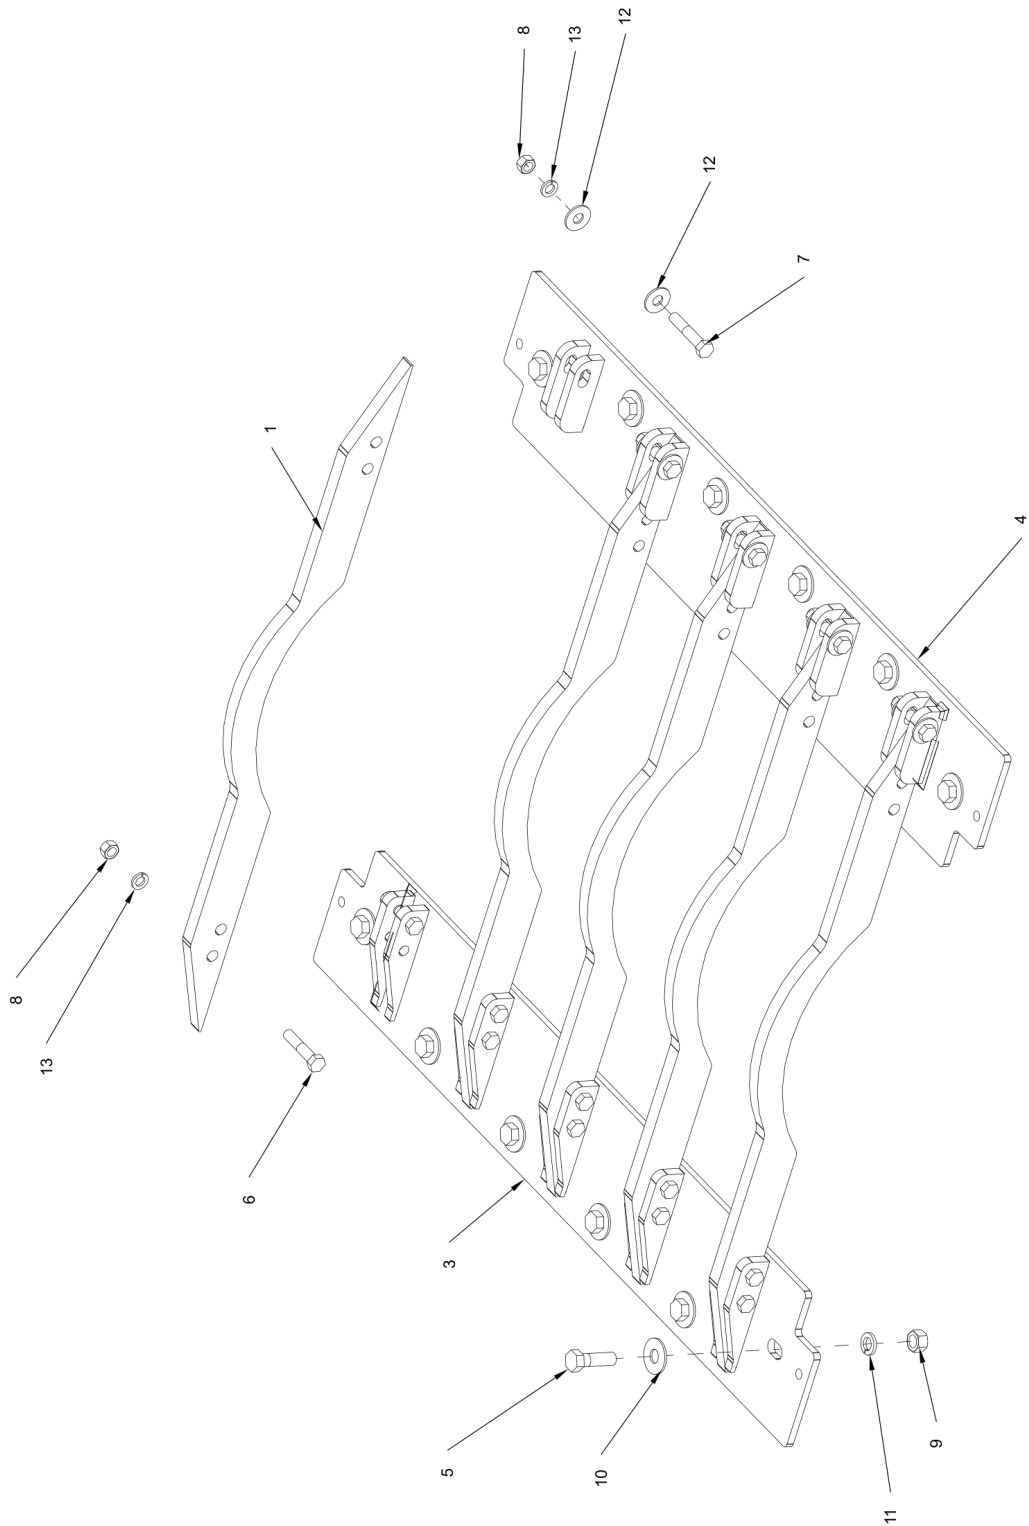


4502689 Mill Grate-5 Bar -2-1/4 (for SN 1020012130 to 1020016030)

Item	Part No.	Name	Remarks	Qty	Uom
1	4502680	BAR\GRATE\MILL		5	EA
2	4502689	GRATE\MILL\BOLTED\ASSY\H1030		1	EA.
3	4502690	PL\SIDE\GRATE\MILL		1	EA.
4	4502691	PL\SIDE\GRATE\MILL		1	EA.
5	4800010	BOLT\HEX\5/8X2		12	EA.
6	4800070	BOLT\HEX\1/2X2-1/2		10	EA.
7	4800351	BOLT\HEX\1/2X2-3/4		5	EA.
8	4900001	NUT\HEX\1/2\NC		15	EA.
9	4900005	NUT\HEX\5/8\NC		12	EA.
10	5000002	WASH\FLAT\5/8		12	EA.
11	5000003	WASH\LOCK\5/8		12	EA.
12	5000004	WASH\FLAT\1/2		10	EA.
13	5000006	WASH\LOCK\1/2		15	EA.
CA	4502689	GRATE\MILL\BOLTED\ASSY\H1030			EA.

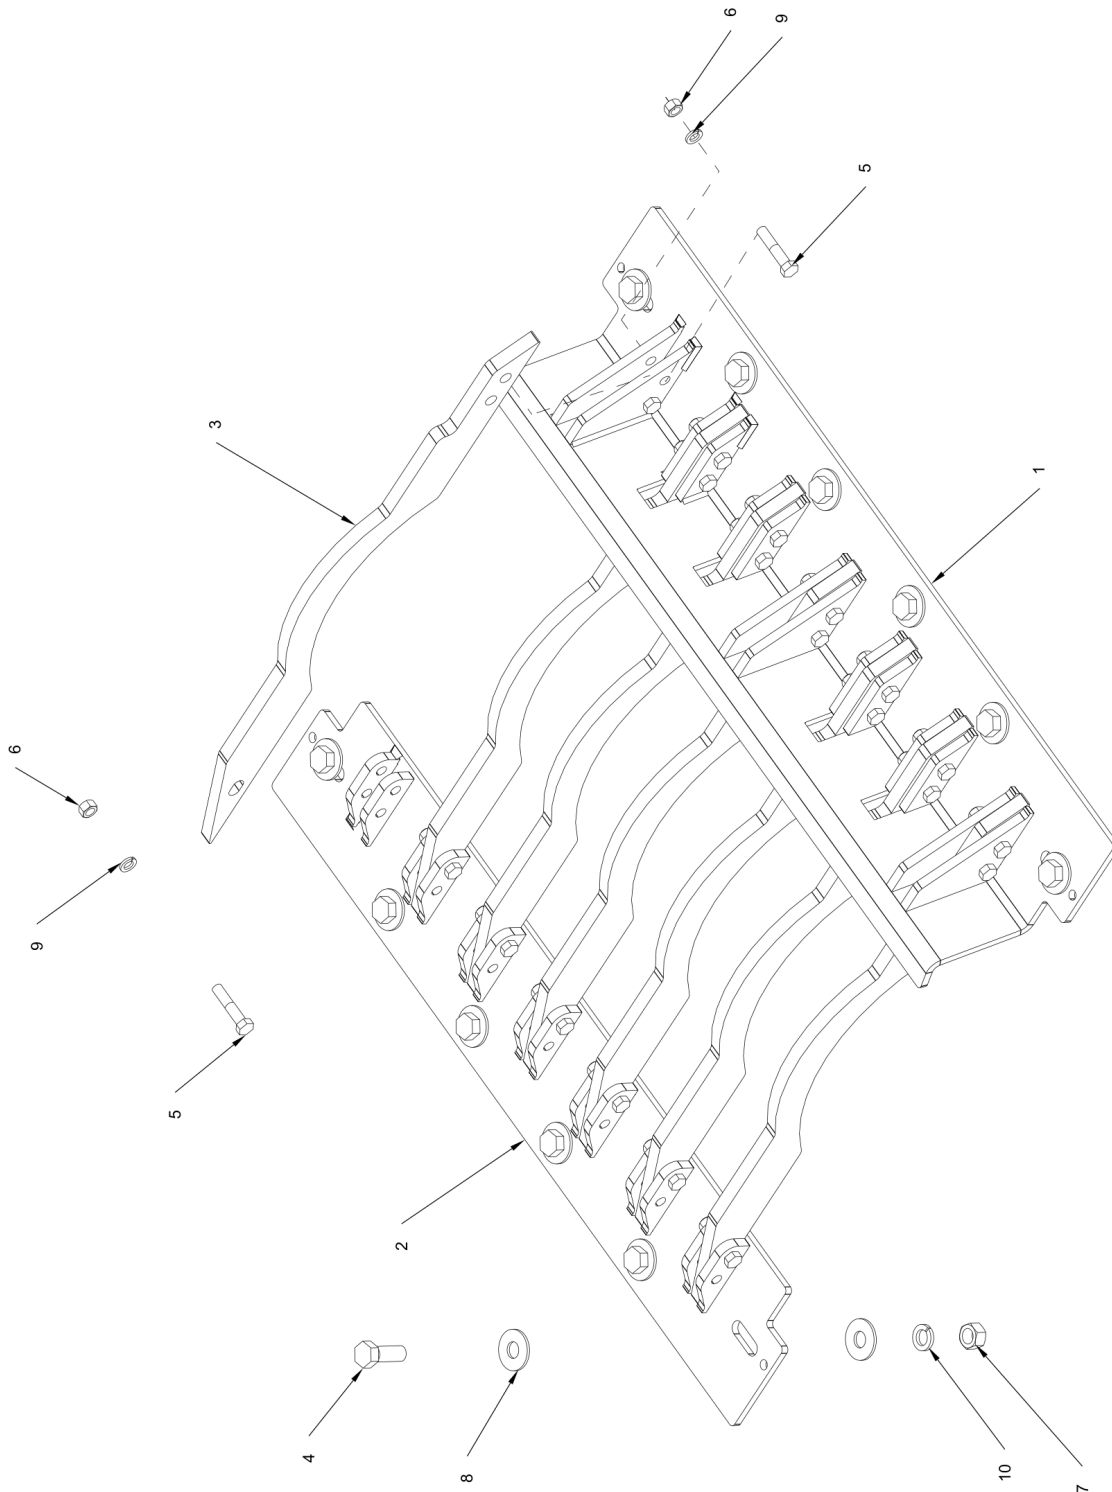


H-1030 Mill Grate/Geyser Plate - 7-Bar-2-1/2 (for SN 1021016130 and Up)

Item	Part No.	Name	Remarks	Qty	Uom
1	4502963	PL\GEYSER\7 BAR		1	EA
2	4502965	PL\SIDE\GRATE\MILL\7-BAR		1	EA.
3	4503013	BAR\GRATE\MILL\2-1/2		7	EA
4	4800033	BOLT\HEX\3/4X2		12	EA.
5	4800070	BOLT\HEX\1/2X2-1/2		21	EA.
6	4900001	NUT\HEX\1/2\NC		21	EA.
7	4900004	NUT\HEX\3/4\NC		12	EA.
8	5000005	WASH\FLAT\3/4		24	EA.
9	5000006	WASH\LOCK\1/2		21	EA.
10	5000012	WASH\LOCK\3/4		12	EA.
CA	4502549	PL\GYSRW\MILL\7-BAR\2-1/2"ASSY\H1030			EA.

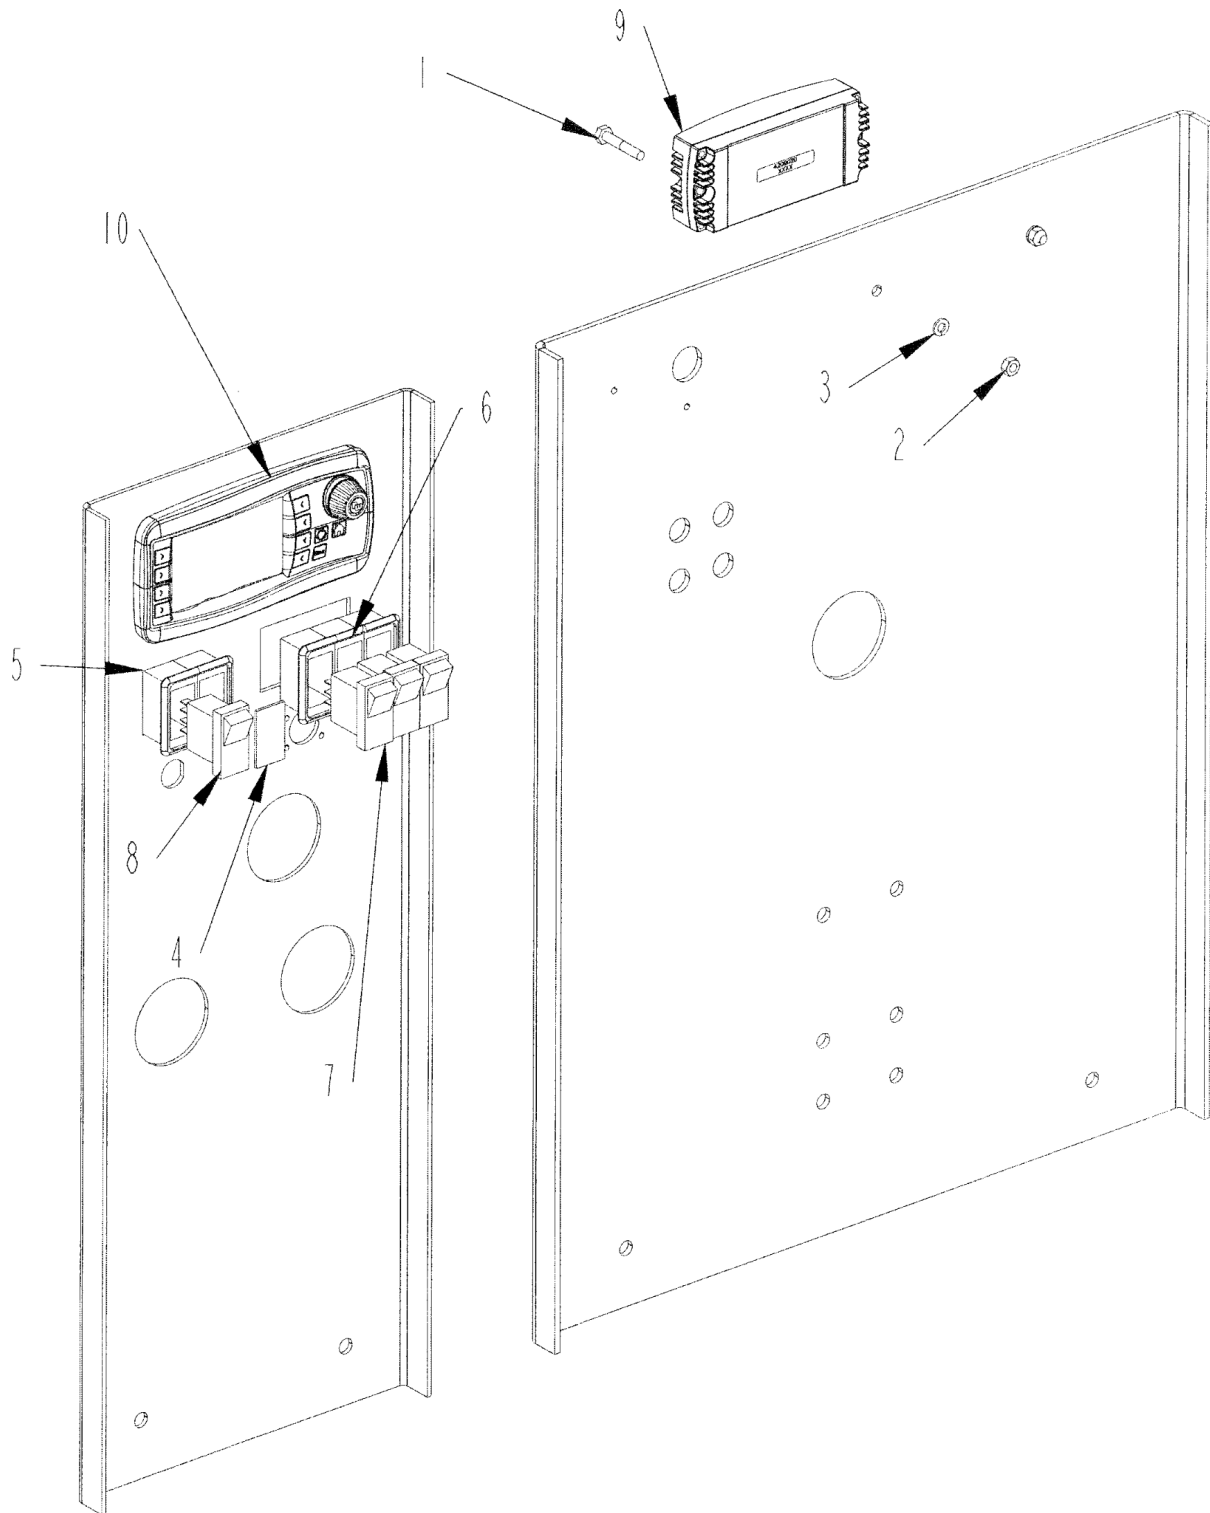


H-1030 Electrical Parts (for SN Up to 1018012030)

Item	Part No.	Name	Remarks	Qty	Uom
1	4800505	BOLT\HEX\1/4X1-1/2\NC		2	EA
2	4900009	NUT\HEX\1/4\NC		2	EA.
3	5000024	WASH\LOCK\1/4		2	EA.
4	5700329	SWITCH\RCKR\PLUG		1	EA
5	5700333	SWITCH\RCKR\MNT\PNL\MTPL		4	EA.
6	5700448	SWITCH\RCKR\MNT\PNL\MDDL		1	EA
7	5700542	SWITCH\RCKR\DPDT\24VUNLIT\15A\MOMNTR YW\RAISED BRCKT		3	EA.
8	5700547	SWITCH\RCKR\DPST\12V\2LIT\15A\LATCHW/R ASED BRCKT		1	EA
9	5701071	CNTRL\ECU-710		1	EA
10	5701072	DSPLY\WACH\OPUSA3SL1CANB00V		1	EA
NS	4300089	SNSR\PROXIM12X60		1	EA
NS	5701073	KIT\MNT\DASH\WACHENDORF		1	EA

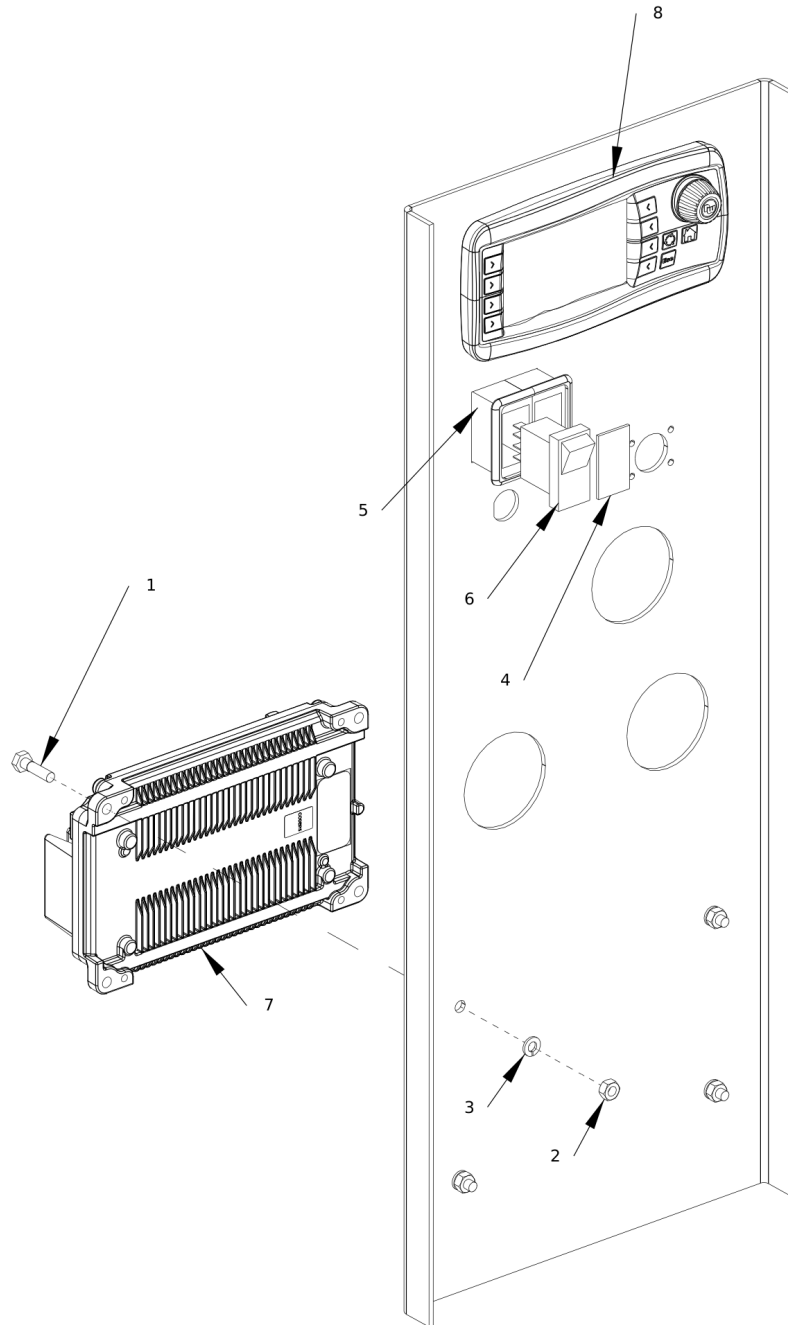

H-1030 Electrical Parts (for SN 1020012130 and Up)


Item	Part No.	Name	Remarks	Qty	Uom
1	4800277	BOLT\HEX\1/4X1		4	EA.
2	4900009	NUT\HEX\1/4\NC		4	EA.
3	5000024	WASH\LOCK\1/4		4	EA.
4	5700329	SWITCH\RCKR\PLUG		1	EA
5	5700333	SWITCH\RCKR\MNT\PNL\MTPL		2	EA.
6	5700547	SWITCH\RCKR\DPST\12V\2LIT\15A\LATCH\W/R ASED BRCKT		1	EA
7	5701189	CNTRL\HFX32		1	EA.
8	5701234	DSPLY\WACH\OPUS\A3X		1	EA.
NS	4300089	SNSR\PROX\M12X60		1	EA
NS	4502789	SHIM\CNTRLLR		1	EA
NS	4801439	BOLT\HEX\M5X12\0.8P		4	EA.
NS	5701073	KIT\MNT\DASH\WACHENDORF		1	EA

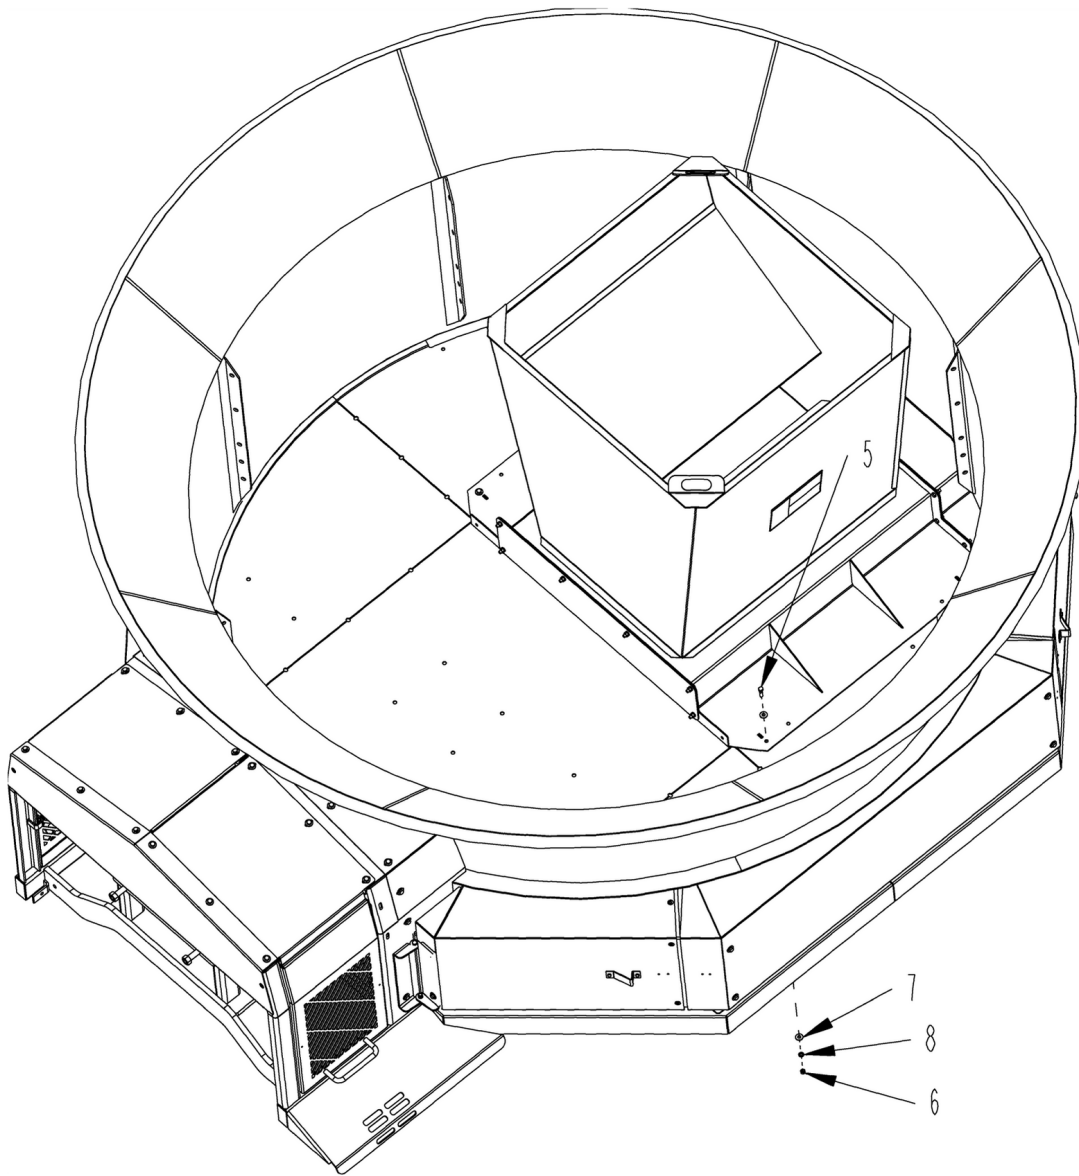

Grain Hopper Option Installation:

1. Orient tub so that two interior tub angles are centered in front of cylinder box.
2. Bolt front (Item 2) and rear (Item 3) covers to grain hopper with hardware.
Check to see that hopper baffle orientation is correct.
3. Place rounded end of hopper tight against the tub seal ring.
4. Check to see the hopper is centered side to side over rotor.
5. Drill four 7/16" holes through tub floor using hopper as guide.
6. Secure hopper to the floor with provided 3/8" hardware.

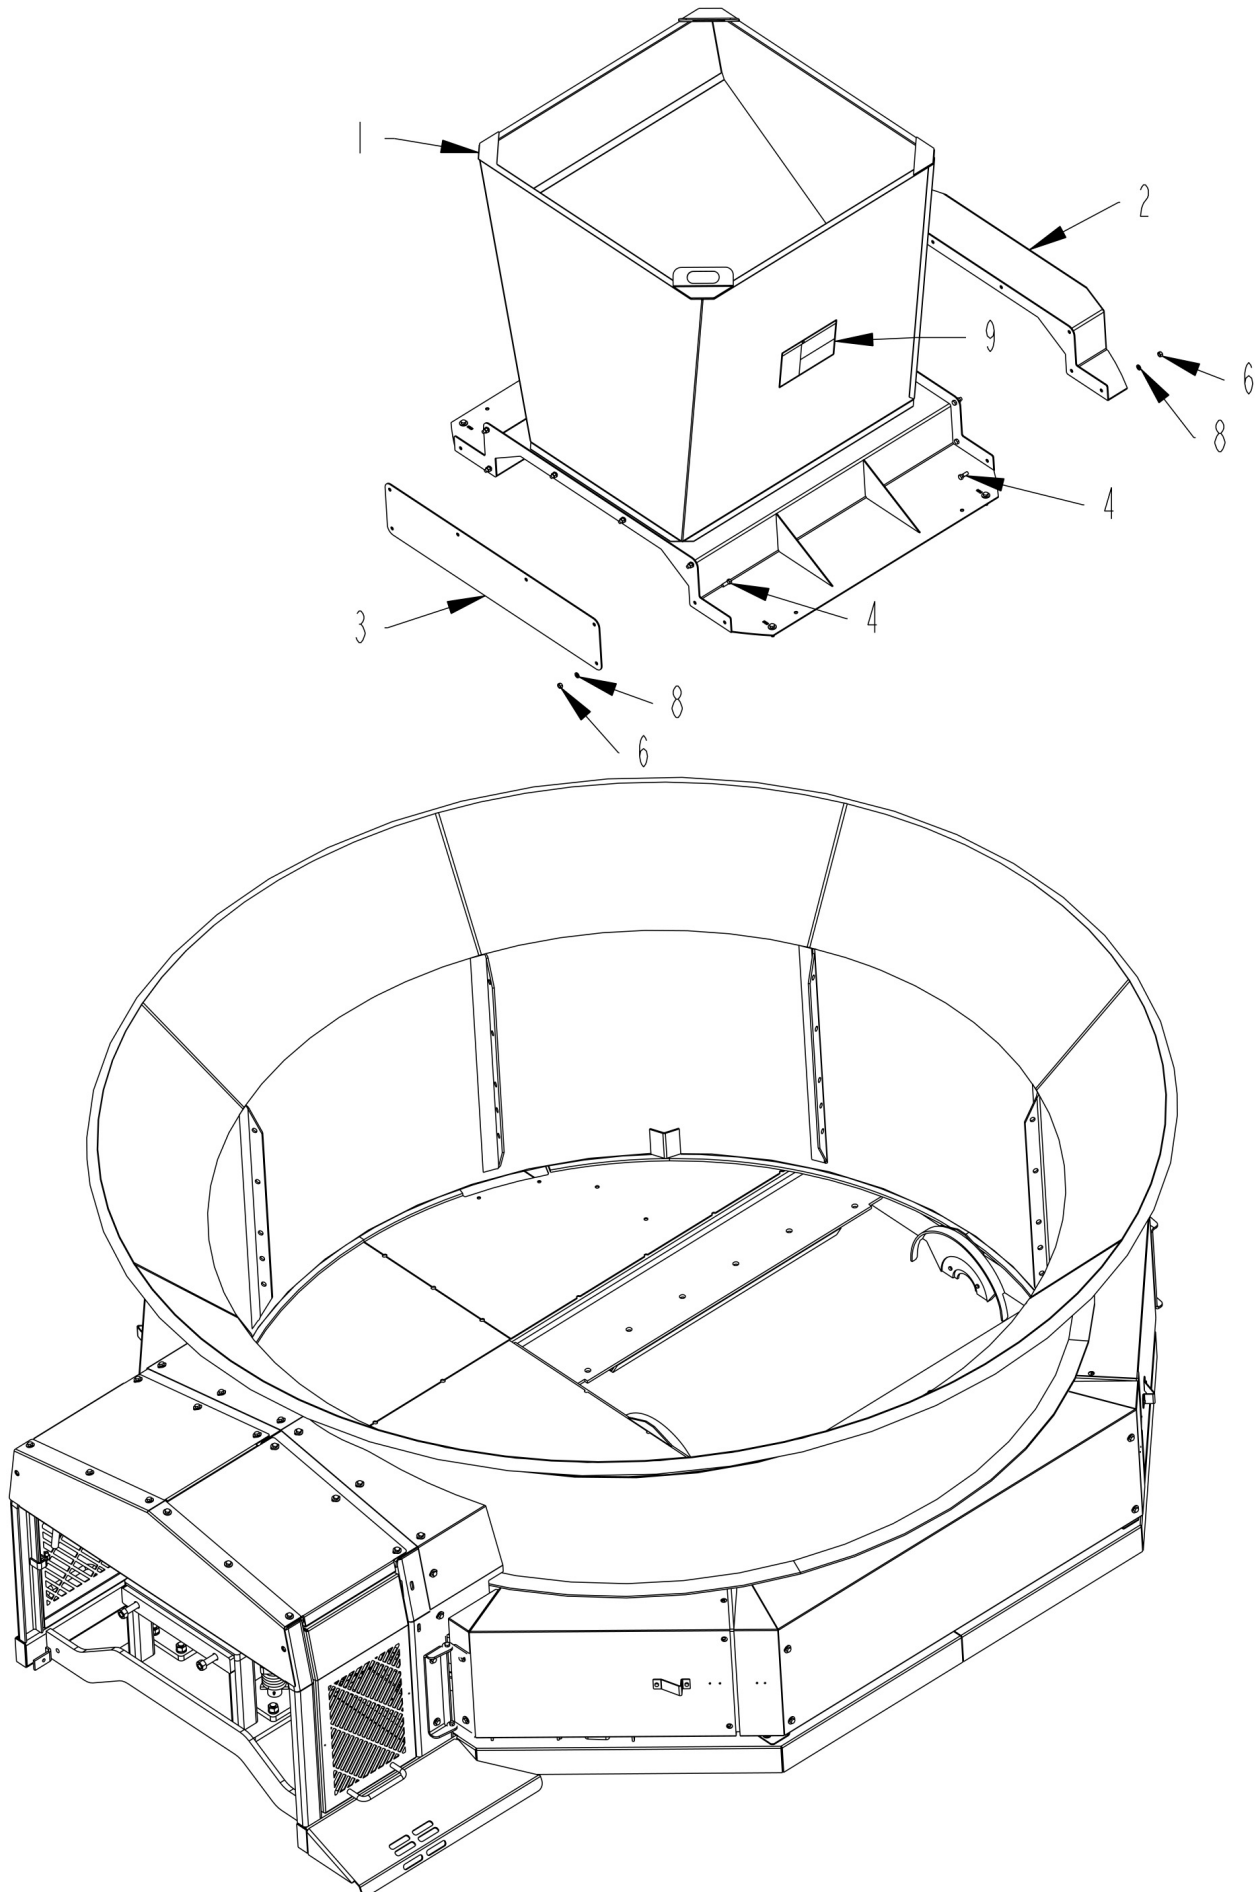
IMPORTANT! DO NOT ROTATE TUB WITH HOPPER INSTALLED




This page intentionally left blank

Optional Grain Hopper Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	4501335	HPPR\GRAIN		1	EA
2	4501339	CVR\RTR\HPPR\GRAIN		1	EA
3	4501341	CVR\END\HPPR\GRAIN		1	EA
4	4800003	BOLT\HEX\3/8X1		14	EA.
5	4800034	BOLT\HEX\3/8X1-1/2		4	EA.
6	4900002	NUT\HEX\3/8\NC		18	EA.
7	5000001	WASH\FLAT\3/8		8	EA.
8	5000019	WASH\LOCK\3/8		18	EA.
9	6500452	DECAL\INFO\GRAIN;HPPR		2	EA
CA	4501349	HPPR\GRAIN\ASSY\COMPLETE			EA

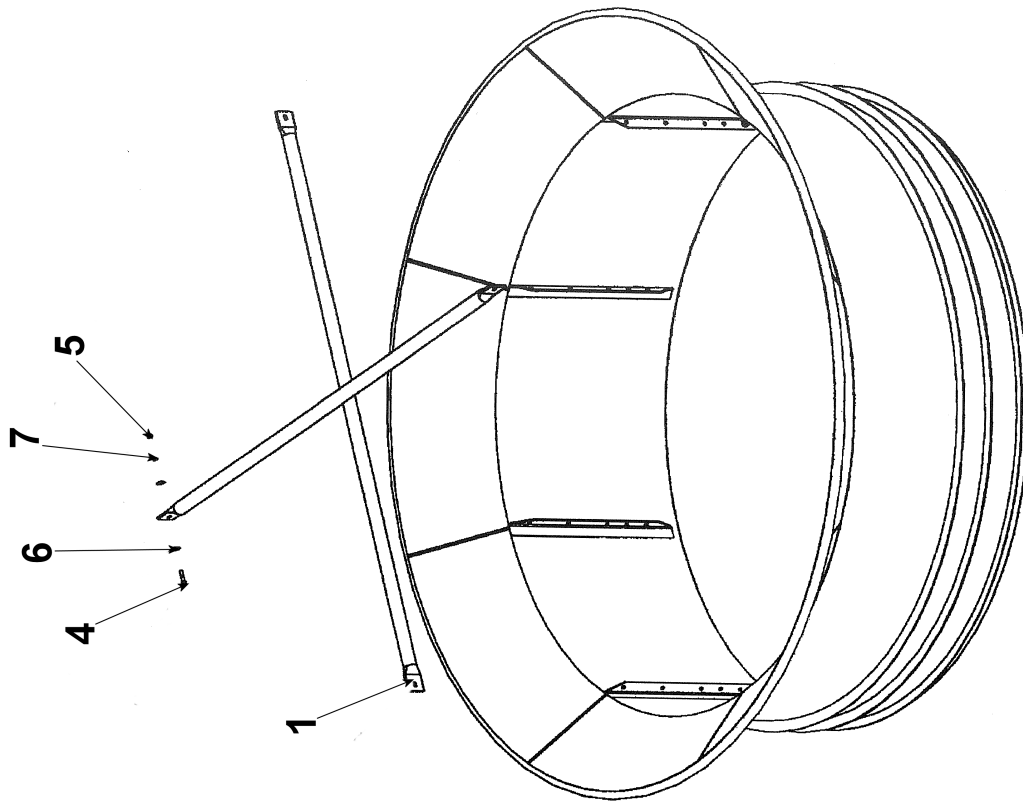


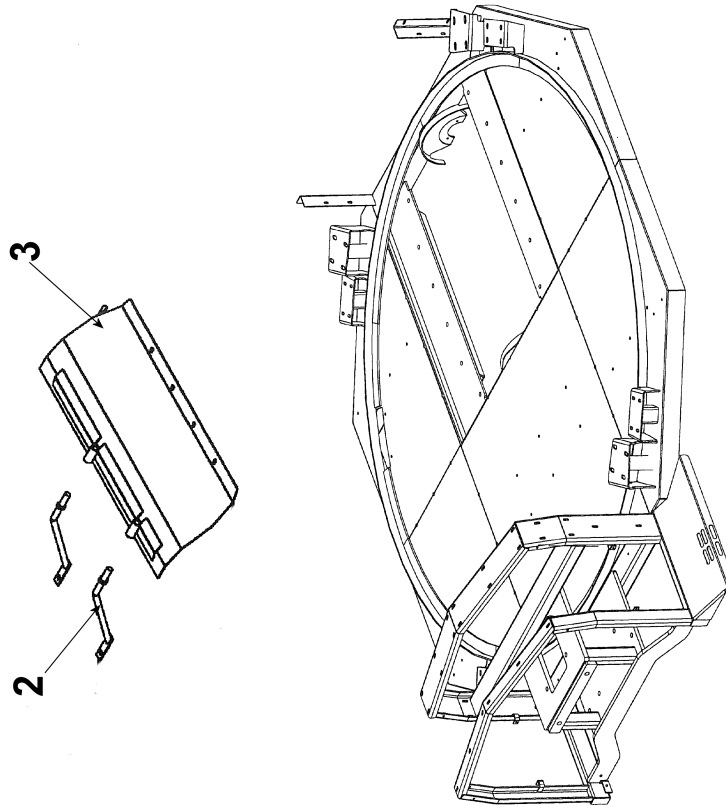The Ear Corn Attachment is designed specifically for grinding ear corn. It should not be used when grinding hay, and other bulk materials or small grains. This attachment fits directly over the rotor and bolts to the tub platform. Agitator bars inside the tub move ear corn to the rotor.




Optional Ear Corn Kit

Item	Part No.	Name	Remarks	Qty	Uom
1	4500122	PIPE\CROSS\1-1/2X95		2	EA
2	4500751	BRKT\COVER\ROTOR\EARCORN		2	EA
3	4502959	COV\TR\EARCORN\H-1030		1	EA.
4	4800114	BOLT\HEX\1/2X2		4	EA.
5	4900001	NUT\HEX\1/2\NC		4	EA.
6	5000004	WASH\FLAT\1/2		8	EA.
7	5000006	WASH\LOCK\1/2		4	EA.
CA	4502848	AGTTR\CORN_EAR\KIT\H1030			EA.

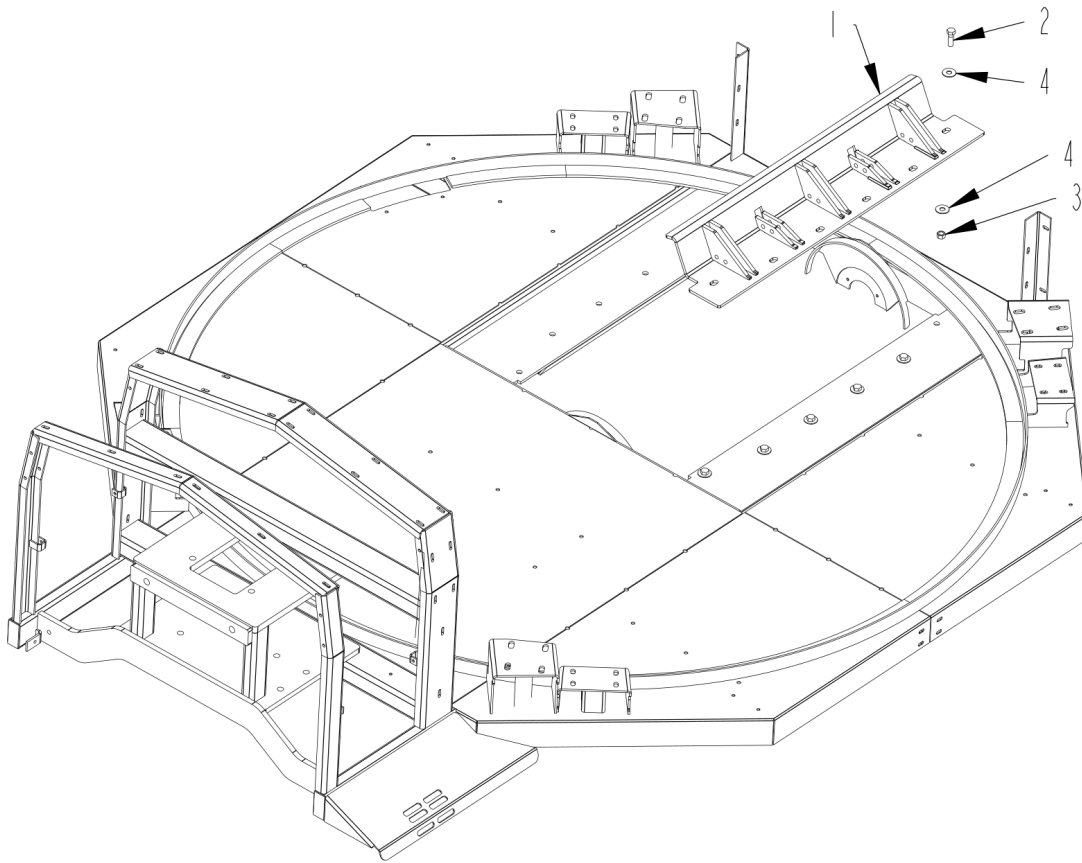







Optional Geyser Plate for 5-Bar 2-1/4

Item	Part No.	Name	Remarks	Qty	Uom
1	4502281	PL\GEYSER	(FOR SN UP TO 1018012030)	1	EA
1A	4502692	PL\GEYSER	(FOR SN 1019012130 to 1020016130)	1	EA.
2	4800010	BOLT\HEX\5/8X2		6	EA.
3	4900012	NUT\TPLCK\5/8\NC		6	EA.
4	5000002	WASH\FLAT\5/8		12	EA.

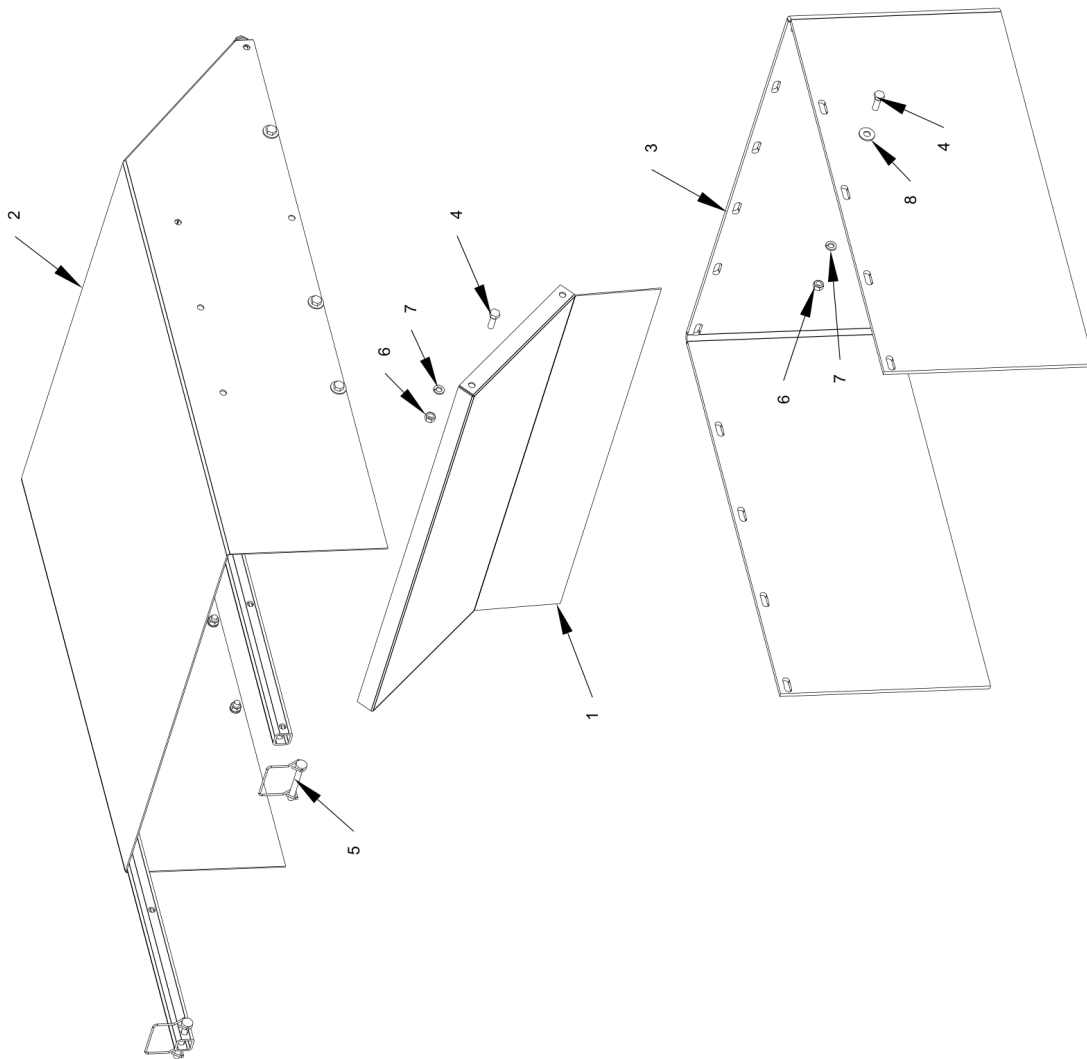

Optional Material Guide Assembly

Item	Part No.	Name	Remarks	Qty	Uom
1	4501616	DEFL\GUIDE\MATL\CNVY\UPPR		1	EA
2	4501617	GUIDE\MATL\CNVY\UPPR\24		1	EA
3	4501618	BELT\GUIDE\MATL\CNVYR\UPPR		1	EA
4	4800013	BOLT\HEX\5/16X1		16	EA.
5	4800559	PIN\LYNCH\5/16X2-1/2\W\SQ;WIRE;KEEPER		2	EA.
6	4900003	NUT\HEX\5/16\NC		16	EA.
7	5000022	WASH\LOCK\5/16		16	EA.
8	5000023	WASH\FLAT\5/16		14	EA.
CA	4501609	GUIDE\DSCH\CNVYR\24"CNVYR\KIT>			EA

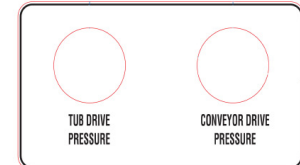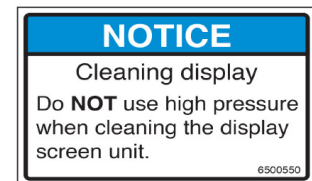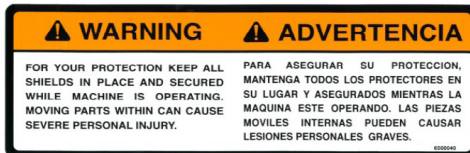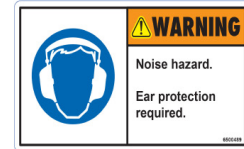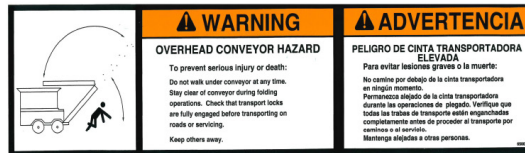




Grease rotor bearings daily. Administer new grease until it pushes out of bearing, use Lithium #2 base grease. **DAILY**



12 - 6500363

10 - 6500302

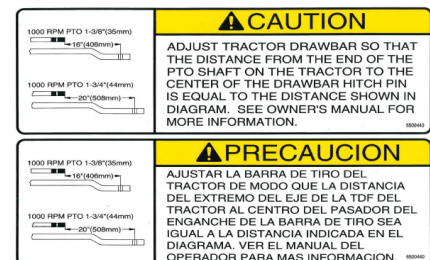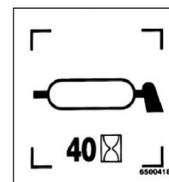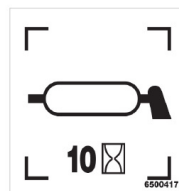H-1030
18 - 6500520




15 - 6500440

6 - 6500118

7 - 6500214

6500498 H-1030 Decal Kit

Item	Part No.	Name	Remarks	Qty	Uom
1	6500020	DECAL\LOGO\HYBSTR\SNBRS\3		3	EA.
2	6500040	DECAL\WARN\SHIELD\PROT		2	EA.
3	6500056	DECAL\INFO\ROTATION\STR		2	EA
4	6500082	DECAL\DNGR\ROTATN;PART;>		4	EA.
5	6500085	DECAL\DNGR\ROTATNG;DR-LNE		1	EA.
6	6500118	DECAL\DNGR\OBJECT;THROWN		1	EA
7	6500214	DECAL\WARN\OVRHED;CNVYR;HAZARD		2	EA
8	6500215	DECAL\WARN\FOLDNG;CNVYR;>		2	EA
9	6500245	DECAL\MISC\TAPE\RED\WHT\		8	FT
10	6500302	DECAL\LOGO\STRIP\3\RD&BLK		20	FT.
11	6500339	DECAL\WARN\PINCH;POINT		4	EA
12	6500363	DECAL\LOGO\BIGBITE\UNVRSL		3	EA
13	6500417	DECAL\GREASE\10 HRS		7	EA.
14	6500418	DECAL\GREASE\40 HRS		4	EA.
15	6500440	DECAL\CAUT\ADJ_DRWBAR\16&20		1	EA
16	6500489	DECAL\WARN\PPE\HEARING		1	EA
17	6500497	DECAL\EXTINGUISHER\FIRE		1	EA
18	6500520	DECAL\LOGO\H1030		3	EA
19	6500538	DECAL\GAUGE\PRESSURE\1030		1	EA
20	6500550	DECAL\NOTICE\DISPLAY\CLEANING		1	EA.
21	6500576	DECAL\BRG\RTTR\GREASE\DAILY		2	EA.
CA	6500498	DECAL\KIT\H1030			EA
NS	7500077	Yellow Spray Paint	ORDER 7500980		EA.
NS	7500092	Yellow Paint			EA.
NS	7500091	Yellow Paint			EA.
NS	7500078	Red Spray Paint			EA.
NS	7500105	Red Paint			EA.
NS	7500104	Red Paint			EA.

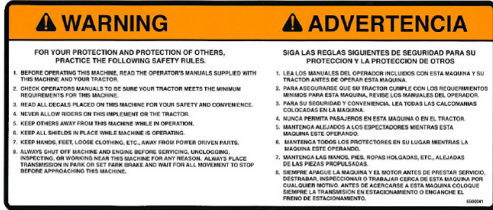

2 - 6500041



3 - 6500043



4 - 6500052



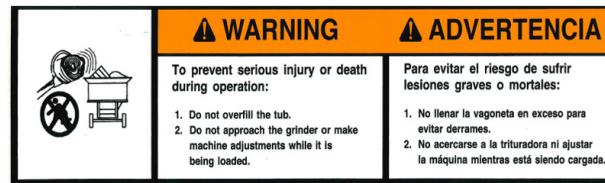
6 - 6500209



7 - 6500220



8 - 6500282



9 - 6500283



10 - 6500363

**HYDRAULIC
OIL**



5 - 6500124

6500561 Hydraulic Oil Tank Decal Kit

Item	Part No.	Name	Remarks	Qty	Uom
1	6500020	DECAL\LOGO\HYBSTR\SNBRS\3		1	EA.
2	6500041	DECAL\WARN\PROTECTION		1	EA.
3	6500043	DECAL\WARN\NO;RIDERS		2	EA.
4	6500052	DECAL\INFO\OIL;LEVEL		1	EA
5	6500124	DECAL\INFO\HYD;OIL		1	EA
6	6500209	DECAL\WARN\THROWN;OBJECT;HAZARD		1	EA
7	6500220	DECAL\WARN\HI;PRESS;FLUID		1	EA.
8	6500282	DECAL\WARN\TIPPING;HZRD		1	EA
9	6500283	DECAL\WARN\OVERLOAD;TUB		1	EA
10	6500363	DECAL\LOGO\BIGBITE\UNVRSL		1	EA
CA	6500561	DECAL\KIT\TANK\OIL\H1030\H1130\H1135			EA.


H-1030 Decal Locations

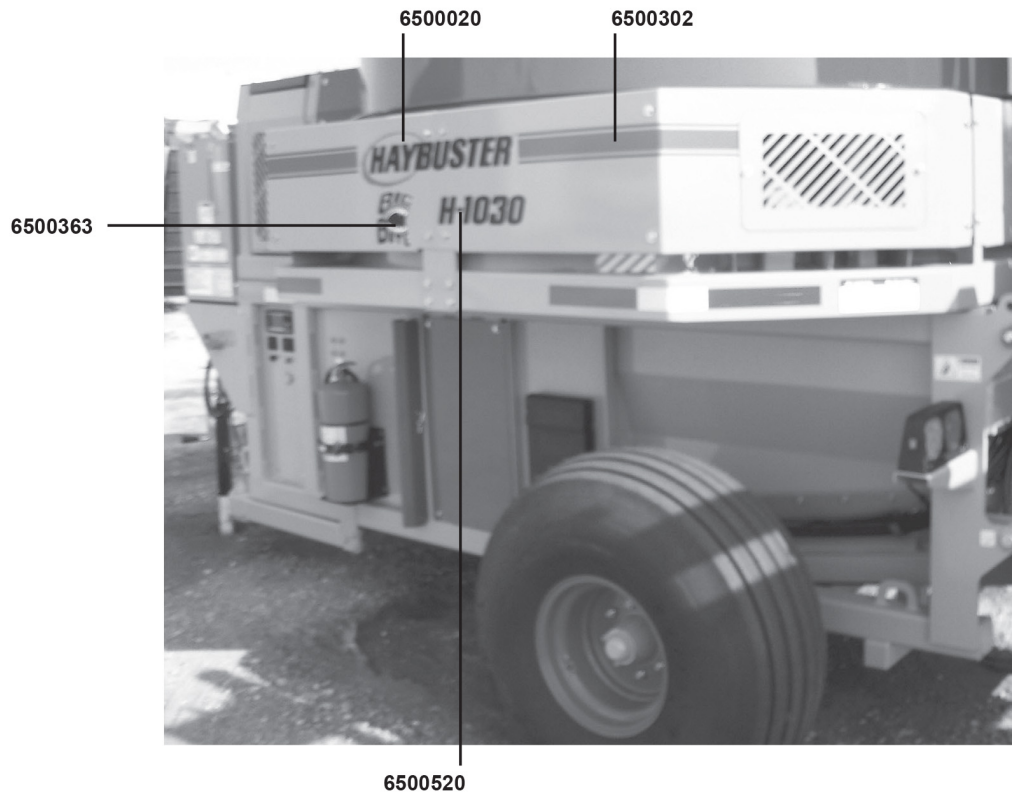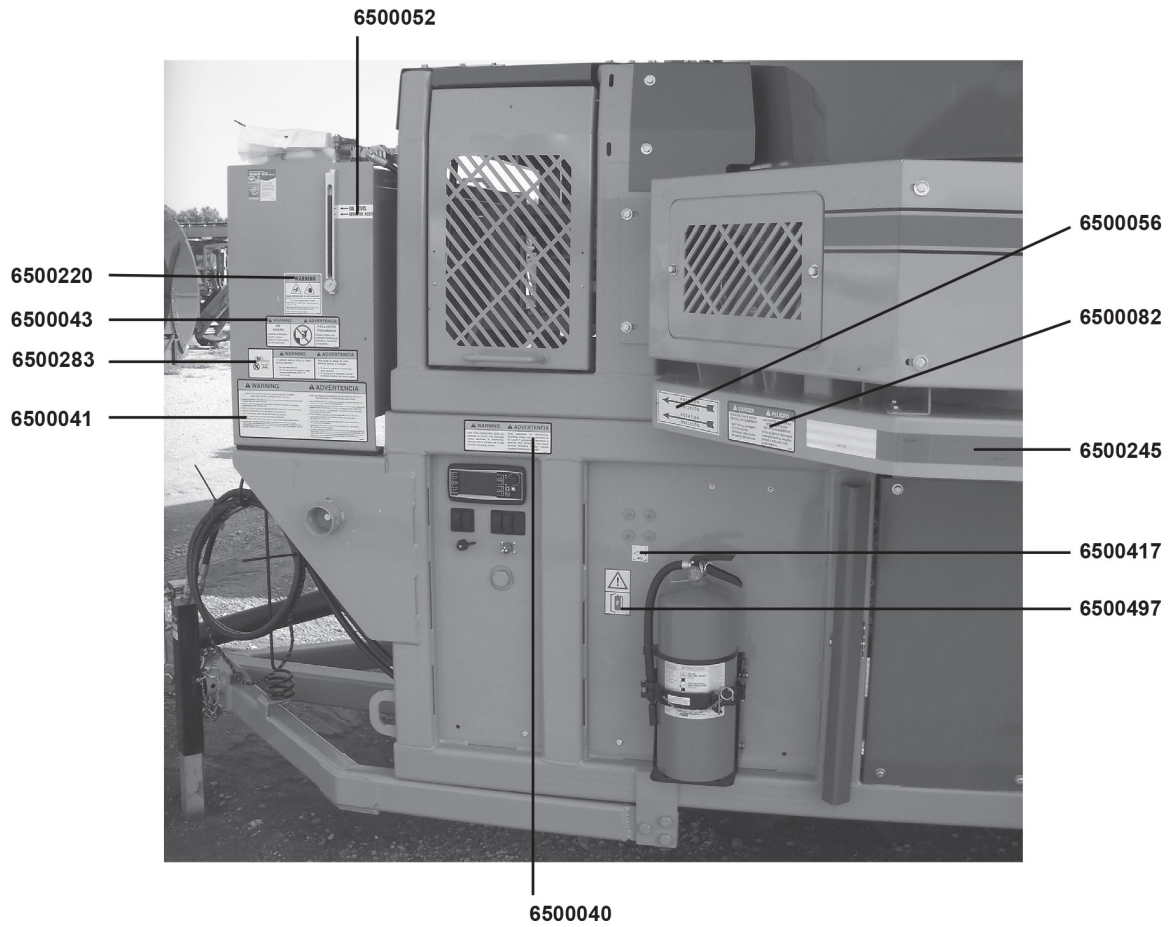H-1030 PTO Driven Tub Grinder Parts Reference




H-1030 Decal Locations

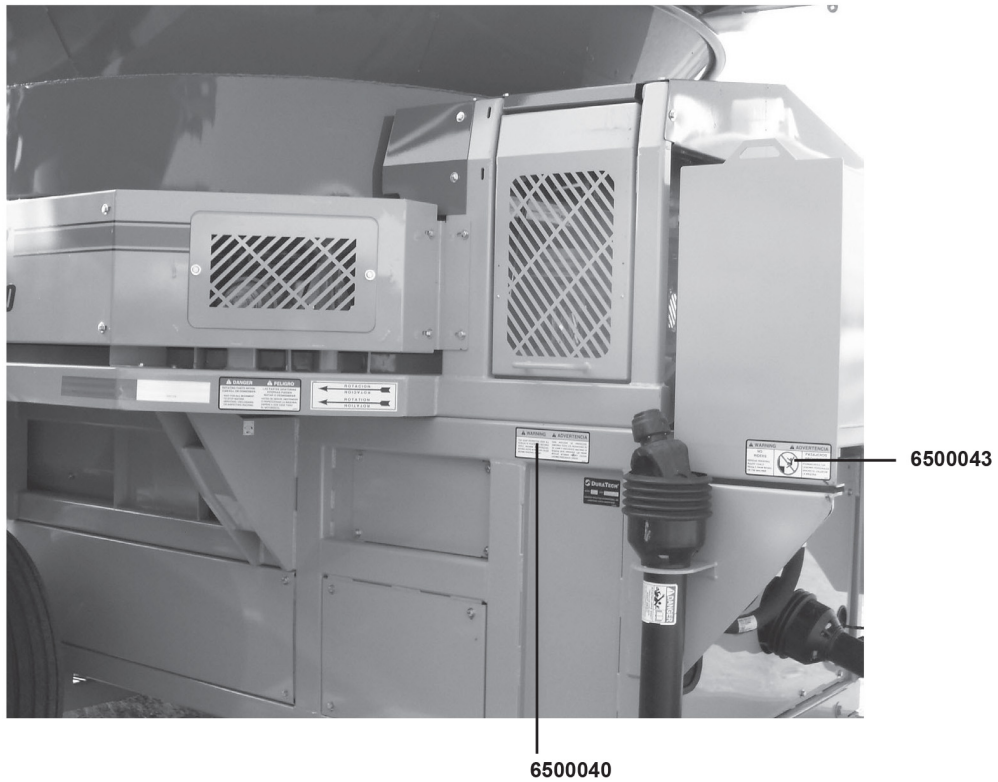H-1030 PTO Driven Tub Grinder Parts Reference




H-1030 Decal Locations

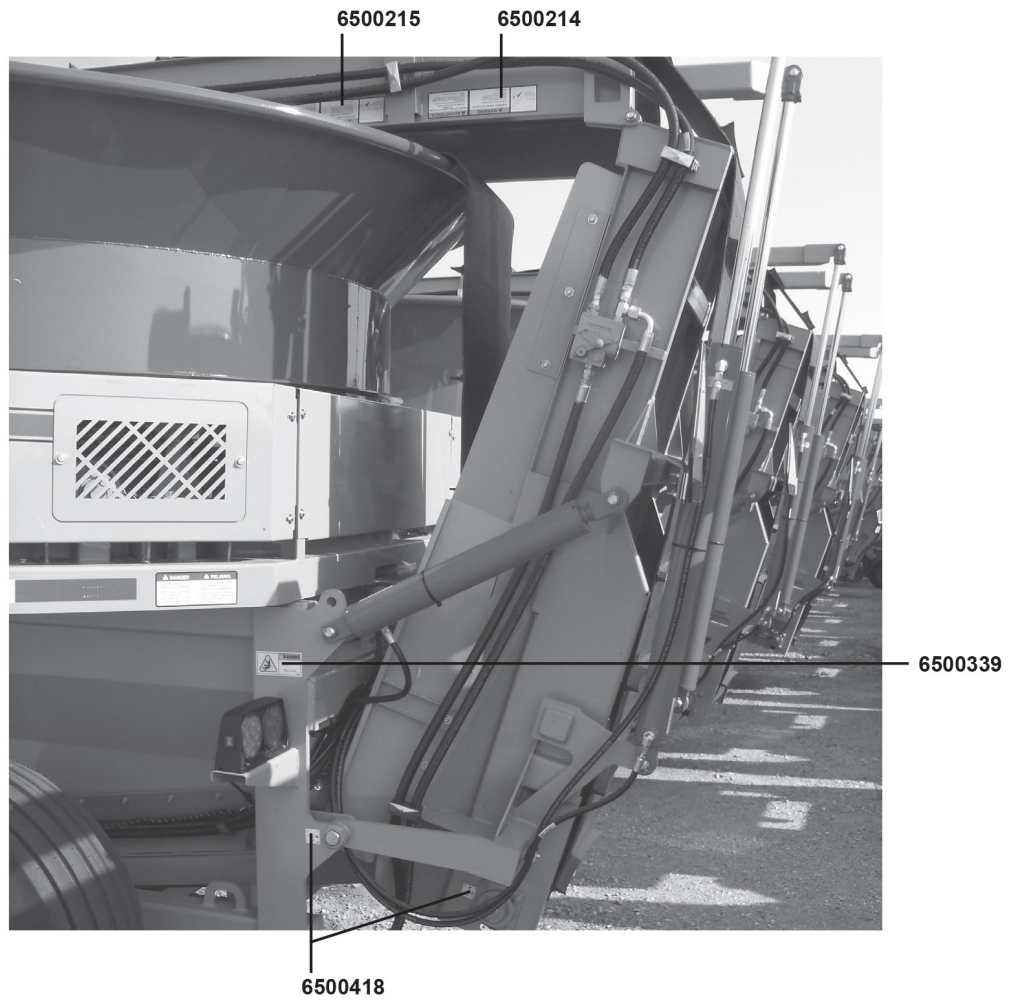
H-1030 PTO Driven Tub Grinder Parts Reference



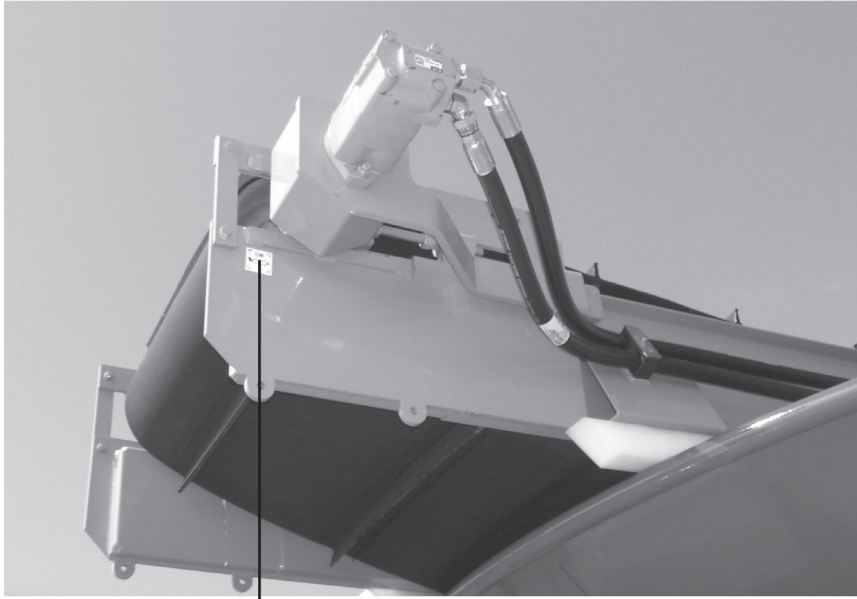H-1030 PTO Driven Tub Grinder Parts Reference




6500417

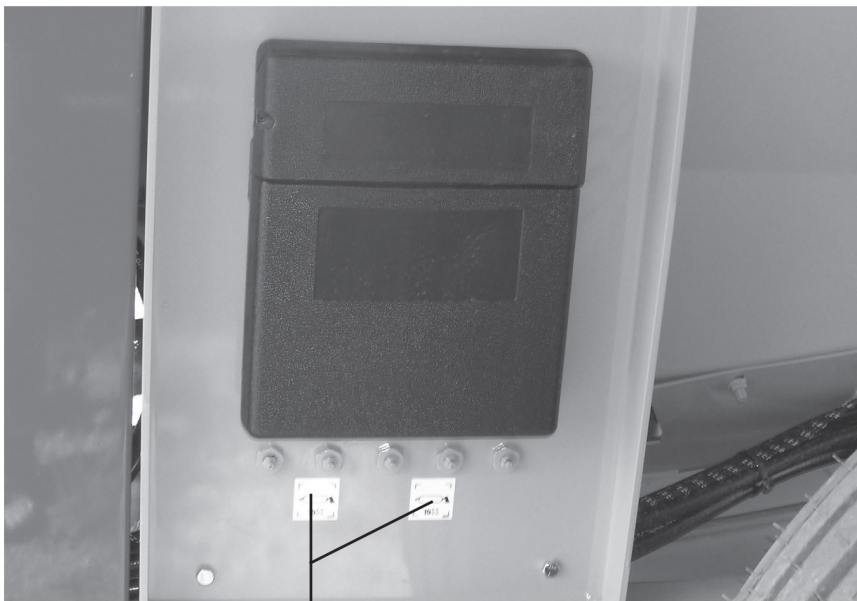

6500417

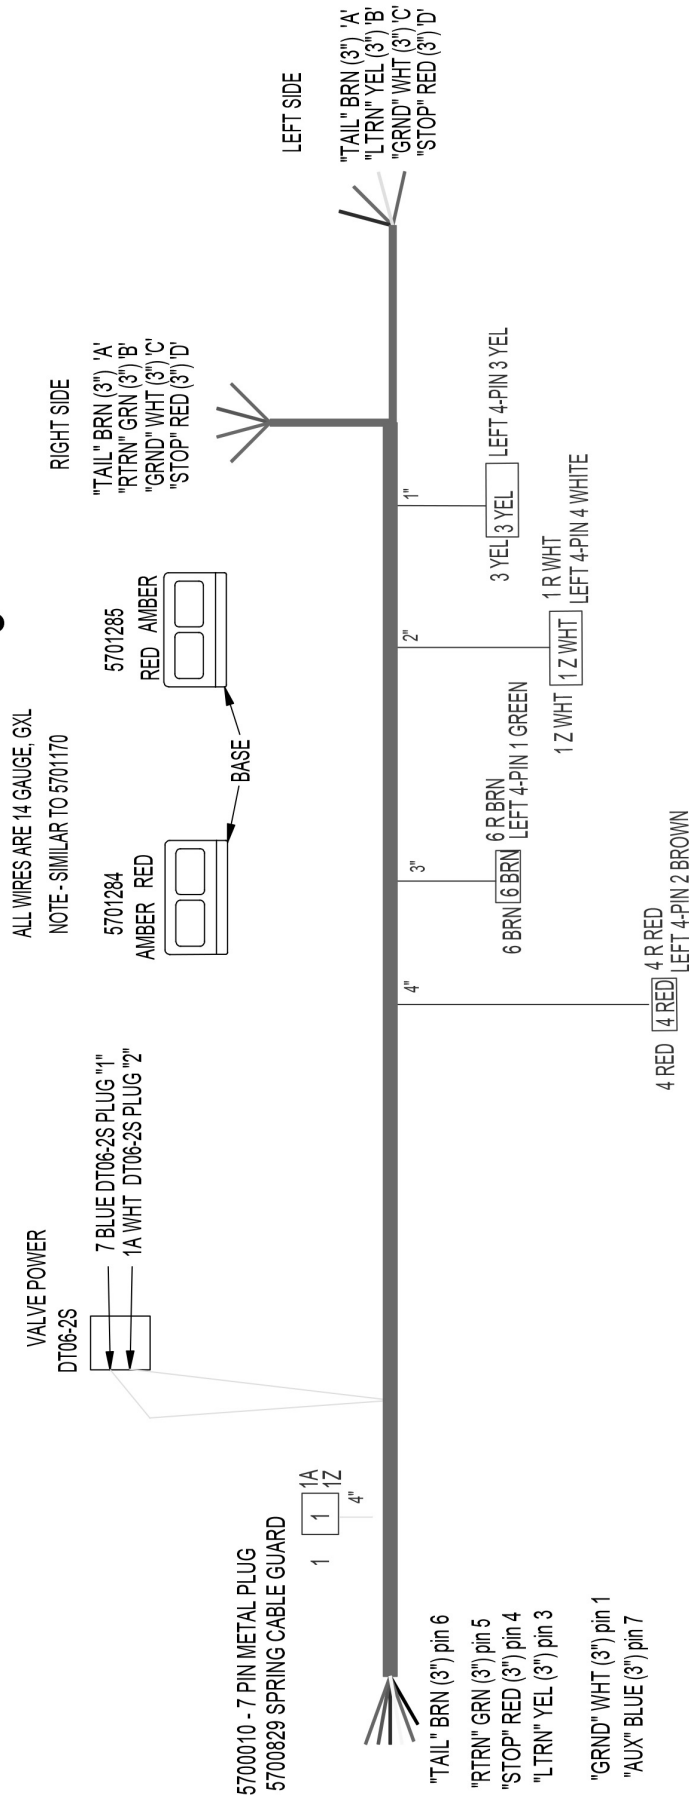5701310 - PTO TUB tail lights harness





Delivery Report

Delivery Date	Machine Model	Serial No.	
Dealer Name		Engine Serial No.	
Dealer Address		Invoice No.	
Dealer City	State	Zip	
Dealer Email		Phone	

Customer Name		
Customer Address	Phone	
Customer City	State	Zip
Customer Email		

The following items are to be checked as they are explained to the owner / operator at the time of delivery


- ☐ Explain the delivery packet and present the operators manual(s) to the owner / operator.
- ☐ Review and inspect the machine safety signs (decals) and the operator's manual.
- ☐ Advise the owner that the dealer is the source to obtain operator training, and information regarding the correct application of the machine to the job, as well as service and warranty information.
- ☐ Explain the capabilities and restrictions of the machine as it applies to the owner's application as defined in the operator's manual.
- ☐ Explain the operation of the controls and start up and shut down procedures of the engine and power transmission components of the machine.
- ☐ Explain rated lift or carrying capacity and loading and unloading procedures of the machine to maintain safety and stability of the machine.
- ☐ Explain proper folding, unfolding, and transporting procedures to the owner / operator.
- ☐ Explain recommended fueling procedures on engine equipped machines.
- ☐ Explain proper loading and unloading of materials from the tub or grinding chamber of the machine.
- ☐ Objects thrown by shredding or spinning rotors may represent a hazard to personnel and property in the area. Minimize risks by planning and by keeping personnel and property clear of hazard area.
- ☐ Explain the availability and use of the tub cover to further reduce risks of thrown objects.
- ☐ Review maintenance and lubrication procedures with the operator / maintenance person as defined in the operators manual.
- ☐ Advise never to use the machine in an environment with explosive or flammable materials present.
- ☐ Explain warranty policy and limitations to the owner / operator.




Warning


Misuse of the machine or modification or removal of the guards, safety devices, or control interlocks can cause injury or death.

The above delivery information has been explained to me. I understand the operation and maintenance of this machine. I also acknowledge the warranty conditions and limitations as outlined.	
Owner / Operator Signature	Date
Dealer Representative Signature	Date

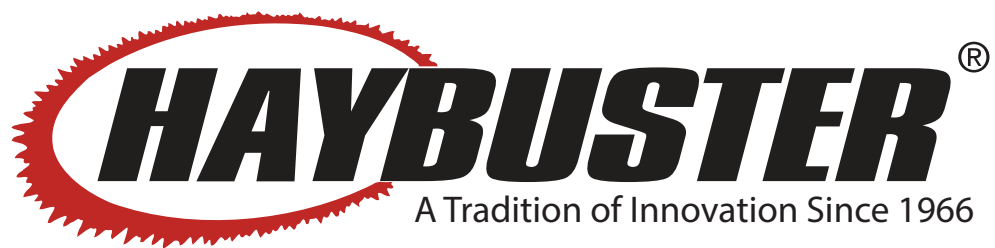


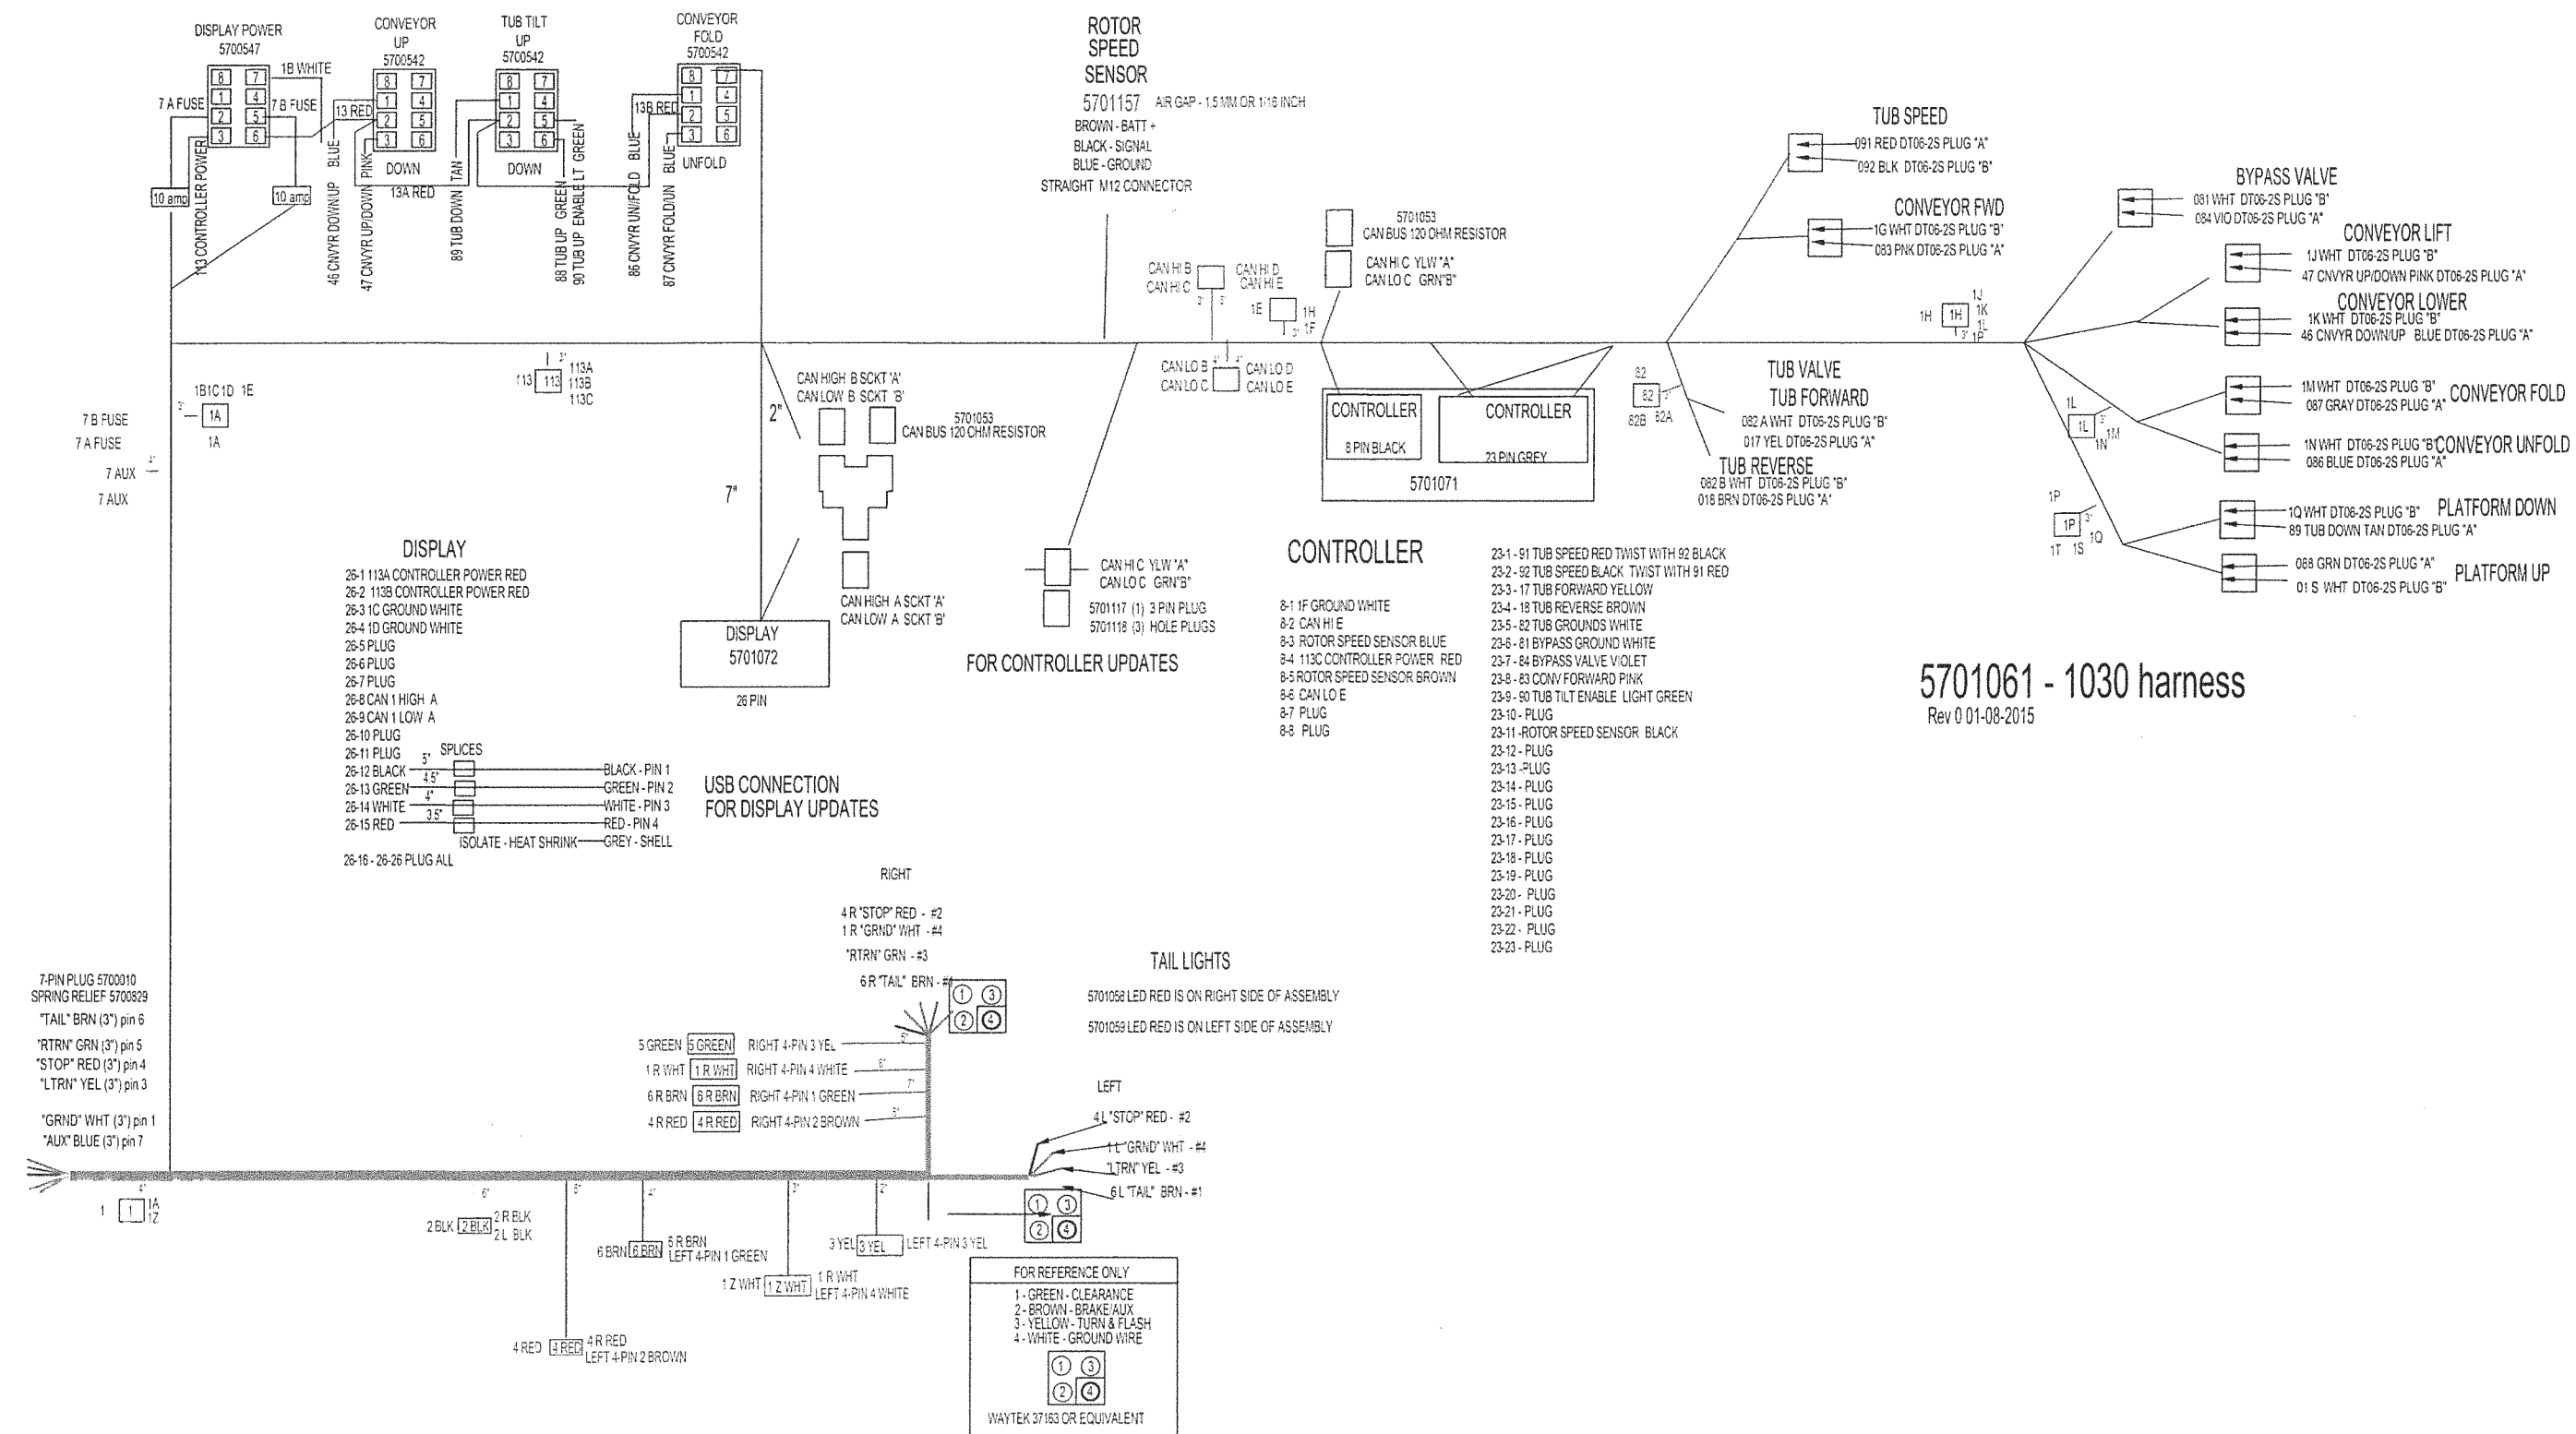

5701061 - 1030 harness
Rev 0 01-08-2015

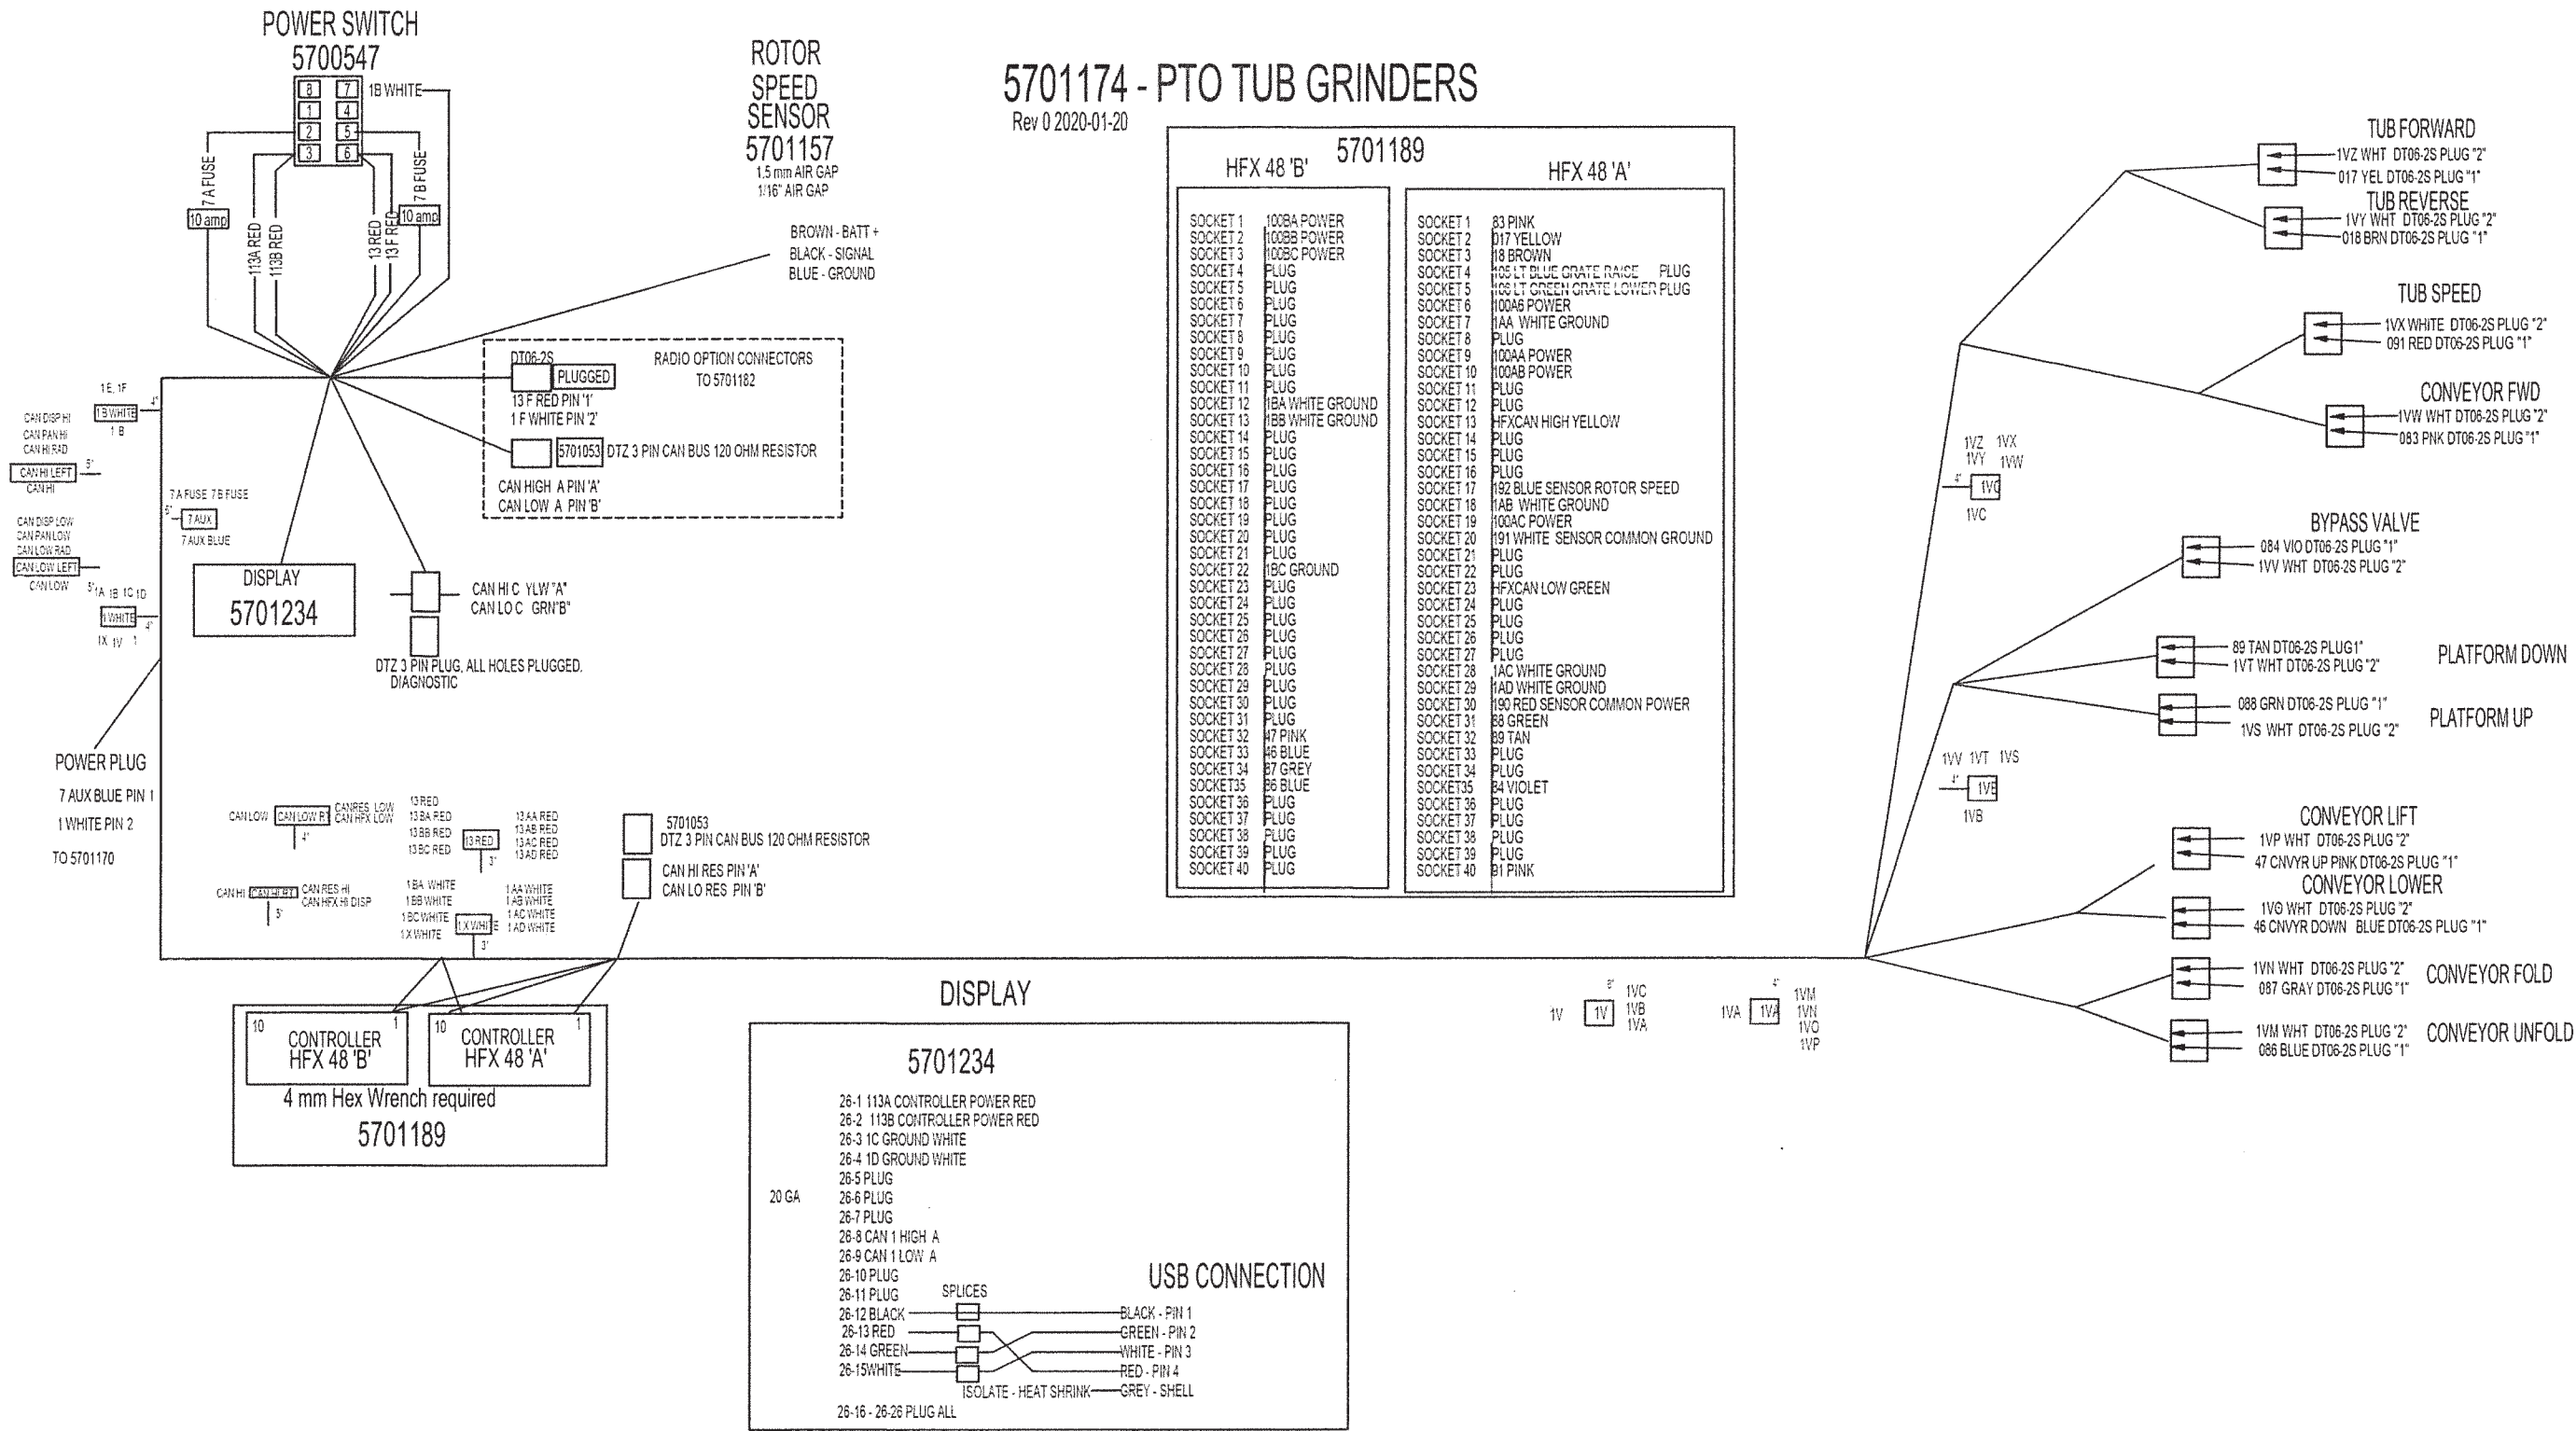

5701170 - PTO TUB tail lights harness

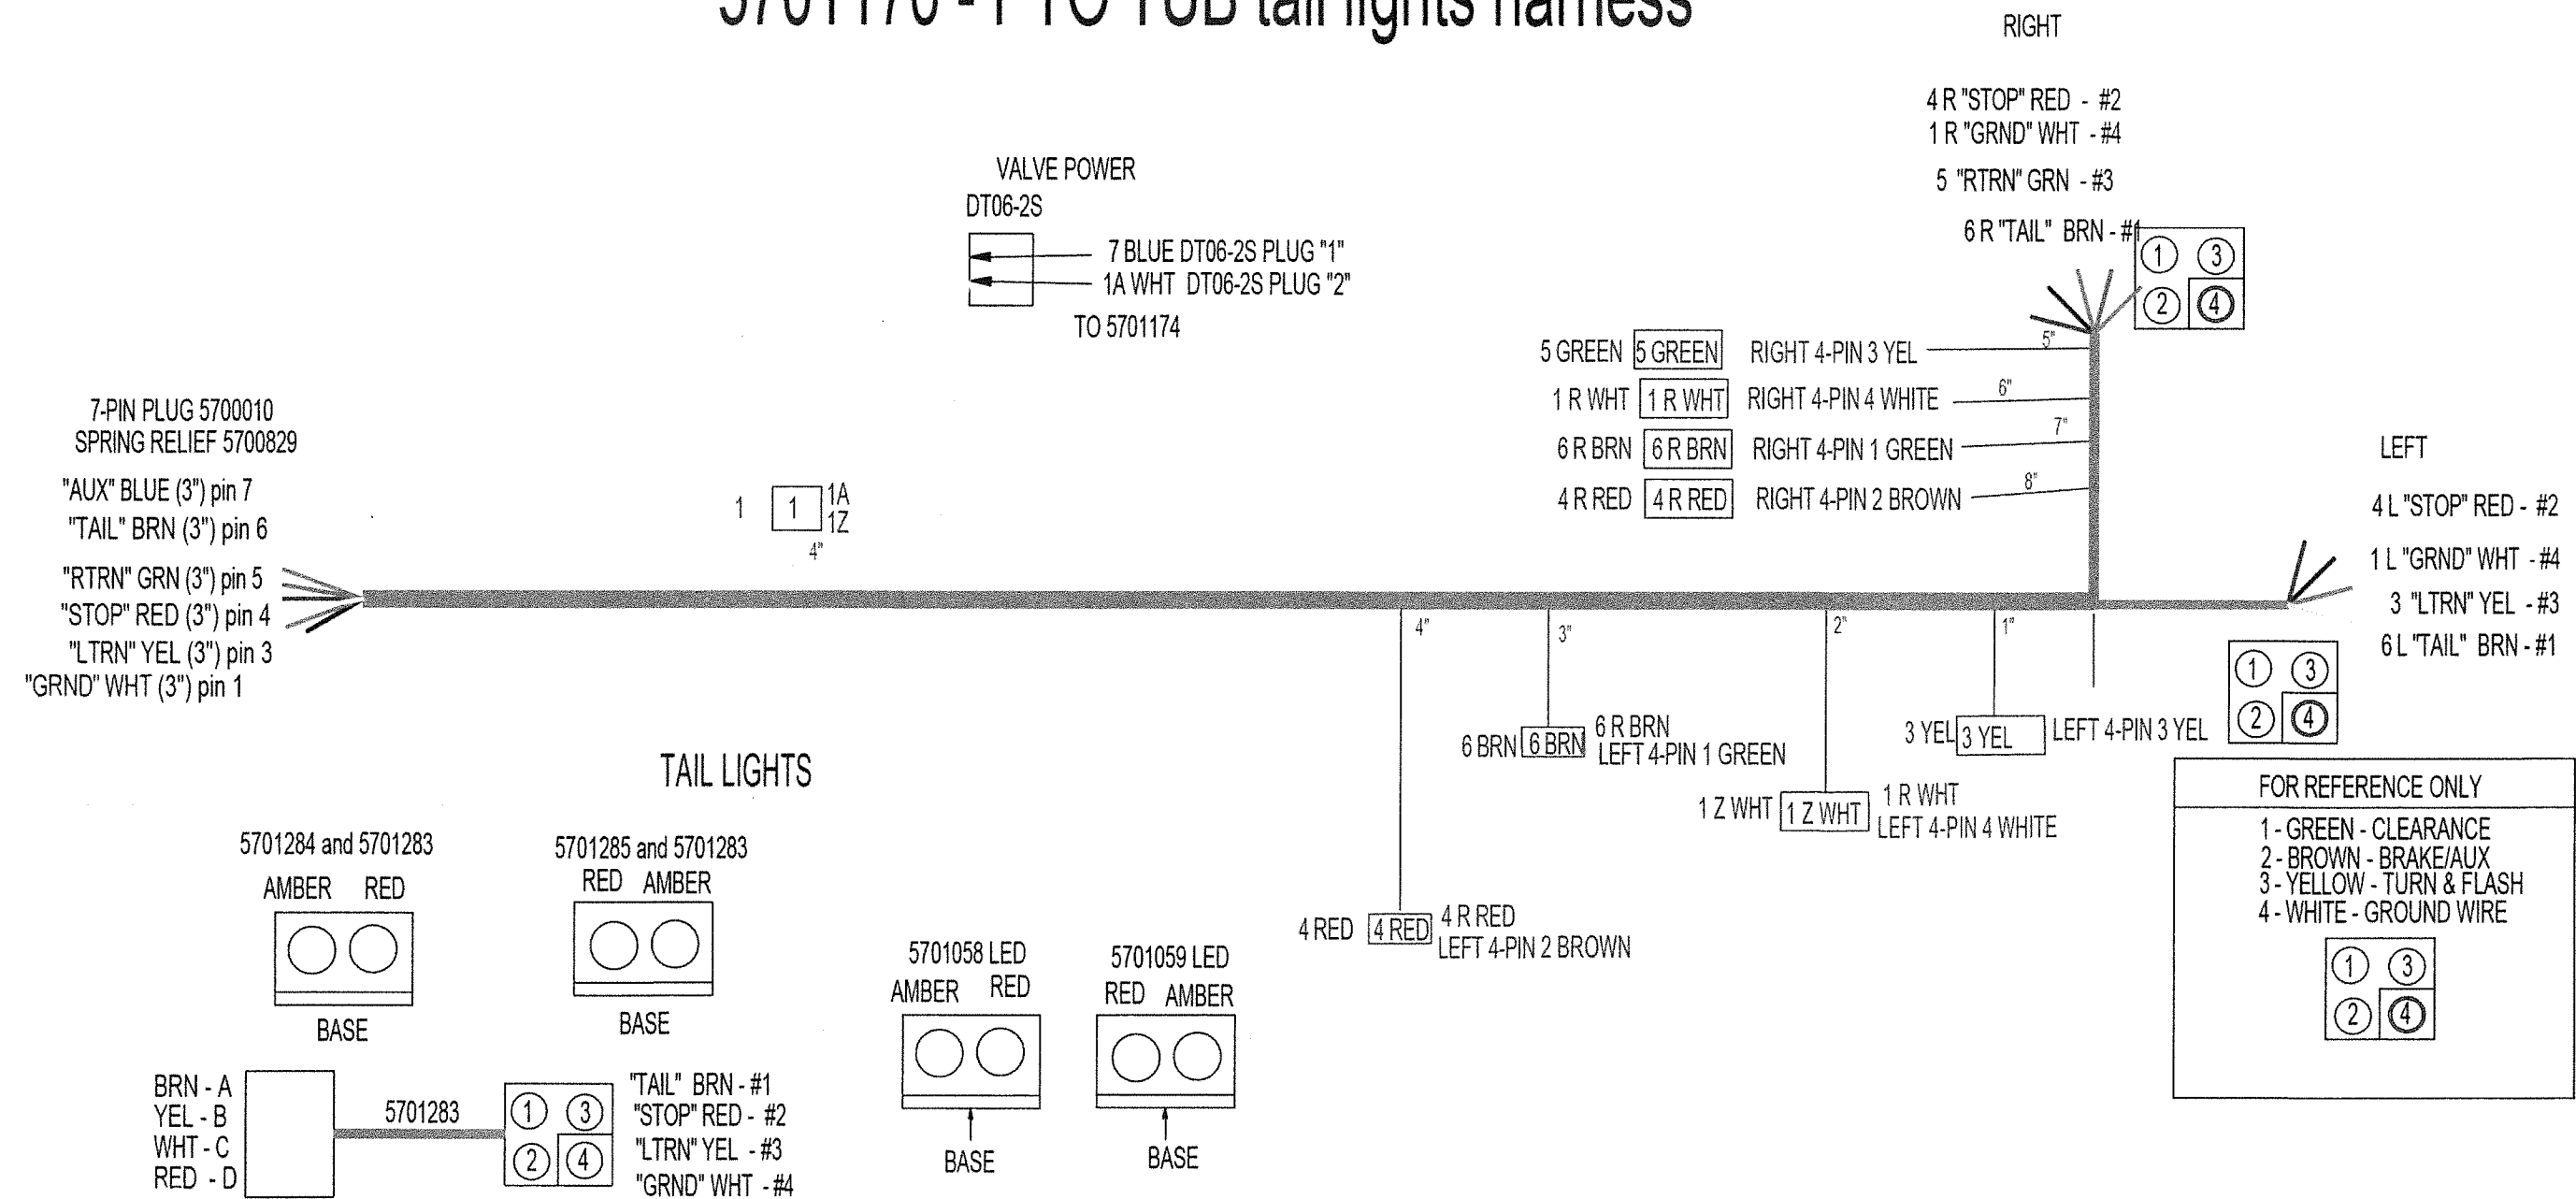

H-1030 TUB GRINDER



H-1030 HYDRAULIC SCHEMATIC S.N. 10200121130 AND UP

